ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) FOR

REEL UNITS RL-31, RL-31B, RL-31C, RL-31D, AND RL-31E

(NSN 3895-00-252-6896)

14 August 1978

Headquarters, Department of the Army, Washington, D.C.

Current as of 28 February 1978

REPORTING OF ERRORS

You can help improve this manual by calling attention to errors and by recommending improvements and stating your reasons for the recommendations. Your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) should be mailed directly to Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q Fort Monmouth, New Jersey 07703. A reply will be furnished directly to you

Table of Contents

		Page	IIIs Figure
Section	I.	Introduction	
	II.	Repair Parts List	
Group	00	Real Units RL-31, RL-31B, RL-31C, RL-31D, and RL-31E	1
Section	III.	Special Tools List (Not Applicable)	
	IV.	National Sttock Number Part Number Index	

^{*}This mental supersodes TM 11-3005-202-24P, 20 August 1976.

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational and direct support maintenance of the RL-31, RL-31B, RL-31C, RL-31D, and RL-31E. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NUN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

- a. Illustration. This column is divided as follows:
- (1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.
- (2) *Item number.* The number used to identify item called out in the illustration.

b. S o u r c e, Maintenance, and Recoverability (SMR) Codes.

(1) **Source code.** Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

PA—Item procured and stocked for anticipated or known usage.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

- (2) **Maintenance code.** Maintenance codes are assigned **to** indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:
- (a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code Application/Explanation

- O—Support item is removed, replaced, used at the organizational level.
- F-Support. item is removed, replaced, used at the direct support level.
- **(b)** The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain the following maintenance code:

Code Application/Explanation 7 Nonreparable No repair is authorized

Z-Nonreparable. No repair is authorized.

(3) **Recoverability code.** Recovera

(3) **Recoverability code.** Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability codes

Definition

- Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
- *c. National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.
- **d. Part Number.** Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the Item by means of its engineering drawings, specifications,

standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock-numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

- e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.
- *f. Description.* Indicates the Federal item name and, if required, a minimum description to identify the item.
- g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.
- h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	used on
5C3	RL31
5C4	RL-31B
5 C 5	RL-31C
4 P P	RL-31D
4 T 5	RL-31E

b. The following publication pertains to the RL-31, RL-31B, RL-31C, RL-31D, and RL-31E and its components:

TM 11-362, Reel Units RL-31, RL-31B, RL-31C, RL-31D, and RL-31E

5. How to Locate Repair Parts

- a. When National stock number or part number is unknown.
- (1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.
- (2) *Second.* Find the illustration covering the functional group to which the item belongs.
- (3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.
- (4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.
- b. When National stock number or part number is known.
- (1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numhers in alphameric sequence, cross-referenced to the illustration figure number and item number.
- (2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

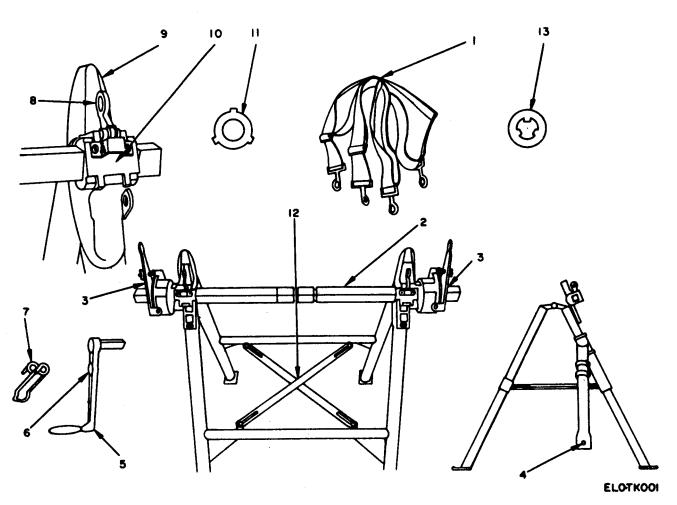


Figure 1. Reel Units M-31, RL-31B, RL-31C, RL-31D, and RL-31E.

SECTION II. REPAIR PARTS LIST

1 1 1 1 1 1 1 1 1 1	(J LUST (A) FIG NO.	(B) FEM NO.	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) Part Number	(5) SCM	(6) DESCRIPTION USABLE ON CODE	(7) INIT OF IEAS	(a) Y Y Z T
1 1 AOZZ 165-00-498-1713 T19A,AW 0063 TRAP 1 2 AOZZ 395-00-301-5885 CD11418 0063 XLE 1 3 AOZZ 395-00-629-9487 C10A 0058 RAKE UNIT 1 4 AFZZ 395-00-127-1037 CD1831 0063 RACE, LEG AFF, 5C3, 5C4, 5C5 EA 2 1 5 AOZZ 395-00-127-0969 C4A 0058 RANK 1 6 AFZZ 395-00-127-0976 CD1379 0063 LUNGER 1 7 AFZZ 360-00-233-3780 CD11576DITEM6 0063 PRING 1 8 AFZZ 395-00-633-5799 CD11576-3 0063 ASTENER, LATCH 1 9 AFZZ 130-00-245-2241 LSNB599220 0063 LOCK, BEARING 1 10 AFZZ 395-00-588-4796 CD11576ITEM2 0063 AF, BEARING 2 AFZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE 1 12 AFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4 AFZ 2 2									
1 2 NOZZ 395-00-301-5885 CD11\(18 \) 0063 XLE 1 3 NOZZ 395-00-629-9487 C10A 0058 RAKE UNIT 1 4 NFZZ 395-00-127-1037 CD1831 0063 RACE, LEG NFP, 5C3, 5C4, 5C5 EA 2 1 5 NOZZ 395-00-127-0969 C4A 0058 RANK 1 6 NFZZ 395-00-127-0976 CD1379 0063 LUNGER 1 7 NFZZ 360-00-233-3780 CD11576DITEM6 0063 PRING 1 8 NFZZ 395-00-633-5799 CD11576-3 0063 ASTEMER, LATCH 1 9 NFZZ 130-00-245-2241 LSMS599220 0063 LOCK, BEARING 1 10 NFZZ 395-00-351-8212 CD11576ITEM2 0063 AP, BEARING 1 1 NFZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE 1 12 NFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4 1 2 NFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4 2 2 3 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	١,	١,	AOZZ	:65-00-k98-1713	T19A.AV	0063		PA	2
1 3 AOZZ 395-00-629-9487 C10A 0058 RAKE UNIT 1 4 AFZZ 395-00-127-1037 CD1831 0063 RACE, LEG 4PP, 5C3, 5C4, 5C5 EA 2 1 5 AOZZ 395-00-127-0969 C4A 0058 RANK EA 2 1 6 AFZZ 395-00-127-0976 CD1379 0063 LUNGER 1 7 AFZZ 360-00-233-3780 CD11576DITEM6 0063 PRING 1 8 AFZZ 395-00-633-5799 CD11576-3 0063 ASTENER, LATCH 1 9 AFZZ 130-00-245-2241 LSNB599220 0063 LOCK, BEARING 1 10 AFZZ 395-00-588-4796 CD11576ITEM2 0063 AF, BEARING 1 11 AFZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE 1 12 AFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4T5 EA 2									
1									
1 5 AOZZ 395-00-127-0969 CNA OOSB RAHK EA 2 1 6 AFZZ 395-00-127-0976 CD1379 OOG3 LUNGER EA 4 1 7 AFZZ 360-00-233-3780 CD11576DITEM6 OOG3 PRING EA 2 1 8 AFZZ 395-00-633-5799 CD11576-3 OOG3 ASTEMER, LATCH EA 2 1 9 AFZZ 130-00-245-2241 LSNB599220 OOG3 LOCK, BEARING EA 2 1 10 AFZZ 395-00-588-4796 CD11576ITEM2 OOG3 AF, BEARING EA 2 1 11 AFZZ 395-00-351-8212 CD11579ITEM11 OOG3 ISK, BRAKE EA 8 1 12 AFZZ 250-00-127-1051 CD11575 OOG3 RACE ASSEMBLY AT5 EA 2	1		A F ZZ			0063	RACE, LEG 4PP, 503, 504, 505		
1 7 AFZZ 360-00-233-3780 CD11576DITEM6 0063 PRING EA 2 1 8 AFZZ 395-00-633-5799 CD11576-3 0063 ASTEMER, LATCH EA 2 1 9 AFZZ 130-00-245-2241 LSMB599220 0063 LOCK, BEARING EA 2 1 10 AFZZ 395-00-588-4796 CD11576ITEM2 0063 AF, BEARING EA 2 1 11 AFZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE EA 8 1 12 AFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4T5 EA 2	1	5	NOZZ.	395-00-127-0969	Cha	0058		EA	2
1 8 APZZ 395-00-633-5799 CD11576-3 0063 ASTEMER, LATCH 1 9 APZZ 130-00-245-2241 LSMB599220 0063 LOCK, BEARING 2 1 10 APZZ 395-00-588-4796 CD11576ITEM2 0063 AP, BEARING 2 1 11 APZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE 3 1 12 APZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4 2 2	1	6	AFZZ	395-00-127-0976	CD1379	0063	LUNGER	EA	14
1 9 APZZ 130-00-245-2241 LSMB599220 0063 LOCK, BEARING EA 2 1 10 APZZ 395-00-588-4796 CD11576ITEM2 0063 AP, BEARING EA 2 1 11 APZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE EA 8 1 12 APZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4T5 EA 2	1	7	AFZZ	360-00-233-3780	CD11576DIT EM 6	0063	PRING	BA	2
1 10 AFZZ 395-00-588-4796 CD115761TEM2 0063 AF, BEARING EA 2 1 11 AFZZ 395-00-351-8212 CD11579ITEM1 0063 ISK, BRAKE EA 8 1 12 AFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4T5 EA 2	1	8	APZZ	395-00-633-5799	CD11576-3	0063	ASTEMER, LATCH	EA	2
1 11 AFZZ 395-00-351-8212 CD11579ITEM11 0063 ISK, BRAKE BA 8 1 12 AFZZ 350-00-127-1051 CD11575 0063 RACE ASSEMBLY 4T5 EA 2	1	9	AFZ2	130-00-245-2241	LSMB599220	0063	LOCK, BEARING	EA	2
1 12 AFZZ >50-00-127-1051 CD11575 0063 RACE ASSEMBLY 4T5 EA 2	1	10	APZZ	395-00-588-4796	CD11576ITEC	0063	AP, BEARING	EA	2
	ı	11	APZZ	395-00-351-8212	CD11579ITEM11	0063	ISK, BRAKE	EA	8
1 13 MP22 395-00-351-5213 CD11579ITEMIO 0063 USK, BRAKE BA 10	1	12	NF22)50-00-127-1051	CD11575	0063	RACE ASSEMBLY 4T5	BA	2
	1	13	AFZZ	395-00-351-8213	CD11579I TEM 10	0063	ISK, BRAKE	EA	10

SECTION IV. NATIONAL STOCK NUMBER AND PART NUMBER INDEX

STOCK NUMBER	F	GURE NO.	ITEM NO.	STOCK NUMBER	F	IGURE NO.	ITEM NO.
3895-00-127-0969		1	5	3895-00-351-8212		1	11
3895-00-127-0976		1	6	3895-00-351-8213		1	13
3895-00-127-1037		1	4	8465-00-498-1713		1	1
3950-00-127-1051		1	12	3895-00-588-4796		1	10
5360-00-233-3780		1	7	3895-00-629-9487		1	3
8130-00-245-2241		1	9	3895-00-633-5799		1	8
3895-00-301-5885		1	2				
PART NUMBER	FSCM	FIG. NO.	ITEM NO.	PART NUMBER	FSCM	FIG . NO.	ITEM NO.
DLSMB599220	80063	1	9	SCD11576ITEM2	80063	1	10
GC10A	80058	ī		SCD11579ITEM10	80063	1	13
GC4A	80058	ī	3 5	SCD11579ITEM11	80063	1	11
SCD11418	80063	ī	2	SCD1379	80063	1	6
SCD11575	80063	ī	12	SCD1831	80063	ī	ŭ
SCD11576-3	80063	ī	8	ST19A,AW	80063	ī	i
SCD11576DITEM6	80063	ī	7			_	_

By Order of the Secretary of the Army:

BERNARD W. ROGERS General, United States Army Chief of Staff

Official:

J. C. PENNINGTON
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

Active Army:

	II . I CITOT
USAINSCOM (2)	Units org under fol TOE:
COE (1)	(1 ea. UNOINDC)
TSG (1)	11-15
USAARENBD (1)	11-16
USAIB (2)	11-17
DARCOM (1)	11-18
TECOM (2)	11-19
USACC (4)	11-25
TRADOC (2)	11-26
OS Maj Comd (4)	11-27
USARJ (2)	11-37
MDW (1)	11-33
Armies (2)	11-36
corps (2)	11-45
HISA (Ft Monmouth) (32)	11-46
Fort Gillem (10)	11-47
Fort Gordon (10)	11-35
Fort Huachuca (10)	11-66
Fort Carson (5)	11-87
Ft Richardson (CERCOM Ofc) (2)	11-25
Svc Colleges (1)	11-97
USASIGS (5)	11-98
USAICS (3)	11-116
USATSCH (2)	11-117
USAADS (2)	11-122
USAFAS (2)	11-127
USAARMS (2)	11-137
USAIS (2)	11-147
USAES (2)	11-205
USAOC&S (2)	11-207
USAMPS (2)	11-215
AD (1) except	11-217
SAAD (30)	11-218
LBAD (14)	11-225
TOAD (14)	11-227
SHAD (3)	11-228
USA Dep (1)	11-237
Sig Sec USA Dep (1)	11-302
USAECFB (2)	11-303
MAAG (1)	11-327
USARMIS (1)	11-257
USAERDAA (1)	11-500 (AA-AC)
USAERDAW (1)	29-207 (2)
USACRTC (2)	29-610 (2)
USATC FA (2)	

ARNG: State AC (3); Units-Same as Active Army except allowance! is one (1) copy per unit.

USAR: None.

For explanation of abbreviations ussd, see AR 310-50.

PIN: 015461-000

This fine document...

Was brought to you by me:



<u>Liberated Manuals -- free army and government manuals</u>

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

Free Military and Government Manuals

- SincerelyIgor Chudovhttp://igor.chudov.com/
- Chicago Machinery Movers