

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL
SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS (INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS)
CONNECTORS, RECEPTACLE, ELECTRICAL
U187/G AND U-187A/G
(FSN 5935-682-0381)

Headquarters, Department of the Army, Washington, D. C.
18 March 1975

Current as of December 1974

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope	1-1	2
General	1-2	2
Explanation of columns	1-3	4
Special information	1-4	4
Location of repair parts	1-5	4
Abbreviations (Not applicable)	1-6	5
Reporting of equipment manual improvements	1-7	5
Items comprising an operable equipment	1-8	5
II. BASIC ISSUE ITEMS LIST (Not applicable)		
III. ITEMS TROOP INSTALLED OR AUTHORIZED LIST (Not applicable)		
IV. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
V. REPAIR PARTS LIST		6
VI. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
VII. REPAIR PARTS LIST		7
VIII. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IX. INDEX — FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		8

* This manual supersedes TM 11-5935-205-15P, 13 August 1962.

SECTION I INTRODUCTION

1-1. Scope

This manual lists basic issue items, items troop installed or authorized, repair parts and special tools required by the crew/operator for operation and required for the performance of organizational, direct support general support and depot maintenance of the U-187/G and U-187A/G. The PCCN for the equipment is GCWAKN for all models.

1-2. General

This basic issue items, items troop installed or authorized, repair parts, and special tools list is divided into the following sections -

a. *Basic Issue Items List - Section II.* Not applicable.

b. *Items Troop Installed or Authorized List - Section III.* Not applicable.

c. *Prescribed Load Allowance (PLA) - Section IV.* Not applicable.

d. *Repair Parts List - Section V.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

e. *Special Tools, Test and Support Equipment - Section VI.* Not applicable.

f. *Repair Parts List - Section VII.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

g. *Special Tools, Text and Support Equipment - Section VIII.* Not applicable.

h. *Index - Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number - Section IX.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and referents numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) Source code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are -

<i>Code</i>	<i>Explanation</i>
PA	- Item procured and stocked for anticipated or known usage.
PB	- Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	- Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	- Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	- Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities
PF	- Support equipment which will not be stocked but which will be centrally procured on demand.
PG	- Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	- An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	- An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	- Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	- Item to be manufactured or fabricated at organizational level.
MF	- Item to be manufactured or fabricated at direct support maintenance level.

<i>Code</i>	<i>Explanation</i>
MH	- Item to be manufactured or fabricated at general support maintenance level.
MD	- Item to be manufactured or fabricated at depot maintenance level.
AO	- Item to be assembled at organizational level.
AF	- Item to be assembled at direct support maintenance level.
AH	- Item to be assembled at general support maintenance level.
AD	- Item to be assembled at depot maintenance level.
XA	- Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	- Item is not procured or stocked. If not available through salvage, requisition.
XC	- Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	- Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage maybe used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows -

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O	- Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organization maintenance.

F	- Support item is removed, replaced, used at the direct support maintenance level.
---	--

<i>Code</i>	<i>Application/Explanation</i>
H	- Support item is removed, replaced us. d a. the general support maintenance.
D	- Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code -

<i>Code</i>	<i>Application/Explanation</i>
O	- The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	- The lowest maintenance level capable of complete repair of the support item is direct support
H	- The lowest maintenance level capable of complete repair of the support item is general support.
D	- The lowest maintenance level capable of complete repair of the support item is the depot level.
L	- Repair restricted to designated Specialized Repair Activity.
Z	- Non-repairable. No repair is authorized.
B	- No repair is authorized. The item may be reconditional by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows -

<i>Code</i>	<i>Explanation</i>
Z	- Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code .
O	- Repairable item When uneconomically repairable, condemn and dispose at organizational level.
F	- Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.

<i>Code</i>	<i>Explanation</i>
H -	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D -	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L -	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A -	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

b. Federal Stock Number. Indicates the Federal stock number assigned to the item.

NOTE

For requisitioning purposes, the Federal stock number must be converted to the National stock number by adding "-00-" after the Federal stock classification (FSC) code (first four digits). For example, FSN 6625-553-0142 converts to NSN 6625-00-553-0142.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity Furnished with Equipment (Basic Issue Items Only). Not applicable.

f. Quantity Authorized (Items Troop Installed or Authorized Only). Not applicable.

g. Quantity Incorporated in Unit. This column indicates the quantity of the item used in the equipment.

h. 15-Day Organizational Maintenance Allowances

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support item authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to the Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, N.J., 07703.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other support equipment.

i. 30-Day DS/GS Maintenance Allowances.

NOTE

Allowances in GS column are for GS maintenance only.

(1) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the special tool lists section for special tools, TMDE, and other support equipment.

j. 1-Year Allowances Per 100 Equipments/Contingency Planning Purposes. Column intentionally left blank.

k. Depot Maintenance Allowance Per 100 Equipments. This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

i. Illustration. Not applicable.

1-4. Special Information

Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are -

<i>Code</i>	<i>Used on</i>
B R 5	U-187/G
B R 6	U-187A/G

1-5. Location of Repair Parts

a. This manual contains one cross reference index (sec IX) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or

alphanumeric sequence in ascending order. The reference numbers (manufacturers part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec IX), and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (see V and VII) and locate the figure number (col 7a - 20P, 10a - 34P) and item number or reference designation (col 7b - 20P, 10b - 34P) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b - 20P and 10a and 10b - 35P, of the repair parts list (see V and VII) until the itcm is located.

d. When the FSN, reference number, figure

number, and item number are not known, scrutinize column 3 of the repair parts list (sec V and VII), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Manual Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submittal on DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forwarded direct to Commander. US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, NJ 077003.

1-8. Items Comprising An Operable Equipment

Connectors, Receptacle, Electrical

U-187/G and U-187 A/G FSN 5935-682-0381

SECTION V						(6)				(7)		
(1)	(2)	(3)		(4)	(5)	30-DAY DS MAINT ALLOWANCE				ILLUSTRATION		
SMR	FEDERAL	DESCRIPTION		UNIT	QTY	INC	(A)	(B)	(C)	(D)	(A)	(B)
CODE	STOCK	REFERENCE NUMBER & MFR. CODE	USABLE ON CODE	OF	IN	IN	1-5	6-20	21-50	51-100	FIGURE	ITEM
	NUMBER			MEAS	UNIT						NO.	NO.
PAOZZ	5995-823-3262	CONTACT ASSEMBLY, ELECTRICAL MS-3227/G NO-REF-DESIG 52 MALE AND 52 FEMALE CONTACTS SMD159139 (80063)		EA	1	*	*	*	*			
PAOZZ	5935-883-4265	COVER, ELECTRICAL CONNECTOR NO-REF-DESIG UPPER HOUSING SMCL159171 (80063) BR6		EA	1	*	*	*	*			
PAOZZ	5935-580-5308	GASKET NO-REF-DESIG F/PANEL MTG SMB173834 (80063)		EA	1	*	*	*	*			
PAOZZ	5935-045-9832	HOUSING NO-REF-DESIG LOWER HOUSING SMCL173830 (80063) BR6		EA	1	*	*	*	*			
PCOZZ	5935-542-1431	PACKING, PREFORMED NO-REF-DESIG F/LOWER HOUSING SEAL SMB249788 (80063)		EA	1	*	*	*	*			
PCOZZ	5935-542-1433	PACKING, PREFORMED NO-REF-DESIG F/UPPER HOUSING SMB349789 (80063)		EA	1	*	*	*	*			
PAOZZ	5935-707-6820	RING, CONNECTING, COLLAR NO-REF-DESIG W/PROTRUDING EAR W/ONE BALL AND RETAININGSRING STAKED IN SMB173826 (80063)		EA	1	*	*	*	*			
PAOZZ	5935-793-9590	RING, CONNECTING, COLLAR NO-REF-DESIG W/ONE BALL AND RETAINING SPRING STAKED IN SMB349793 (80063) BR5		EA	1	*	*	*	*			
PADZZ	5935-688-4632	RETAINER, ELECTRICAL CONNECTOR NO-REF-DESIG HOLDS CONTACT ASSY IN HOUSING SMB173823 (80063) BR5		EA	2	*	*	*	*			
PADZZ	5305-719-5064	SCREW, MACHINE NO-REF-DESIG U/W RETAINER ASSY SS NO. 6-32, 0.417 IN LG MS51959-30 (96906) BR5		EA	4	*	*	*	*			
XDOZZ		SCREW, MACHINE NO-REF-DESIG F/BODY TO PANEL MTG SS NO. 8-32, 5/8 IN LG 1366-2-9 (99872) BR5		EA	6	*	*	*	*			
PADZZ	5305-054-6671	SCREW, MACHINE NO-REF-DESIGN F/BODY TO PANEL MTG FIL HD NO. 8-32, 5/8IN LG SMCL159173-1 (80063) BR6		EA	6	*	*	*	*			
PAOZZ	5310-933-8119	WASHER, LOCK NO-REF-DESIG SS F/NO. 8 PANEL MTG SCREW MS35339-137 (96906) BR5		EA	6	*	*	*	*			
XDOZZ		WASHER, LOCK NO-REF-DESIG F/PANEL MTG SCREW MS35337-32 (96906) BR6		EA	6	*	*	*	*			

(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)	
					30-DAY DS MAINT ALLOWANCE			30-DAY GS MAINT ALLOWANCE			1-YR	DEPOT	ILLUSTRATION	
SMR	FEDERAL STOCK	DESCRIPTION	UNIT OF MEAS	QTY INC IN UNIT	(A)	(B)	(C)	(A)	(B)	(C)	ALW PER 100 EQUIP	MAINT ALW PER 100 EQUIP	(A)	(B)
CODE	NUMBER	REFERENCE NUMBER & MFR. CODE USABLE ON CODE			1-20	21-50	51-100	1-20	21-50	51-100	CNTGCT	EQUIP	FIGURE NO.	ITEM NO.
PAOZZ	5995-823-3262	CONTACT ASSEMBLY, ELECTRICAL MS-' '27/G NO-REF-DESIG 52 MALE AND FEMALE CONTACTS SMD159139 (80063)	EA	1	*	*	*	*	*	*				3
PAOZZ	5935-883-4265	COVER, ELECTRICAL CONNECTOR NO-REF-DESIG. UPPER HOUSING SMC159171 (80063) BR6	EA	1	*	*	*	*	*	*				2
PAOZZ	5935-580-5308	GASKET NO-REF-DESIG F/PANEL MTG SMD173834 (80063)	EA	1	*	*	*	*	*	*				5
PAOZZ	5935-045-9832	HOUSING NO-REF-DESIG LOWER HOUSING SMC173830 (80063) BR6	EA	1	*	*	*	*	*	*				2
PCOZZ	5935-542-1431	PACKING, PREFORMED NO-REF-DESIG F/LOWER HOUSING SEAL SMB249788 (80063)	EA	1	*	*	*	*	*	*				10
PCOZZ	5935-542-1433	PACKING, PREFORMED NO-REF-DESIG F/UPPER HOUSING SMB349789 (80063)	EA	1	*	*	*	*	*	*				10
PAOZZ	5935-707-6820	RING, CONNECTING, COLLAR NO-REF-DESIG W/PROTRUDING EAR W/ONE BALL AND RETAININGSRING STAKED IN SMB173826 (80063)	EA	1	*	*	*	*	*	*				2
PAOZZ	5935-793-9590	RING, CONNECTING, COLLAR NO-REF-DESIG W/ONE BALL AND RETAINING SPRING STAKED IN SMB349793 (80063) BR5	EA	1	*	*	*	*	*	*				2
PAOZZ	5935-688-4632	RETAINER, ELECTRICAL CONNECTOR NO-REF-DESIG HOLDS CONTACT ASSY IN HOUSING SMB173823 (80063) BR5	EA	2	*	*	*	*	*	*				2
PAOZZ	5305-719-5064	SCREW, MACHINE NO-REF-DESIG U/W RETAINER ASSY SS NO. 6-32, 0.417 IN LG MS51959-30 (96906) BR5	EA	4	*	*	*	*	*	*				5
XDOZZ		SCREW, MACHINE NO-REF-DESIG F/BODY TO PANEL MTG SS NO. 8-32, 5/8 IN LG 1366-2-9 (99872) BR5	EA	6	*	*	*	*	*	*				
PAOZZ	5305-054-6671	SCREW, MACHINE NO-REF-DESIG F/BODY TO PANEL MTG FIL HD NO. 8-32, 5/8IN LG SMC159173-1 (80063) BR6	EA	6	*	*	*	*	*	*				5
PAOZZ	5310-933-8119	WASHER, LOCK NO-REF-DESIG SS F/NO. 8 PANEL MTG SCREW MS35338-137 (96906) BR5	EA	6	*	*	*	*	*	*				5
XDOZZ		WASHER, LOCK NO-REF-DESIG F/PANEL MTG SCREW MS35337-32 (96906) BR6	EA	6	*	*	*	*	*	*				

INDEX - FEDERAL STOCK SECTION IX

CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.		
5305-054-6671			5935-542-1433				
			5935-580-5308				
5305-719-5064			5935-688-4632				
			5935-707-6820				
5310-933-8119			5935-793-9590				
5935-045-9832			5935-883-4265				
5935-542-1431			5995-823-3262				
Reference No.	Mfg Code	Fig No.	Item No.	Reference No.	Mfg Code	Fig No.	Item No.
MS35337-32	96906			SMB349789	80063		
MS35338-137	96906			SMB349793	80063		
MS51959-30	96906			SMC159171	80063		
SMB173823	80063			SMC159173-1	80063		
SMB173826	80063			SMC173830	80063		
SMB173834	80063			SMD159139	80063		
SMB249788	80063			1366-2-9	99872		

By Order of the Secretary of the Army:

FRED C. WEYAND
General, *United States Army*
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

Active Army:

USASA (2)	WRAMC (1)
Dir of Trans (1)	ATS (1)
COE (1)	Fort Gordon (10)
TSG(1)	Fort Huachuca (10)
USAARENBD (1)	WSMR (1)
USAMB (5)	Fort Carson (5)
AMC (1)	Ft Richardson (ECOM Ofc) (2)
TRADOC (2)	Army Dep (1) except
ARADCOM (2)	LBAD (14)
ARADCOM Rgn (2)	SAAD (30)
OS Maj Comd (4)	TOAD (14)
LOGCOMDS (3)	ATAD (10)
MCOM (2)	USA Dep (2)
TECOM (2)	Sig Sec USA Dep (2)
USACC (4)	Sig Dep (2)
MDW (1)	SigFLDMS (1)
Armies (2)	USAERDAA (1)
Corps (2)	USAERDAW (1)
HISA (Ft Monmouth) (18)	MAAG (1)
Svc Colleges (1)	USARMIS (1)
USASESS (5)	Units org under fol TOE:
USAADS (2)	(1 copy each unit)
USAFAS (2)	11-16
USAARMS (2)	11-97
USAIS (2)	11-98
USAES (2)	11-117
USAINTCS (3)	11-500 (AA-AC)

NG: None

USAR: None

For explanation of abbreviations used see AR 310-50.

GPO 903-869

PIN: 014426-000

This fine document...

Was brought to you by me:



[Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals

- Sincerely
Igor Chudov
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)