### ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS CHARGERS, BATTERY PP-1660/G AND PP-1660A/G FSN 6130-669-6659

Headquarters Department of the Amy, Washington, DC. 28 June 1974

Current as of November 1973

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope	1-1	2
		2
Explanation of columns	1-3	2
Special information	1-4	4
Location of renair parts	1-5	4
Abbreviations (Not applicable)	1-6	4
Reporting of equipment publication improvements II. PRESCRIBED LOAD ALLOWANCE (Not applicable)	1-7	4
III. REPAIR PARTS LIST		6
IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable) V. INDEX — FEDERAL NUMBER AND REFERENCE NUMBER CROSS-		
REFERENCE TO FIGURE AND ITEM NUMBER	••••	7

Code

#### 1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the PP-1660/G and PP-1660A/G. The PCCN for the equipment is GTBAAR for all models.

#### 1-2. General

This repair parts and special tools list is divided into the following sections:

a. *Prescribed Load Allowance (PLA) - Section II.* Not applicable.

*b. Repair Parts List* – *Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

c. Special Tools, Test and Support Equipment – Section IV. Not applicable.

*d. Index – Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number – Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

#### 1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists -

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) Source code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are -

code

#### Explanation

- PA Item procured and stocked for anticipated or known usage.
- PB Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
- PC- Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
- PD- Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional

Explanation

initial issues or out fittings. Not subject to automatic replenishment.

- PE Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
- PF Support equipment which will not be stocked but which will be centrally procured on demand.
- PG Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
- KD An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
- KF An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
- KB Item included in both a depot overhaul/repair kit and a maintenance kit.
- MO Item to be manufactured or fabricated at organizational level.
- MF Item to be manufactured or fabricated at direct support maintenance level.
- MH Item to be manufactured or fabricated at general support maintenance level.
- MD Item to be manufactured or fabricated at depot maintenance level.
- AO Item to be assembled at organizational level.
- AF Item to be assembled at direct support maintenance level.
- AH Item to be assembled at general support maintenance level.
- AD Item to be assembled at depot maintenance level.
- XA Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
- XB Item is not procured or stocked. If not available through salvage, requisition.

Code

#### Explanation

- XC Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
- XD Support items can be requisitioned with justification.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 70042.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Cede Format as follows —

(a) **Use(third position).** The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

#### code Application/Explanation

O - Support item is removed, replaced, used at the organizational level of maintenance. NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

- F Support item is removed, replaced, used at the direct support maintenance level.
- H Support item is removed, replaced, used at the general maintenance.
- D Support items that are removed, replaced, used at depot only.

**(b) Repair (fourth position).** The maintenance de entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions} When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code —

#### Application/Explanation

Code

- O The lowest maintenance level capable of complete repair of the support item is the organizational level.
- F The lowest maintenance level capable of

Code

Application/Explanation

- complete repair of the support item is direct support.
- H The lowest maintenance level capable of complete repair of the support item is general support.
- D The lowest maintenance level capable of complete repair of the support item is the depot level.
- L Repair restricted to designated Specialized Repair Activity.
- Z Non-repairable. No repair is authorized.
- B No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows —

#### Code

z - Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.

Explanation

- O Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
- F Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
- H Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
- D Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
- L Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
- A Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

*b. Federal Stock Number.* Indicates the Federal stuck number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

*d.* Unit of Measure (UIM). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., e.a, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. *Quantity Incorporated in Unit.* This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. 15-Day Organizational Maintenance Allowance.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-TMDE, Fort Monmouth, N.J., 07703. Any changes approved will be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TM DE, and other equipment.

*g. Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM TM 11-6130-227-12.

(2) *Item number.* Indicates the item number or reference designation used to reference the item in the illustration.

#### 1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are -

Code	Used on	
A7C	PP-1660/G	
B29	PP-1660A/G	

*b.* The following publication pertains to the equipment and its components:

TM 11-6130-227-12 Operator and Organizational Maintenance Manual: Charger, Battery PP-1660/G.

#### 1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

*b.* When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.

*d.* When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

#### 1-6. Abbreviations

Not applicable.

# 1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-TMDE, Fort Monmouth, N.J., 07703.

(Next printed page is 6)

SECTION III

TM11-6130-227-20P

	NIZATIONAL	(7)
SMR CODE  FEDERAL STOCK NUMBER  DESCRIPTION  JNI OF  INC OF  INC IN  (o)  (b)    'AD22  5940-884-0094  :LIP, ELECTRICAL BATTERYCLIP ALLIGATOR TYPE 2 IN M X 5 IN LG X 1-1/16 IN W LIA (76545)  CODE  USABLE ON CODE  EA  2  •		H
CODE  NUMBER  REFERENCE NUMBER & MFR CODE  USABLE ON CODE  UNIT  1.5  6-20  2    'AD22  5940-884-0094  :LIP, ELECTRICAL BATTERYCLIP ALLIGATOR TYPE 2  EA  2  •    IN  H X 5  IN  LG X 1-1/16  IN  w    LIA  (76545)	(6) (0)	(a) (b)
IN H X 5 IN LG X 1-1/16 IN W L1A (76545)	21. 50 51-100	FIGUR ITEM
	• *	1 P2
ONTI-1/2 IN DIA X 1-5/8 IN LG O/A	* *	1 PI
'AD22    5935-201-8467    i277 (74545)    A7C      'DNNECTOR, PLUG, ELECTRICAL PL3 CONT I-112    EA    1      IN DIA X 1-5/8IN LG O/A    15AMP, 125V 0.562 IN    EA    1      JA O/A    1    4    1    4	<b>₽</b> ×	PI
PADZZ      5935-802-5046      5264 (74545 )      B29      B29 <td>+ +</td> <td>Eć</td>	+ +	Eć
AUZZ 5935-802-8043 ACK, TIP E2 P/O CABLE ASSEMBLY EA 1 * *	* *	E2
'AD22 5335-813-Y LU7 (NUB MP12 RD PHENCLIC L-1/a IN OD X 9/16 IN THK EA 2 * *	* 1	IP 12
AOZZ 5355-813-9107 NOB MP13 R D PHENOLIC 1-1/8 IN O D X 9/16 IN THK IA EF * *	* *	IP 13
'AD22    5355-823-9888    (NDB MP11 RD PHENOLIC 1-5/8 IN O D x 7/8 IN T H K . = A    1    *      'AD22    5355-823-9888    (NDB MP11 RD PHENOLIC 1-5/8 IN O D x 7/8 IN T H K . = A    1    *	* 1	P11
ADZZ 5316-8J4-2409 (JT, SPECIAL H14	* *	Н14
'A022 5310-804-2410 (UT, SPECIAL H15 EA 1 * *	* *	H15
PA02Z    5940-884-0094    XLIP, ELECTRICAL BATTERYCLIP ALLIGATOR TYPE 2 IN H X 5    EA    2    E	* *	1 P3

#### SECTION

v

#### FIGURE **LTEM** FIGURE ITEM STUCK NUMBER NU. ND. STOCK NUMBER NO. NO. 5310-804-2409 H14 5935-201-8467 P1 5310-804-2410 H15 5935-802-8046 E6 5355-813-9107 MP12 5935-802-8048 E2 5355-313-9107 MP13 5935-888-7319 PL 1 5355-323-9868 MPII 5940-884-0094 1 P 3 5940-884-0094 1 P2 MFR FIG. ITEM CODENO. NO. REFERENCE REFERENCE FIG. ITEM MER NU. CODE ΝΟ. NO. NO. R8200 86797 MP12 ∠ 543-004 82386 E2 R8200 86797 MP13 2558-001 82386 H15 114 76545 1 P2P3 2558-002 82386 H14 1901 82386 MPIL 5 264 74545 P1 2543-002 82386 Εb 5277 74545 1 P1

#### INUEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE A N D ITEM NUMBER

#### Official:

VERNE L. BOWERS Major General, United States Army The Adjutant General

#### DISTRIBUTION:

Active Army:

USASA (2) CNGB (1) Dir of Trans (1) COE (1) **TSG** (1) **USAARENBD** (1) **USAMB (10)** AMC(1) TRADOC (2) ARADCOM (2) ARADCOM Rgn (2) OS Maj Comd (4) LOGCOMDS (3) MICOM (2) TECOM (2) USACC (4) MDW (1) Armies (2) Corps (2) HISA (18) Svc Colleges (1) USASESS (5) USAADS (2) USAFAS (2) USAARMS (2) USAIS (2) USAES (2)

USAINTCS (3) WRAMC (1) ATS (1) Ft Gordon (10) Ft Huachuca (10) WSMR (1) Ft Carson (5) Ft Richardson (ECOM Ofc) (2) Army Dep (1) except LBAD (14) SAAD (30) TOAD (14) ATAD (10) GENDEP (2) Sig Sec GENDEP (2) Sig Dep (2) SigFLDMS (1) USAERDAA (1) **USAERDAW** (1) MAAG (1) USARMIS (1) Units org under fol TOE: (1 cy each) 11-500 (AA-AC) 29-134 29-136

NG & USAR: None For explanation of abbreviations used, see AR 310-50.

\*U.S. Government PRINTING OFFICE 1993- 388-421/41149

#### CREIGHTON W. ABRAMS General, United States Army Chief of Staff

DOPE A CAREF	RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS SOMETHING WRONG WITH PUBLICATION FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS) FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS) ADDUT IT ON THIS FORM. ULLY TEAR IT OUT, FOLD IT ROP IT IN THE MAIL.
	PUBLICATION DATE PUBLICATION TITLE
BE EXACT PIN-POINT WHERE IT	IN THIS SPACE, TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT.
PRINTED NAME, GRADE OR TITLE AN	ID TELEPHONE NUMBER SIGN HERE
DA 1 JUL 79 2028-2	PREVIOUS EDITIONSP.SIF YOUR OUTFIT WANTS TO KNOW ABOUT YOURARE OBSOLETE.RECOMMENDATION MAKE A CARBON COPY OF THISAND GIVE IT TO YOUR HEADQUARTERS.

This fine document...

Was brought to you by me:



## Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<u>http://www.liberatedmanuals.com/</u>>Free Military and Government Manuals</A>

Sincerely
 Igor Chudov
 <u>http://igor.chudov.com/</u>
 Chicago Machinery Movers