

# DEPARTMENT OF THE ARMY TECHNICAL MANUAL

## ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS) MULTIMETER AN/URM-105 (INCLUDING MULTIMETER ME-771U) FSN 6625-561-2036

Headquarters, Department of the Army, Washington, D.C.  
15 August 1973

*Current as of January 1973*

	Paragraph	Page
SECTION I. INTRODUCTION		
Scope . . . . .	1-1	2
General . . . . .	1-2	2
Explanation of columns . . . . .	1-3	2
Special Information . . . . .	1-4	4
Location of repair parts . . . . .	1-5	4
Abbreviations (Not applicable) . . . . .	1-6	5
Reporting of equipment publication improvements . . . . .	1-7	5
II. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III. REPAIR PARTS LIST . . . . .		6
IV. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
V. REPAIR PARTS LIST . . . . .		7
VI. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
VII. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER		
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER . . . . .		9

THIS PUBLICATION IS A COURTESY QUICK COPY  
FROM THE UNITED STATES ARMY PUBLICATIONS  
DISTRIBUTION CENTER, ST. LOUIS , MISSOURI,  
TO MEET YOUR NEEDS WHILE WE REPLENISH OUR  
REGULAR STOCK.

\*This manual supersedes TM 11-6625-203-20P, 29 October 1962 and TM 11-6625-203-45P, 26 October 1962.

# SECTION I INTRODUCTION

## 1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational, direct support, general support, and depot maintenance of the AN/URM-105. The PCCN for the AN/URM-105 is GTEAAI for all models.

## 1-2. General

This repair parts and special tools list is divided into the following sections:

- a. *Prescribed Load Allowance (PLA)-Section II.* Not applicable.
- b. *Repair Parts List-Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.
- c. *Special Tools, Test and Support Equipment--section IV.* Not applicable.
- d. *Repair Parts List-Section V.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.
- e. *Special Tools Test and Support Equipment--section VI.* Not applicable.
- f. *Index--Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number--Section VII.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

## 1-3. Explanation of Columns

The following provide. an explanation of columns found in the tabular list.

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

Code	Explanation
PA—	Item procured and stocked for anticipated or known usage.
PB—	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC—	Item procured and stocked and which other-

Code	Explanation
	wise would be coded PA except that it is deteriorative in nature.
PD—	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE—	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF—	Support equipment which will not. be stocked but which will be centrally procured on demand.
PG—	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD—	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF—	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general levels of maintenance.
KB—	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO—	Item to be manufactured or fabricated at organizational level.
MF—	Item to be manufactured or fabricated at direct support maintenance level.
MH—	Item to be manufactured or fabricated at general support maintenance level.
MD—	Item to be manufactured or fabricated at depot maintenance level.
AO—	Item to be assembled at organizational level.
AF—	Item to be assembled at direct support maintenance level.
AH—	Item to be assembled at general support maintenance level.
AD—	Item to be assembled at depot maintenance level.
XA—	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB—	Item is not procured or stocked. If not available through salvage, requisition.

<i>Code</i>	<i>Explanation</i>
XC—	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD—	Support items can be requisitioned with justification.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support item as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O—	Support item is removed, replaced, used at the organizational level of maintenance.

#### NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

<i>Code</i>	<i>Application/Explanation</i>
F—	Support item is removed, replaced, used at the direct support maintenance level.
H—	Support item is removed, replaced, used at the general support maintenance.
D—	Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment /systems or when a code is entered, this position will contain one of the following maintenance codes

as assigned by the service(s) that require the code—

<i>Code</i>	<i>Application/Explanation</i>
O—	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F—	The lowest maintenance level capable of complete repair of the support item is direct support.
H—	The lowest maintenance level capable of complete repair of the support item is general support.
D—	The lowest maintenance level capable of complete repair of the support item is depot level.
L—	Repair restricted to designated Specialized Repair Activity.
Z—	Non-repairable. No repair is authorized.
B—	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows-

<i>Code</i>	<i>Explanation</i>
Z—	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O—	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F—	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
H—	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D—	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L—	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A—	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal contents high dollar value, critical material or hazardous material).

b. *Federal Stock Number* Indicates the Federal

stock number assigned to the item and will be used for requisitioning purposes.

*c. Description* Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

*d. Unit of Measure (U/M).* Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea. in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

*e. Quantity Incorporated in Unit.* This column indicates the quantity of the item used in the equipment.

*f. 15-Day Organizational Maintenance Allowances.*

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL MA-CRA, Fort Monmouth NJ 07703.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other support equipment.

*g. 30-Day DS/GS Maintenance Allowances.*

#### NOTE

Allowances in GS column are for GS main. tenance only.

( 1 ) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is basal on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the special tool hats section for special tools TMDE, and other support equipment.

*h. 1 Year Allowances Per 100 Equipments/Contingency Planning Purposes.* Column intentionally left blank.

*i. Depot Maintenance Allowance Per 100 Equipments* This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

*j. Illustration*

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM 11-6625-203-12 and TM 11-6625-203-35.

(2) *Item number.* Indicates the item number or reference designation used to reference the item in the illustration.

#### 1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are—

Code	Used on
AE9	AN/URM-105

b The following publication pertain to the AN/URM-105 and its components:

TM 11.6625-203-12	Operator and Organizational Main. tenance: Multi meter AN/URM-105 Including Multimeter ME-77/U.
TM 11-6625-203-35	Field and Depot Maintenance Manual: Multimeter AN/URM-105 Including Multimeter ME-77/U

#### 1-5. Location of Repair Parts

a This manual contains one cross-reference index (see VII) and to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec VII), and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec III and V)

and locate the figure number (col 7a—20P, 10a—34P) and item number or reference designation (col 7b-20P, 10b—34P) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b—20P and 10a and 10b—34P, of the repair parts list (see III and V) until the item is located.

d. When the FSN, reference number, figure number, and item number are not known, scrutinize column 3 of the repair parts list (see III and V), which is arranged in alphabetical order.

## **1-6. Abbreviations**

Not applicable.

## **1-7. Reporting of Equipment Publication Improvements.**

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CRA, Fort Monmouth, NJ, 07703.

## SECTION III

(1)	(2)	(3)		(4)	(5)	(6)		(7)
SMR	FEDERAL	DESCRIPTION		UNIT	QTY.	15-DAY	ORGANIZATIONAL	ILLUSTRATION
CODE	STOCK			OF	IN	MAINTENANCE	ALW	(A) (B)
	NUMBER	REFERENCE NUMBER & MFR CODE	USABLE ON CODE	MEAS	UNIT	1-5	6-20	21-50
						51-100		FIGURE
								ITEM
								NO.
								NO.
PAOZZ	5940-702-5256	CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP)		EA	1	*	*	*
		SMC145744-1 (800631						
PAOZZ	5940-702-5240	CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP)		EA	1	*	*	*
		SMC145746-2 (80063)						
PAOZZ	6625-887-9910	CLIP ASSEMBLY NO-REF-DESIG (INSTALLED IN EQUIP)		EA	2	*	*	*
		SCOL20735 (80063)						
PAOZZ	6625-887-9140	COVER, TEST SET NO-REF-DESIG		EA	1	*	*	*
		SMO145727 (80063)						
PAOZZ	5330-847-9928	GASKET NO-REF-DESIG		EA	1	*	*	*
		SMO145725 (80063)						
PAOZZ	5970-892-3583	INSULATOR NO-REF-DESIG		EA	1	*	*	*
		SC882764-1 (80063)						
PAOZZ	5970-892-3584	INSULATOR NO-REF-DESIG		EA	1	*	*	*
		SC682764-3 (80063)						
PAOZZ	5355-855-5184	KNOB NO-REF-DESIG		EA	1	*	*	*
		A20109 (91802)						
PAOZZ	5355-823-9886	KNOB NO-REF-DESIG		EA	1	*	*	*
		SCC22125 (80063)						
PAOZZ	6625-655-8045	HOLDER, SPRING NO-REF-DESIG AUTOMATIC		EA	1	*	*	*
		39-301972 (70779)						
PAOZZ	5305-655-6645	SCREW,MACHINE NO-REF-DESIG NYLON		EA	1	*	*	*
		20-301967 (842471)						
PAOZZ	6625-395-9313	TIP, TEST PROD NO-REF-DESIG		EA	2	*	*	*
		SNC 82761 (80063)						

TM11-6625-203-24P															
SECTION V	(1)	(2)	(3)	(4)	(5)	(6)			(7)			(8)	(9)	(10)	
			DESCRIPTION		QTY	30-DAY DS MAINT			30-DAY GS MAINT			1-YR	DEPOT	ILLUSTRATION	
					INC	(A)	(B)	(C)	(A)	(B)	(C)	ALW PER	MAINT	(A)	(B)
SMR	FEDERAL				IN							100			
CODE	STOCK			USABLE ON CODE	MEAS	UNIT	1-20	21-50	51-100	1-20	21-50	51-100	CNTGCY	ALW PER	FIGURE ITEM
	NUMBER		REFERENCE NUMBER & MFR. CODE											100	
PAHZZ	6625-887-9151		BRACKET NO-REF-DESIG D67-2013-1020 (34855)		EA	1				*	*	*	2		
PAHZZ	6625-887-9152		CASE, MULTIMETER NO-REF-DESIG SMD145727 (80063)		EA	1	*	*	*	*	*	*	2		1
PAOZZ	5940-702-5256		CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP)		EA	1	*	*	*	*	*	*	3		1
PAOZZ	5940-702-5260		SMC145746-1 (80063) CLIP, ELECTRICAL NO-REF-DESIG (INSTALLED IN EQUIP)		EA	1	*	*	*	*	*	*	3		1
PAOZZ	6625-887-9910		SMC145746-2 (80063) CLIP ASSEMBLY NO-REF-DESIG (INSTALLED IN EQUIP)		EA	2	*	*	*	*	*	*	3		1
PAOZZ	6625-887-9148		SCDL20735 (80063) COVER, TEST SET NO-REF-DESIG		EA	1	*	*	*	*	*	*	2		1
PAOZZ	5330-887-9928		SMD145727 (80063) GASKET NO-REF-DESIG		EA	1	*	*	*	*	*	*	5		
PAOZZ	5970-892-3583		SMB145725 (80063) INSULATOR NO-REF-DESIG		EA	1	*	*	*	*	*	*	1		
PAOZZ	5970-892-3584		SCV82764-1 (80063) INSULATOR NO-REF-DESIG		EA	1	*	*	*	*	*	*	1		
PAOZZ	5355-855-5184		SCB82764-3 (80063) KNOB NO-REF-DESIG		EA	1	*	*	*	*	*	*	3		
PAOZZ	5355-823-9886		A2105 (91802) KNOB NO-REF-DESIG		EA	1	*	*	*	*	*	*	3		
PAHZZ	6625-656-2321		SCC22125 (80063) MULTIMETER REPLACEMENT NO-REF-DESIG		EA	1	*	*	*	*	*	*	3		
PAHZZ	6130-264-6050		SMD145751 (80063) RECTIFIER, METALLIC CR1 CX2E20-139		EA	1				*	*	*	3		6 CR1
PAHZZ	5905-702-1152		SMB145759 (83264) RESISTOR, FIXED, FILM R16		EA	1				*	*	*	3		6 R16
PAHZZ	5905-577-1780		RN65849R9F (81349) RESISTOR, FIXED, FILM R15		EA	1				*	*	*	3		6 R15
PAHZZ	5905-577-1787		RN60B2260F (81349) RESISTOR, FIXED, FILM R10		EA	1				*	*	*	3		6 R10
PAHZZ	5905-824-3083		RN60B8660F (81349) RESISTOR, FIXED, FILM R19		EA	1				*	*	*	3		6 R19
PAHZZ	5905-833-3872		RN60B8870F (81349) RESISTOR, FIXED, FILM R17		EA	1				*	*	*	3		6 R17
PAOZZ	6625-655-8045		RN60B1151F (81349) HOLDER, SPRING NO-RER-DESIG AUTOMATIC		EA	1	*	*	*	*	*	*	3		6
PAHZZ	5905-581-6914		39-301972 (70779) RESISTOR, FIXED, FILM R18		EA	1				*	*	*	3		6 R18
PAHZZ	5905-581-6913		RN6081211F (81349) RESISTOR, FIXED, FILM R12		EA	1				*	*	*	3		6 R12
PAHZZ	5905-824-8534		RN60B1501F (81349) RESISTOR, FIXED, FILM R9		EA	1				*	*	*	3		6 R9
PAHZZ	5905-983-5946		RN60B1691F (81349) RESISTOR, FIXED, FILM R8		EA	1				*	*	*	3		6 R8
PAHZZ	5905-577-6736		RN6089091F (81349) RESISTOR, FIXED, FILM R20		EA	1				*	*	*	3		6 R20
PAHZZ	5905-581-7626		RN60B1002F (81349) RESISTOR, FIXED, FILM R1		EA	1				*	*	*	3		6 R1
			RN60B1502F (81349)												

SECTION V															
(1)	(2)	(3)	(4)	(5)	(6)	(7)			(8)	(9)	(10)				
		DESCRIPTION			30-DAY DS MAINT	30-DAY GS MAINT			1-YR	DEPOT	ILLUSTRATION				
				QTY	ALLOWANCE	ALLOWANCE			ALW PER	MAINT					
SMR	FEDERAL			INC	(A)	(B)	(C)	(A)	(B)	(C)	100	ALW PER	(A)	(B)	
CODE	STOCK	REFERENCE NUMBER & MFR. CODE	USABLE ON CODE	OF	IN						EQUIP	100	FIGURE	ITEM	
	NUMBER			MEAS	UNIT	1-20	21-50	51-100	1-20	21-50	51-100	CNTGCTY	EQUIP	NO.	NO.
PAHZZ	5905-691-0572	RESISTOR, FIXED, FILM R21 RN60B2872F (81349)		EA	1				*	*	*	3		6	R21
PAHZZ	5905-725-2120	RESISTOR, FIXED, FILM R6 RN60B9092F (81349)		EA	1				*	*	*	3		6	R6
PAHZZ	5905-723-4380	RESISTOR, FIXED, FILM R2 RN60B1783F (81349)		EA	1				*	*	*	3		6	R2
PAHZZ	5905-655-1991	RESISTOR, FIXED, FILM R22 RN60B3013F (81349)		EA	1				*	*	*	3		6	R22
PAHZZ	5905-655-3687	RESISTOR, FIXED, FILM R5 900,000 OHMS PORM1PCT 2W SMC145753-18 (81349)		EA	1				*	*	*	3		6	R5
PAHZZ	5905-655-3716	RESISTOR, FIXED, FILM R3 1-8 MEG PORM1PCT 1-2W 33-301907-17 (84247)		EA	1				*	*	*	3		6	R3
PAHZZ	5905-813-5382	RESISTOR, FIXED, FILM R4 18 MEG PORM1PCT 2W SMC145753-19 (80063)		EA	1				*	*	*	3		6	R4
PAHZZ	5905-815-3798	RESISTOR, FIXED, FILM R13 RN65B24R9F (81349)		EA	1				*	*	*	3		6	R13
PAHZZ	5905-577-9710	RESISTOR, FIXED, WIREWOUND R14 4 OHMS PORM1PCT 1-4W SMB145761 (80063)		EA	1				*	*	*	3		6	R14
PAHZZ	5905-866-0263	RESISTOR, VARIABLE R11 20,000 OHMS, PORM20PCT 1-2W SMB145757 (80063)		EA	1				*	*	*	3		6	R11
PAOZZ	5305-655-6645	SCREW, MACHINE NO-REF-DESIG NYLON 20-301967 (84247)		EA	1	*	*	*	*	*	*	5			
PAHZZ	5930-887-7796	SWITCH ASSEMBLY S1 SMD145771 (80063)		EA	1				*	*	*	5			S1
PAOZZ	6625-395-9313	TIP, TEST PROD NO-REF-DESIG SCC82761 (80063)		EA	2	*	*	*	*	*	*	3			
PAHZZ	6145-160-5027	WIRE, ELECTRICAL NO-REF-DESIG WS16U (81349)		FT	4				*	*	*	8			
PAHZZ	6145-164-6952	WIRE, ELECTRICAL NO-REF-DESIG WS17U (81349)		FT	4				*	*	*	8			



## SECTION VII

## INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER

## CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.		
5305-655-6645			5905-824-3083	6	R19		
5330-887-9928			5905-824-8534	6	R9		
5365-823-9886			5905-833-3872	6	R17		
5355-855-5184			5905-866-0263	6	R11		
5905-577-1780	6	R15	5905-983-5946	6	R8		
5905-577-1787	6	R10	5930-887-7796		S1		
5905-577-6736	6	R20	5940-702-5256	1			
5905-577-9710	6	R14	5940-702-5260	1			
5905-581-6913	6	R12	5970-892-3583				
5905-581-6914	6	R18	5970-892-3584				
5905-581-7626	6	R1	6130-264-6050	6	CR1		
5905-655-1981	6	R22	6145-160-5027				
5905-655-3687	6	R5	6145-164-6952				
5905-655-3716	6	R3	6625-395-9313				
5905-691-0572	6	R21	6625-655-8045				
5905-702-1152	6	R16	6625-656-2321				
5905-723-4380	6	R2	6625-887-9148	1			
5905-725-2120	6	R6	6625-887-9151				
5905-813-5382	6	R4	6625-887-9152	1			
5905-815-3798	6	R13	6625-887-9910	1			
REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.	REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.
A2105	91802			SCC22125	80063		
D67-2013-1020	34855			SCC82761	80063		
RN60B1002F	81349	6	R20	SCDL20735	80063	1	
RN60B1151F	81349	6	R17	SMB145725	80063		
RN60B1211F	81349	6	R18	SMB145757	80063	6	R11
RN60B1501F	81349	6	R12	SMB145759	83264	6	CR1
RN60B1502F	81349	6	81	SMB145761	80063	6	R14
RN60B1691F	81349	6	R9	SMC145746-1	80063	1	
RN60B1783F	81349	6	R2	SMC145746-2	80063	1	
RN60B2260F	81349	6	R15	SMC145753-18	81349	6	R5
RN60B2872F	81349	6	R21	SMC145753-19	80063	6	R4
RN60B3013F	81349	6	R22	SMD145727	80063	1	
RN60B8660F	81349	6	R10	SMD145751	80063		
RN60B8870F	81349	6	R19	SMD145771	80063		S1
RN60B9091F	81349	6	R8	WS16U	81349		
RN60B9092F	81349	6	R6	WS17U	81349		
RN65B24R9F	81349	6	R13	20-301967	84247		
RN65B49R9F	81349	6	R16	33-301907-17	84247	6	R3
SCB82764-1	80063			39-301972	70779		
SCB82764-3	80063						

By Order of the Secretary of the Army:

**CREIGHTON W. ABRAMS**  
*General United States Army*  
*chief of staff*

Official:

**VERNE L. BOWERS**  
*Major General United States Army*  
*The Adjutant General*

Distribution:

Active Army:

USASA (2)  
CNGB (1)  
ACSC-E (2)  
USAARENBD (2)  
USAMB (10)  
AMC (1)  
MICOM (2)  
TECOM (2)  
USASTRATCOM (4)  
HISA (ECOM) (18)  
CONARC (5)  
ARADCOM (2)  
ARADCOM Rgn (2)  
OS Maj Cored (4)  
LOGCOMD (5)  
USACDCEC (5)  
MDW (1)  
Armies (2)  
Corps [2]  
Div (1)  
Regt (1)  
Bde (1)  
Bn (1)  
Instl (2) except  
Ft Gordon (10)  
Ft Huechuca (10)  
Ft Carson (10)

Svc Colleges (2)  
USASESS (5)  
USAINTS (2)  
USAADS (2)  
USAFAS (2)  
UBAARMS (2)  
USAIS (2)  
USAES (2)  
AD (2) 1 XWPI  
SAAD (30)  
LBAD (14)  
TOAD (14)  
ATAD (10)  
LEAD (7)  
Gen Dep (2)  
Sig Sec. Gen Dep (2)  
Sig Dep (5)  
MAAG (1)  
WRAMC (1)  
USARMIS (1)  
USERDAA (1)  
USAERDAW (1)  
Sig FLDMS (1)  
Ft Richardson (ECOM Oft) (2)  
Units org under fol TOE: -1 ea.  
11-158 29.136  
29-134

NG: State AG (3): Units-Same as Active Army.

USAR: None.

For explanation of abbreviations used, see AR 310-50.

☆ U.S. GOVERNMENT PRINTING OFFICE : 1965 0 - 491-202 (20511)



**019411-000**

This fine document...

Was brought to you by me:



### [Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to [liberatedmanuals.com](http://liberatedmanuals.com), so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals</A>

- Sincerely  
Igor Chudov  
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)