TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS
FOR

RADIO TEST SET AN/PRM-32A (NSN 6625-01-013-9900)

TECHNICAL MANUAL
No. 11-6625-2632-24P-1

HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, D.C. 5 December 1978

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS FOR

RADIO TEST SET AN/PRM-32A (NSN 6625-01-013-9900)

Current as of 1 August 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self-addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Forms 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-ME-MQ, Fort Monmouth, NJ 07703.

In either case a reply will be furnished direct to you.

Table of Contents

			Illus
		Page	Figure
SECTION I	Introduction	1	
ΙΙ	Repair Parts List	5	
GROUP 00	Radio Test Set AN/PRM-32A	5	1
	Cover Assembly	7	2
	Panel Assembly	9	3
	Case Assembly		4
	Shielded Box Assembly		5
01	Bulk Materials	. 14	
SECTION III	Special Tools List (Not Applicable)		
IV	National Stock Number and Part Number		
	Index	15	

SECTION I

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the AN/PRM-32A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

- a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed at end of Section II.
- b. Section III. Special Tools List. Not applicable.
- c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

- a. Illustration. This column is divided as follows:
- (1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.
- (2) *Item number.* The number used to identify item called out in the illustration.
- b. Source, Maintenance, and Recoverability (SMR) Codes.
- (1) Source *code*. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

- PA-Item procured and stocked for anticipated or known usage.
- PD-Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfitting. Not subject to automatic replenishment.
- MH-Item to be manufactured or fabricated at general support maintenance level.
- XD-A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

- (2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:
- (a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code Application/Explanation

- O-Support item is removed, replace, used at the organizational level.
- H-Support item is removed, replaced, used at the general support level.
 - (b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code Application/Explanation

- H-The lowest maintenance level capable of complete repair of the support item is the general support level.
- **Z**-Nonreparable. No repair is authorized.
- (3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the dispo-

1

TM 11-6625-2632-24P-1

sition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability

codes Definition

- Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
- H-Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
- c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.
- d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock-numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

- *e.* Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.
- f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.
- g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.
- h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information


National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications and Electronics Material Readiness Command, ATTN: DRSEL-MM, Fort Monmouth, NJ 07703 for the part required to support your equipment.

5. How to Locate Repair Parts


- a. When National stock number or part number is unknown.
- (1) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.
- (2) *Second.* Find the illustration covering the functional group to which the item belongs.
- (3) Third. Identify the item on the illustration and note the illustration figure and item number of the item.
- (4) Fourth. Using the Repair Parts Listing, find the figure and item number noted on the illustration.
- *b.* When National stock number or part number is known.
- (1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.
- (2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations


Not applicable.

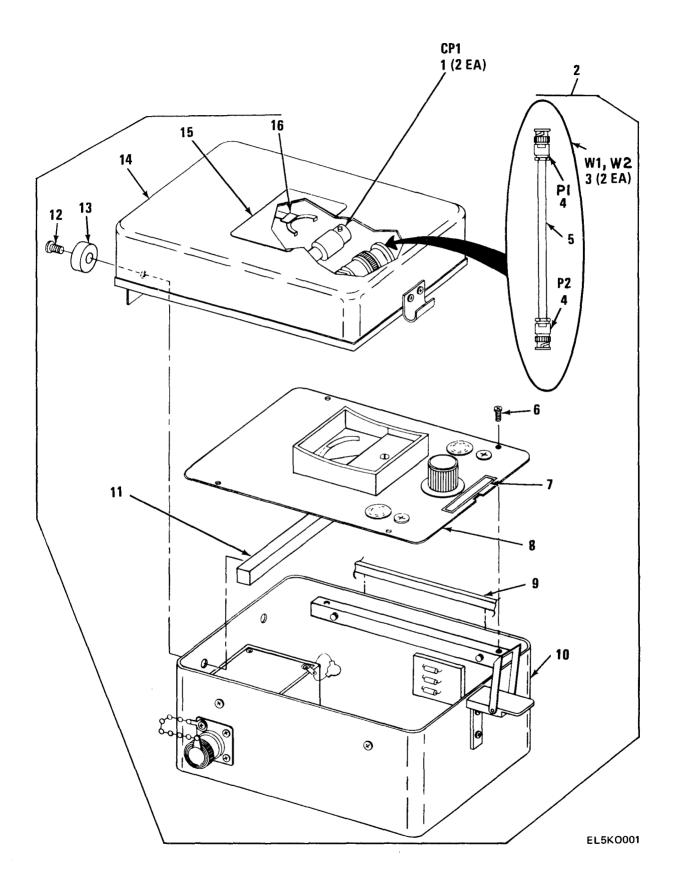


SECTIO (1) ILLUST (A)	N II RATION (B)	(2)	(3) NATIONAL	(4)	(5)	TM11-6625-2632-24P-1 (6) DESCRIPTION		(7)	(8) QTY INC
FIG NO	ITEM NO	SMR CODE	STOCK NUMBER	PART NUMBER	FSCM		USABLE ON CODE	U/M	IN UNIT
						GROUP 00 RADIO TEST SET AN/PRM-32A			
1	1	PAOZZ	5820-00-478-7054	MX8802PRC90	80058	ADAPTER, ANTENNA TES		EA	2
1	2	POOHH		A3-08-0006	18560	TEST SET ASSEMBLY		EA	1
1	3	XDOHH		A3-06-0639	18560	CABLE ASSEMBLY		EA	2
1	4	PAHZZ		UG-88C/U	96906	CONN, PLUG, ELEC		EA	4
1	5	PAHZZ		RG-58/U	96906	CABLE, RF		IN	7
1	6	PAHZZ	5305-00-054-5637	MS51957-3	96906	SCREW, MACHINE		EA	4
1	7	XDOZZ		A1-20-0042	18560	PLATE, IDENT		EA	1
1	8	XDHHH		A3-06-0644	18560	PANEL ASSEMBLY		EA	1
1	9	MHHZZ		A1-25-0033	18560	RUBBER CHANNEL (MFD FROM P/N X661)		IN	18
1	10	XDHHH		A3-06-0638	18560	CASE ASSEMBLY		EA	1
1	11	XDHZZ		A1-17-0584	18560	BAR, HINGE		EA	1
1	12	PAHZZ	5305-00-054-6669	MS51957-44	96906	SCREW, MACHINE		EA	2
1	13	XDHHH	5340-00-209-9352	2192	83330	BUMPER, RUBBER		EA	2
1	14	XDHHH		A3-06-0630	18560	COVER, ASSEMBLY		EA	1
1	15	XDOZZ		A1-20-0370	18560	PLATE, IDENT		EA	1
1	16	XDOZZ		T1-04-0001	18560	WRENCH, SPANNER		EA	1

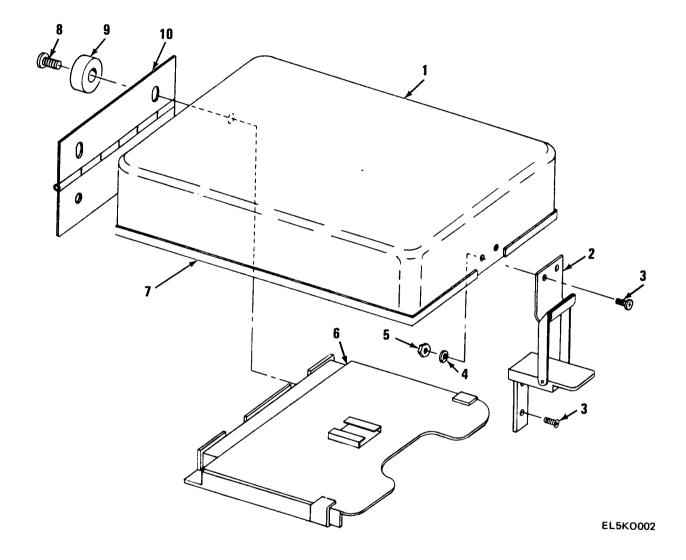


SECTION (1) ILLUSTR	ATION	(2)	(3)	(4)	(5)	TM11-6625-2632-24P-1 (6)		(7)	(8) QTY
(A) FIG NO	(B) ITEM NO	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION	USABLE ON CODE	U/M	INC IN UNIT
2	1	XDHZZ		A1-06-0314	18560	COVER		EA	1
2	2	XDHZZ		A1-05-0314	18560	CATCH ASSEMBLY		EA	1
2	3	PAHZZ	5305-00-727-8833	MS51959-3	96906	SCREW, MACHINE		EA	4
2	4	PAHZZ	5310-00-928-2690	MS35338-134	96906	WASHER, LOCK		EA	4
2	5	PAHZZ	5310-00-938-2013	MS35649-224	96906	NUT, PLAIN, HEXAGON		EA	4
2	6	XDHZZ		A3-06-0626	18560	IB.HOLDER ASSY		EA	1
2	7	MHHZZ		A1-25-0033	70485	RUBBER CHANNEL (MFD FROM P/N X661)		IN	18
2	8	PAHZZ	5305-00-054-6669	MS51957-44	96906	SCREW, MACHINE		EA	2
2	9	XDHZZ	5340-00-209-9352	2192	83330	BUMPER, RUBBER		EA	2
2	10	XDHZZ		A1-05-0311	18560	HINGE		EA	1

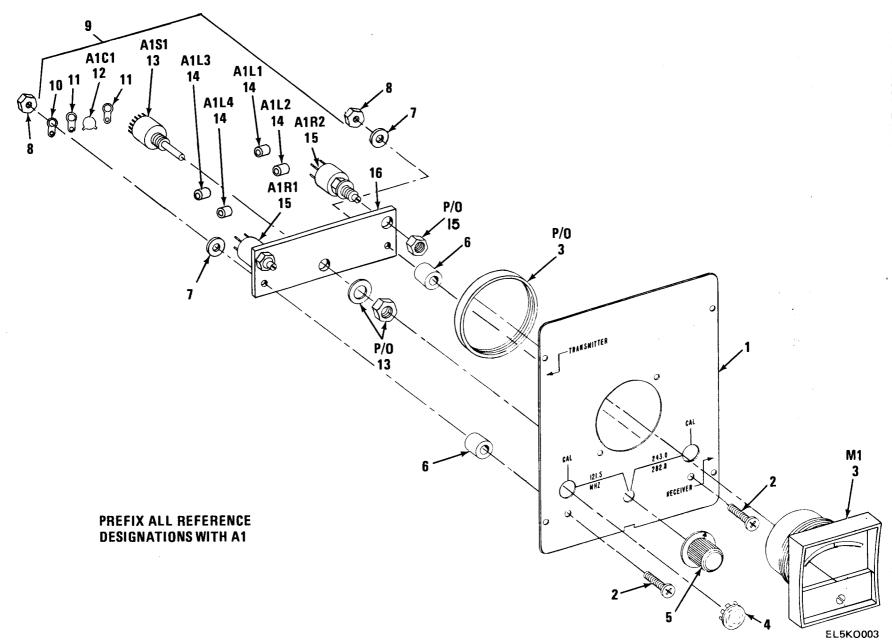

SECTIO (1) ILLUST (A)	RATION (B)	(2)	(3) NATIONAL	(4)	(5)	TM11-6625-2632-24P-1 (6) DESCRIPTION		(7)	(8) QTY INC
FIG NO	ITEM NO	SMR CODE	STOCK NUMBER	PART NUMBER	FSCM		USABLE ON CODE	U/M	IN UNIT
3	1	XDHHH		A1-17-0582	18560	PLATE, PANEL		EA	2
3	2	PAHZZ	5305-00-054-6657	MS51957-33	96906	SCREW, MACHINE		EA	1
3	3	PAHZZ		MS1T50MAD6	40931	METER		EA	1
3	4	XDHZZ	5340-00-865-0220	652	83330	BUTTON, PLUG		EA	2
3	5	PAOZZ		KNS501	95146	KNOB		EA	1
3	6	PAHZZ		A1-05-0324-1	18560	SPACER		EA	2
3	7	PAHZZ	5310-00-880-5976	MS15795-806	96906	WASHER, FLAT		EA	2
3	8	PAHZZ	5310-00-934-9761	MS35649-264	96906	NUT, PLAIN, HEXAGON		EA	2
3	9	XDHHH		A3-06-0643	18560	MOUNTING BKKT ASSY		EA	1
3	10	XDHZZ		A1-05-0011-4	18560	TERMINAL, LUG		EA	1
3	11	XDHZZ		A1-05-0011-7	18560	TERMINAL, LUG		EA	2
3	12	PAHZZ		511A1000M-Z5U	26625	CAPACITOR, FIXED		EA	1
3	13	PAHZZ		12FFM2	01686	SWITCH, ROTARY		EA	1
3	14	PAHZZ	5950-00-784-0475	56-590-65/38	02114	COIL, RADIO FREQUENC		EA	4
3	15	PAHZZ		RV6LAYSA254A	12697	RESISTOR, VARIABLE		EA	2
3	16	XDHZZ		A1-17-0583	18560	BRACKET, MOUNTING		EA	1

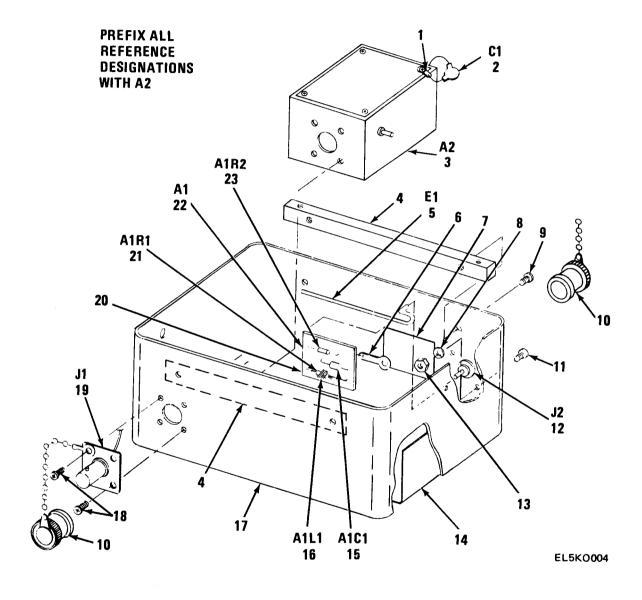

(A) FIG	RATION (B) ITEM	(2) SMR	(3) NATIONAL STOCK	(4)	(5)	TM11-6625-2632-24P-1 (6) DESCRIPTION		(7)	(8) QTY INC IN
NO	NO	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE		UNIT
4	1	XDHZZ		A1-05-0011-17	18560	TERMINAL, LUG		EA	1
4	2	PAHZZ		511A1000M-Z5U	26625	CAPACITOR, FIXED		EA	1
4	3	XDHHH		A3-06-0637	18560	SHIELDED BOX ASSY		EA	1
4	4	XDHZZ		A1-17-0580	18560	BAR, SIDE		EA	2
4	5	MHHZZ		A1-04-0101	18560	ANTENNA (MFD FROM P/N 19-290291-16)		EA	1
4	6	PAHZZ		A1-05-0011-3	18560	TERMINAL LUG		EA	1
4	7	MHHZZ		MIL-I-695TYPEF	96906	FISHPAPER INSULATOR (MFD FROM P/N MIL-I-695)		IN	1
4	8	PAHZZ	5310-00-933-8118	MS35338-135	96906	WASHER, LOCK		EA	4
4	9	PAHZZ	5305-00-054-5647	MS51957-13	96906	SCREW, MACHINE		EA	4
4	10	XDHZZ		3839	05276	CAP, JACK		EA	2
4	11	PAHZZ	5305-00-054-5648	MS51957-14	96906	SCREW, MACHINE		EA	4
4	12	PAHZZ		2451	05276	CONNECTOR, RECEPTACL		EA	1
4	13	PAHZZ	5310-00-934-9748	MS35649-244	96906	NUT, PLAIN, HEXAGON		EA	4
4	14	XDHZZ		A1-17-0581	18560	PLATE, LEAD		EA	1
4	15	PAHZZ		TC-10-208	05123	CAPACITOR, FXD, 10PF		EA	1
4	16	PAHZZ		A1-08-0023-1	18560	RF COIL		EA	1
4	17	XDHZZ		A1-16-0312	18560	CASE		EA	1
4	18	PAHZZ	5305-00-054-5649	MS51957-15	96906	SCREW, MACHINE		EA	4
4	19	PAHZZ		2451	05276	CONNECTOR, RECEPTACL		EA	1
4	20	XAHZZ		A1-07-0170	18560	BOARD, PRINTED CKT		EA	1
4	21	PAHZZ	5905-00-782-4106	RC05GF470J	81349	RESISTOR, FIXED, COMP		EA	1
4	22	XDHHH		A3-07-0044	18560	RCVR PC BD ASSY		EA	1
4	23	PAHZZ	5905-00-946-9102	RC05GF151J	81349	RESISTOR, FIXED, COMP		EA	1

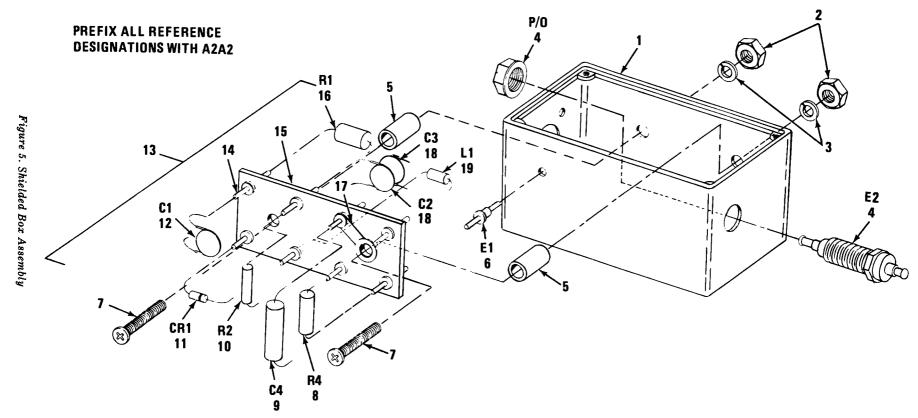

EL5K0005

SECTION (1) ILLUST (A) FIG NO	RATION (B) ITEM NO	(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	TM11-6625-2632-24P-1 (6) DESCRIPTION	USABLE ON CODE	(7) U/M	(8) QTY INC IN UNIT
5	1	XDHZZ		A1-16-0316	18560	BOX, SHIELDED		EA	1
5	2	PAHZZ	5310-00-934-9748	MS35649-244	96906	NUT, PLAIN, HEXAGON		EA	2
5	3	PAHZZ	5310-00-933-8118	MS35338-135	96906	WASHER, LOCK		EA	2
5	4	PAHZZ		1503BLACK	83330	TERMINAL, FEEDTHRU		EA	1
5	5	PAHZZ		8706	83330	SPACER, SLEEVE		EA	2
5	6	PAHZZ	5940-00-655-3704	001-1007	98291	TERMINAL, FEEDTHRU		EA	1
5	7	PAHZZ	5305-00-054-5652	MS51957-18	96906	SCREW, MACHINE		EA	2
5	8	PAHZZ		RN60D1202F	81349	RESISTOR, FIXED, FILM		EA	1
5	9	PAHZZ	5910-00-235-2356	150D156X9020B2	56289	CAPACITOR, FIXED, ELE		EA	1
5	10	PAHZZ		RN60D220RF	81349	RESISTOR, FIXED, FILM		EA	1
5	11	PAHZZ		1N4148	07688	SEMICOND DVC DIODE		EA	1
5	12	PAHZZ		CK60BX220K	72982	CAPACITOR, FXD		EA	1
5	13	XDHHH		A3-07-0042	18560	MOUNTING PLATE ASSY		EA	1
5	14	PAHZZ	5940-00-655-3704	001-1007	98291	TERMINAL, FEEDTHRU		EA	8
5	15	XDHZZ		A1-17-0579	18560	PLATE, MOUNTING		EA	1
5	16	PAHZZ	5905-00-227-5074	RN60D56R0F	81349	RESISTOR, FIXED, FILM		EA	1
5	17	PAHZZ		A1-05-0011-3	18560	TERMINAL, LUG		EA	1
5	18	PAHZZ	5910-00-009-4633	CK60AW152M	72982	CAPACITOR, FIXED, CER		EA	2
5	19	PAHZZ	5950-00-961-9600	1025-36	99800	COIL, RADIO FREQUENC		EA	1

SECTION II (1) ILLUSTRATION	(2)	(3)	(4)	(5)	TM11-6625-2632-24P-1 (6)		(7)	(8) QTY
(A) (B) FIG ITEM	SMR	NATIONAL STOCK	PART		DESCRIPTION			INC
NO NO	CODE	NUMBER	NUMBER	FSCM		USABLE ON CODE	U/M	UNIT
					GROUP 01 BULK MATERIALS			
BULK	PAHZZ		19-290291-15	04655	WIRE ELECTRICAL		RL	1
BULK	PAHZZ		MIL-I-695	81349	FISH PAPER TYPE F		SH	1
BULK	PAHZZ		X661	74588	CHANNEL		RL	1

DECITOR IV		MATIONAL DIO	CK NORDEK AND TAKE NOR	DER INDEX		11111 0025 20	,,,,
F	FIGURE	ITEM	OCK NUMBER ASSIGNMENT I	FIGURE	ITEM		
STOCK NUMBER	NO	NO	STOCK NUMBER	NO	NO		
5305-00-054-5647 5305-00-054-5648 5305-00-054-5649 5305-00-054-5662 5305-00-054-6657 5305-00-054-6657 5305-00-054-6669 5340-00-209-9352 5340-00-209-9352 5340-00-209-555-65820-00-4748-7054 5910-00-235-2356 5820-00-478-7054	4 5 3 1 1 2	18 6 9 11 18 7 7 2 12 13 9 16 9 1 16 14	5305-00-727-8833 5905-00-782-4106 5950-00-784-0475 5340-00-865-0220 5310-00-880-5976 5310-00-933-8118 5310-00-933-8118 5310-00-934-9748 5310-00-934-9748 5310-00-934-9761 5310-00-938-2013 5905-00-946-9102 5950-00-961-9600	2 4 3 3 3 3 2 4 5 4 5 3 2 4 5 5 4 5 5	3 21 14 4 7 4 8 3 13 2 8 5 23 19		
PART NUMBER	FSCM	FIG NO	ITEM NO	PART NUMBER	FSCM	FIG NO	ITEM NO
A1-05-0011-17 A1-05-0011-3 A1-05-0011-3 A1-05-0011-3 A1-05-0011-7 A1-05-0011-7 A1-05-0311 A1-05-0314 A1-05-0314 A1-05-0314 A1-07-0170 A1-08-0023-1 A1-16-0316 A1-17-0580 A1-17-0580 A1-17-0581 A1-17-0581 A1-17-0581 A1-17-0583 A1-17-0583 A1-17-0583 A1-17-0583 A1-17-0580 A1-17-0583 A1-17-0580 A1-17-0580 A1-17-0581 A1-17-0581 A1-17-0581 A1-17-0581 A1-17-0582 A1-17-0583 A1-17-0583 A1-17-0584 A1-17-0583 A1-17-0584 A1-17-0583 A1-17-0584 A1-17-0584 A1-17-0583 A1-17-0584 A1-17-0584 A1-17-0584 A1-17-0583 A1-17-0584 A1-17-0584 A1-17-0584 A1-17-0584 A1-17-0583 A1-17-0584 A1-17-0584 A1-17-0584 A1-17-0580 A1-17-0	18560 18560 18560 72982 72982 72982 95146 81349 40931 96906 96906	4 4 4 4 5 5 3 3 2 2 2 3 2 4 4 4 4 5 5 5 4 4 4 3 3 3 1 1 1 1 1 2 2 2 1 4 1 1 5 5 3 BULK K BULK BULK C C C C C C C C C C C C C C C C C C C	5 1 1 1 10 11 11 10 2 2 6 1 1 20 6 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	MS35649-244 MS35649-244 MS35649-264 MS51957-13 MS51957-14 MS51957-15 MS51957-18 MS51957-3 MS51957-3 MS51957-44 MS51950-3 MX8802PRC90 MIL-I-695TYPEF RC05GF470J RC05GF470J RC05GF470J RC05GF470J RC15GF470J RC15GF470J RC15GF470J RC15GF470J RC15GF470J RC15GF470J RC10120F RN60D1202F RN60D1202F RN60D1202F RN60D1202F RN60D1202F RN60D1202F RN60D120F RV6LAYSA254A TC-10-208 T1-04-0001 UG-88C/U X661 001-1007 IN4148 1025-36 12FFM2 150D156X9020B2 1503BLACK 19-290291-16 2192 2192 2451 3839 511A1000M-Z5U 511A1000M-Z5U 511A1000M-Z5U 511A1000M-Z5U 511A1000M-Z5U 511A1000M-Z5U 56-590-65/3B 652	96906 96906 96906 96906 96906 96906 96906 96906 96906 96906 96906 80058 96906 81349 81349 81349 12697 05123 18560 96906 8123 18560 96906 81349 81349 12697 05123 18560 96906 81349 8	4 5 3 4 4 4 4 4 5 1 2 1 1 2 1 4 4 4 4 1 5 5 5 5 5 5 5 5 5 5 5 5 5 5	13 28 89 11 18 76 62 812 31 723 21 58 106 115 116 4 614 111 113 94 113 91 119 110 110 110 110 110 110 110 110
	96906 96906	5 2	3 5	8706	83330	5	5

LATEST NATIONAL STOCK NUMBER ASSIGNMENT

FIGURE NO. 1TEM NO. 5305-00-054-6669 2 8

By Order of the Secretary of the Army:

BERNARD W. ROGERS General, United States Army Chief of Staff

Official:

J.C. PENNINGTON
Brigadier General, United States Amy
The Adjutant General

Distribution:

To be distributed in accordance with DA Form 12-31, Section IV, Organizational TMP 11-Series avionics literature requirements for All Fixed and Rotor Wing Aircrafts.

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS SOMETHING WRONG WITH THIS MANUAL? FROM: (YOUR UNIT'S COMPLETE ADDRESS) THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM, TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL! DATE DATE PUBLICATION NUMBER TITLE 5 Dec 78 TM 11-6625-2632-24P-1 Radio Test Set AN/PRM-32A BE EXACT. . . PIN-POINT WHERE IT IS IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT: PAGE TABLE FIGURE PARA-GRAPH NO. TEAR ALONG DOTTED LINE TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

PENALTY FOR PRIVATE USE, \$300

POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD-314



TEAR ALONG DOTTED LINE

Commander
US Army Communications and
Electronics Materiel Readiness Command
ATTN: DRSEL-ME-MQ
Fort Monmouth, New Jersey 07703

FOLD BACK

DEPARTMENT OF THE ARMY US ARMY AG PUBLICATIONS CENTER 1655 WOODSON ROAD ST. LOUIS, MISSOURI 63114

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314



PIN : 036228-000

This fine document...

Was brought to you by me:



<u>Liberated Manuals -- free army and government manuals</u>

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

Free Military and Government Manuals

- SincerelyIgor Chudovhttp://igor.chudov.com/
- Chicago Machinery Movers