TECHNICAL MANUAL

ORGANIZATIONAL, DIRECTSUPPORT, AND GENERAL SUPPORTMAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

F O R

POWER HEAD

MX-10314/USM (NSN 6625-01-100-3726)

HEADQUARTERS, DEPARTMENT OF THE ARMY
5 AUGUST 1983

DEPARTMENT OF THE ARMY, WASHINGTON, DC, 5 August 1983

TECHNICAL MANUAL

No. 11-6625-3006-24P

**HEADQUARTERS** 

# ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS

FOR

**AND SPECIAL TOOLS)** 

**POWER HEAD** 

MX-10314/USM

(NSN 6625-01-100-3726)

Current as of 27 April 1983

### REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DRSEL-ME-MP, Fort Monmouth, New Jersey 07703.

In either case, a reply will be furnished direct to you.

#### **Table of Contents**

			Page	Illus Figure
SECTION	I.	Introduction	1	Ū
	II.	Repair Parts List	5	
GROUP	00	Power Head MX-10314/USM	5	1
SECTION	III.	Special Tools List (Not applicable)		
	IV.	National Stock Number and Part Number Index	7	

#### **SECTION I**

#### INTRODUCTION

- 1. Scope This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the MX-10314/USM. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.
- **2. General** This Repair Parts and Special Tools List is divided into the following sections:
- a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.
  - b. Section III. Special Tools List. Not applicable.
- c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

#### 3. Explanation of Columns

- a. Illustration. This column is divided as follows:
- (1) Figure number. Indicates the figure number of the illustration on which the item is shown.
- (2) *Item number*. The number used to identify item called out in the illustration.
- b. Source, Maintenance, and Recoverability (SMR) Codes.
- (1) Source code. Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

- PA-- Item procured and stocked for anticipated or known usage.
- XB-- Item is not procured or stocked. If not available through salvage requisition.

#### NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 750-1.

- (2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:
- (a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code Application/Explanation

H--Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code Application/Explanation

H--The lowest maintenance level capable of complete repair of the support item is the general support level.

- Z--Nonreparable. No repair is authorized.
- (3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability

Codes Definition

- Z-- Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
- H-- Reparable item. When uneconomically reparable, condemn and dispose at the general support
- A-- Item requires special handling or condemnation procedures because of specific reasons (i.e.,

Recoverability

codes Definition

precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

- c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.
- d. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-41/42 which is used to identify the manufacturer, distributor, or Government agency, etc.
- e. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

#### **NOTE**

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

- f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.
- g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea., in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.
- h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

#### 4. Special Information

National stock numbers (NSN's) that are missing from P source coded items have been applied for and will be added to this TM by future change/revision when they are entered in the Army Master Data File (AMDF). Until the NSN's are established and published, submit exception requisitions to: Commander, US Army Communications-Electronics Command and Fort Monmouth, ATTN: DR-SEL-MM, Fort Monmouth, NJ 07703 for the part required to support your equipment.

#### 5. How to Locate Repair Parts

- a. When National stock number or part number is unknown.
- (1) First. Using the table of contents, determine the functional group within which the item belongs This is necessary since illustrations are prepared for functional groups and listing are divided into the same groups.
- (2) Second. Find the illustrations covering the functional group to which the item belongs.
- (3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.
- (4) Fourth. Using the Repair Parts Listing, find the figure and item number noted on the illustration.
- b. When National stock number or part number is known.
- (1) First. Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item.
- (2) Second. After finding the figure and item number, locate the figure and item number in the repair parts list.

#### 6. Abbreviations

Not applicable.

(Next printed page is 4)

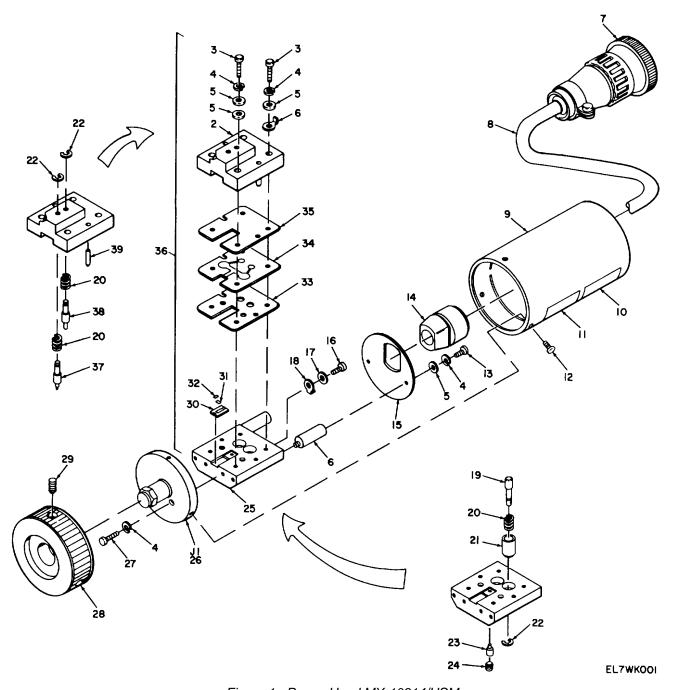


Figure 1. Power Head MX-10314/USM.

SECTION II TM 11-6625-3006-24P

(1)(2)	(3)	(4)	(5)	(6)	(7)	(8)	
(a) (b FIG ITE NO. NO	M SMR	NATIONAL STOCK NUMBER	FSCM	PART NUMBER	DESCRIPTION  USABLE ON CODE	U/M	l 1
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	PAHHH  NOTICE TO THE PAHHH  NOTICE TO THE PAHHH  NOTICE TO THE PAHH PAHH PAHH PAHH PAHH PAHH PAHH PA	6625-01-126-4352 5940-00-633-0762 5935-01-053-4008	11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 80205 11332 28520 11332 95987 06540 06540 11332 84830	8391 G1 6434-3 CS211-26 NS35338-134 CS260-1 416-093 8376 P1 8397 P1 8217 G2 8396 P6 6845-7 NAS1635-02-P3 CS211-212 SR-5P-4 8403 P1 N-256-1/8 252-N089 9212N-091 6443-3 CI-008B-1SS	GROUP 00 POWER HEAD MX-10314/USM  POWER HEAD ASSEMBLY	EA E	1 1 4 6 4 3 1 1 1 1 1 2 2 1 1 2 2 2 2 4
1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 3 1 3 1 3 1 3 1 3 1 3 1 3 1 3 1 3 1 3	2 XDHZZ 3 PAHZZ 4 XDHZZ 5 XDHZZ 6 PAHZZ 7 XDHZZ 8 XDHZZ 9 PAHZZ 9 PAHZZ 1 XDHZZ 1 XDHZZ 1 XDHZZ 1 XDHZZ 2 XDHZZ 3 XDHZZ 4 XDHZZ 5 XDHZZ 6 XDHZZ 6 XDHZZ 7 PAHZZ 7 PAHZZ	5910-01-053-1430	11332 79136 11332 96906 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332	6444-3 X5133-6-MD 6447-3 MS51045-18 6433-3 6944-3 CS211-28 6776-3 CS250-64 6448-3 5878-17 6027-3 6420-3 7022-G3 6420-5 6432-1 6445-5 6445-3	INSULATOR, BUSHING RING ROD, HEAT SINK SETSCREW HOUSING LOWER CONNECTOR PANEL, MAL SCREW PH COUPLING NUT SETSCREW STRIPLINE CAPACITOR. FIXED, CER GOLD, REAGENT TEST SET RF POWER S TFT ELEMENT COVER SHEET HOUSING ASSY PLUNGER PLUNGER	EAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA	2 4 1 1 1 2 1 3 1 1 1 1 1 1 1

SECTION II TM 11-6625-3006-24P

ILLU (a	(1) JSTRAT ) (b)	<b>(2)</b> ION	(3) NATIONAL	(4)	(5)	(6) DESCRIPTION		<b>(8)</b> QTY
FIC NC	G  ITEN	SMR	STOCK NUMBER	FSCM	PART NUMBER	USABLE ON CODE	U/M	INC
	1 39	XDHZZ		00141	D3-250	PIN, STRAIGHT, HEADLE	EA	1

SECTION IV	NATIONAL ST	TM 11-6625-6006-24P					
STOCK NUMBER	FIGURE NO.		EM O.	STO	OCK NUMBER	FIGURE NO.	ITEM NO.
5975-00-351-6114 5940-00-633-0762 5910-01-053-1430	1 1 1	6	14 5935-01-053-4008 6 6625-01-126-4352 31			1 1	1
FSCM PART NUI	MBER	FIGURE NO.	ITEM NO.	FSCM	PART NUMBER	FIGURE NO.	ITEM NO.
84830 CI-008B-1: 11332 CS211-26 11332 CS211-26 11332 CS250-64 11332 CS250-64 11332 CS260-1 00141 D3-250 11332 MS35338- 96906 MS51045- 95987 N-256-1/8 80205 NAS1635- 28520 SR-5P-4 79136 X5133-6-N 06540 2252-N089 79963 416-093 11332 5878-17 11332 6027-3 11332 6420-3	2 134 18 02-P3 1D	1 1 1 1 1 1 1 1 1 1	20 13 3 27 29 5 39 4 24 16 12 14 22 17 6 31 32 33	11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332 11332	6433-3 6434-3 6443-3 6444-3 6445-3 6445-5 6447-3 6448-3 6776-3 6845-7 6944-3 7022-G3 8217 G2 8376 P1 8391 G 8396 P6 8397 P1 8403 P1	1 1 1 1 1 1 1 1 1 1 1 1 1	25 2 19 21 38 37 23 30 28 11 26 34 9 7 10 8 15
11332 6420-5 11332 6432-1		1	35 36	06540	9212N-091	1	18

7/(8 BLANK)

Ву	Order	of the	Secretary	of /	the	Army:
----	-------	--------	-----------	------	-----	-------

Official:

JOHN A. WICKHAM JR. General, United States Army Chief of Staff

ROBERT M. JOYCE Major General, United States Army The Adjutant General

Distribution:

To be distributed in accordance with special list.

\*U.S. GOVERNMENT PRINTING OFFICE: 1983-605-040/282

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS								
		WRONG WITH THIS PUBLICATION?  (PRINT YOUR UNIT'S COMPLETE ADDRESS)						
THEN JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!  DATE SENT								
PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE						
BE EXACTPIN-POINT WHERE IT IS  PAGE PARA- FIGURE TABLE NO. GRAPH NO NO.	IN THIS SPACE TELL WHAT IS AND WHAT SHOULD BE DON!	B WRONG E ABOUT IT:						
PRINTED NAME, GRADE OR TITLE, AND TELEP	HONE NUMBER SIGN HE	ERE:						

DA 150% 2028-2

PREVIOUS EDITIONS • ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

PIN: 053689-000

## This fine document...

Was brought to you by me:



## <u>Liberated Manuals -- free army and government manuals</u>

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=http://www.liberatedmanuals.com/>Free Military and Government Manuals</A>

- SincerelyIgor Chudov<a href="http://igor.chudov.com/">http://igor.chudov.com/</a>
- Chicago Machinery Movers