ORGANIZATIONAL MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

ELECTRON TUBE TEST SETS TV-2/U, TV-2A/U, TV-2B/U, AND TV-2C/U FSN 6625-669-0263

Headquarters, Department of the Army, Washington, D.C.

17 September 1973

Current as of February 1973

			Paragraph	Page
Section	I.	INTRODUCTION		
		Scope	1-1	2
		General	1 - 2	2
		Explanation of columns	1 - 3	2
		Special information	1 - 4	4
		Location of repair parts	1 - 5	4
		Abbreviations (Not applicable)	1 - 6	4
		Reporting of equipment publication improvements	1 - 7	4
	II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
	III.	REPAIR PARTS LIST.		6
	IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
	v .	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER		

 $^{^{}ullet}$ This manual supersedes TM 11-6625-316-20P, 2 March 1961.

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the TV-2/U, TV-2A/U, TV-2B/U, and TV-2C/U. The PCCN for the equipment is GTEABO for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

- a. Prescribed Load Allowance (PLA)—Section II. Not applicable.
- b. Repair Parts List—Section III. A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.
- c. Special Tools, Test and Support Equipment— Section IV. Not applicable.
- d. Index—Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number—Section V. A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists—

- a. Source, Maintenance, and Recoverability Codes (SMR).
- (1) Source code. Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

Code Explanation

- PA—Item procured and stocked for anticipated or known usage.
- PB—Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
- PC—Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.

Code Explanation

- PD—Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
- PE—Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
- PF—Support equipment which will not be stocked but which will be centrally procured on de-
- PG—Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
- KD—An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
- KF—An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
- KB—Item included in both a depot overhaul/repair kit and a maintenance kit.
- MO—Item to be manufactured or fabricated at organizational level.
- MF—Item to be manufactured or fabricated at direct support maintenance level.
- MH—Item to be manufactured or fabricated at general support maintenance level.
- MD—Item to be manufactured or fabricated at depot maintenance level.
- AO—Item to be assembled at organizational level.
- AF—Item to be assembled at direct support maintenance level.
- AH—Item to be assembled at general support maintenance level.
- AD—Item to be assembled at depot maintenance level.
- XA—Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
- $XB{--}Item \ is \ not \ procured \ or \ stocked. \ If \ not \ available \ through \ salvage, \ requisition.$

- XC—Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
- XD-Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

- (2) Maintenance code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows—
- (a) Use (third position). The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

Code Application/Explantion

O—Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

- F—Support item is removed, replaced, used at the direct support maintenance level.
- H—Support item is removed, replaced, used at the general support maintenance.
- D—Support items that are removed, replaced, used at depot only.
- (b) Repair (fourth position). The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability, to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multiservice equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code—

Code Application/Explanation

O—The lowest maintenance level capable of complete repair of the support item is the organizational level. Code Application/Explanation

- F—The lowest maintenance level capable of complete repair of the support item is direct support.
- H—The lowest maintenance level capable of complete repair of the support item is general support.
- D—The lowest maintenance level capable of complete repair of the support item is the depot level
- L—Repair restricted to designated Specialized Repair Activity.
- Z-Non-repairable. No repair is authorized.
- B—No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.
- (3) Recoverability code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows—

Code Explanation

- Z-Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
- O—Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
- F—Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
- H—Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
- D—Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
- L—Repairable item. Repair, condemnation, and disposal not authorized below depot specialized Repair Activity level.
- A—Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).
- b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.
- c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code

for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

- d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.
- e. Quantity Incorporated in a Unit. This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".
 - f. 15-Day Organizational Maintenance Allowance.
- (1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.
- (2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CRA, Fort Monmouth, N.J. 07703. Any changes approved will be reflected in a revision to the RPSTI.
- (3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.
 - g. Illustration. This column is divided as follows:
- (1) Figure number. Indicates the figure number of the illustration on which the item is shown in TM 11-6625-316-12.
- (2) Item number. Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are-

Code	Used on
A M F	T V - 2 / U
A M G	T V - 2 A / U
АМН	T V - 2 B / U
A M I	T V - 2 C / U

b. The following publication pertains to the equipment and its components:

TM 11-6625-316-12 Operator and Organizational Maintenance Manual: Test Sets, Electron Tube TV-2/U, $TV-2A/U,\ TV-2B/U,\ and\ TV-2C/U.$

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

- (1) Refer to the index of Federal stock numbers (sec V) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.
- (2) Refer to the repair parts list (sec III) and locate the figure number (col 7a) and item number or reference designation (c ol 7b) as noted in the FSN index.
- c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (sec III) until the item is located.
- d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CRA, Fort Monmouth, NJ 07703.

(1)	(2)	(3)	(3) (4) (5)		(6)				(7)	
("	(2)		``	,,,,	5-D. ORGANIZATIONAL				``'	
	FEDERAL	DESCRIPTION	ואט	QTY INC	М	TEI	CE		ILLU!	ATIO
SM R CODE	STOCK		OF	IN	(a)	(b)	(c)	(d)	(a) IGUR	(b)
	NUMBER	REFERENCE NUMBER & MFR CODE USABLE ON CODE	MEA	UNIT	1-5	6-20	!1-5	1.10	NO.	NO.
PACZZ	6 62 5-61 8-9929	ADAPTER: TEST X108	EΔ	l.	*	ä	s	*	5	(108
PAOZZ	6625-684-1189	B246-502 (00641) AMH-AMI ADAPTER, TEST X3B	EΑ	ì	*	×	*	*	5	X3f
	6625-618-9928	A1313 (00641) AMH.AMI	<u>5</u> 4	1			29	*	5	X7E
PANZZ		B246-502 (00641) AMH.AMI								
PACZZ	5935-204-8379	ADAPTER, TEST X138	ĘΔ	1	*	1	X)	*	5	113E
PADZZ	5920-283-7178	CAP, ELECTRICAL NO-RUF-DESIG FOR FUSEHOLDER . 342003SA2 (75915)	F.A	į	*	×	*	*	1	
PACZZ	5999-230-1212	CLIP, ELECTRICAL WIA FLESTRICALCLIPS	EΑ	2	*	*		*	1	W1/
PACZZ	5999-230-1212	CLIP SLECTRICAL NO. PLECTROAL CLIPS	6.4	j. E	×	,	ź	*	1	W21
PAOZZ	5960-272-9182	48C (76545) ELEC TRON TUBE	c n	2	*		×	*	17	V2
		6X4W (81350)	١.							
PATZZ	5960-272-9182	ELECTRONITURE V3	1, 1	8 F	*	*	*	*	17	V3
PATZZ	5960-100-7323	EL ECTRON TURE V1	5.4	1	*	ŵ	*	*	17	٧ı
PATZZ	5920-010-6652	FUSE, CARTRINGE	EΛ	2	*	*	*	34	14	F]
PACZZ	5920-010-6652	312903 (75915) FUSE: CARTRIDGE FORMER FORM	ΞA	r.t.	*	*	*	*	14	F2
PATZZ	5975-281-0046	312003 (75915) INSULATOR, CLIP W1:	PД).		*	*	*	5	W18
		49RED (76545)	Δ.3	1	ył:		*	*		
PACZZ	5975-383-1318	498LACK (75545)	ļ							W2 E
PAPZZ	5355-160-5910	KNOR 0.15	FΛ	1 4	*	k	*	*	l	715
PANZZ	5355-160-5910	KNOB 016 \$246-3L (7537.6)	ιV	t; tr	*	*	*	*	1	216
PAOZZ	5355-160-5910	KNOR C17	EΔ	f.t-	*	¥	×	×	1	217
PADZZ	5355-160-5910	\$246-3((75.276) KNOR 019	ĒΛ	r r	*		*	*	1	∩1·8
PADZZ	5355-160-5910	\$246-3L (75376) KNOR 010	FΔ	= r:	*	ж	28.	*	1	A19
	•	5246-31 175 176)						,		
PATZZ	5355-1o0-5910	6277 20 676 2773	F 1		*	÷	214	**	ł	-m-11-1
PANZZ	5355-160-5910	13.245-31 (75.275) PMMM		71 E	7	¥:	*	*	1	791
PANZZ	5355-160-5910	K/mn (122	E A	· t	***	*	×	*	1	022
PATZZ	5355-160-5910	\$246-3L (75°76) KMJn 033	EΛ	÷¢	*	х.	*	*	1	023
PACZZ	5355-160-5910	\$246-31 (75376) KND9 534	g A	- e	*	÷.	*	300	1	724
	5355-150-5910	\$246-31 (75976) KND9 025	E V	.: F	*	-	¥	71	1	_
PAGZZ		\$245-3L (75376)	ļ							025
የ4ባጀን	5355-100-5010	N/08 (26	L. V	2.61	*	¥.	20	*	1	026
PATZZ	5355-160-5910		ĘΑ	2 p	*	3 4.	=	*	l	027
PANZE	5355-160-5910	KNOE 038	FΛ	· ř	**	*	źż	*	1	728
P 4:0 7.Z	5355-234-5647	\$246-3L (75376) KNOB 174	٨	4	÷	+	*	±	ì	C4
PA777	5255-284-5667	\$643-70-11188 (75376) KMOP (35	- A	FI	*	,	*	*	ı	O.
]		\$643-70-111 P8 (75376) KNOP D6		£.F	*	:	3	*		^¿
2 4072	5355-284-5667	5643-70-11188 (7.5376)	E- V						1	
PACI7	5355-284-5667	KN99 (17	1.4	e i.	*	•	nk.	*	1	61
9 A D 2.7	5355-284-5600	KN09 031	F٨	1	*	,	*	×	1	031
25040	5355-667-9675	KN79 08	E A	ŧ	×	,	-	311	1	٩٠
PA-27	5 340-223-9100	KMA1004 (71575) AMF.AMF.	EΛ		*	¥	*	*		110
PANZZ	6240-223-5100	NEST (09108) L AMP, GLOW 12C	E 1.	F. 6.	1	#	*	.*		120
		NE51 (08108)				_	ź			
PATZ	6215-186-8776	TENS, INDICA TOR LIGHT 119	FΑ	-1	צי	*		*		118
P4072	6210-549-0157	[ENS. INDICATION 1604] 100	⊏ V	1	25	7	*	37:		1,2E
PAOZZ	5960-244-5000	PETATMER, FICTRO N TORE - FILL.	E V	2	*	*	¥	*	ε	н)
PATZZ	59c 0-269-5006	CALVINES & CALLUNIAN AL PROPERTY OF THE PROPER	Ę٨	re	*	×	*	*	8	HZ
	i	144AT (975.33)	1	1	1				1	

SECTION	<u> </u>					-						
(1)	(2)	(3)			(4)	(5)	_		6)		(7)
						QTY.	5-DA	Y ORGA	ICE	IONAL	ILLU	
SMR	FEDERAL STOCK	DESC	RIPTION		NI	INC IN	(e)	(b)	(c)			
CODE	NUMBER	REFERENCE NUMBER & MFR CO	DDE	USABLE ON CODI	EA	TÍNU	1.5	6-20	21-5	<u>1-10</u>	HO.	NO.
AOZZ	5960-295-7652	HIELD, ELECTRON TUBE	El			2	<u>*</u>	*	1	*		€1
AOZZ	5960-295-7652	S102U03 (81350) HIELD+ EL ECTPON TUBE	E2			# F F	*	÷	*	*	1	E;
		\$102003 (81350)										
AC FORM 17	53 10 APR 701 (TEST)		7	3				•	•			

INDEX - FEDERAL ST OCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE	ITEM No.
5355-160-5910	1	015 016	5920-010-6652 5920-283-7178	14	F2
5355-160-5910 5355-160-5910	i	017	5935-204-8379	1 5	X138
5355-160-5910	ī	018	5960-100-7323	17	V1
5355-160-5910	1	019	5960-249-5009	8	Hi
5355-160-5910	1	020	5960-249-5009	8	H2
5355-160-5910	1	021 022	5960-272-9182 5960-272-9182	17 17	V2
5355-160-5910 5355-160-5910	i	022	5960-295-7652	8	V3 E1
5355-160-5910	i	024	5960-295-7652	8	E2
5355-160-5910	ī	025	5975-281-0046	5	WIB
5355-160-5910	1	026	5975-383-1318		W28
5355-160-5910	j	027	5999-230-1212	1	WlA
5355-160-5910	1	028	5999-230-1212	1	W2 A
5355-284-5600 5355-284-5667	1	031 04	6210-188-8778 6210-548-0157		118 128
5355-284-5667	i	05	6240-223-9100		110
5355-284-5667	i	06	6240-223-9100		120
5355-284-5667	ī	07	6625-618-9928	5	X79
5355-667-9675	1	08	6625-618-9929	5	X10B
5920-010-6652	14	F1	6625-684-1189	5	X38
REFERENCE NO.	MFR CODE 00641	FIG. ITEM NO. NO.	REFERENCE NO. S643-70-11188	MFR CODE 75376	FIG. ITEM
A1313 B246-502	00641	5 X7B	S643-70-1118B	75376	1 04 1 05
B246-502	00641	5 X10B	S643-70-111BB	75376	1 06
KNA1004	71575	1 08	S643-70-111BB	75376	ī 07
NE51	08108	11C	\$645-3L	75376	1 031
NE51	08108	120	TS 102U03	81350	8 E1
SMB1 79212	80063 75376	5 X13B 1 015	TS 1 02U03 25CLEAR	81350 72619	8 E2
S 246-3L S 246-3L	75376	1 016	25PRED	72765	11B 12B
\$246-3L	75376	1 017	31 2 003	75915	14 F1
\$246-3L	75376	1 018	312003	75915	14 F2
S 246-3L	75376	1 019	342003SA2	75915	I
\$ 246-3L	75376	1 020	4HAT	97 98 3	8 H1
\$246-3L	75376	1 021 1 022	4HAT 48C	97983	8 H2 1 W1A
S 246-3L S 246-3L	75376 75376	1 022	48C	76545 76545	1 W1A 1 W2A
5 2 4 6 - 3 L S 2 4 6 - 3 L	75376	1 024	49BLACK	76545	1 W2B
\$246-3L	75376	1 025	49RED	76545	5 W18
S 2 46 - 3L	75376	1 026	6X4W	81350	17 V2
\$246-3L	75376	1 027	6X4W	81350	17 V3
\$246-3L	75376	1 028	83	81350	17 V1

CREIGHTON W. ABRAMS

General, United States Army Chief of Staff

Official:

VERNE L. BOWERS

Major General, United States Army The Adjutant General

Distribution:

Active Army: USASA (2) CNGB (1) ACSC-E (2) USAARENBD (2) USAMB (10) AMC (1) FORSCOM (5) ARADCOM (2) ARADCOM Rgn (2) OS Maj Comd (4) LOGCOMDS (5) MICOM (2) TECOM (2) USASTRATCOM (4) HISA (ECOM) (18) MDW (1) Armies (2) Corps (2) Svc Colleges (2) USASESS (5) USAADS (2) USAFAS (2) USAARMS (2) USAIS (2) USAES (2) USAINTS (3)

NG: State AG (3); Units-Same As Active Army

USAR: None

USACDCEC (5)

For explanation of abbreviations used, see AR 310-50.

Instl (2) except Fort Gordon (10) Fort Huachuca (10) Fort Carson (10) WSMR (2) Army Dep (2) except LBAD (14) **SAAD** (30) TOAD (14) LEAD (7) ATAD (10) USA Dep (2) Sig Sec USA Dep (2) Sig Dep (5) Sig FLDMS (1) USAERDAA (1) USAERDAW (1) MAAG (1) USARMIS (1) Ft Richardson (ECOM Ofc) (2) WRAMC (1 Units org under fol TOE: (1 copy each) 11-158 29-134 29-136

PIN : 017100-000

This fine document...

Was brought to you by me:



<u>Liberated Manuals -- free army and government manuals</u>

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

Free Military and Government Manuals

- SincerelyIgor Chudovhttp://igor.chudov.com/
- Chicago Machinery Movers