

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)
METER, PHOTOGRAPHIC EXPOSURE LM-46A
FSN 6760-810-8385

Headquarters, Department of the Army, Washington, D.C.
8 March 1974

Current as of July 1973

	Paragraph	Page
Section I. INTRODUCTION		
Scope	1-1	2
General	1-2	2
Explanation of columns	1-3	2
Special information	1-4	4
Location of repair parts	1-5	4
Abbreviations (Nonapplicable)	1-6	5
Reporting of equipment publication improvements	1-7	5
II. REPAIR PARTS LIST		6
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IV. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER.		7

*This manual supersedes TM 11-6760-206-35P, 21 October 1960, including all changes.

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of direct support, general support, and depot maintenance of the LM-46A. The PCCN for the LM-46A is GRNADN for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

a. Repair Parts List - Section II. A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level. This repair parts list is arranged in alphabetical order.

b. Special Tools, Test and Support Equipment - Section III. Not applicable.

c. Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number - Section IV. A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphameric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are -

<i>Code</i>	<i>Explanation</i>
PA-	Item procured and stocked for anticipated or known usage.
PB-	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC-	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.

<i>Code</i>	<i>Explanation</i>
PD-	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE-	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF-	Support equipment which will not be stocked but which will be centrally procured on demand.
PG-	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD-	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF-	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB-	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO-	Item to be manufactured or fabricated at organizational level.
MF-	Item to be manufactured or fabricated at direct support maintenance level.
MH-	Item to be manufactured or fabricated at general support maintenance level.
MD-	Item to be manufactured or fabricated at depot maintenance level.
MO-	Item to be assembled at organizational level.
AF-	Item to be assembled at direct support maintenance level.

<i>Code</i>	<i>Explanation</i>
AH-	Item to be assembled at general support maintenance level.
AD-	Item to be assembled at depot maintenance level.
XA-	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB-	Item is not procured or stocked. If not available through salvage, requisition.
XC-	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD-	Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows:

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O-	Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F-	Support item is removed, replaced, used at the direct support maintenance level.
----	--

<i>Code</i>	<i>Application/Explanation</i>
H-	Support item is removed, replaced, used at the general support maintenance.
D-	Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i. e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multiservice equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code:

<i>Code</i>	<i>Application/Explanation</i>
O-	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F-	The lowest maintenance level capable of complete repair of the support item is direct support.
H-	The lowest maintenance level capable of complete repair of the support item is general support.
D-	The lowest maintenance level capable of complete repair of the support item is the depot level.
L-	Repair restricted to designated Specialized Repair Activity.
Z-	Nonrepairable. No repair is authorized.
B-	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows:

<i>Code</i>	<i>Explanation</i>
Z-	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O-	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.

<i>Code</i>	<i>Explanation</i>
F-	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H-	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D-	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L-	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A-	Item requires special handling or condemnation procedures because of specific reasons (i. e., precious metal content, high dollar value, critical material or hazardous material).

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation; e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity Incorporated in Unit. This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. 30-Day DS/GS Maintenance Allowances.

NOTE

Allowances in GS column are for GS maintenance only.

(1) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the special tool lists section for special tools, TMDE, and other support equipment.

g. 1-Year Allowances Per 100 Equipments/Contingency Planning Purposes. Column intentionally left blank.

h. Depot Maintenance Allowance Per 100 Equipments. This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

i. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM 11-6760-206-35.

(2) *Item number.* Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are -

<i>Code</i>	<i>Used on</i>
A1W	LM-46A

b. The following publications pertain to the LM-46A and its components:

- TM 11-6760-206-12 Operator and Organizational Maintenance Manual: Meter, Photographic Exposure LM-46A.
- TM 11-6760-206-35 Field and Depot Maintenance Manual: Meter, Photographic Exposure LM-46A.

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec IV) to be used to locate a repair part when either the Federal stock number or reference number (manufac-

turer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (sec IV) and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (sec II) and locate the figure number (col 10a) and item number or reference designation (col 10b) as noted in the FSN index.

c. When the figure and item number or

reference designation are known, scrutinize columns 10a and 10b of the repair parts list (sec II) until the item is located.

d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (sec II), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-SNV, Fort Monmouth, N.J., 07703.

(Next printed page is 6)

SECTION II

TM11-6760-206-34P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE USABLE ON CODE	(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30-DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGCT	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUSTRATION	
					(A) 1-20	(B) 21-50	(C) 51-100	(A) 1-20	(B) 21-50	(C) 51-100			(A) FIGURE NO	(B) ITEM NO
PAHZZ	5355-817-1357	ADJUSTER, METERPOINTER MP2 Z7-214 (11707)	EA	2				*	*	*	3	1	MP2	
PAHZZ	6760-786-4145	BUTTON, BAFFLE RELEASE MP1 Z6-537 (11707)	EA	1				*	*	*	3	1	MP1	
PAHZZ	6760-786-4148	CASE, ASSEMBLY A22 Z20-1042 (11707)	EA	1				*	*	*	3	5	A22	
PAHZZ	5330-786-4146	GASKET MPS Z6-844 (11707)	EA	1				*	*	*	3	1	MP2	
PAHZZ	6760-786-4147	GLASS, CELL E2 Z10-788 (11707)	EA	1				*	*	*	3	6	E2	
PAHZZ	6760-832-5916	MATCHED CELL AND MECHANISM ASSEMBLY V1 Z10-1350 (11707)	EA	2				*	*	*	3	6	V1	
PAHZZ	6760-832-5916	MATCHED CELL AND MECHANISM ASSEMBLY A9 Z10-1350 (11707)	EA	REF				*	*	*		6	A9	
PAHZZ	6760-786-4150	PHOTOGRAPHIC EXPOSURE METER SUB-ASSEMBLY A6 Z20-1050 (11707)	EA	1				*	*	*	3	4	A6	
PAHZZ	6760-786-4149	SLIDER ASSEMBLY A25 Z20-1045 (11707)	EA	1				*	*	*	3	5	A25	
PAHZZ	5355-817-1355	WINDOW, DIAL MP59 Z10-1310 (11707)	EA	1				*	*	*	3	6	MP59	

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER
 CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

NO	FIGURE	ITEM NO	STOCK NUMBER	FIGURE NO	ITEM NO			
5330-786-4146	6	MPS	6760-786-4148	5	A22			
5355-817-1355	6	MP59	6760-786-4149	5	A25			
5355-817-1357	1	MP2	6760-786-4150	4	A6			
6760-786-4145	1	MP1	6760-832-5916	6	A9			
6760-786-4147	6	E2	6760-832-5916	6	V1			
REFERENCE NO	MFR CODE	FIG NO	ITEM NO	REFERENCE NO	MFR CODE	FIG NO	ITEM NO	
Z10-1310	11707	6	MP59	Z20-1045	11707	5	A25	
Z10-1350	11707	6	A9	Z20-1050	11707	4	A6	
Z10-1350	11707	6	V1	Z6-537	11707	1	MP1	
Z10-788	11707	6	E2	Z6-844	11707	6	MPS	
Z20-1042	11707	5	A22	Z7-214	11707	1	MP2	

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

Active Army:

USASA (2)	Instl (2) except
CNGB (1)	Fort Gordon (10)
ACSC-E (2)	Fort Huachuca (10)
USAARENBD (2)	WSMR (2)
USAMB (10)	Fort Carson (5)
AMC (1)	Ft Richardson (ECOM Of) (2)
ARADCOM (2)	Army Depot (2) except
ARADCOM Rgn (2)	LBAD (14)
OS Maj Comd (4)	SAAD (30)
TRADOC (2)	TOAD (14)
LOGCOMDS (3)	ATAD (10)
MICOM (2)	USA Dep (2)
TECOM (2)	Sig Sec USA Dep (2)
HISA (ECOM) (1)	Sig Dep (2)
MDW (1)	Sig FLDMS (1)
USACC (3)	USAERDAA (1)
Armies (2)	USAERDAW (1)
Corps (2)	MAAG (1)
Svc Colleges (2)	USARMIS (1)
USASESS (5)	Units org under fol TOE
USAADS (2)	(1 copy each unit):
USAFAS (2)	11-16
USAARMS (2)	11-96
USAIS (2)	11-158
USAES (2)	29-134
USAINTS (2)	29-136
USACDCEC (5)	11-117
WRAMC (1)	11-237

NG: None.

USAR: None.

For explanation of abbreviation used, see AR 310-50

* U.S. GOVERNMENT PRINTING OFFICE : 1995 - 388-421 (1519)

This fine document...

Was brought to you by me:



[Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals

- Sincerely
Igor Chudov
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)