# TM 5-4320-248-25P

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT AND GENERAL SUPPORT, AND DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

FUEL SYSTEM, TRANSFER, PORTABLE,

PUMP, CENTRIFUGAL, 100 GPM; TWO

**DISCHARGE HOSE ASSEMBLIES;** 

**ONE SUCTION HOSE ASSEMBLY;** 

TWO NON-AUTOMATIC NOZZLE

ASSEMBLIES; ONE MONITOR GO-NO-GO

GAGE, 100 GPM; 3 HP GASOLINE ENGINE;

ONE BASKET ASSEMBLY KENCO

MODEL 114MX1A FSN 4320-900-8544

HEADQUARTERS, DEPARTMENT OF THE ARMY

FEBRUARY 1968

Technical Manual No. 5-4320-248-25P HEADQUARTERS DEPARTMENT OF THE ARMY WASHINGTON, D. C., 12 February 1968

## Organizational, Direct And General Support, And Depot Maintenance

## Repair Parts And Special Tools List

FUEL SYSTEM, TRANSFER, PORTABLE, PUMP, CENTRIFUGAL, 100 GPM; TWO DISCHARGE HOSE ASSEMBLIES; ONE SUCTION HOSE ASSEMBLY; TWO NON-AUTOMATIC NOZZLE ASSEM-BLIES; ONE MONITOR GO-NO-GO GAGE, 100 GPM; 3 HP GASOLINE ENGINE; ONE BASKET ASSEMBLY KENCO MODEL

## 114MX1A

FSN 4320-900-8544

CURRENT AS OF NOVEMBER 1967

SECTION       I. INTRODUCTION         Scope       1         General-       2         Explanation of columns       3         Special information       4         How to locate repair parts       5         Abbrevi ations       6         Federal supply codes for manufactures       7         Recommendations for maintenance manual improvements       8         II. PRESCRIBED LOAD ALLOWANCE	iii iii vi vi vi vi vi vi
General-2Explanation of columns3Special information4How to locate repair parts5Abbrevi ations6Federal supply codes for manufactures7Recommendations for maintenance manual improvements8	iii vi vi vi vi vi vi
Explanation of columns       3         Special information       4         How to locate repair parts       5         Abbrevi ations       6         Federal supply codes for manufactures       7         Recommendations for maintenance manual improvements       8	iii vi vi vi vi vi vi vi
Special information       -       -       4         How to locate repair parts       -       -       5         Abbreviations       6       6         Federal supply codes for manufactures       7         Recommendations for maintenance manual improvements       8	vi vi vi vi vi
Special information       -       -       4         How to locate repair parts       -       -       5         Abbreviations       6       6         Federal supply codes for manufactures       7         Recommendations for maintenance manual improvements       8	vi vi vi vi
How to locate repair parts	vi vi vi
Abbrevi ations       6         Federal supply codes for manufactures7         Recommendations for maintenance manual improvements         8	vi vi
Recommendations for maintenance manual improvements 8	vi
Recommendations for maintenance manual improvements 8	
II. PRESCRIBED LOAD ALLOWANCE	vii
III. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR ORGANIZATIONAL MAINTENANCE (NOT APPLICABLE)	
SECTION IV. REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE	
Group 01. Engine	
0100 Engine assembly	1
0106 Engine lubrication system	_ 1
0107 Engine starting system	2
03. Fuel System	
0301 Carburetor	3
0304 Air cleaner	3
0306 Tanks, lines, and fittings	4
0308 Engine speed governor	4
04. Exhaust System	
0401 Muffler and pipes	5
05. Cooling System	
0502 Shrouds	5
06. Electrical System	
0605 Ignition components	6

Group 15.		8
22.	Body Chassis or Hull and Accessory Items	9
		10
72.	Dispensing and Servicing Equipment Components	11
		11
	7203 Valves, fittings, nozzles 7204 Miscellaneous parts and accessories	12 13
SECTION V.	REPAIR PARTS FOR DS, GS, AND DEPOT MAINTENANCE	
Group 01.	Engine	
	0100 Engine assembly	16 17
	0101 Crankcase, block, cylinder head 0102 Crankshaft	18
	0104 Pistons, connecting rods	18
	0105 Valves, camshafts and timing system	18
	0106 Engine lubrication system 0107 Engine starting system	19 20
03	Fuel System	20
05.	0301 Čarburetor	21
	0304 Air cleaner	23
	0306 Tanks, lines, and fittings 0308 Engine speed governor	
04	0308 Engine speed governor Exhaust System	24
04.	0401 Muffler and pipes	26
05.	Cooling System	26
00	0502 Shrouds	20
06.	Electrical System 0605 Ignition components	27
15.	Frame	90
	1501 Frame assembly	28
22.	Body Chassis or Hull, and Accessory Items	29
	2210 Data plates and instruction holders	31
72.	Dispensing and Servicing Equipment Components	
	7202 Pumps and meters	31
	7203 Valves, fittings, n o z z l e s 7204 Miscellaneous parts and accessories	33 35
SECTION VI	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT FOR DS,	
SECTION VI.	GS, AND DEPOT MAINTENANCE (NOT APPLICABLE)	
VII.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER,	
	CROSS-REFERENCE TO INDEX NUMBER	52

#### SECTION I.

### INTRODUCTION

#### 1. Scope

This manual lists repair parts required for the performance of organizational, direct support, general support, and depot maintenance of the pump.

#### 2. General

*a.* The repair parts list is arranged as follows:

- (1) Individual parts and major assemblies are listed alphabetically by item name within the numbered functional groups.
- (2) Assembly components and subassemblies are intended and listed alphabetically by item name under major assemblies.

*b.* This Repair Parts and Special Tools List is divided into the following sections.

- (1) Prescribed Load Allowance (PLA)-Section II. A consolidated listing of repair parts quantitatively allocated for initial stockage at the organizational level. This is a mandatory minimum stockage allowance.
- (2) Special Tools, Test and Support Equipment-Section III. A list of special tools test and support equipment authorized for the performance of maintenance at the organizational level. (NOT APPLICABLE)
- (3) *Repair Parts-Section IV.* A list of *re*pair parts authorized for the performance of maintenance at the organizational level.
- (4) *Repair Parts-Section V.* A list of repair parts authorized for the performance of maintenance at the direct

support, general support, and depot level.

- (5) Special *Tools, Test and Support Equipment—Section VI.* A list of special tools, test and support equipment authorized for the performance of maintenance at the direct support, general support, and depot level. (NOT APPLICABLE)
- (6) Federal Stock Number and Reference Number Index—Section VII. A list of Federal stock numbers followed by reference numbers, appearing in all the listings, in ascending alphanumeric sequence cross-referenced to index number.

#### 3. Explanation of Columns

The following provides an explanation of columns in the tabular lists in Sections II through VI.

a. Source, Maintenance, and Recoverability Codes (SMR).

(1) *Source Code.* Indicates the selection status and source for the listed item. Source codes used are:

Code

Explanation

- P Applied to repair parts which are stocked in or supplied from DSA/GSA or Army supply system, and authorized for use at indicated maintenance categories.
- M Applied to repair parts which are not procured or stocked but are to be manuf actured at indicated maintenance categories.
- A Applied to assemblies which are not procured or stocked as such but made up of two or more units, each of which carry individual stock numbers and descriptions and are procured and stocked and can be assembled by units at indicated maintenance categories

Code

#### Explanation

- X Applied to parts and assemblies which are not procured or stocked, the mortality of which is normally below that of the applicable end item, and the failure of which should result in retirement of the end item from the supply system.
- X1 Applied to repair parts which are not procured or stocked, the requirement for which will be supplied by use of the next higher assembly or components.
- X2 Applied to repair parts which are not stocked. The indicated maintenance category requiring such repair pints will attempt to obtain them through cannibalization; if not obtainable through cannibalization, such repair parts will be requisitioned with sup porting jusitification through normal supply channels.
- C Applied to repair parts authorized for local procurements. If not obtainable from local procurement, such repair parts will be requisitioned through normal supply channels with a supporting statement of nonavailibility from local procurement.

Applied to major assemblies that are procured with PEMA (Procurement Equipment Missile Army) funds for initial issue to be used as exchange assemblies at DSU and GSU maintenance level. These assemblies will not be stocked above DSU and GSU level or returned to depot supply level.

*Note.* Source code and level of maintenance am not shown on common hardware items known to be readily available in Army supply channel and through local procurement.

(2) *Maintenance Code.* Indicates the lowest category of maintenance authorized to install the listed item. The maintenance level codes are:

Code

G

#### Explanation

- **0** Organizational maintenance
- F Direct support maintenance
- H General support maintenance
- D Depot maintenance
- (3) *Recoverability Code.* Indicates whether unserviceable items should be returned for recovery or salvage. Items not coded are expendable. Recoverability codes are:

Code

R

Т

u

#### Explanation

- Applied to repair parts and assemblies which are economically repairable at DSU and GSU activities and normally are furnished by supply on an exchange basis.
- Applied to high dollar value recoverable repair parts which are subject to spe cial handling and are issued on an exchange basis. Such repair parts nor. really are repaired or overhauled at depot maintenance activities.
- Applied to repair parts specifically selected for salvage by reclamation united because of precious metal content, critical materials, high dollar value reusable easings or castings.
- (4) This column also lists, below the SMR code, an index number for each item in ascending numerical sequence, which is used to locate items in the publication when the Federal stock number and/or reference number is known.

*b. Federal Stock* Number. Indicates the Federal stock number for the item.

c. Description. Indicates the Federal item name and any additional description of the item required. A part number or other reference number is followed by the applicable five. digit Federal supply code for manufacturers in parentheses.

d. *Unit of Issue.* Indicates the unit used as a basis for issue, e.g. ea, pr, ft, yd, etc.

h. *Quantity Incorporated in Unit Pack.* Indicates the actual quantity contained in the unit pack.

*f. Quantity Incorporated in Unit.* Indicates the quantity of the item used in the functional group.

g. Fifteen-Day Organizational Maintenance Allowances.

(1) The allowance columns are divided into four subcolumns. Indicated in each subcolumn opposite the first appearance of each item is the total quantity of items authorized for the number of equipments supported. Sub sequent appearances of the same item will have no entry in the allowance columns but will have in the descrip tion column a reference to the first appearance of the item. Items authorized

iν

for use as required but not for initial stockage are identified with an-asterisk in the allowance column,

- (2) The quantitative allowances for organizational level of maintenance represents one initial prescribed load for a 15-day period for the number of equipments supported. Units and organizations authorized additional prescribed loads will multiply the number of prescribed loads authorized by the quantity of repair parts reflected in the appropriate density column to obtain the total quantity of repair parts authorized.
- (3) Organizational units providing maintenance for more than 100 of these equipments shall determine the total quantity of parts required by converting the equipment quantity to a decimal factor by placing a decimal point before the next to last digit of the number to indicate hundredths, and multiplying the decimal factor by the parts quantity authorized in the 51-100 allowance column. Example, authorized allowance for 51–100 equipments is 12; for 140 equipments multiply 12 by 1.40 or 16.80 rounded off to 17 parts required.
- (4) Subsequent changes to allowances will be limited as follows: No change in the range of items is authorized. If additional items are considered necessary, recommendation should be forwarded to U.S. Army Mobility Equipment Command for exception or revision to the allowance list. Revisions to the range of items authorized will be made by this Command based upon engineering experience, demand data, or TAERS information.

h. Thirty-Day DS/GS Allowances.

(1) The allowance columns are divided into three subcolumns. Indicated in each subcolumn, opposite the first appearance of each item, is the total quantity of items authorized for the number of equipments supported, Subsequent appearance of the same item will have no entry in the allowance column, but will have in the description column a reference to the first appearance of the item. Items authorized for use as required but not for initial stockage are identified with an asterisk in the allowance column.

- (2) The quantitative allowances for DS/ GS levels of maintenance will represent intial stockage for a 30-day period for the number of equipments supported.
- (3) Determination of the total quantity of parts required for maintenance of more than 100 of these equipments can be accomplished by converting the equipment quantity to a decimal factor by placing a decimal point before the next to last digit of the number to indicate hundredths, and multiplying the decimal factor by the parts quantity authorized *in* the *51-100 al*lowance column. Example, authorized allowance for 51–100 equipments is 40; for 150 equipments multiply 40 by 1.50 or 60 parts required.

*i.* One-Year Allowances Per 100 Equipments/Contingency Planning Purposes. Indicates opposite the first appearance of each item the total quantity required for distribution and contingency planning purposes. The range of items indicates total quantities of all authorized items required to provide for adequate support of 100 equipments for one year.

j. Depot Maintenance Allowance Per 100 Equipments. Indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments. Subsequent appearances of the same item will have no entry in this column, but will have in the description column a reference to the first appearance of the item. Items authorized for use but not for initial stockage are identified with an asterisk in the allowance column.

k. Illustration.

- (1) *Figure Number.* Indicates the figure number of the illustration in which the item is shown.
- (2) Item *Number.* Indicates the callout number to reference the item in the illustration.

#### 4. Special Information

*a.* Repair parts mortality has been based on 1000 hours of operation per year.

*b.* Parts which require manufacture or assembly at a category higher than that authorized for installation will indicate in the source column the higher category.

c. The following publication pertains to the pump and its components:

TM 5-4	320-248-Operator, organizational,
15	direct support, gen-
	eral support, and
	depot maintenance
	manual.

#### 5. How to Locate Repair Parts

*a.* When Federal stock number or reference number is unknown:

- (1) *First.* Using the table of contents, determine the functional group within which the repair part belongs.
- (2) *Second.* Find the illustration covering the functional group to which the repair part belongs,
- (3) *Third.* Identify the repair part on the illustration, and note the illustration figure and item number of the repair part.
- (4) *Fourth.* Using the Repair Parts Listing, find the functional group to which the repair part belongs and locate the illustration figure and item number noted on the illustration.

*b.* When Federal stock number or reference number is 'known:

(1) *First.* Using the index of Federal stock numbers and reference numbers, find the pertinent Federal Stock number or reference number, This in-

dex is in ascending alphanumeric sequence cross-referenced to an index number.

(2) *Second.* Using the repair part listing, find the index number referenced in the index of Federal stock numbers and reference numbers,

#### 6. Abbreviations

GPMGallons Per Minute
hphorse power
ininch, inches
lglong, length mtgmounting stdstandard
mtgmounting
stdstandard
thdthread
w/with

#### 7. Federal Supply Codes for Manufacturers

Code	Manufacturers
08484	Breeze Corporation Inc.
08645	Briggs and Stratton Corp.
25500	Goodyear Aircraft Corp.
38508	Marsh Instrument Co., Division of
	Colorado Oil and Gas Corp.
81718	OPW Division of Dover Corp. Kenco Pump Division of American Crucible Products Co.
88795	Kenco Pump Division of American
	Crucible Products Co.
98906	Bendix Corp., The Filter Division Military Stantdards

## 8. Recommendations for Maintenance Manual Improvements

Report of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to DA Publications) and forwarded direct to the Commanding General, U. S. Army Mobility Equipment Command, ATTN: AMSME-MPP, 4300 Goodfellow Blvd., St. Louis, Mo. 63120,

# SECTION II PRESCRIBED LOAD ALLOWANCE

(1)	(2)	(3) Qty		(4) day org m	aint. elw	
Federal stock	Description	inc in unit	(B)			(4)
stock number	useable on code	pack	(a) 1-5	(b) 6–20	(c) 21-50	(d) 51-100
805-828-0783	Group 01-ENGINE 01.00—ENGINE ASSEMBLY GASKET SET: engine (08645) 297275 Group 01.06—ENGINE LUBRICATION		*	sk.	2	2
805-776-2282	SYSTEM GROMMET : breather cover (08645) 66578		*	*	2	2
990-174-5255	Group 0107—ENGINE STARTING SYSTEM ROPE, ENGINE STARTER: 47 1/8 in. lg. (08645) 294584 Group 03—FUEL SYSTEM		2	2	4	8
10-920-5361	0301—CARBURETOR CARBURETOR ASSEMBLY (08645) 296784		*	*	2	2
940-688-7912	0304—AIR CLEANER FILTER ELEMENT, AIR INTAKE (08645) 27987		*	*	*	2
9906240260	0308—ENGINE SPEED GOVERNOR SPRING, CONTROL ROD (08645) 26855		*	*	*	2
990	SPRING, GOVERNOR LINK (08645) 260585		*	*	*	2
340-945-0493	(08645) 200000 SPRING, GOVERNOR LEVER (08645) 260545		*	•	*	2
	Group 06-ELECTRICAL SYSTEM 0605-IGNITION COMPONENTS					
305-624-0284	PARTS KIT, IGNITION: breaker points and condenser (08645) 294628		*	2	2	4
9202943747	PLUG, SPARK W/GASKET (08645) CJ8		2	2	4	8
9707891925	INSULATOR, PLATE: terminal; condenser lead (08645) 66935 Group 22CHASSIS OR HULL,		*	*	2	2
	AND ACCESSORY ITEMS 2202—ACCESSORY ITEMS					
720-916-1883	HOSE ASSEMBLY, DISCHARGE: rubber w/coupling (88795) SX937		*	*	*	2
730–3 <b>60–059</b> 5	GASKET (81718) H6430M		*	2	2	2
	Group 72—DISPENSING AND SERVICING EQUIPMENT COMPONENTS 7204—MISCELLANEOUS					
	PARTS AND ACCESSORIES					
320-920-5342	CLAMP, HOSE (88795) QS200M28A		*	*	*	2
930-872-1779	ELEMENT, FILTER (90005) 041420S		2	2	4	8
330-526-7517	O-RING, 100 GPM GAGE (96906) MS29513-249		*	2	2	4

(1)	(2)	(3)		(4) Э	(5)	(6)			(7)		ILL	(8) US-
SMR CODE	FEDERAL STOCK	DESCRIPTION		OF ISSU	QTY INC IN	QTY INC IN	15-D/ M/	AY ORG			(a)	ATION (b)
INDEX NO.	NUMBER	REFERENCE NO. & MFR. CODE	USABLE ON CODE	UNIT C	UNIT PACK	UNIT	(a) 1-5	(b) 6-20-	(c) 21-50	(d) 51-100	FIG NO.	ITEM NO.
00001		SECTION IV - REPAIR PARTS FOR ORGANIZATIONAL MAINTENANCE										
00001A		GROUP OI - ENGINE								j		
00001B		0100 - ENGINE ASSEMBLY										
P 0 00004	2805-828-0783	GASKET SET: ENGINE 297275 (08645)		EA		1	*	*	2	2		
X1 00005	2940-608-8514	GASKET: AIR CLEANER 27660 (08645)		EA		1	SEE	GRP 0	304			
X1 00006	29 <b>40-171-7</b> 935	GASKET: CARBURETOR MIG 27402 (08645)		EA .		1	SEE	GRP 0	301			
X1 00009	2910-898-2094	GASKET: FUEL TANK MTG 27911 (08645)		EA		1	SEE	GRP O	306			
00049		0106 - ENGINE LUBRICATION SYSTEM										
0 00050	5306-073-8255	BOLT, ASSEMBLED WASHER: BREATHER MTG 93394 (08645)		EA		2					5	8
P 0 00051	2805-624-0282	BREATHER, VALVE CHAMBER 294178 (08645)		EA		1	*	•*	*	*	5	4
P 0 00052	2805-422-5804	CAP, OIL FILLER: CRANKCASE COVER 69345 (08645)	·	EA		1	*	*	*	*	2	11
x1 00053	2805-678-4431	GASKET; VALVE CHAMBER COVER MTG 27549 (08645) (Component of GASKET SET, Stock No. 2805-828-0783, Group 0100)		EA		1					5	3
P 0 00054	2805-776-2282	GROMMET: BREATHER COVER 66578 (08645)		EA		1	*	*	2	2	5	5
x20 00055		GROMMET, BREATHER TUBE 67608 (08645)		EA		1					5	7

**\_** 

Ν

CODE NUMBER         FEERAL NAMER         DESCRIPTION         State and formation of the state of t	(1)	(2)	(3)		4)	(5)	(6)			7)	·	(	8)
NGA         REFERENCE NO. & MER. CODE         USABLE ON CODE         S         PACK         OIT         (a)         (b)         (c)         (c)        <	<b>—</b>	STOCK	DESCRIPTION			INC	INC . IN	15-D/ M/	Y ORG	NIZAT	IONAL AL₩	ILLI TRA (a)	US- ATION (b)
00056       91256 (05645)         P 0       2805-849-31Å1       TUBE, BRATHER         00057       2805-849-31Å1       TUBE, BRATHER         00058       0107 - ENGINE STARTING SYSTEM       EA       1       •       •       •         00058       0107 - ENGINE STARTING SYSTEM       EA       1       •       •       •       •       •         00059       2990-907-06Å4       CLUTCH ASSEMELY STARTER       EA       1       •			REFERENCE NO. & MFR. CODE USABLE ON				UNIT					FIG NO.	ITEM NO.
00057       230634 (08645)       0107 - ENGINE STARTING SYSTEM         00058       0107 - ENGINE STARTING SYSTEM       EA       1       •       •       •         00059       2990-907-06H       CLUTCH ASSEMBLY STARTER 299301 (08645)       EA       1       •       •       •       •         x1 00050       3110-100-6180       BEARING, BALL: clutch HOUSING 63770 (08645)       EA       6       I       I       •       <		4730-192-9481	NIPPLE, PIPE: OIL FILLER, 3/4 IN, 2 IN LG 91258 (08645)	E	•		1					2	12
P 0 000059       2990-907-06Å       CLUTCH ASSEMBLY STARTER 298310 (08645)       EA       1       •		2805-849-3141	TUBE, BREATHER 230634 (08645)	E	^		1	*	*	*	*	5	6
000059       298310 (08645)         X1       3110-100-6180       BEARING, BALL: CLUTCH HOUSING         6       6         X1       5840-787-6662         BUMPER, STARTER PULLEY         66528 (08645)         X1       5840-787-6662         2990-768-0723       GRIP, ENGINE STARTER         66728 (08645)       EA         X1       2990-768-0723         66728 (08645)         X20       HOUSING, STARTER CLUTCH         211393 (08645)         X1       200063         X1       2000645)         X20       HOUSING, STARTER CRIP         211393 (08645)       EA         X1       200053         X1       230228 (08645)         X1       230228 (08645)         X1       230228 (08645)         X1       230228 (08645)         X1       2990-786-2030         P 0       2990-930-1737         P 0       2990-930-1737         2990-786-2030       PULLEY, ENGINE STARTER         2990-786-2030       PULLEY, ENGINE STARTER         2990-786-2030       PULLEY, ENGINE STARTER         2990-786-2030       PULLEY, ENGINE STARTER         2990-786-2030	00058		0107 - ENGINE STARTING SYSTEM										
00000       63770 (08645)       EA       1       I		2990-907-0644	CLUTCH ASSEMBLY STARTER 298310 (08645)	E	^		1	*	*	*	*		
00061       66528 (08645)         X1       2990-768-0723       GRIP, ENGINE STARTER 66728 (08645)         X20       HOUSING, STARTER CLUTCH 211383 (08645)       EA       1       I       I         X1       21383 (08645)       EA       1       I       I       I         X1       230228 (08645)       EA       1       I       I       I       I         X1       230228 (08645)       EA       1       I <t< td=""><td></td><td>3110-100-6180</td><td></td><td>E</td><td>^</td><td></td><td>6</td><td></td><td></td><td></td><td></td><td>4</td><td>16</td></t<>		3110-100-6180		E	^		6					4	16
00062       66728 (08645)         X20 00063       HOUSING, STARTER CLUTCH 211383 (08645)         X1 00064       5315-855-4336         PIN, STARTER GRIP 230228 (08645)         X1 00064       5315-855-4336         PIN, STARTER GRIP 230228 (08645)         X1 00064       5315-855-4336         PIN, STARTER GRIP 230228 (08645)         X1 00065       2990-786-2030         PULLEY, ENGINE STARTER 294088 (08645)         EA       1         P 0 00066       2990-930-1737         RATCHET, REWIND 296036 (08645)         P 0 00066       2990-174-5255         ROPE, ENGINE STARTER; 47 1/8 IN LG 294584 (08645)         K20 00068       2990-930-1738         SCREEN, REWIND STARTER PULL 221661 (08645)         Q       5305-719-4603         SCREW, ASSEMBLED WASHER; BCREEN MTG		5840-787-6662	BUMPER, STARTER PULLEY 66528 (08645)	E	^	,	1					4	10
00063       211383 (08645)         X1       5315-855-4336       PIN, STARTER GRIP         230228 (08645)       EA       1         X1       2990-786-2030       PULLEY, ENGINE STARTER         2990-786-2030       PULLEY, ENGINE STARTER         2990-930-1737       RATCHET, REWIND         2990-930-1737       RATCHET, REWIND         2990-930-1737       RATCHET, REWIND         2990-930-174-5255       ROPE, ENGINE STARTER: 47 1/8 IN LG         P 0       2990-930-174-5255         ROPE, ENGINE STARTER: 47 1/8 IN LG         X20       2990-930-1738         SCREEN, REWIND STARTER PULL         221661 (08645)         0       5305-719-4603         SCREW, ASSEMBLED WASHER; SCREEN HTG	X1 00062	2990-768-0723	GRIP, ENGINE STARTER 66728 (08645)	E	^		1					4	5
00064       230228 (08645)         X1       2990-786-2030         P 0       294088 (08645)         P 0       2990-930-1737         RATCHET, REWIND         298436 (08645)         P 0         00066         2990-930-1737         RATCHET, REWIND         298436 (08645)         EA         1         **       **         **         **         **         **         <			HOUSING, STARTER CLUTCH 211383 (08645)	E	^		1					4	17
P 0 00066       2990-930-1737       RATCHET, REVIND 298436 (08645)       RATCHET, REVIND 298436 (08645)       I       I       # <td>X1 00064</td> <td>5315-855-4336</td> <td>PIN, STARTER GRIP 230228 (08645)</td> <td>E.</td> <td>^</td> <td></td> <td>1</td> <td></td> <td></td> <td></td> <td></td> <td>4</td> <td>6</td>	X1 00064	5315-855-4336	PIN, STARTER GRIP 230228 (08645)	E.	^		1					4	6
00066       298436 (08645)         P 0       2990-174-5255         ROPE, ENGINE STARTER: 47 1/8 IN LG         00067         2990-1738         SCREEN, REWIND STARTER PULL         2990-930-1738         SCREEN, REWIND STARTER PULL         00068         0         5305-719-4603         SCREW, ASSEMBLED WASHER; SCREEN HTG	X1 00065	299 <b>0-</b> 786-2030	PULLEY, ENGINE STARTER 294088 (08645)	E	^		1					4	9
00067         294584 (08645)           X20         2990-930-1738         SCREEN, REWIND STARTER PULL           00068         221661 (08645)           0         5305-719-4603         SCREW, ASSEMBLED WASHER: SCREEN NTG		2990-930-1737		E	^		1	. *	*	*	*	4	15
00068 221661 (08645) 0 5305-719-4603 SCREW, ASSEMBLED WASHER: SCREEN NTG		2990~174-5255	ROPE, ENGINE STARTER: 47 1/8 IN LG 294584 (08645)	E	^		1	2	2	4	8	4	2
0 5305-719-4603 SCREW, ASSEMBLED WASHER: SCREEN NTG 93042 (08645) EA 4	X20 00068		SCREEN, REWIND STARTER PULL 221661 (08645)	. E.			1					4	12
		5305-719-4603	SCREW, ASSEMBLED WASHER: SCREEN NTG 93042 (08645)	E	^		4					4	11

(1)	(2)	(3)		(4)	(5)	(6)		(	7)			8)
SMR CODE	FEDERAL	DESCRIPTION		ISSUE	QTY INC	QTY INC	15-DA MA	Y ORGA				TION
INDEX	NUMBER			Ъ	IN UNIT	IN UNIT	(o)	(Ь)	(c)	(d)	(a)	(Ь)
NO.		REFERENCE NO. & MFR. CODE USAE	BLE ON CODE	LINU	PACK		1-5	6-20		51-100	FIG NQ.	ITEM NO,
P 0 00070	2990 <b>-</b> 76 <b>9</b> -4104	SPRING, REWIND STARTER 294303 (08645)		EA			4	*	*	*	4	3
X20 00071		WASHER, CLUTCH RETAINER 221653 (08645)		EA							4	14
x20 00072		WASHER, RUBBER, RATCHET SEALING 68238 (08645)		EA							4	13
00073		GROUP 03 - FUEL SYSTEM										
00073	1	0301 - CARBURETOR						-				
P 0 00074	2910-920-5361	CARBURETOR ASSEMBLY 296784 (08645)		EA		1	*	*	2	2	6	7
x1 00094	2940-171-7935	GASKET; CARBURETOR MTG 27402 (08645) (Component of GASKET SET, Stock No. 2805-828-0783, See Group 0100)		EA		1					6	6
X20 00095		SCREW, ASSEMBLED WASHER: CARBURETOR TO FUEL TANK MTG, 10-32 THD SIZE, 5/8 IN LG 93341 (08645)		EA		3					6	12
x20 00097		SCREW, CAP, HEXAGON HEAD: CARBURETOR TO ENGINE MTG $1/4-20$ thd size, $3/4$ in Lg 93357 (08645)		EA		2					6	5
00100		0304 - AIR CLEANER										
P 0 00101	2940-294-1599	AIR CLEANER, INTAKE 294870 (08645)	E	EA		1	*	*	•	*	6	2
P 0 00102	2940-688-7912	FILTER ELEMENT, AIR INTAKE 27987 (08645)	E	EA		1	*	*	*	2	6	3
x1 00103	2940 <b>-</b> 608-8514	GASKET: AIR CLEANER (Component of GASKET SET Stock No. 2805-828-0783, See Group 0100) 27660 (08645)	E	A		1					6	4
X20 00104 		SCREW, AIR CLEANER 93322 (08645)	E	A		1					6	1

ω

(1)	(2)	(3)		(4) ш	(5)	(6)		(	7)		()  LL1	B)
SMR CODE	FEDERAL STOCK	DESCRIPTION		issu	QTY INC	OTY INC	15-DA МА	Y ORGA	NIZAT	IONAL ALW		JS- TION (b)
INDEX NO.	NUMBER			IT OF	IN UNIT PACK	. IN UNIT	(a)	(b)	(c)	(d)	FIG	ITEM
		REFERENCE NO. & MFR. CODE USA	BLE ON CODE	LINU			1-5	6-20	21-50	51-1 <b>0</b> 0	NO.	NO.
C0105		0306 - TANKS, LINES, AND FITTINGS										-
x20 <b>0</b> 0106		TANK, FUEL 296591 (08645)		EA		1					6	9
P 0 00107	2910 <b>-</b> 707 <b>-75</b> 03	CAP, FUEL TANK 293270 (08645)		EA		· 1	*	*	*	*	6	11
x1 00108	291 <b>0-</b> 898-2094	GASKET: FUEL TANK MTG 27911 (08645) (Component of GASKET SET Stock No. 2805-828-0783, See Group 0100)		EA		1					6	8
*20 <b>001</b> 09		SCREW, CAP, HEXAGON HEAD: танк мтс, 1/4-20 тно size 93343 (08645)		EA		1					6	10
00110		0308 - ENGINE SPEED GOVERNOR									8	10
x20 00117		BUSHING: GOVERNOR LEVER 23688 (08645)		EA		1					0	10
x20 00115		BRACKET: CONTROL ROD MTG 221384 (08645)		EA		1		-			8	5
X20 00116	2990-787-6665	BRACKET, MECHANICAL GOVERNOR: THROTTLE CONTROL 220691 (08645)		EA		1					8	12
<b>x2</b> 0 <b>00</b> 119		LEVER, GOVERNOR 294077 (08645)		EA		1					8	16
X20 00120		LEVER, MECHANICAL GOVERNOR 220690 (08645)		EA		1					8	7
X20 00121	2990-920-5347	LINK, GOVERNOR 260544 (08645)		EA		1					8	14
X20 00122		NUT, CONTROL ROD 230149 (08645)		EA		1					8	3
X20 00125		ROD, CONTROL: GOVERNOR 230680 (08645)		EA		1					8	6
F- 1	ł			. 1	_					'	1	

(1)	(2)	(3)	(4		(6)			(7)		(	8)
SMR CODE	FEDERAL STOCK	DESCRIPTION				15-DA МА	Y ORGA		ONAL AL₩		(b)
INDEX NO	NUMBER			IN UNIT PACK	. IN UNIT	(a)	(Ь)	(c)	(d)	FIG	ITEM
		REFERENCE NO. & MFR. CODE USABLE ON CO	DE =		ļ	1-5	6- <b>2</b> 0	21-50	51-100	NO.	NO.
X20 00126		SCREW, ASSEMBLED WASHER: BRACKET MTG, 10-24 THD SIZE, 9/16 IN LG 93062 (08645)	EA		1					8	11
0 00128	5306-543-5219	SCREW, ASSEMBLED WASHER: THROTTLE LEVER MTG, 10-24 THD SIZE, 3/8 IN LG 93067 (08645)	EA		1					8	9
0 00129	53 <b>05-</b> 719-4783	SCREW, MACHINE: LEVER MTG 93100 (08645)	EA		1					8	17
РО 00131	2990-624-0260	SPRING, CONTROL ROD 26855 (08645)	EA		1	*	*	*	2	8	ц
P 0 00132	5340-945-0493	SPRING, GOVERNOR LEVER 260545 (08645)	EA		1	*	*	*	2	8	15
P 0 00133	2990 <b>-</b> 898-2097	SPRING, GOVERNOR LINK 260585 (08645)	EA		1	*	•*	*	2	8	13
x20 00134		WASHER: GOVERNOR BRACKET AND LEVER MTG 66432 (08645)	EA		2					8	8
00137		GROUP 04 - EXHAUST SYSTEM									
<b>001</b> 37A		0401 - MUFFLER AND PIPES									
x20 00138	5975-152-1075	LOCKNUT, EXHAUST, MUFFLER 91811 (08645)	EA		1					8	1
ро 00139	2990-269-7145	MUFFLER, EXHAUST 89966 (08645)	EA		1	*	*	*	*	8	2
00140		GROUP 05 - COOLING SYSTEM									
<b>0</b> 0140A		0502 - SHROUDS									
X20 00141	2930-537 <b>-</b> 1363	COVER, CYL INDER HEAD 220581 (08645)	EA		1				ŗ	4	1

...

ري.

ი

(1)	(2)	(3)		(4)	(5)	(6)		(	7)		(i 1L <b>L</b> I	B)
SMR CODE	FEDERAL STOCK	DESCRIPTION		OF ISSUE	QTY INC	QTY INC	15DA МА	Y ORGA	NIZATI	ONAL ALW		TION (b)
INDEX	NUMBER			IT OF	IN UNIT PACK	UNIT	(a)	(b)	(c)	(b)	FIG	ITEM
NO.		REFERENCE NO. & MFR. CODE USA	BLE ON CODE	UNIT			1-5	6-20	21-50	51-100	NO.	NO.
x20 00142	2930-537-1360	DEFLECTOR, AIR 220692 (08645)		EA		1					9	.7
x20 00143		HOUSING, BLOWER 294260 (08645)		EA		1					4	4
0 00144	5305-719-4603	SCREW, ASSEMBLED WASHER: CYLINDER SHIELD MTG 93042 (08645)		EA		, 1 ,					5	1
x20 00145		SCREW, CAP, HEXAGON: SHROUD MTG, 1/4-20 THD SIZE, 9/16 IN LG 92666 (08645)		EA		3					<u>)</u> ţ	7
X20 00146		SHIELD, CYLINDER 220478 (08645)		EA		1					5	2
x20 00147		WASHER, LOCK: INTERNAL AND EXTERNAL TEETH, shroud mtg, 1/4 in screw size 92778 (08645)		EA		3					4	8
00148		GROUP OG - ELECTRICAL SYSTEM										
00148a		0605 - IGNITION COMPONENTS										
₽ <sup>-</sup> 0 00149	2920-920-5373	ARMATURE, MAGNETO 298502 (08645)		EA		1	*	*	*	*	9	6
0 00150	5305-010-0752	BOLT: CONDENSER LEAD MTG 92786 (08645)		EA		1					9	17
x20 00151		CLAMP: CONDENSER MTG 260455 (08645)		EA		1.					9	15
X20 00152	292 <b>0-5</b> 37 <b>-</b> 1365	COVER, CONTACT SET 220366 (08645)		EA		1					9	9
РО <b>0</b> 0153	2805-920-5385	FLYWHEEL ASSEMBLY, MAGNETO 296884 (08645)		EA		1	*	*	*	*	. 4	20
P 0 00154	5970-789-1925	INSULATOR, PLATE: TERMINAL, CONDENSER LEAD 66935 (08645)		EA		1	*	*	2	2	9	19

(1)	(2)	(3)		(4) ш	(5)	(6)		(	7)		( 	8)
SMR CODE	FEDERAL STOCK	DESCRIPTION		ISSU	QTY INC	QTY INC	15DA MA	Y ORGA	NIZATI	IONAL AL₩		TION (b)
INDEX	NUMBER			IT OF	IN UNIT PACK	. и Тил	(a)	(b)	(c)	(d)	FIG	ITEM
NO.		REFERENCE NO. & MFR. CODE USA	BLE ON CODE	UNIT			1.5	6-20	21-50	51-1 <b>00</b>	NO.	NO.
P 0 00155	5315-598-5970	KEY, MACHINE: FLY WHEEL MTG 61760 (08645)		EA		1	*	*	*	*	4	19
ро 00156	2920-213-1147	LEAD, ELECTRICAL, SPARK PLUG: ARMATURE 293141 (08645)		EA		1	*	*	*	÷	9	5
0 00157	5310 <b>-</b> 596 <b>-</b> 5224	NUT, HEXAGON: CONDENSER LEAD MTG 90576 (08645)		EA		1					9	20
ро 00158	2805-624-0284	PARTS KIT, IGNITION: BREAKER POINTS AND CONDENSER 294628 (08645)		EA		1	*	2	2	4	9	12
X20 00159	5340-2 <b>86-</b> 4566	SPRING, HELICAL, EXTENDED: BREAKER ARM 26018 (08645)		EA		1					9	11
P 0 00160	2920-29 <b>4-</b> 3747	PLUG, SPARK, WITH GASKET CJ8 (08645)		EA		1	2	2	4	8	9	3
РО 00161	2920-356-1333	PLUNGER, BREAKER POINT 65704 (08645)		EA		1	*	*	*	*	9	13
0 00162	5305-992-0440	screw, assembled washer 93381 (08645)		EA		3					9	8
0 00163	5305-719-4603	SCREW, ASSEMBLED WASHER: CONDENSER CLAMP MTG 93042 (08645)		EA		1					9	14
0 00164	5305-5 <sup>4</sup> 3-5220	SCREW, ASSEMBLED WASHER: DUST COVER MTG 93014 (08645)		EA		2				_	9	10
0 00165	5310-721-4667	WASHER, FLAT: FLYWHEEL MTG 220865 (08645)		EA		1					4	18
0 00166	5310-011-55 <sup>44</sup>	WASHER, LOCK: CONDENSER LEAD MTG		EA		2					9	18
x20 00167	6150-624-0279	WIRE, ELECTRICAL: LEAD, CONDENSER TO INSULATOR 293999 (08645)		EA		1					9	16
					l		<u>``</u>	· · J	1			

œ		

(1) SMR CODE	(2) FEDERAL STOCK	(3) DESCRIPTION	OF ISSUE &	(5) QTY INC	(6) QTY INC	15-DA MA	Y ORG	(7) ANIZAT ANCE	IONAL ALW	ILL TR/	(8) US- ATION	
INDEX NO.	NUMBER			UNIT OF	IN UNIT PACK	N UNIT	(a)	(ь)	(c)	(d)	(a) FIG NO	(b) ITEM NO.
		REFERENCE NO. & MFR. CODE	USABLE ON CODE				1.5	6-20	21-50	51-100		
00168		GROUP 15 - FRAME										
00168A		1501 - FRAME ASSEMBLY										
K20 20169		BASE ASSEMBLY SX1610 (88795)		EA		1						
(20 20170		BASE, LEFT SX1644A (88795)		EA		1					10	3
(20 20170a		BASE, RIGHT SX1644B (88795)		EA		1					10	3
(20 20171		BASKET, CARRYING SX700 (88795)		EA		1					10	8
(20 )0172		BOLT: BASE MTG, 5/16-18 THD SIZE, 1 1/2 IN LG BEO02A7 (88795)		EA		4					10	9
(20 )0173		BOLT: SUPPORT AND SPACER MTG, 3/8-16 THD SIZE, 9 IN LG SX1094 (88795)		EA		2					10	5
(20 )0174		NUT, HEXAGON: BASE MTG, 5/16-18 тно size BG002B2 (88795)		EA		4					10	6
20 20175		NUT, STOP: SUPPORT AND SPACER MTG, 3/8-16 THD SIZE SX989 (88795)		EA		2					10	1
20 0176		SPACER, BASE: 4-5/8 IN LG SX988 (88795)		EA		2					10	2
20 0177		SUPPORT, FILTER ASSEMBLY SX1091 (88795)		EA		2					10	4
20 0178		WASHER, LOCK: BASE MTG, 5/16 IN SCREW SIZE AHOO2B1 (88795)		EA		4					10	7

(1)	(2)	(3)		(4) 	(5)	(6)			(7)	1	( ILL	8) US
SMR CODE	FEDERAL STOCK	DESCRIPTION		= ISSUE		QTY INC	15-D4 м4	Y ORG	NIZAT	IONAL ALW	T R,4	TION (b)
INDEX NO.	NUMBER			UNIT OF	IN UNIT PACK	TINU	( a)	(Ъ)	(c)	(d)	FIG NO.	IT EM NO.
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	5			1-5	6- <b>2</b> 0	21-50	51- <b>100</b>		110.
00179		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS										
00179A		2202 - ACCESSORY ITEMS										
x20 00180		ACCESSORY HOSE AND NOZZLE PACKAGE SX1077 (88795)		EA		1						
ро 00181	4720-946-9960	HOSE ASSEMBLY, SUCTION, RUBBER: WITH COUPLING SX848 (88795) (Components Same as HOSE ASSEMBLY, Stock No. 4720-916-1883, except where individual components are annotated)		EA		1	*	*	*	#		
ро <sup>:</sup> 00182	4720-916-1883	HOSE ASSEMBLY, DISCHARGE: RUBBER W/COUPLING SX937 (88795)		EA		2	*	*	*	2	11	
x1 00183		HOSE, DISCHARGE: 50 FT 546-622-048 (25500) (Used with HOSE ASSEMBLY, Stock No. 4720-916-1883, only)		EA		2					11	1
x1 00184		HOSE, SUCTION, FUEL: 10 FT 541-621-048 (25500) (USED WITH HOSE ASSEMBLY, STOCK NO. 4720-946-9960 ONLY)		EA		1					11	2
X1 00185		CLAMP, HOSE AR005A1 (08484)		EA		12					11	8
X1 00186	4730-542-4031	COUPLING, HALF QUICK 633C (81718)		EA		3					11	10
x1 00187		COUPLER, HOSE, SHANK SX1616 (81718)		EA		3			ŀ			
x1 00188		FINGER RING SX1605 (88795)		EA		6						
ро 00189	4730-360-0595	GASKET H6430M (81718)		EA		3	*	2	2	2		

(1)	(2)	(3)	(4) E	('5)	(6)			(7)			(8) US-
SMR CODE	FEDERAL STOCK	DESCRIPTION	OF ISSUE	QTY INC IN	QTY INC . IN	15-DA мА	Y ORGA	NIZAT	IONAL ALW	(a)	TION (b)
INDEX NO.	NUMBER	REFERENCE NO. & MFR. CODE	UNIT O	UNIT PACK	UNIT	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	FIG NO	IT E NO
			<u>  .</u>				0-20	21-50	31 100		$\vdash$
X1 00190		PLUG ASSEMBLY, DUST SX1617 (88795)	EA		3						
x1 00191	4010-628-5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)	EA		6					11	
X1 00192	4730-595-3846	PLUG, HOSE 634a (81718)	EA		3					11	
x1 00193	4730-542-4030	COUPLING HALF, QUICK 633E (81718)	EA		3					11	
x1 00194		CAP ASSEMBLY, DUST SX1604 (88795)	EA		3						
X1 00195	4730-555-1562	САР, HOSE 634в (81718)	EA		3					11	
X1 00196	4010-628 <b>-</b> 5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)	EA		3						
ро 00197	4730-360-0595	GASKET H6430M (81718) (Initially listed as Index No. 00189)	EA		6					11	
x1 00198		RING, FINGER SX1605 (88795)	EA		12					11	
<b>0</b> 0199		2210 - DATA PLATES AND INSTRUCTION HOLDERS									
x20 00200		DRIVE SCREW BH002A (88795)	EA		4	-					
x20 00201		IDENTIFICATION, PLATE G3020A2 (88795)	EA		1						
x20 00202	2930 <b>-</b> 537-136 <sup>4</sup>	PLATE IDENTIFICATION: CYLINDER SHIELD 220478 (08645)	EA		1						
	ŕ										

(1)	. (2)	(3)		(4) 111	(5)	(6) (6)	15 04	( Y ORGA	7) NIZATI		ILL	8) US- TION
SMR CODE	FEDERAL STOCK NUMBER	DESCRIPTION		OF ISSU	QTY INC IN UNIT	OTY INC IN UNIT	MÀ	INTENA		ALW	(o)	(Ь)
INDEX NO.	NUMBER			UNIT	PACK	UNIT	(a)	(b)	(c)	(b)	FIG NO.	ITEM NO.
		REFERENCE NO. & MFR. CODE	USABLE ON CODE				1-5	6-20	21-30	51-100		
00203		GROUP 72 - DISPENSING AND SERVICING EQUIPMENT COMPONENTS										
00203A		7202 - PUMPS AND METERS										
x20 00204		PUMP ASSEMBLY SX1603 (88795) (Includes Components of Kit, Stock No. 4320-989-3259)		EA		1						
X1 00205		CASING ASSEMBLY SX1608 (88795)		EA		1						
X1 00207		CAP ASSEMBLY, DUST SX1604 (88795)		EA		1					12	22
X1 00208	4730-555-1562	сар 634в (81718)		EA	-	1						
X1 00209	4010-628-5276	CHAIN ASSEMBLY, SINGLE SECURITY H6682M (81718)		EA		1						
X1 00210		FINGER, RING SX1605 (88795)		EA		2						
P 0 00211	4730 <b>-</b> 360 <b>-</b> 0595	GASKET: OUST CAP H6430M (81718) (Initially listed as Index No. 00189)		EA.		1					12	23
X20 00213	4730-805-6726	COUPLING, HALF QUICK: PUMP CASING 633F (81718)		EA		3					12	25
x20 00214		ELBOW, SIDE OUTLET, PUMP: ALL ENDS FEMALE, 1 1/2-11 1/2 THD SIZE SX990 (88795)		EA		1					12	1
X20 00215		HANDLE, PUMP C2002A1 (88795)		EA		1					12	2
X20 00216		NIPPLE: 1 1/2 IN, ALUM, 2 IN LG PUMP CASING SX715 (88795)		EA		1					12	27

<u> -</u>

(1) SMR CODE	(2) FEDERAL STOCK	(3) DESCRIPTION		OF ISSUE 🖗	(5) QTY INC	(6) QTY INC	15-D/ M/	Y ORG	(7) ANIZAT ANCE	IONAL ALW	111	(8) US- ATION (6)
INDEX NO.	NUMBER	REFERENCE NO. & MFR. CODE	USABLE ON CODE	UNIT OF	IN UNIT PACK	. IN UNIT	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	ł	ITEM NO.
X20 00217		NUT, CAP: PUMP CASING, 3/8-16 THD SIZE BG001A2 (88795)		EA		2					12	24
x20 00218		PLUG, PIPE: 1/2 IN NPT PUNP CASING AJOO2A4 (88795)		EA		.1					12	21
X20 00221		ADAPTER ASSEMBLY SXT609 (88795)		EA		1					12	
x20 00224		BOLT: РИМР МТС, 5/16-18 ТНС SIZE, 5/8 IN LG BE002A2 (88795)		EA		1					12	20
<b>X</b> 20 <b>00</b> 225		BOLT: PUMP TO ENGINE MTG, 5/16-24 THD SIZE, 3/4 IN LG BEO01A3 (88795)		EA		4					12	12
X20 00226		BOLT, MACHINE: PUMP NTG, 5/16-18 THD SIZE, 1 IN LG BE002A5 (88795)		EA		1					12	17
x20 00228		NUT, HEXAGON: PUMP ADAPTER NTG, 3/8-16 THD SIZE BG002B3 (88795)		EA		4					12	14
X20 00229		NUT, HEXAGON: РИМР МТС, 5/16-18 ТНС SIZE BG002B2 (88795)		EA	-	5					12	19
X20 00230		WASHER, FLAT: PUMP MTG, 5/16 IN SCREW SIZE AD001A1 (88795)		EA		1					12	18
x20 00231		WASHER, LOCK: PUMP MTG, 5/16 IN SCREW SIZE AHOO2B1 (88795)		EA	-	10					12	13
X20 00232		WASHER, LOCK: PUMP ADAPTER, 3/8 IN SCREW SIZE AHOO2B2 (88795)		EA		4					12	15
00238		7203 - VALVES, FITTINGS, NOZZLES										
P OR 00239	4320-946-9961	NOZZLE ASSEMBLY, NONAUTOMATIC SX931A (88795)		EA		2	#	*	•			
X20 00241	4730-715-1558	COUPLING, HALF, QUICK 6338 (81718)		EA		1						
ŗ.												

(1)	(2)	(3)		(4) 및	(5)	(6)			7)		(8 11.11	
SMR CODE	FEDERAL STOCK	DESCRIPTION		OF ISSUE	QTY INC IN	QTY INC IN	IS-DA MA	Y ORGA	NCE		(a)	(b)
INDEX NO	NUMBER	REFERENCE NO. & MFR, CODE USA	BLE ON CODE	C LIND	UNIT PACK	UNIT	(a) 1-5	(b) 6-20	(c) 21-50	(d) 51-100	FIG NO.	ITEM NO.
		REFERENCE NO. B MI R. CODE										
x20 00243		PLUG ASSEMBLY, DUST SX1617 (88795)		EA		1						
X20 00244		CHAIN, BRASS: 6 IN H6682M (81718)		EA		1					13	11
X20 00245		COUPLER SX888 (81718)		ĘA		1					13	3
ро 00246	4730-360-0595	GASKET H6 <sup>1</sup> 30M (81718) (1nitially listed as Index No. 00189)		EA		1					13	2
X20 00247	4730-595-3846	PLUG, DUST 634a (81718)		EA		1					13	1
x20 00248		RING, FINGER SX1605 (88795)		EA		2					13	10
X1 00249		SCREEN, FILTER: 100 MESH 153 (81718)		EA		1					13	5
X20 00250		SCREW, GROUNDING WIRE SX1048 (88795)		EA		1					13	9
X20 00251		SPOUT, RIGID: NOZZLE ASSEMBLY CC296 1 1/2X1 5/8 (81718)		EA							13	6
X20 00252		WIRE ASSEMBLY, GROUNDING 190W (81718)		EA		1					13	8
00253		7204 - MISCELLANEOUS PARTS AND ACCESSORIES										
X20 00254		GAGE ASSEMBLY, 30-NO-GO: 100 GPM SX1611 (887:5)		EA		1						
X1 00256		COVER, END: 100 GPM SX1613 (88795)		EA		1					15	5
P 0 00257	4930-872-1779	ELEMENT, FILTER 041420S (90005)		EA		5	2	2	4	8	15	1
F							<u> </u>					

(1) SMR CODE	(2) FEDERAL STOCK	(3) DESCRIPTION		OF ISSUE (F)	(5) QTY INC	(6) QTY INC	15-D/ M/	Y ORG	(7) ANIZAT ANCE	IONAL ALW	ILL TR	18) US- ATION
INDEX	NUMBER			T OF	IN UNIT	. IN UNIT	(a)	(b)	(c)	(d)	(a) FIG	(b) ІТЕМ
NO.		REFERENCE NO: & MFR. CODE	USABLE ON CODE	UNIT	PACK		1-5	6-20		51-100	NO.	NO.
P 0 00259	5330-526-7517	0 RING, 100 GPM GAGE MS29513-249 (96906)		EA		1	*	2	2	4	15	4
X20 00260		ADAPTER, HOSE MAB6 (88795)		EA		2					14	8
x20 00261	4730-805-6726	ADAPTER, HOSE: 1 1/2 IN - 633F (81718)		EA		<i>,</i> 2					14	2
X1 00262		CAP ASSEMBLY, DUST SX1604 (88795)	•	EA		2					14	· 4
X1 00263		DUST CAP 6348 (88795)		EA		2						
X1 00264		FINGER RING SX1605 (88795)		EA		4						
ро 00265	¥730-360-0595	GASKET H6430M (81718) (Initially listed as Index No. 00189)		EA		2					14	3
X1 00266	4010-628-5276	CHAIN, ASSEMBLY, SING H6682M (81718)		EA		2						
P 0 00267	4320-920-5342	CLAMP, HOSE QS200M28A (88795)		EA		<b>4</b>	*	*	*	2	14	9
X20 00268	4730-02 <b>0-92</b> 93	COUPLER: 1 1/2 N 633H (81718)		EA		1					14	12
<b>X2</b> 0 <b>00</b> 269		HOSE, GAGE CONNECTING SX1619 (88795)		EA		1					14	10
X20 00270		NIPPLE: 1 1/2, ALUM, 2 IN LG SX715 (88795)		EA		1					14	5
P 0 00271	6685-923-7077	GAGE, PRESSURE, DIAL 022-171 (38508)		EA		·2	*	*	*	+	14	7
X20 00272		PLUG ASSEMBLY, DUST SX1617 (88795)		EA		- 1					14	11
											ļ	

(1)	(2)	(3)	(4)	(5)	(6)	[		(7)			B)
SMR CODE	FEDERAL STOCK	DESCRIPTION	ISSUE		QTY INC	15-D/ M/	AY ORGA		IONAL ALW		JS- TION
INDEX NO.	NUMBER		T OF	IN UNIT PACK	UNIT	(a)	(b)	(c)	(d)	(a) FIG	(b) ITEM
	·	REFERENCE NO. & MFR. CODE USABLE ON COD		I ACK		1-5	6-20		51-100	NO.	NO.
X1 00273		FINGER RING SX1605 (88795)	EA		2						
РО 00274	4730-360-0595	GASKET H6430M (81718) (Initially listed as Index No. 00189)	EA		1					14	3
X1 00275	473 <b>0-</b> 595-3846	PLUG, HOSE 634a (81718)	EA		1						
X1 00276	4010-628-5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)	EA		1						
X20 00277		TEE, ALUM: 1 1/2, 1/2 X 1/2 SX733 (88795)	EA		1					14	1
											[
											ſ
											1

(1) SMR	(2)	(3)		(4)	151	(6)	(7)			(8)			(9)	(10)	1 1	1)
	FEDERAL			ISSUE	QTY	στγ	D	30-DA S MAIN	IT	G	30-DA S MAIN	Т	1-YR	DEPOT	ILL	.US- TION
	STOCK	DESCRIPTION		OF IS	INC IN UNIT	INC IN	(0)	(6)	(c)	(a)	LOWAI	(c)	PER 100	MAINT ALW PER	(a)	(ь)
NO.				UNIT O	PACK	UNIT							EQUIP	100 EQUIP	FIG NO.	ITEM NO
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	5			1-20	21-50	51-100	1-20	21 50	51~100			NU.	NU
									1			ĺ				
00001		SECTION V - REPAIR PARTS FOR DS, GS, AND' DEPOT MAINTENANCE														
00001A		GROUP OT - ENGINE														
00001B		0100 - ENGINE ASSEMBLY														
X2F 00002		BOLT, MACHINE: ENGINE MTG, 5/16-18 тнр size 1 1/2 in. Lg BE002A7 (88795)		EA		4									1	8
PFR 00003	2 <b>805-999-5</b> 238	ENGINE: 3 HP 81232 (08645)		EA		1	*	2	2	*	2	2	15	15		
P 0 00004	2805-828-0783	GASKET SET: ENGINE 297275 (08645)		EA		1	2	2	2	2	2	2	25	25		
X1 00005	2940-608-8514	GASKET: AIR CLEANER 27660 (08645)		EA		1	SE	: GRP	0304							
X1 00006	29 <b>40- 171-7</b> 935	GASKET: CARBURETOR MTG 27402 (08645)		EA		1	SE	GRP	0301							
x1 00007	2805-678-4432	GASKET: CRANKCASE COVER MTG 27586 (08645)		EA		1	SE	GRP	0101							
x1 00008	2805-678-4395	GASKET: CYLINDER HEAD NTG 27670 (08645)		EA		1	SE	groi	0101							
X1 00009	2910-898-2094	GASKET: FUEL TANK MTG 27911 (08645)		EA		1	SE	: GRP	0306							
X1 00010	2805-678-4431	GASKET: VALVE CHAMBER BREATHER NTG 27549 (08645)		EA		1	SE	: GRP	0106							
X2F 00011		NUT, PLAIN, HEXAGON: ENGINE MTG, 5/16-18 THO SIZE BGOO2B2 (88795)		EA		4									۱	6
X2F 00012		WASHER, LOCK: ENGINE MTG, 5/16 in screw size Ahoo2b1 (88795)		EA		¥									1	7

(1)	(2)	(3)	(.1) W	(5)	(6)		30-DA		(8)	30-DA	Ŷ	(9)	(10) DEPOT	() 	
SMR	FEDERAL	DESCRIPTION	SSUE	QTY INC IN	ÓTY INC	<u>^</u>	S MAIN	NCE	AL	S MAIN	ICE	1-YR ALW PER 100	MAINT	TRA	TION
INDEX	STOCK NUMBER		, p			(a)	10)	10)	(0)	(Б)	(c)	100 EQUIP CNTGCY	PER 100	to) FiG	(b) ITEM
NO.		REFERENCE NO. & MFR. CODE USABLE ON CODE	LINU			1-20	21-50	51-100	1-20	21.50	51-100	1	EQUIP	NÔ.	NÖ
												-			
				1											
poc13		0101 - CRANKCASE, BLOCK, CYLINDER HEAD							}						
Х2F 00014		BOLT, ASSEMBLED WASHER: CRANKCASE COVER MTG 93032 (08645)	EA		6									2	1
X2F 00015		BOLT, MACHINE: CYLINDER HEAD MTG, 5/16-18 THD SIZE, 1 15/16 in lg 93111 (08645)	EA		5									9	<b>)</b> 4
X2F 00016		BOLT, MACHINE: CYLINDER HEAD MTG, 5/16-18 THD SIZE, 2-5/16 IN LG 93113 (08645)	EA		3									9	1
X2F 00017	2805-658-3916	COVER, CRANKCASE 294306 (08645)	EA		1									2	2
x1 00018	2805-678-4432	GASKET: CRANKCASE COVER MTG 27586 (08645) (Component of GASKET SET, Stock No. 2805-828-0783, See Group 0100)	EA		1									2	3
X2F 00019	2805-920-5383	CYLINDER ASSEMBLY 296610 (08645)	EA		1									1	4
PF 00020_	2805-351-6692	SEAL, OIL, PLAIN ENCASED: CRANKSHAFT 89660 (08645)	EA		1	*	2	2	*	2	2	20	20	1	5
PF 00021	2805-624-0278	SEAL, OIL: CRANKCASE COVER 293740 (08645)	EA		1	*	2	2	*	2	2	. 20	20	2	16
X1 00022	2805-678-4395	GASKET: CYLINDER HEAD MTG 27670 (08645) (Component of GA\$KET SET, Støck No. 2805-828-0783, Sfe Group 0100)	EA		1									9	.21
P F 00023	2805-594-1030	HEAD, CYLINDER 210812 (08645)	EA		1	*	*	*	*	*	*.	5	5	9	2
F 0002¥	4730-950-7613	PLUG, PIPE: OIL DRAIN 91249 (08645)	EA		1									1	9

ד ו<sub>ו</sub>ן

<u>1</u> 8

(1)	(2)	(3)		Е ÷	(5) QTY	(6)		- 30DA 5 MAIN			30-DA S MAIN		(9) 1-YR	(10) DEPOT	()   L L	
SMR CODE	FEDERAL STOCK	DESCRIPTION		issuE		QTY INC		LLOWA	NCE	AL	LOWAN	ICE	ALW PER	MAINT ALW-	TRA	TION
INDEX NO.	NUMBER			T OF	UNIT PACK	IN UNIT	(0)	(1)	(c)	(a)	{b}	. (c)	100 EQUIP CNTGCY	PER 100	(a) FIG	(6) ITEM
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	L NO			1-20	2150	51-100	1-20	21 50	51-100		EQUIP	NO.	NO
20025		0102 - CRANKSHAFT														
P F 00026	3110-144-9004	BEARING, BALL, ANNULAR: CRANKSHAFT 99158 (08645)		EA		1	*	*	2	*	*	2	10	10	3	10
PF 00027	2805-920-5384	CRANKSHAFT 260182 (08645)		EA		1	*	*	*	<b>+</b> ,	*	*	5	5	3	9
85000		0104 - PISTONS, CONNECTING RODS														
PF 20029	2805-949-0543	PISTON ASSEMBLY, STANDARD 295455 (08645)		EA		1	*	*	*	*	*	*	5	5	3	3
Р F 00030	2805-353-7712	PIN, PISTON, STANDARD 291925 (08645)		EA		1	*	*	*	*	*	*	5	5	3	2
PF 00031	5340-356-1325	RING, RETAINING: PISTON PIN 26026 (08645)		EA		2	2	2	3	2	2	3	30	30	3	1
00032	2805-608-8509	ROD ASSEMBLY, CONNECTING 294367 (08645)		EA		1	2	2	3	2	2	3	30	30	3	5
00033	5306-817-0730	BOLT, MACHINE: CONNECTING ROD LOCK 92296 (08645)		EA		2						[			3	7
poo3¥	2805-678-4423	DIPPER, CONNECTING ROD 220670 (08645)		EA		1									3	8
00035	2805-608-8508	LOCK, CONNECTING ROD SCREW 220756 (08645)		EA		1	2	2	3	2	2	3	-30	30	3	6
Р F 20036	2805-920-5387	RING SET, STANDARD, PISTON 295657 (08645)		EA		1	2	2	3	2	2	3	30	30	3	4
20037		0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM														
р <sub>Г</sub> 20038	2805-678-4421	CAMSHAFT, WITH GEAR 210453 (08645)		EA		1	*	*	*	*	+	*	5	5	1	17
ſ																

			(4) 10	(5)	(6)		30-DA1	r I	(8)	30-DA		(9)	(10)	ILL	1)
FEDERAL	DESCRIPTION		issu				S MAIN			S MAIN		1-YR ALW PER	DEPOT MAINT	TRA	
STOCK NUMBER			P.	UNIT	IN UNIT	(a) 	(6)	ເຕີ	(a)	(Б)	(c)	100 EQUIP CNTGCY	PER 100	(a) EIC	(b) ITEM
	REFERENCE NO. & MFR. CODE	USABLE ON CODE	UNIT			1-20	2150	51-100	1-20	21 50	1		EQUIP	NO.	NO
j315-276- <b>4</b> 081	PIN, STRAIGHT, HEADLESS: EXHAUST VALVE 230126 (08645)		EA		1	*	*	*	*	+	*	5	5	1	13
315-248-0052	PIN, STRAIGHT, HEADLESS: INTAKE VALVE 23187 (08645)		EA		1	*	*	#	*	*	*	5	5	1	12
2 <b>805-3</b> 53 <b>-75</b> 87	RETAINER, EXHAUST VALVE 230127 (08645)		EA		1	*	*	*	. <b>*</b>	*	*	5	5	1	14
805-342-7432	ROTATOR CAP, EXHAUST VALVE 292259 (08645)		EA		1	*	+	2	*	*	2	10	10	1	15
805-356-1334	SEAT, VALVE SPRING: INTAKE 23184 (08645)		EA		1	*	*	*	<b>. +</b>	*	*	5	5	1	11
805-254-1370	SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 26478 (08645)		EA		1	*	2	2	.*	2	2	. 20	20	1	16
805-992-0403	SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260552 (08645)		EA		1	*	2	2	*	2	2	20	20	1	10
805-678-4425	TAPPET, VALVE 230173 (08645)		EA		2	*	*	*	*	*	+	5	5	1	1
805-920-5388	VALVE, EXHAUST 296676 (08645)		EA		1	*	2	2	*	2	2	15	15	1	2
805-018-5293	VALVE, INTAKE 296677 (08645)		EA		1	*	*	2	*	*	2	10	10	1	3
	0106 - ENGINE LUBRICATION SYSTEM														
306-073-8255	BOLT, ASSEMBLED WASHER: BREATHER MTG 93394 (08645)		EA		2									5	8
805-624-0282	BREATHER, VALVE CHAMBER 294178 (08645)		EA		1	*	*	*	*	*	*	5	5	5	4
805-422-5804	CAP, OIL FILLER: CRANKCASE COVER 69345 (08645)		EA		1	*	<b>*</b> .	*	*	*	*	5	5	2	11
	STOCK NUMBER 315-276-4081 315-248-0052 805-353-7587 805-352-7587 805-342-7432 805-356-1334 805-254-1370 805-992-0403 805-678-4425 805-992-0403 805-678-4425 805-920-5388 805-018-5293 806-073-8255 805-624-0282	STOCK NUMBER         REFERENCE NO. & MFR. CODE           315-276-4081         PIN, STRAIGHT, HEADLESS: EXHAUST VALVE 230126 (08645)           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE 23187 (08645)           805-353-7587         RETAINER, EXHAUST VALVE 230127 (08645)           805-342-7432         ROTATOR CAP, EXHAUST VALVE 292259 (08645)           805-356-1334         SEAT, VALVE SPRING: INTAKE 23184 (08645)           805-254-1370         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 260552 (08645)           805-992-0403         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 260552 (08645)           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260552 (08645)           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260572 (08645)           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260572 (08645)           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260572 (08645)           805-678-4425         TAPPET, VALVE 230173 (08645)           805-920-5388         VALVE, EXHAUST 296676 (08645)           805-018-5293         VALVE, INTAKE 296677 (08645)           806-073-8255         BOLT, ASSEMBLED WASHER: BREATHER MTG 93394 (08645)           805-624-0282         BREATHER, VALVE CHAMBER 294178 (08645)           805-422-5804         CAP, OIL FILLER: CRANKCASE COVER	STOCK NUMBER         REFERENCE NO. & MFR. CODE         USABLE ON CODE           315-276-4081         PIN, STRAIGHT, HEADLESS: EXHAUST VALVE 230126 (08645)         USABLE ON CODE           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE 23187 (08645)         Nake           805-353-7587         RETAINER, EXHAUST VALVE 230127 (08645)         Nake           805-3342-7432         ROTATOR CAP, EXHAUST VALVE 230259 (08645)         Set Nake           805-356-1334         SEAT, VALVE SPRING: INTAKE 23184 (08645)         Set Nake           805-254-1370         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 260752 (08645)         Set Nake           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260752 (08645)         Set Nake           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260752 (08645)         Set Nake           805-920-05388         VALVE, EXHAUST 296676 (08645)         Set Nake           805-920-5388         VALVE, EXHAUST 296677 (08645)         Set Nake           805-018-5293         VALVE, INTAKE 296677 (08645)         Set Nake           806-073-8255         BOLT, ASSEMBLED WASHER: BREATHER MTG 93394 (08645)         Set Nake           805-624-0282         BREATHER, VALVE CHAMBER 294178 (08645)         Set Nake           805-624-0282         BREATHER, VALVE CHAMBER 294178 (08645)         Set Nake	STOCK NUMBER         B           REFERENCE NO. & MFR. CODE         USABLE ON CODE         5           315-276-4081         PIN, STRAIGHT, HEADLESS: EXHAUST VALVE 230126 (08645)         EA           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE 230127 (08645)         EA           805-353-7587         RETAINER, EXHAUST VALVE 230127 (08645)         EA           805-342-7432         ROTATOR CAP, EXHAUST VALVE 292259 (08645)         EA           805-356-1334         SEAT, VALVE SPRING: INTAKE 23184 (08645)         EA           805-254-1370         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 26478 (08645)         EA           805-992-0403         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 26478 (08645)         EA           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 26478 (08645)         EA           805-920-5388         VALVE, EXHAUST 296676 (08645)         EA           805-920-5388         VALVE, ENTAKE 296677 (08645)         EA           806-073-8255         BOLT, ASSEMBLED WASHER: BREATHER MTO 93394 (08645)	STOCK NUMBER         REFERENCE NO. & MFR. CODE         USABLE ON CODE         UNATT E           315-276-4081         PIN, STRAIGHT, HEADLESS: EXHAUST VALVE 230126 (08645)         EA           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE 23017 (08645)         EA           805-353-7587         RETAINER, EXHAUST VALVE 230127 (08645)         EA           805-352-7432         ROTATOR CAP, EXHAUST VALVE 292259 (08645)         EA           805-356-1334         SEAT, VALVE SPRING: INTAKE 23164 (08645)         EA           805-356-1334         SEAT, VALVE SPRING: INTAKE 23164 (08645)         EA           805-254-1370         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 260552 (08645)         EA           805-678-4425         TAPPET, VALVE 230173 (08645)         EA           805-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 260552 (08645)         EA           805-678-4425         TAPPET, VALVE 230173 (08645)         EA           805-073-6285         VALVE, INTAKE 296676 (08645)         EA           906-073-8255         BOLT, ASSEMELED VASHER: BREATHER MTG 93394 (08645)         EA           805-624-0282         BREATHER, VALVE CHAMBER 294176 (08645)         EA           805-624-0282         BREATHER, VALVE CHAMBER 294176 (08645)         EA           805-624-0282         BREATHER, VALVE CHAMBER 294176 (08645)	STOCK NUMBER         REFERENCE NO. & MFR. CODE         USABLE ON CODE $\frac{1}{5}$ $\frac{1}{9}$ ACK $\frac{1}{1}$ 315-276-4081         PIN, STRAIGHT, HEADLESS: EXHAUST VALVE         EA         1           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE         EA         1           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE         EA         1           305-253-7587         RETAINER, EXHAUST VALVE         EA         1           230127 (08645)         BOS         EA         1           805-332-7327         ROTATOR CAP, EXHAUST VALVE         EA         1           230127 (08645)         BA         EA         1           805-336-1334         SEAT, VALVE SPRING: INTAKE         EA         1           230529 (08645)         BOS         BOS         BOS         BOS           305-254-1370         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE         EA         1           260752 (08645)         SOS         EA         1         2           305-992-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE         EA         1           260752 (08645)         SOS         EA         1         2           305-920-9380         VALVE, EXHAUST         296671 (08645)<	STOCK NUMBER         REFERENCE NO. & MFR. CODE         USABLE ON CODE         UNIT E         UNIT PACK         UNIT I         III 1-20           315-276-4081         PIN, STRAIGHT, HEADLESS: EXHAUST VALVE 230126 (08645)         EA         1         *           315-248-0052         PIN, STRAIGHT, HEADLESS: INTAKE VALVE 23187 (08645)         EA         1         *           805-353-7587         RETAINER, EXHAUST VALVE 230127 (08645)         EA         1         *           805-342-7432         ROTATOR CAP, EXHAUST VALVE 292259 (08645)         EA         1         *           805-356-1334         SEAT, VALVE SPRING; INTAKE 23184 (08645)         EA         1         *           805-254-1370         SPRING, HELICAL, COMPRESSION, EXHAUST VALVE 286478 (08645)         EA         1         *           805-292-0403         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 266752 (08645)         EA         1         *           805-920-05380         VALVE, EXHAUST 2866750 (08645)         EA         1         *           805-920-033         SPRING, HELICAL, COMPRESSION, INTAKE VALVE 230173 (08645)         EA         1         *           805-920-0380         VALVE, EXHAUST 296677 (08645)         EA         1         *           805-920-0380         VALVE, INTAKE 296677 (08645)         EA         <	STOCK NUMBER         USABLE ON CODE         USABLE ON CODE         UNIT E         UNIT PACK         UNIT UNIT         UNIT         UNIT	STOCK NUMBER       USABLE ON CODE       USABLE ON CODE       UNIT       UNIT <td>STROCK NUMBER       UNIT PACK       UNIT UNIT       UNIT       UNIT UNIT       UNIT       UNIT UNIT       UNIT       UNIT UNIT       UNIT UNIT       UNIT       UNIT UNIT       UNIT UNIT<td>STOCK       usality       usality</td><td>STOCK       INIT       UNIT       UNIT</td><td>STOCK       B       UMAT       IN       (i)       (</td><td>STOCK       usable on code       unit       (a)       (b)       (c)       (c)</td><td>STOCC       UNIT       UNIT</td></td>	STROCK NUMBER       UNIT PACK       UNIT UNIT       UNIT       UNIT UNIT       UNIT       UNIT UNIT       UNIT       UNIT UNIT       UNIT UNIT       UNIT       UNIT UNIT       UNIT UNIT <td>STOCK       usality       usality</td> <td>STOCK       INIT       UNIT       UNIT</td> <td>STOCK       B       UMAT       IN       (i)       (</td> <td>STOCK       usable on code       unit       (a)       (b)       (c)       (c)</td> <td>STOCC       UNIT       UNIT</td>	STOCK       usality       usality	STOCK       INIT       UNIT       UNIT	STOCK       B       UMAT       IN       (i)       (	STOCK       usable on code       unit       (a)       (b)       (c)       (c)	STOCC       UNIT       UNIT

(1)	(2)	(3)	•	(.1) Ш	(51	(6)		30 DA		(8)	30-DA		(9)	(10)	()   ILL	
SMR Çode	FEDERAL	DESCRIPTION		SSUE	QTY INC IN	QTY INC	Α	S MAIN	NCE	AL	S MAIN	ICE	1-YR ALW PER 100	DEPOT MAINT ALW-	TRA	TION
INDEX NO.	STOCK NUMBER			1 0 1	UNIT PACK	IN UNIT	(0)	69	(c)	(a)	(6)	(c)	100 EQUIP CNTGC1	IPEP	(o) FIG	(b) IТЕМ
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	Livn			120	21 - 50	51-100	1-20	21 50	51-100		EQUIP	NÕ.	NÖ
x1 00053	2805-678-4431	GASKET: VALVE CHAMBER COVER MTG 27549 (08645) (Component of GASKET SET, Stock No. 2805-828-0783, See Group 0100)		EA		1									5	3
P 0 00054	2805-776-2282	GROMMET: BREATHER COVER 66578 (08645)		EA		1	2	2	3	2	2	3	30	30	5	5
x20 00055		GROMMET, BREATHER TUBE 67608 (08645)		EA		1									5	7
0 00056	4730-192-9481	NIPPLE, PIPE: OIL FILLER, 3/4 IN, 2 IN LG 91258 (08645)		EA		1									2	12
P 0 00057	2805-849-3141	TUBE, BREATHER 230634 (08645)		EA		1	*	*	*	*	*	*	5	5	5	6
00058		0107 - ENGINE STARTING SYSTEM														
РС 00059	2990-907-0644	CLUTCH ASSEMBLY STARTER 298310 (08645)		EA		r	*	*	2	*	*	2	10	10		
X1 00060	3110-100-6180	BEARING, BALL: CLUTCH HOUSING 63770 (08645)		EA		6		ļ							4	16
X1 00061	5840-787-6662	BUMPER, STARTER PULLEY 66528 (08645)		EA		1									4	10
X1 00062	<b>2990-768-</b> 0723	GRIP, ENGINE STARTER 66728 (08645)		EA		1									4	5
x20 00063		HOUSING, STARTER CLUTCH 211383 (08645)		EA		1									4	17
X1 00064	5315-855-4336	PIN, STARTER GRIP 230228 (08645)		EA		1									4	6
X1 00065	2990-786-2030	PULLEY, ENGINE STARTER 294088 (08645)		EA		1									4	9
P 0 00066	2990-93 <b>0-</b> 1737	RATCHET, REWIND 298436 (08645)		EA		1	*	*	*	*	*	*	5	5	4	15

(1)	(2)	(3)		(5) H	(5) QTY			30- DA' IS MAIN	Y	G	30-DA 5 млін	Т	(9) 1-YR	(10) DEPOT		US-
SMR CODE	FEDERAL	DESCRIPTION		F issue	INC IN	QTY INC IN	۸ (a)	LLOWA	ICE (c)	AL (u)	LOWAN (b)	NCE (د)	ALW PER 100	MAINT ALW- PER	(a)	TION (b)
INDEX NO.	STOCK NUMBER			UNIT OF	PACK	UNIT							EQUIP	EQUIP	FIG NO.	ITEM NO
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	5			120	21-50	51100	120	21 50	51–100				┨───┥
P 0 00067	2990-17 <sup>4</sup> -5255	ROPE, ENGINE STARTER: 47 1/8 им Lg 294584 (08645)		EA		1	4	8	17	4	8	17	200	200	4	2
x20 00068	299 <b>0</b> -930-1738	SCREEN, REWIND STARTER PULL 221661 (08645)		EA		1									4	12
0 00069	5 <b>305-</b> 719-4603	SCREW, ASSEMBLED WASHER: SCREEN MTG 93042 (08645)		EA		4									4	11
P 0 00070	2990-769-4104	SPRING, REWIND STARTER 294303 (08645)		EA	-	1	*	*	2	*	*	2	10	10	4	3
x20 00071		WASHER, CLUTCH RETAINER 221653 (08645)		EA		1									4	14
x20 00072		WASHER, RUBBER, RATCHET SEALING 68238 (08645)		EA	-	1									4	13
00073		GROUP 03 - FUEL SYSTEM														
00073A		0301 - CARBURETOR														
РО 00074	2910 <b>-920-</b> 5361	carburetor assembly 296784 (08645)		EA		1	2	2	3	2	2	3	30	30	6	5 7
X2F 00075	291 <b>0-</b> 920-5369	CAP. SPRING 221377 (08645)		EA		1									7	4
X2F 00076	29 <b>10-</b> 920-5 <sup>3</sup> 70	COVER, DIAPHRAGM 210959 (08645)		EA		1									7	′  7 
X2F 00077		CRANK, BELL 297069 (08645)		EA		1									7	11
	29 <b>10-</b> 920-5368	DIAPHRAGM, CARBURETOR 270026 (08645)		EA		1	2	2	3	2	2	3	30	30	7	7 5
P F 00079	5330-924 <b>-0</b> 090	GASKET, NEEDLE VALVE NUT 66594 (08645)		EA		1	2	4	8	2	4	8	100	100	7	7 18
X1 00080	2910-920-5371	HOUSING, FUEL PIPE 296178 (08645)		EA		1										

(1) SMR	(2) FEDERAL	(3)		issue 🕃	(5) QTY INC	QTY	ן נ	30-DA S MAIN	IT		30-DA SS MAIN	IŤ	A1 W	(10) DEPOT MAINT		
CODE INDEX NO.	STOCK	DESCRIPTION		UNIT OF 1	IN UNIT PACK	INC IN UNIT	(a)	(5)	(c)	(a)	(Ь)	(c)	PER 100 EQUIP CNTGCY	ALW- PER 100 EQUIP	(a) FIG NO.	Ţ
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	5			1-20	21-50	51-100	1-20	21 50	51-100				+
X2F 00081		LINK, THROTTLE 260563 (08645)		EA		1									-	7
P F 000,82	2910-893 <b>-</b> 5072	VALVE, NEEDLE 23433 (08645)		EA		1	2	2	3	2	2	3	30	30	7	7
X2F 00083	2910-949-2135	NUT, NEEDLE VALVE 230590 (08645)		EA		1									7	7
Р F 00084	5330-924-0049	PACKING, PREFORMED 65978 (08645)		EA		1	2	4	8	2	4	8	100	100	7	7
F 00085	5315-924-0051	PIN, DIAPHRAGM COVER 93265 (08645)		EA		1									7	7
X1 00086		PIPE, FUEL, PLASTIC 296811 (08645)		EA		1										
p f 00087	2910 <b>-</b> 920-5363	SEAT, NEEDLE VALVE 230591 (08645)		EA		1.	2	2	3	2	2	3	30	30	7	7
x1 00088	2910-893-5073	SHAFT AND LEVER, THROTTLE: CARBURETOR BODY 297961 (08645)		EA		1										
PF 00089	5340-923-9875	SPRING, NEEDLE VALVE 26336 (08645)		EA		1	2	2	3	2	2	3	30	30	7	,
PF 00090	5340-923-7050	SPRING, PUMP DIAPHRAGM 260455 (08645)		EA		1	2	2	3	2	2	3	30	30	7	ŗ
(2F 00091		SPRING, THROTTLE LINK 260564 (08645)		EA		1								ļ	7	,
(2F 00092		SPRING, THROTTLE SCREW 260575 (08645)		EA		1									7	<i>,</i>
(2F 20093		WASHER, NEEDLE VALVE 22235 (08645)		EA		2									7	
(1 20094	2940-171 <b>-</b> 7935	GASKET: CARBURETOR MTG 27402 (08645) (Component of GASKET SET, Stock No. 2805-828-0783, See Group 0100)		EA		1									6	

(1) SMR	(2) FEDERAL	(3)	issue f	1			30- DA DS MAII	NT	(8) 0	30-DA SS MAIN	IT	(9) 1-YR ALW	(IU) DEPOT MAINT	() ILL TRA	US-
CODE INDEX NO.	STOCK NUMBER	DESCRIPTION	5	UNI		(0)	(6)	(c)	(0)	(b)	(c)	PER 100 EQUIP CNTGCY	ALW- PER 100	(a) FIG	(b) ITEM
		REFERENCE NO. & MFR. CODE USABLE ON COD	DE S			1~20	21-50	51-100	1-20	21:50	51–100	[	EQUIP	NO.	NO
x20 00095		SCREW, ASSEMBLED WASHER: CARBURETOR TO FUEL TANK MTG, 10-32 THD SIZE, 5/8 IN LG 93341 (08645)	E		3									6	12
X2F 00096		SCREW: BELL CRANN HTG 230671 (08645)	E/		1									7	12
x20 00097		SCREW, CAP, HEXAGON HEAD: CARBURETOR TO ENGINE MTG $1/4$ -20 thd size, $3/4$ in Lg 93357 (08645)	E/		2									6	5
X2F 00098		screw, diaphragm cover 93141 (08645)	E/		4									7	8
X2F 00099		SCREW, MACHINE, THROTTLE: SPEED ADJUSTING 93392 (08645)	E/		1									7	1
00100		0304 - AIR CLEANER													
P 0 00101	2940 <b>-</b> 294 <b>-1</b> 599	AIR CLEANER, INTAKE 294870 (08645)	E/	•	1	*	*	*	*	+	•	5	5	6	2
P0 00102	2940-688-7912	FILTER ELEMENT, AIR INTAKE 27987 (08645)	EA		1	*	2	2	*	2	2	20	20	6	3
X1 00103-	2940-608-8514	GASKET: AIR CLEANER 27600 (08645) (Component of GASKET SET, Stock No. 2805-828-0783, See Group 0100)	EA		1									6	4
X20 00104		SCREW, AIR CLEANER 93322 (08645)	EA		1									6	1
00105		0306 - TANKS, LINES, AND FITTINGS													
X20 00106		TANK, FUEL 296591 (08645)	EA		1									6	9
РО 00107	2910-707-7503	CAP, FUEL TANK 293270 (08645)	EA		1	+	*	Ż	*	*	2	10	10	6	11
23				1	1	I	<u> </u>	<u> </u>	<u>.</u>	<u>l</u>	I	L			

(1)	(2)	(3)	<u></u>	ц. Э	(5) QTY	(6)		30 DA		(8) G	30-DA 5 MAIN	Y T	(9) 1-YR	(10) DEPOT	(1 	
SMR	FEDERAL	DESCRIPTION		- issue	INC IN	QTY INC IN		LLOW/			LOWAN		AL.W PER 100	MAINT		
INDEX NO.				T OF	PACK	UNIT	, (ur	( <b>1</b>	10.	<i>(u)</i>	(0/		EQUIP	PER 100 EQUIP	FIG	ITEM
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	UNIT			1-20	2150	51-100	1~20	21 50	51-100	<u> </u>		NO.	NO
x1 00108	2910-898-2094	GASKET: FUEL TANK MTG 27911 (08645). (Component of GASKET SET Stock No. 2805-828-0783 See Group 0100)		EA		1									6	8
X20 00109		SCREW, CAP, HEXAGON HEAD: TANK MTG, 1/4-20 thd size 93343 (08645)		EA		1					-				6	10
00110		0308 - ENGINE SPEED GOVERNOR													ļ	
X2F 00111	2990-992-0405	governor assembly 294932 (08645)		EA		1										
x1 00112		BODY, GOVERNOR 210227 (08645)		EA		1									2	8
x1 00113		GEAR, GOVERNOR 210226 (08645)		EA		1									2	7
x1 00114		SHAFT, GOVERNOR GEAR 230445 (08645)		EA		1									2	10
X20 00115		BRACKET: CONTROL ROD MTG 221384 (08645)		EA.		1									8	5
x20 00116	2990-787-6665	BRACKET, MECHANICAL GOVERNOR: THROTTLE CONTRO 220691 (08645)	L	EA		1									8	12
x20 00117		BUSHING: GOVERNOR LEVER 23688 (08645)		EA		1									8	10
x2F 00118	2805-679-5779	FOLLOWER, GOVERNOR CRANK 220381 (08645)		EA		1									2	5
<b>x20</b> 00119		LEVER, GOVERNOR 294077 (08645)		EA		1									8	16
x20 00120		LEVER, MECHANICAL GOVERNOR 220690 (08645)		EA		1									8	7
X20 00121	2990-920-5347	LINK, GOVERNOR 260544 (08645)		EA		1									8	14

(1)	(2)	(3)	(4) 10	(5)	(6)		30 DA		(8)	30-DA	Y	(9)	(10)	()  LL	
SMR CODE	FEDERAL	DESCRIP TION	issue		OTY INC	Å	S MAIN		AL	S MAIN	NCE	ALW	DEPOT MAINT ALW-	TRA	TION
INDEX	STOCK NUMBER		5	IN UNIT PACK	IN UNIT	(a). ,	(6)	(c)	(a)	(b)	(c)	100 EQUIP CNTGCY	PER	(0) 5.0	(b) ITEM
NO.		REFERENCE NO. & MFR. CODE USABLE ON CODE	LINU	, nen		1-20	21 - 50	51-100	1-20	21 50	51-100		EQUIP	FIG NO.	NO
K20 00122		NUT, CONTROL ROD 230149 (08645)	EA		1									8	3
F 00123	5315-626-1789	PIN, STOP: governor lever shaft 93043 (08645)	EA		1									2	15
K2F 00124	2805-679 <b>-</b> 5784	RETAINER, GOVERNOR SHAFT 230177 (08645)	EA		1									2	6
x20 00125		ROD, CONTROL: GOVERNOR 230680 (08645)	EA		1									8	6
x20 00126		SCREW, ASSEMBLED WASHER: BRACKET MTG, 10-24 THD SIZE, 9/16 IN LG 93062 (08645)	EA		1									8	11
F 00127	5305-753 <b>-</b> 4269	SCREW, CAP, SLOTTED: GOVERNOR MTG 93064 (08645)	EA		2				-					2	9
0 00128	5306-543-5219	SCREW, ASSEMBLED WASHER: THROTTLE LEVER MTG, 10-24 THD SIZE, 3/8 IN LG 93067 (08645)	EA		1									8	9
0 00129	5305-719-4783	SCREW, MACHINE: LEVER MTG 93100 (08645)	EA		1									8	17
X2F 00130	2910-711-5609	SHAFT, GOVERNOR LEVER 230181 (08645)	EA		1									2	13
P 0 00131	2990-624-0260	SPRING, CONTROL ROD 26855 (08645)	EA		1	*	2	2	*	2	5	15	.15	8	4
P 0 00132	5340-945-0493	SPRING, GOVERNOR LEVER 260545 (08645)	EA		1	*	2	2	*	2	2	15	15	8	15
P 0 00133	2990-898-2097	SPRING, GOVERNOR LINK 260585 (08645)	EA		1	*	2	2	*	2	2	15	15	8	13
X20 00134		WASHER: GOVERNOR BRACKET AND LEVER MTG 66432 (08645)	EA		2									8	8
F 00135	5310-353-7577	WASHER, FLAT: GOVERNOR LEVER SHAFT 22826 (08645)	EA		1									2	14
Ł															

N 5

26						71	<u>.</u>		(8)			· (9)	(10)	(1	n 1
(1) SMR	(2)	(3)	issue 🕃	(5) QTY	(6) QTY	Г	30- DA' IS MAIN L1. OWA	IT I	G	30-DA SMAIN LOWAN	т	1-YR ALW	DEPOT MAINT		US-
CODE	FEDERAL STOCK	DESCRIPTION	OF ISS	INC IN UNIT	INC IN	(a)	(b)	(c)	(a)	(b)	. (c)	PER 100	ALW-	(a)	(b)
INDEX NO.	NUMBER			PACK	UNIT							CNTGCY	EQUIP	FIG NO.	ITEM NO
		REFERENCE NO. & MFR. CODE USABLE ON CODE	5			1-20	21-50	51-100	1-20	21 50	51-100				
X2F 00136	2990-678-1220	WASHER, THRUST: GOVERNOR SHAFT 220680 (08645)	EA											2	4
00137		GROUP 04 - EXHAUST SYSTEM													
00137A		0401 - MUFFLER AND PIPES													
X20	59 <b>75-1</b> 52-1075	LOCKNUT, EXHAUST, MUFFLER	EA		1									8	1
00138		91811 (08645)													
РО 00139	299 <b>0-</b> 269-7145	MUFFLER, EXHAUST 89966 (08645)	EA		1	*	*	2	*	*	2	10	10	8	2
00140		GROUP 05 - COOLING SYSTEM													
00140A		0502 - Shrouds													
x20 00141	2930-537-1363	COVER, CYLINDER HEAD 220581 (08645)	EA		1									4	1
X20 00142	2930-537-1360	DEFLECTOR, AIR 220692 (08645)	EA		1									9	7
x20 00143		HOUSING, BLOWER 294260 (08645)	EA		1									4	4
0 00144	5305-719-4603	SCREW, ASSEMBLED WASHER: CYLINDER SHIELD MTG 93042 (08645)	EA		1									5	1
x20 001 <b>4</b> 5		SCREW, CAP, HEXAGON: SHROUD MTG, 1/4-20 THD SIZE, 9/16 IN LG 92666 (08645)	EA		3									<b>}</b>	7
x20 00146		SHIELD, CYLINDER 220478 (08645)	EA		1		;						Ì	5	2
K20 00147		WASHER, LOCK: INTERNAL AND EXTERNAL TEETH, shroud mrg, 1/4 in screw size' 92778 (08645)	EA		3									4	8
1			<u></u>				<u> </u>	·				i	<u> </u>		

(1) SMR CODE	(2) FEDERAL STOCK	(3) DESCRIPTION	OF ISSUE ()	(5) QTY INC IN	(6) QTY INC IN	D	30-DA' S MAIN LLOWA	T I	G	30-DA S MAIN LOWAN	т	(9) 1-YR ALW PER 100 EQUIP CNTGCY	(10) DEPOT MAINT ALW- PED	ILL	1) US- TION (b)
INDEX NO.	NUMBER	REFERENCE NO. & MFR. CODE USABL		PACK		1-20	21-50	51-100	1-20	21 50	51-100	EQUIP			TEN NO
00148 00148A		GROUP OG - ELECTRICAL SYSTEM 0605 - IGNITION COMPONENTS													
P 0 00149	2920-920-5373	ARMATURE, MAGNETO 298502 (08645)	EA		1	*	*	*	*	*	*	3	3	9	
0 00150	5305-010-0752	BOLT: CONDENSER LEAD MTG 92786 (08645)	EA		1								ĺ	9	1
X20 00151		CLAMP: CONDENSER MTG 260455 (08645)	EA		1									9	1
X20 00152	29 <b>20-5</b> 37-1365	COVER, CONTACT SET 220366 (08645)	EA		1									9	1
P 0 00153	280 <b>5-</b> 920-5385	FLYWHEEL ASSEMBLY, MAGNETO 296884 (08645)	EA		1	*	*	2	*	*	2	5	5	4	2
P 0 00154	5970 <b>-</b> 789-1925	INSULATOR, PLATE: TERMINAL, CONDENSER LEAD 66935 (08645)	EA		1	2	2	3	2	2	3	30	30	9	1
P 0 00155	53 <b>15-5</b> 98 <b>-</b> 5970	KEY, MACHINE: FLYWHEEL MTG 61760 (08645)	EA		1	*	*	2	*	*	. 2	10	10	4	1
P 0 00156	2920 <b>-</b> 213 <b>-</b> 1147	LEAD, ELECTRICAL, SPARK PLUG: ARMATURE 293141 (08645)	EA		1	*	#	*	*	*	*	5	5	9	*
0 00157	5310-596-522 <sup>4</sup>	NUT, HEXAGON: CONDENSER LEAD MTG 90576 (08645)	EA		1									9	2
ро 00158	2805-624-0284	PARTS KIT, IGNITION: BREAKER POINTS AND CONDENSER 294628 (08645)	EA		1	2	4	8	2	4	8	100	100	9	1
x20 00159	<b>5340-</b> 286 <b>-</b> 4566	SPRING, HELICAL, EXTENDED: BREAKER ARM 26018 (08645)	EA		1									. 9	1
P 0 00160	2920-294-3747	PLUG, SPARK, WITH GASKET CJ8 (08645)	EA		1	4	8	17	4	8	17	200	200	9	
															L

e.

(1) SMR CODE	(2)	(3)	E F) ISSUE		(5) QTY INC	QTY	D	30-DA SMAIN	IT		30-DA S MAIN	τ	ALW	(10) DEPOT MAINT	IL TR
INDEX NO.	I STOCK	DESCRIPTION	10 L	5 L		INC IN UNIT	(a)	(b)	(c)	(a)	(Ь)	(c)	PER 100 EQUIP CNTGCY	ALW-	(a) FIC
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	<u>-</u>			1-20	21-50	51-100	1-20	21.50	51 <u>-</u> 100			
Р ( 00161	2920-356-1333	PLUNGER, BREAKER POINT 65704 (08645)	EA			1	*		2	*	*	2	10	10	
0 00162	5305-992-0440	SCREW, ASSEMBLED WASHER 93381 (08645)	EA			3									
0 00163	5305-719-4603	SCREW, ASSEMBLED WASHER: CONDENSER CLAMP MTG 93042 (08645)	EA			1			1						
0 00164	5305-543-5220	SCREW, ASSEMBLED WASHER: DUST COVER MTG 93014 (08645)	EA			2	-								
0 00165	5310-721-4667	WASHER, FLAT: FLYWHEEL MTG 220865 (08645)	EA			1									
0 00166	5310-011-5544	WASHER, LOCK: CONDENSER LEAD MTG	EA			2									
<b>x</b> 20 00167	615 <b>0-</b> 624 <b>-</b> 0279	WIRE, ELECTRICAL: LEAD, CONDENSER TO INSULATO 293999 (08645)	R EA			1									
00168		GROUP 15 - FRAME													
00168A		1501 - FRAME ASSEMBLY												1	ĺ
x20 00169-		base assembly sx1610 (88795)	EA			1									
x20 00170		BASE, LEFT SX1644A (88795)	EA			1									
X20 0170A		BASE, RIGHT SX1644B (88795)	EA			1					,				
X20 00171		BASKET, CARRYING SX700 (88795)	EA			1									
X20 00172		ВОLТ: вале мта, 5/16-18 тно віде, 1 1/2 ім La веоога7 (88795)	EA			4									
x20 00173		BOLT: SUPPORT AND SPACER MTG, 3/8-16 THD SIZE SX1094 (88795)	, 9 IN L <u>a</u> EA			2									

l m	(2)	(3)	(4) 10	(5)	(6)		30- DA 95 MAIN	Y		30-DA		(9)	(10)	(1 11.E	
SMR	FEDERAL STOCK	DESCRIPTION	issul	QTY INC IN	QTY INC	<u>۸</u>	LLOW/	NCE	AL	LOWA	NCE	ALW PER	DEPOT MAINT ALW-	TRA	TION
INDEX NO.	NUMBER		1 01	UNIT PACK	IN UNIT	(a)	- (Ы	(c)	(0)	(Ь)	(c)	100 EQUIP CNTGCY	PER 100	(a) FIG	(b) ITEM
		REFERENCE NO. & MFR. CODE USABLE ON CODE	- CNIT			1-20	21-50	51-100	1-20	21 50	51-100		EQUIP	NŌ.	NO
x20 00174		NUT, HEXAGON: BASE NTG, 5/16-18 THD SIZE BG002B2 (88795)	ξĄ		4									10	6
x20 00175		NUT, STOP: SUPPORT AND SPACER MTG, 3/8-16 THD SIZE SX989 (88795)	EA		2						-			10	1
x20 00176		SPACER, BASE: 4-5/8 IN. LG SX988 (88795)	EA		2									10	2
x20 00177		SUPPORT, FILTER ASSEMBLY SX1091 (88795)	EA		2									10	4
x20 00178		WASHER, LOCK: BASE MTG, 5/16 IN SCREW SIZE AHDO2B1 (88795)	EA		4									10	7
00179		GROUP 22 - BODY CHASSIS OR HULL, AND ACCESSORY ITEMS													
00179A		2202 - ACCESSORY ITEMS													
x20 00180		ACCESSORY HOSE AND NOZZLE PACKAGE SX1077 (88795)	EA		1										
P 0 00181	4720-946-9960	HOSE ASSEMBLY, SUCTION, RUBBER: WITH COUPLING SX848 (88795) (Components Same as HOSE ASSEMBLY, Stock No. 4720-916-1883, except where individual components are annotated)	EA		1	*	*	*	*	*	*	5	5		
P 0 00182	4720-916-1883	HOSE ASSEMBLY, DISCHARGE: RUBBER W/COUPLING SX937 (88795)	EA		2	*	2	2	*	2	2	20	20	11	
x1 00183		HOSE, DISCHARGE: 50 FT 546-622-048 (25500) (Used with HOSE ASSEMBLY, Stock No. 4720-916-1883, ONLY)	EA		2									11	1
x1 00184		HOSE, SUCTION, FUEL: 10 гт 541-621-048 (25500) (Used with HOSE ASSEMBLY, Stock No. 4720-946-9960 онцу)	EA		1									11	2
x1 00185		CLAMP, HOSE AR005A1 (08484)	EA		12									11	8

(1) SMR	(2)	(3)		issue 🗄	(5) QTY	(6) QTY	C 1	30- DA S MAIN	11		30-DA	IT .	(9) 1-YR	(10) DEPOT		11) .US- .TION
CODE INDEX NO.	FEDERAL STOCK NUMBER	DESCRIPTION		UNIT OF ISS	INC IN UNIT PACK	INC IN UNIT	(0)	(b)	(c)	(a)	.L <b>Ю</b> WAI (Б)	(c)	ALW PER 100 EQUIP CNTGC	MAINT ALW- PER 100 EQUIP	(a) FIG NO.	(   1   1   N
<u> </u>		REFERENCE NO. & MFR. CODE	USABLE ON CODE	5			1-20	21-50	51-100	1-20	21 50	51-100				-
1 10186	4730-542-4031	COUPLING, HALF QUICK 633C (81718)		EA		3									11	
1 0187		COUPLER, HOSE, SHANK SX1616 (81718)		EA		3		ĺ								
1 0188		FINGER RING SX1605 (88795)		EA		6										
0 0189	4730-360-0595	GASKET H6430M (81718)		EA		3	2	2	4	2	2	4	50	50		
1 0190		PLUG ASSEMBLY, DUST SX1617 (88795)		EA		3										
1 0191	4010-628-5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)		EA		6									11	
1 0192	4730-595-3846	PLUG, HOSE 634a (81718)		EA		3.									11	
1 0193	4730-542-4030	COUPLING HALF, QUICK 633E (81718)		EA		3									11	
1 0194		CAP ASSEMBLY, DUST SX1604 (88795)		EA		3										
1 0195	4730-555-1562	CAP, HOSE 634B (81718)		EA		3									11	
1 0196	4010-628-5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)		EA		3										
0 0197 -	4730-360-0595	GASKET H6430M (81718) (Initially listed as Index No. OC	1189)	EA		6									11	
1 0198		RING, FINGER SX1605 (88795)		EA		12									11	
												ļ				

SMR	FEDERAL	DESCRIPTION		ISSUE		QTY	( C	30- DA IS MAIN LLOW/	NT T		30-DA 5 MAIN 10WA	Ť	I-YR ALW	DEPOT MAINT	ILL TRA	
INDEX NO.	STOCK	DESCRIPTION		Ъ	IN UNIT PACK		(a).	(b)	10)	(a)	(b)	(c)	PER 100 EQUIP CNTGCY	MAINT ALW- PER 100	(o) FIG	
. 		REFERENCE NO. & MFR. CODE	USABLE ON CODE	INN			1-20	21-50	51-100	1-20	21 50	51-100	· <b> </b>	EQUIP	NO.	ł
00199		2210 - DATA PLATES AND INSTRUCTION HOLDER	S													
X20 00200		drive screw bhooza (88795)		EA		4										
X20 00201		IDENTIFICATION, PLATE G3020A2 (88795)		EA		1										
X20 00202	2930-537-1364	PLATE IDENTIFICATION: CYLINDER SHIELD 220478 (08645)		EA		1										
00203		GROUP 72 - DISPENSING AND SERVICING EQUIP	MENT COMPONENTS													
002034		7202 - PUMPS AND METERS														
X20 00204		PUMP ASSEMBLY SX1603 (88795) (Includes Components of kit, Stock No.	4320-989-3259)	EA		1										
X1 00205		CASING ASSEMBLY SX1608 (88795)		EA		1										
X2F 00206		CASING, PUMP E9001A1 (88795)		EA		1									12	2
X1 00207		CAP ASSEMBLY, DUST SX1604 (88795)		EA		1									12	2
X1 00208	4730-555-1562	сар 634в (81718)		EA		1										
X1 00209	4010-628-5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)		EA		1										
X1 00210		FINGER, RING SX1605 (88795)		EA		2										
P 0 00211	4730-360 <b>-0</b> 595	GADALI: DUST CAP H6430M (81718) (Initially listed as Index No. 00	189)	EA		1									12	

(1) SMR CODE	(2) FEDERAL	(3) DESCRIPTION	SSUE &	(5) QTY INC	(6) QTY INC	Г	30- DA DS MAIN	1T		30-DA S MAIN LOWAI	Т	AL₩	(10) DEPOT MAINT	(1 ILLI TRAT	US~
INDEX NO.	STOCK NUMBER	REFERENCE NO. & MFR. CODE USABLE ON COD	IT OF	IN UNIT PACK		(0)	(6)	(с)	(a)	(6)	1	EQUIP CNTGCY	ALW- PER 100 EQUIP	(a) FIG NO.	(b) ITEJ NO
						1-20	21- 50	51-100	1-20	21:50	51-100	ł			
2F 0212		BOLT, CARRIAGE: WEAR PLATE MTG BF001A1 (88795)	EA		2									- 12	
20 0213	4730-805-6726	COUPLING, HALF QUICK: PUMP CASING 633F (81718)	EA		3									12	2
20 10214		ELBOW, SIDE OUTLET, PUMP: ALL ENDS FEMALE, 1 1/2-11 1/2 THD SIZE SX990 (88795)	EA		1									12	
20 0215		HANDLE, PUMP C2002A1 (88795)	EA		1									12	
20 0216		NIPPLE: 1 1/2 in, alum, 2 in Lg pump casing SX715 (88795)	EA		1									12	2
20 0217		NUT, CAP: PUMP CASING, 3/8-16 THD SIZE BG001A2 (88795)	EA		2									12	2
20 0218		PLUG, PIPE: 1/2 IN NPT PUMP CASING AJ002A4 (88795)	EA		1									12	2
F 0219	4320-946-9949	PLATE, WEAR: PUMP C3012A1 (88795)	EA		1	*	*	2	*	*	2	10	10	12	
2F 0220		STUD, PUMP CASING: 3/8-16 nc, 1 1/4 in lo BD001A1 (88795)	EA		4									12	. 1
20 0221		ADAPTER ASSEMBLY SX1609 (88795)	EA		1									12	
2F 0222		adapter, pump d7002a1 (88795)	EA		1									12	1
F 0223	5330 <b>-250-0</b> 238	0 RING, SHAFT SEAT MS29513-216 (96906)	EA		1	2	4	8	. 2	4	8	100	100	12	
20 0224		BOLT: PUMP MTG, 5/16-18 THD SIZE, 5/8 IN LG BE002A2 (88795)	EA		1					· .				12	2
20		BOLT: PUMP TO ENGINE MTG, 5/16-24 THD SIZE, 3/4 IN LG BEOO1A3 (88795)	EA		4									12	1

SMR CODE	FEDERAL	DESCRIPTION		ISSUE	QTY INC IN	QTY INC		S MÁIN	NCE		S MAIN		I-YR ALW PER 100	DEPOT MAINT ALW-		ION
INDEX NO.	STOCK NUMBER			ΤÖ	UNIT PACK	IN UNIT	(a).	(b)	(c)	(0)	(6)		EQUIP	PER 100 EQUIP	(a) FIG	(b) ITEM
·		REFERENCE NO. & MFR. CODE USABLE ON	CODE	L N			1-20	21-50	51-100	1-20	21 50	51-100			NO.	NO
<b>(2</b> 0 00226		BOLT, MACHINE: PUMP MTG, 5/16-18 THD SIZE, 1 IN LG BEOO2A5 (88795)		EA		1									12	17
P F 00227	4320-946-9948	IMPELLER, PUMP A7004A1 (88795)		EA		1	*	*	*	*	*	*	5	5	12	5
<b>x20</b> 00228		NUT, HEXAGON: PUMP ADAPTER MTG, 3/8-16 THD SIZE BG002B3 (88795)		EA		<u></u> ц									12	14
x20 00229		NUT, HEXAGON: РИМР МТС, 5/16-18 ТНО SIZE BG002B2 (88795)		EA		5									12	19
K20 20230		WASHER, FLAT: PUMP NTG, 5/16 IN SCREW SIZE AD001A1 (88795)		EA		1									12	18
K20 00231		WASHER, LOCK: PUMP MTG, 5/16 IN SCREW SIZE AH002B1 (88795)		EA		10									12	13
x20 00232		WASHER, LOCK: PUMP ADAPTER, 3/8 IN SCREW SIZE AHOO2B2 (88795)		EA		4						ļ			12	15
P F 00233	432 <b>0-989-325</b> 9	KIT, PUMP SEAL AND GASKET K214-5 (88795)		EA		·1	2	2	2	2	2	2	25	25		
K1 p0234	5330-924-0050	GASKET, CASING B1004A1 (88795)		EA		1									12	10
K1 00235		SEAL, SHAFT: 3/4 in AE002A1 (88795)		EA		1									12	6
K1 00236	4320-946-9947	SEAT, SHAFT SEAL A6001A1 (88795)		EA		1									12	9
x1 00237	4320-920-5343	SLEEVE, SHAFT E4002A1 (88795)		EA		1									12	7
00238		7203 - VALVES, FITTINGS, NOZZLES														
P OR 00239	4320-946-9961	NOZZLE ASSEMBLY, NONAUTOMATIC SX931A (88795)		EA		2	*	<b>*</b> -	.*	*	<b>*</b> .	*	5	5		

ယ သ


(1) SMR CODE	(2) FEDERAL	(3) DESCRIPTION		issue 🖯	(5) QTY INC	(6) QTY INC	ι τ	30- DA DS MAIN	NT .		30-DA S MAIN _LOWAN	Ť	(9) 1-YR ALW	(10) DEPOT MAINT	1	1) .US .TIO <del>I</del>
INDEX NO.	STOCK			UNIT OF	IN UNIT PACK			(4)		(0)	(b)	(c)	ALW PER 100 EQUIP CNTGCY	ALW- PER 100 EQUIP	(a) FIG NO.	IT I N
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	<u> </u>			1-20	21-50	51-100	1-20	21.50	51–100				┢
PF 00240	5340 <b>-</b> 531-7989	CAP ASSEMBLY, SPOUT 296C (81718)		EA		1	+	*	*	+	*	*	5	5	13	
X20 00241	4730-715-1558	COUPLING, HALF, QUICK 6338 (81718)		ΕΛ		1					2					
X1 00242		NOZZLE 210 (81718)		EA		1									13	
x20 00243		PLUG ASSEMBLY, DUST SX1617 (88795)		EA		1										
x20 00244		CHAIN, BRASS: 6 IN H6682M (81718)		EA		1									13	
x20 00245		COUPLER SX888 (81718)		EA		1									13	
P 0 00246	4730 <b>-</b> 360-0595	GASKET H6430M (81718) ([MITIALLY LISTED AS INDEX NO. 00189)		EA		1									13	
x20 00247	4730-595-3846	PLUG, DUST 634a (81718)		EA		1								[	13	
x20 00248-		RING, FINGER SX1605 (88795)		EA		2									13	
x1 00249		SCREEN, FILTER; 100 MESH 153 (81718)		EA		1									13	
x20 00250		SCREW, GROUNDING WIRE SX1048 (88795)		EA		1							L		13	
x20 00251		SPOUT, RIGID: NOZZLE ASSEMBLY CC2961 1-2X1 5-8 (81718)		EA		1									13	
x20 00252		WIRE ASSEMBLY, GROUNDING 190W (81718)		EA		1									13	

1.00	. (2)	. (3)		(.1) 	(5)	(6)	(7)	30 - DA' S MAIN	T I		30-DA S MAIN		(9)	(10) DEPOT	(†   ILL	
	FEDERAL STOCK	DESCRIPTION		: ISSUE	QTY INC IN			LLOWA			LOWAN		ALW PER	MAINT	TRA	TION
INDEX NO.	NUMBER			I OF	UNIT PACK	IN UNIT	(a)	(67	(6)	((1)	(0)	(6)	EQUIP	PER 100 EQUIP	(a) FIG	(b) ITEM
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	LINU			1-20	21-50	51-100	1-20	21 50	51-100			NO.	NO
00253		7204 - MISCELLANEOUS PARTS AND ACCESSORIES														
x20 00254		GAGE ASSEMBLY, GO-NO-GO: 100 GPM SX1611 (88795)		EA		1										
<b>X1</b> 00255		GAGE, GO-NO-GO: 100 GPM 0441075 (90005)		EA		, <b>1</b>									14	6
X1 00255A		CLAMP, GAGE GO-NO-GO ARO10A1 (08484)		EA		2						}			15	2
X1 00256		COVER, END 100 GPM SX1613 (88795)		EA		1									15	5
P 0 00257	4930-872-1779	ELEMENT, FILTER 041420S (90005)		EA		5	jų.	8	17	4	8	17	200	200	15	1
X2F 00258		HOUSING, GAGE GO-NO-GO SX1660 (90005)		EA		1									15	3
P 0 00259	5330-526-7517	0 RING, 100 GPM GAGE MS29513-249 (96906)		EA		1	2	4	8	2	4	8	100	100	15	4
x20 00260		adapter, hose mab6 (88795)		EA		2									14	8
X20 00261	4730-805-6726	ADAPTER, HOSE: 1 1/2 IN 633F (81718)		EA		2									14	2
X1 00262		CAP ASSEMBLY, DUST SX1604 (88795)		EA		2									14	ų
X1 00263		DUST САР 634в. (88795)		EA		2										
X1 00264		FINGER RING SX1605 (88795)		EA		4										
P 0 00265	¥730-36 <b>0-0</b> 595	GASKET H6430M (81718) (Initially listed as Index No. 00189)		EA		2									14	3
	<u> </u>			<u> </u>												

ა 5

ယ စ

(1) SMR	(2)	(3)		issue 🔆	ري. QTY	(6) QTY	1	30 DA 95 MAII	٦T		30-DA	IT	(9) 1-YR	(10) DEPOT	() 	US-
CODE INDEX NO.	FEDERAL STOCK NUMBER	DESCRIPTION		6	INC IN UNIT PACK		(a)	LLOW/ (b)		(a)	(b)	<del>.</del>	ALW PER 100 EQUIP CNTGC1	MAINT ALW- PER 100 EQUIP	TRA (a) FIG	(ł
		REFERENCE NO. & MFR. CODE	USABLE ON CODE	Linu			1_20	21 - 50	51 - 100	1-20	21 50	51 100		EQUIP	NÔ.	N
X1 00266	4010-628 <b>-</b> 5276	CHAIN, ASSEMBLY, SING <sub>LE</sub> H6682m (81718)		EA		2					,					
Р0 00267	4320-920-53 <b>4</b> 2	CLAMP, HOSE QS200M28A (88795)		EA		4	*	2	2	*	2	2	20	20	14	
<b>x</b> 20 00268	4730-02 <b>0-9</b> 293	COUPLER: 1 1/2 IN 633H (81718)		EA		1									14	
x20 00269		HOSE, GAGE CONNECTING SX1619 (88795)		EA		1									14	
x20 00270		NIPPLE: 1 1/2, ALUM, 2 IN LG SX715 (88795)		EA		1									14	
P 0 00271	6685-923-7077	GAGE, PRESSURE, DIAL 022-171 (38508)		EA		2 .	. *	*	*	*	*	*	5	5	14	
x20 00272		PLUG ASSEMBLY, DUST SX1617 (88795)		EA		1									14	
X1 00273		FINGER RING SX1605 (88795)		EA		2										
РС 0027¥	4730-360-0595	GASKET H6430M (81718) (Initially listed as Index No. 00189)		EA		1									14	
X1 00275	4730-595-3846	PLUG, HOSE 634a (81718)		EA		1										
x1 00276	4010-628-5276	CHAIN ASSEMBLY, SINGLE H6682M (81718)		EA		1										
x20 00277		TEE, ALUM: 1 1/2, 1/2 × 1/2 SX733 (88795)		EA		1									14	

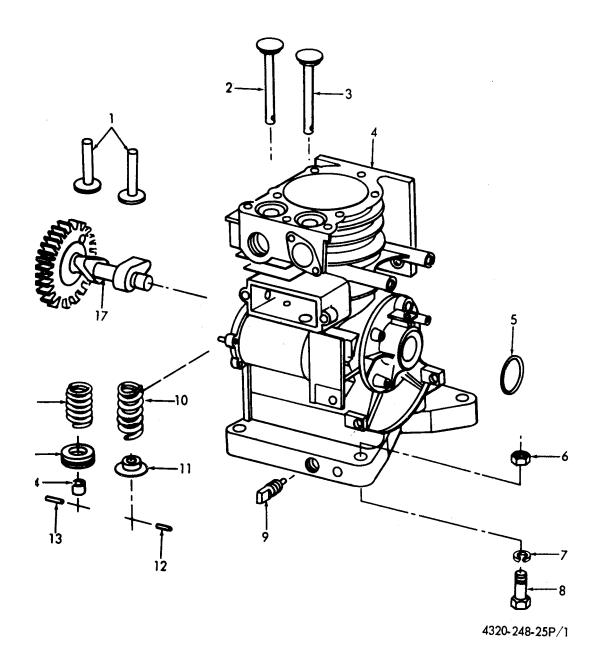



### LEGEND TO PARTS, FIGURE 1

I TEM	FUNCT	I TEM	I TEM	FUNCT	I TEM	I TEM	FUNCT	I TEM
NO.	GROUP	NAME	NO.	GROUP	NAME	NO.	GROUP	NAME
1 2 3 4 5 6	0105 0105 0105 0101 0101 0100	TAPPET VALVE VALVE CYLINDER AY SEAL NUT	7 8 9 10 11 12	0100 0100 0101 0105 0105 0105	WASHER BOLT PLUG SPRI NG SEAT PI N	13 14 15 16 17	0105 0105 0105 0105 0105 0105	PI N RETAI NER ROTATOR CAP SPRI NG CAMSHAFT

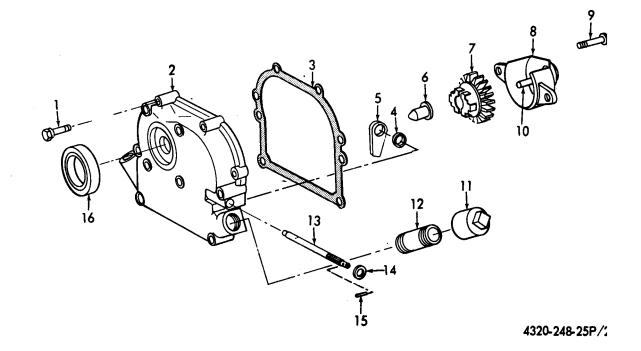


FIGURE NO. 2 CYLINDER COVER AND GOVERNOR

LEGEND TO PARTS, FIGURE 2

I TEM	FUNCT	I TEM
NO.	GROUP	NAME
1 2 4 5 6 7 8 9 10 11 12 13 14 15 16	0101 0101 0308 0308 0308 0308 0308 0308	BOLT COVER GASKET WASHER FOLLOWER RETAI NER GEAR BODY SCREW SHAFT CAP NI PPLE SHAFT WASHER PI N SEAL

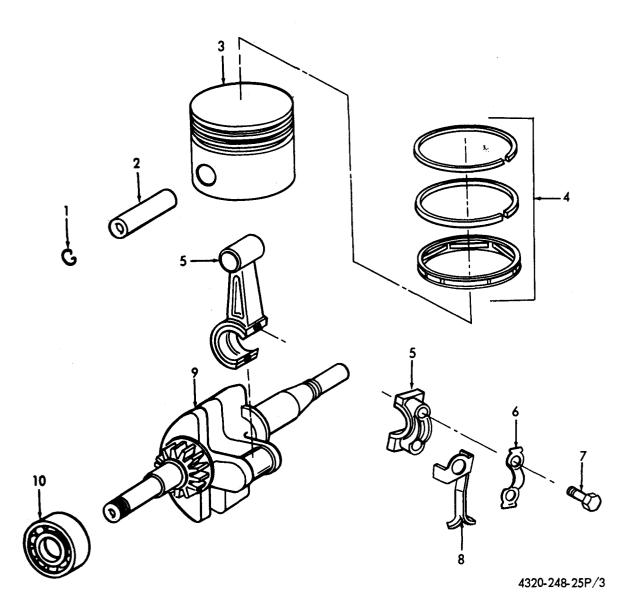


FIGURE NO. 3 PISTON, CONNECTING ROD AND CRANKSHAFT

### LEGEND TO PARTS, FIGURE 3

I TEM NO.	FUNCT GROUP	I TEM NAME	I TEM NO.	FUNCT GROUP	I TEM NAME
1	0104	RING	6	0104	LOCK
2	0104	PIN	7	0104	BOLT
3	0104	PISTON AY	8	0104	DI PPER
4	0104	RING SET	9	0102	CRANKSHAFT
5	0104	ROD AY	10	0102	BEARI NG


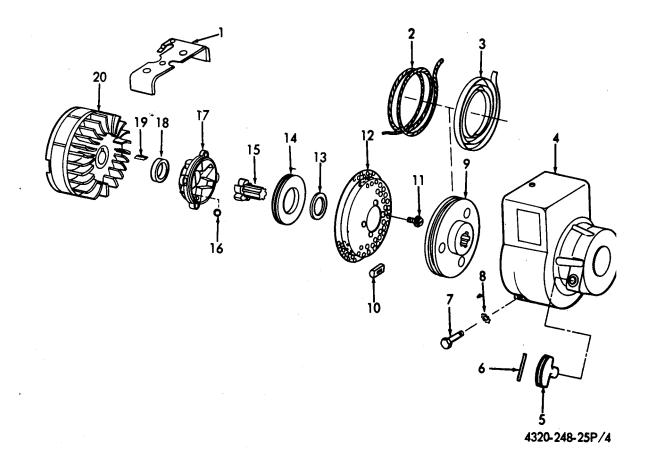


FIGURE No. 4 REWINDSTARTER, FLYWHEEL

			LEGENI	D TO PAR	TS, FIGURE 4			
I TEM NO.	FUNCT GROUP	I TEM NAME	I TEM NO.	FUNCT GROUP	I TEM NAME	I TEM NO.	FUNCT GROUP	I TEM NAME
1	0502	COVER	8	0502	WASHER	15	0107	RATCHET
2	0107	ROPE	9	0107	PULLEY	16	0107	BEARI NG
3	0107	SPRI NG	10	0107	BUMPER	17	0107	HOUSI NG
4	0502	HOUSING	11	0107	SCREW	18	0605	WASHER
5	0107	GRI P	12	0107	SCREEN	19	0605	WASHER
6	0107	PIN	13	0107	WASHER	20	0605	FLYWHEEL AY
7	0502	SCREW	14	0107	WASHER			

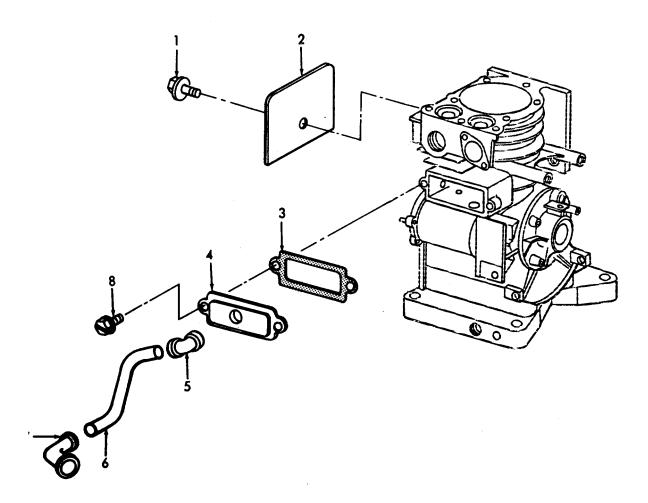

#### FIGURE NO. 5 CRANKCASE BREATHER

### LEGEND TO PARTS, FIGURE 5

ITEM NO.	FUNCT GROUP	ITEM NAME	ITEM NO.	FUNCT GROUP	ITEM NAME
1	0502	SCREW	5	0106	GROMMET
2	0502	SHIELD	6	0106	TUBE
3	0106	GASKET	7	0106	GROMMET
4	0106	BREATHER	8	0106	BOLT

_	
	2
	•
12	J6
	. <u> </u> 9 ≥
	<b>(()</b>
	000 040 0FD

FIGURE NO. 6 FUEL TANK, CARBURETOR AND AIR CLEANER

LEGEND TO PARTS, FIGURE 6

ITEM

SCREW

GASKET

SCREW

GASKET

GASKET

TANK SCREW

CAP

SCREW

AIR CLEANER

FILTER ELEMENT

CARBURETOR AY

I TEM FUNCT I TEM NO. GROUP NAME

0304

0304

0304

0304

0301

0301

0301

0306

0306

0306

0306

0301

1 2

3

4


5

6 7

8

9

10

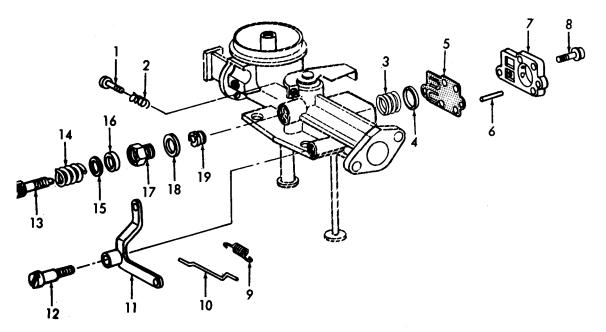

LEGEND TO PARTS, FIGURE 7 ITEM FUNCT ITEM ITEM FUNCT ITEM GROUP NAME NO. NAME NO. GROUP 0301 CRANK 0301 SCREW 11 1 0301 SCREW 2 0301 SPRI NG 12 0301 SPRI NG 13 0301 VALVE 3 SPRI NG 0301 14 4 0301 CAP 0301 DI APHRAGM 15 0301 WASHER 5 0301 PACKI NG 16 PIN 6 0301 17 0301 NUT 7 0301 COVER 0301 SCREW 18 0301 GASKET 8 9 0301 SPRI NG 19 0301 SEAT 0301 LINK 10

FIGURE NO. 7 CABURETOR

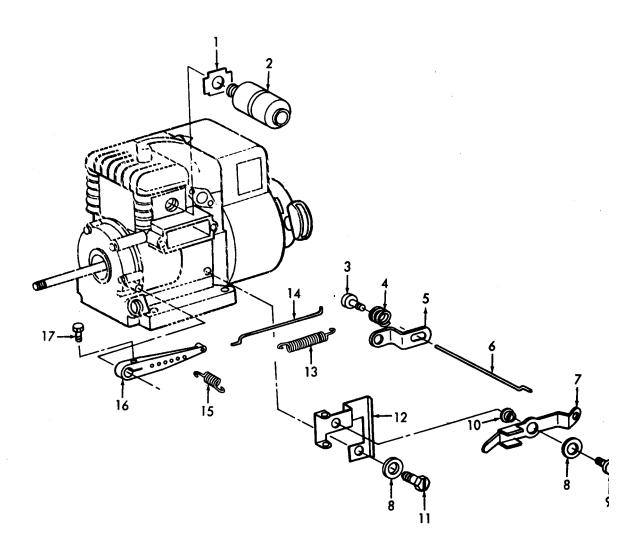


Figure No. 8 Muffler And Governor Controls

### LEGEND TO PARTS, FIGURE 8

I TEM NO.	FUNCT GROUP	I TEM NAME	I TE NO.	M FUNCT GROUP	I TEM NAME
1	0401	LOCKNUT	10	0308	BUSHI NG
2	0401	MUFFLER	11	0308	SCREW
3	0308	NUT	12	0308	BRACKET
4 5	0308	SPRI NG	13	0308	SPRI NG
5	0308	BRACKET	14	0308	LINK
6	0308	ROD	15	0308	SPRI NG
7	0308	LEVER	16	0308	LEVER
8	0308	WASHER	17	0308	SCREW
9	0308	SCREW			

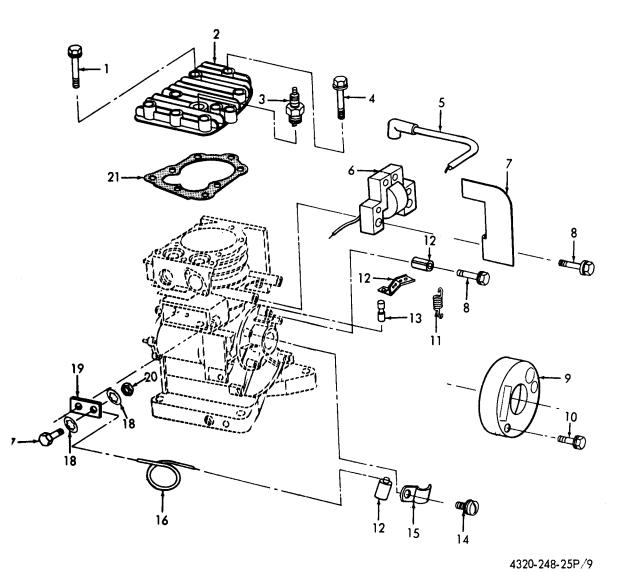


FIGURE NO. 9 CYLINDER HEAD AND IGNITION COMPONENTS

LEGEND TO PARTS, FIGURE 9

ITEM FUNCT	I TEM	I TEM	FUNCT	I TEM	I TEM	FUNCT	I TEM
NO. GROU	JP NAME	NO.	GROUP	NAME	NO.	GROUP	NAME
0101	BOLT	8	0605	SCREW	15	0605	CLAMP
0101	HEAD	9	0605	COVER	16	0605	WIRE
0605	PLUG	10	0605	SCREW	17	0605	BOLT
0101	BOLT	11	0605	SPRING	18	0605	WASHER
0605	LEAD	12	0605	PARTS KIT	19	0605	I NSULATOR
0605	ARMATURE	13	0605	PLUNGER	20	0605	NUT
0502	DEFLECTOR	14	0605	SCREW	21	0101	GASKET

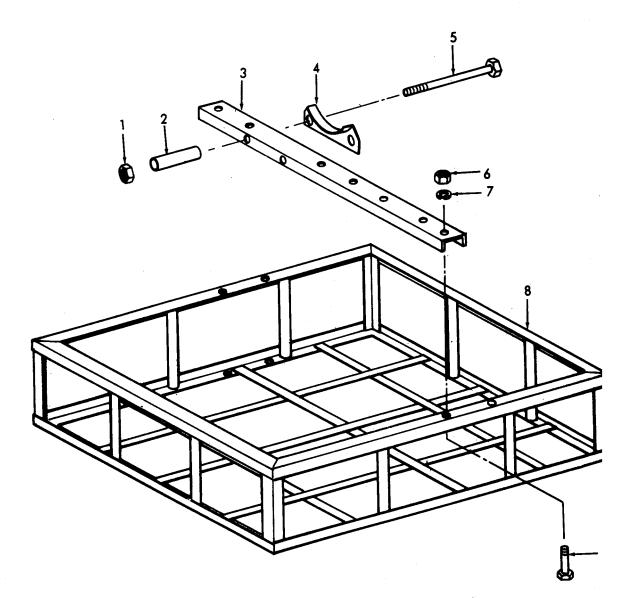
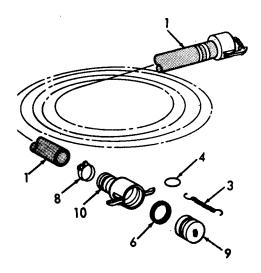


FIGURE NO. 10 BASKET AND FRAME

LEGEND TO PARTS, FIGURE 10

item No.	FUNCT GROUP	ITEM NAME	ITEM NO.	FUNCT GROUP	ITEM NAME	ITEM NO.	FUNCT GROUP	ITEM NAME
1	1501	NUT	4	1501	SUPPORT	7	1501	WASHER
2	1501	SPACER	5	1501	BOLT	8	1501	BASKET
3	1501	BASE	6	1501	NUT	9	1501	BOLT



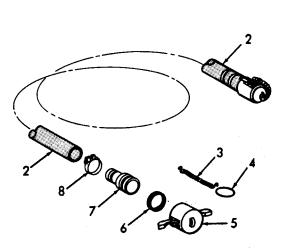


Figure No. 11 HOSE

LEGEN	D TO PAR	RTS, FIGURE 11
	FUNCT GROUP	
1	2202	HOSE
2	2202	HOSE
3	2202	CHAIN AY
4	2202	RING
. 5	2202	CAP
6	2202	GASKET
7	2202	COUPLI NG
8	2202	CLAMP
9	2202	PLUG
10	2202	COUPLI NG

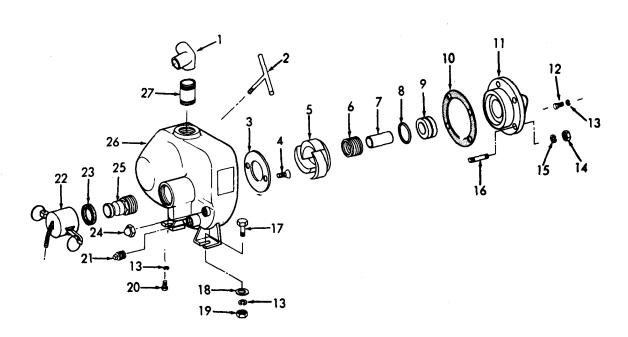


FIGURE NO. 12 PUMP

			LEGEND	) TO PAR	TS, FIGURE 12			
I TEM NO.	FUNCT GROUP	I TEM NAME	ITEM NO.	FUNCT GROUP	I TEM NAME	I TEM NO.	FUNCT GROUP	I TEM NAME
1	7202	ELBOW	10	7202	GASKET	19	7202	NUT
2	7202	HANDLE	11	7202	ADAPTER	20	7202	BOLT
3	7202	PLATE	12	7202	BOLT	21	7202	PLUG
4	7202	BOLT	13	7202	WASHER	22	7202	CAP AY
5	7202	IMPELLER	14	7202	NUT	23	7202	GASKET
6	7202	SEAL	15	7202	WASHER	24	7202	NUT
7	7202	SLEEVE	16	7202	STUD	25	7202	COUPLING
8	7202	0 RING	17	7202	BOLT	26	7202	CASI NG
9	7202	SEAT	18	7202	WASHER	27	7202	NI PPLE

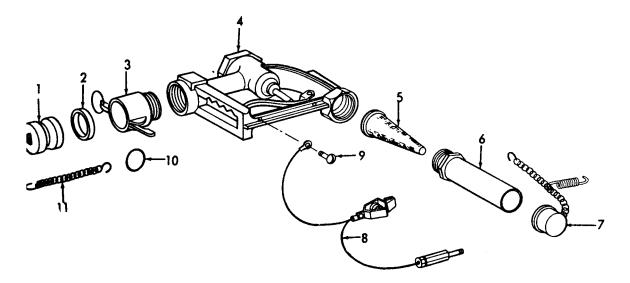


FIGURE NO. 13 NOZZLE

LEGEN	D TO PA	RTS, FIGURE 13
I TEM NO.	FUNCT GROUP	
1	7203	PLUG
2	7203	GASKET
3	7203	COUPLER
4	' /203	NOZZLE
5	7203	SCREEN
6	7203	SPOUT
7	7203	CAP AY
8	7203	WIRE AY
9	7203	SCREW
10	7203	RI NG
11	7203	CHAI N

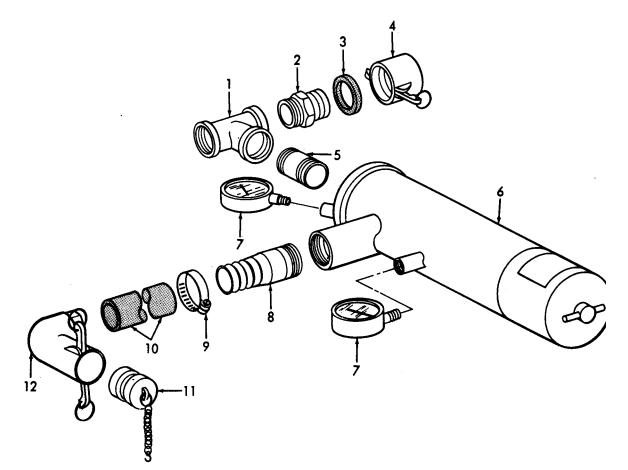


FIGURE NO. 14 MONITOR

	LEGEND TO PARTS, FIGU	IRE 14		
ITEM FUNCT No. Group	ITEM NAME	ITEM No.	FUNCT Group	ITEM NAME
1 7204	TEE	7	7204	GAGE
2 7204	ADAPTER	8	7204	ADAPTER
3 7204	GASKET	9	7204	CLAMP
4 7204	CAP AY	10	7204	NOSE
5 7204	NIPPLE	11	7204	PLUG AY
6 7204	GAGE	12	7204	COUPLER

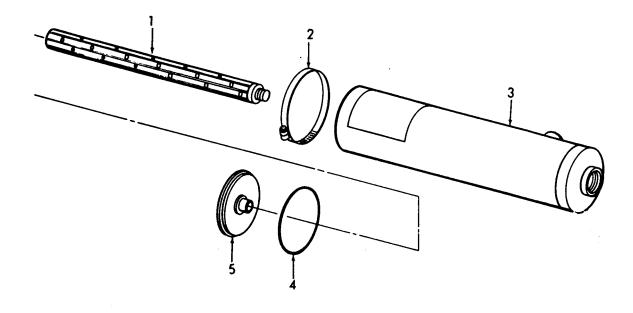


FIGURE NO. 15 GAGE GO- NO - GO LEGEND TO PARTS, FIGURE 15

.

LLGLN	DIUFA	NIS, FIGURE
I TEM NO.	FUNCT GROUP	I TEM NAME
1	7204	ELEMENT
2	7204	CLAMP
3	7204	HOUSI NG
4	7204	0 Ring
5	7204	COVER

## Section VII. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER

STOCK NUMBER	INDEX NUMBER	STOCK NUMBER	INDEX NUMBER
2805-018-5293	00048	4010-628-5276	00209
2805-254-1370	00044	4010 020 9210	00266
2805-342-7432	00042		00276
2805-351-6692	00020	4320-920-5342	00267
2805-353-7587 2805-353-7712	00041 00030	4320-920-5343	00237
2805-356-1334	00030	4320-946-9947 4320-946-9948	00236 00227
2805-422-5804	000 52	4320-946-9949	00219
2805-594-1030	00023	4320-946-9961	00239
2805-608-8508	0 00 35	4320-989-3259	00233
2805-608-8509	00032	4720-916-1883	00182
2805-624-0278 2805-624-0282	00021	4720-946-9960 4730-020-9293	00181 00268
2805-624-0284	00158	4730-192-9481	00056
2805-658-3916	00017	4730-360-0595	00189
2805-678-4395	000 08		00197
2005 (70 (/2)	00022		00211
2805-678-4421 2805-678-4423	00038 00034		00246
2805-678-4425	00034	4730-360-1595	00274
2805-678-4431	00010	4730-542-4030	00193
	000 5 3	4730-542-4031	00186
2805-678-4432	000 07	4730-555-1562	00195
2005 470 5770	00018	1720 505 2014	00208
2805-679-5779 2805-679-5784	00118 00124	4730-595-3846	00192 00247
2805-776-2282	00054		00275
2805-828-0783	0 00 04	4730-715-1558	00241
2805-849-3141	00057	4730-805-6726	00213
2805-920-5383	00019		00261
2805-920-5384 2805-920-5385	00027 00153	4730-950-7613 4930-872-1779	00024
2805-920-5387	00036	5305-010-0752	00257 00150
2805-920-5388	00047	5305-543-5220	00164
2805-949-0543	00029	5305-719-4603	00144
2805-992-0403	00045		00069
2805-999-5238	00003		00163
2910-707-7503 2910-711-5609	00107 00130	5305-719-4783 5305-753-4269	00129 00127
2910-893-5072	000 82	53 05-992-0440	00162
2910-893-5073	00088	5306-073-8255	00050
2910-898-2094	00108	5306-543-5219	00128
29 10 - 8 98 09 4 29 10 - 9 20 - 5 36 1	000 09	5306-817-0730	00033
2910-920-5363	000 74 000 87	5310-011-5544 5310-353-7577	00166 00135
2910-920-5368	00078	5310-596-5224	00157
2910-920-5369	00075	5310-721-4667	00165
2910-920-5370	00076	5315-248-0052	.00040
2910-920-5371 2910-949-2135	00080	5315-276-4081	00039
2920-213-1147	000 83	5315-598-5970 5315-626-1789	00155
2920-294-3747	00160	5315-855-4336	00064
2920-356-1333	00161	5315-924-0051	00085
2920-537-1365	00152	5330-250-0238	00223
2920-920-5373	00149	5330-526-7517	00259
2930-537-1360 2930-537-1363	00142 00141	5330-924-0049 5330-924-0050	00084
2930-537-1364	00202	5330-924-0090	00234 00079
2940-171-7935	000 06	5340-286-4566	00159
	000 94	5340-356-1325	00031
2940-294-1599	00101	5340-531-7989	00240
2940-608-8514	000 05	5340-923-7050	00090
2940-688-7912	00103 00102	5340-923-9875 5340-945-0493	00089 00132
2990-174-5255	00067	5840-787-6662	00061
2990-269-7145	00139	5970-789-1925	00154
2990-624-0260	00131	5975-152-1075	00138
2990-678-1220 2990-768-0723	00136 00062	6150-624-0279 6685-923-7077	00167
2990-769-4104	00082	8885-725-1011	00271
2990-786-2030	00065		
2990-787-6665	00116		
2990-898-2097	00133		
2990-907-0644	00059		
2990-920-5347 2990-930-1737	00121 00066		
2990-930-1738	00068		
2990-992-0405	00111		
3110-100-6180	00060		
3110-144-9004	00026		
4010-628-5276	00191		
	0011		

## Section VII. INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO INDEX NUMBER

REFERENCE No.	MER CODE	INDEX NO.	REFERENCE No.	Mra Coor	INDEX No.
A0001A1	88795	00230	SX888	81718	00 24 5
AE002A1	88795	00235	5X931A	88795	00239
AH00281	88795	00012	SX 9 37	88795	00182
		00178	5X988	88795 88795	00176 00175
4100.20.2	88795	0231· 00232	SX 989 SX 990	88795	00214
AH00282 AJ00284	88795	00232	022-171	38508	00271
AR005A1	08484	00185	0414205	90005	00257
ARO 10A1	08484	00255	0441075	90005	00255
A6001A1	88795	00236	153	81718	00249
A7004A1	88795	00227	190W	81718	00 25 2
80001A1	88795	00220	210	81718	00242 00113
BE002A7 BE001A3	88795 88795	00172 00225	210226 210227	08645	00112
BEODIAS BEODIAS	88795	00224	210221	08645	000 38
BEOD 2A5	88795	00226	210812	08645	00023
8E002A7	88795	00002	210959	08645	00076
8F001A1	88795	00212	211 38 3	08645	00063
BG001A2	88795	00217	220366	U8645 U8645	00152 00118
8600282	88795	00011 001 <b>74</b>	220381 220478	08645	00146
		00229	220410		00202
BG002B3	88795	00228	220581	U8645	00141
BHOU 2 A	88795	00200	220670	08645	00034
B1004A1	88795	00234	220680	08645	00136
CC 2961 1-2X1 5-8	81718	00251	220690	08645	00120
C J8	08645	00160	220691	08645 08645	00116
C2002A1 C3012A1	88795 88795	00215 00219	220692 220756	08645	000 35
D7002A1	88795	00222	220865	08645	00165
E4002A1	88795	00237	221377	08645	00075
E9001A1	88795	00206	221384	08645	00115
G3020A2	88795	00201	221653	08645	00071
H6430M	81718	00189	221661	08645	00068
		00197	22235	08645	00093 00135
		00211 00246	22826 230126	08645 08645	00039
		00248	230127	08645	00041
		00274	230149	08645	00122
H6682M	81718	00191	230173	08645	00046
		00196	230177	08645	00124
		002 09	230181	08645	00130
		00244 00266	230228 230445	U864 5 U864 5	00064 00114
		00276	230590	08645	00083
K214-5	88795	00233	230591	08645	00087
MABO	88795	00260	230634	08645	00057
MS29513-216	96906	00223	230671	08645	00096
MS29513-249	96906	00259	230680	08645	00125
QS 200M 28 A SX 1048	88795 88795	00267 00250	23184 23187	08645	00043 00040
SX 1077	88795	00180	23433	08645	00082
SX1091	88795	00177	23686	08645	00117
SX 1094	88795	00173	26018	08645	00159
SX1603	88795	00204	260182	08645	00027
SX 1604	88795	00194	26026	08645	00031
		00207	260455	08645	00090 00151
\$X1605	88795	00262 00188	260544	08645	00121
AV 10A3	00172	00198	260545	08645	00132
		00210	260552	08645	00045
		00248	260563	08645	00081
		00264	260564	08645	00091
ey 1 / 0.0	00705	00273	260575	08645	00092 00133
SX 1608 SX 1609	88795 88795	00205 00221	260585 26336	08645	00089
SX 1610	88795	00169	26478	08645	00044
SX 16 11	88795	00254	26855	08645	00131
SX1613	88795	00256	270026	08645	00078
SX 16 16	81716	00187	27402	08645	00094
SX1617	88795	00190 00243	27549	08645	00010 00053
		00272	27586	08645	00007
SX 16 19	88795	00269	21300	00049	00018
SX 1644 A	88795	00170	27660	08645	00005
SX 16448	88795	0170A	·		00103
SX1660	90005	00258	27670	08645	00008
\$X700	88795	00171		· · · · · ·	00022
SX7 15	88795	00216	27911	08645	00009
SX7 33	88795	00270 00277	27987	08645	00108 00102
SX 848	. 88795	00181	291925	08645	00030

REFERENCE No.	MEG CODE	INDEX NO.	REFERENCE No.	Mra Cops	INDEX NO
292259	08645	00042	93113	08645	0001
293141	08645	00156	93141	08645	0005
293270	08645	00107	93265	08645	3000
29 3740	08645	00021	93322	08645	0010
293999	08645	00167	93341	08645	0005
294077	08645	00119	93343	08645	0010
294088	08645	00065	93357	08645	0005
294178	08645	00051	- 93381	08645	0016
294260	08645	00143	93392	08645	0005
294303	08645	00070	93394	08645	0005
294 306	08645	00017	99158	08645	0002
294367	08645	00032			
294584	08645	00067			
294628	08645	00158		·	×.
294870	08645	00101			
294932	08645 08645	00111 00029			
295455 295657	08645	00029			
295657	81718	00240			
2960	08645	00080			
296591	08645	00106			
296610	08645	00019			
296676	08645	00047			
296677	08645	00048			
296784	08645	00074			
296811	08645	00086			
296884	08645	00153			
297069	08645	00077			
297 275	08645	00004	· ·		
297961	08645	00088			
298 310	08645	00059			
298436	08645	00066			
298502	08645	00149			
541-621-048	25500	0084			
546-622-048	25500	00183			
61760	08645	00155			
6338	81718	00241			
63 3C	81718	00186 00193			
63 3E	81718	00193			
63 3F	81718	00261			
63 3H	81718	00268			
634A	81718	00192			
0.74 <b>x</b>	01110	00247			
		00275			
634B	81718	00195			
,		00208			
	68795	00263			
63770	08645	00060			
65704	08645	00161			
65978	08645	00084			
66432	08645	00134			
66528	08645	00061			
66578	08645	00054			
66594	08645	00079			
66728 66935	08645	00062 00154			
66935	08645				
67608 68238	08645 08645	00055 00072			
69345	08645	00072			
81232	08645	00003			
89660	08645	00020			
89966	08645	00139			
90576	08645	00157			
91249	08645	00024			
91258	08645	00056			
91811	08645	00138			
92296	08645	00033			
92666	08645	00145			
92778	08645	00147			
92786	08645	00150			
93014	08645	00164			
93032	08645	00014			
93042	08645	00144			
		00069 00163			
03043	1047 E	00123			
93043 93062	08645 08645	C0126			
93064	08645	00127			
93067	08645	00128			
93100	08645	00129			
93111	08645	00015			

By Order of the Secretary of the Army:

Official:

HAROLD K. JOHNSON, General, United States Amy, Chief of Staff.

KENNETH G. WICKHAM, Major General, United States Army, The Adjutant General.

To be distributed in accordance with DA Form 12-25, Section I, requirements for Organizational Mainteance, Mobility Support Equipment for Pumps, Centrifugal, Petroleum.

TM 5-4320-248-25P FUEL SYSTEM, TRANSFER, PORTABLE, PUMP, CENTRIFUGAL, 100 GPM-1968

PIN: 008476-000

This fine document...

Was brought to you by me:



# Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<u>http://www.liberatedmanuals.com/</u>>Free Military and Government Manuals</A>

Sincerely
 Igor Chudov
 <u>http://igor.chudov.com/</u>
 Chicago Machinery Movers