ARMY TECHNICAL MANUAL NAVY PUBLCATION

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E-121 DZ-204 T.O. 31S9-2FSS9-1 9

AIR FORCE TECHNICAL ORDER

TECHNICAL MANUAL

OPERATORS'S ORGANIZATIONAL DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)

ALARM, AUDIBLE BZ-6350/FSS-9(V) NSN 6350-00-228-2514

Distribution Statement A. Approved for public release; distribution is unlimited.

DEPARTMENT OF THE ARMY, THE NAVY, AND THE AIR FORCE

30 September 1982

WARNING

The Audible Alarm presents a noise hazard to personnel in the area. The noise level exceeds the allowable limits for unprotected personnel. Authorized protective equipment must be worn by all personnel in the work area. If the Audible Alarm is installed, it must be disabled BEFORE any troubleshooting procedures are attempted. Disable the alarm by setting the key operated switch on Control Unit to TEST/RESET position, opening Audible Alarm, removing faceplate, and turning off power switch. After troubleshooting the Audible Alarm must be reactivated. Activate the Alarm by setting the key-operated switch on Control Unit to TEST/RESET position, turn Alarm power switch on, replace faceplate, close and clock Audible Alarm door. Turn key-operated switch on Control Unit to SECURE or ACCESS.

WARNING

HIGH VOLTAGE

High voltage is used in the operation of this equipment. Death on contact may result if personnel fail to observe safety precautions. A 115-volt ac potential may cause death under certain conditions; therefore, precautions should be taken at all times. Be careful not to contact connections for 115-volt ac input when installing or repairing this equipment. Never work on electronic equipment unless there is another person nearby who is familiar with the hazards of the equipment and who is competent in administering first aid.

WARNING

HYDROGEN GAS

The Audible Alarm contains a rechargeable battery which may generate ignitable amounts of hydrogen gas if certain failures occur. This is a potential safety hazard. Do not smoke when opening the door. After opening, allow the unit to ventilate with the door open for 2 minutes before turning off the Power Switch or performing any other maintenance action. If excessive heat or fumes of any nature are being emitted from the Audible Alarm, immediately open the enclosure door and ventilate for 2 minutes before performing any maintenance action.

a/(b blank)

TM 5-6350-264-14&P-9 NAVELEX EE181-AA-OMI-100/E 121 DZ-204 T.O. 31S9-2FSS9-1-9

CHANGE

HEADQUARTERS, DEPARTMENT OF THE ARMY, NAVY, AND THE AIR FORCE WASHINGTON, DC, 1 MARCH, 2008

OPERATOR'S ORGANIZATIONAL DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE MANUAL (INCLUDING REPAIR PARTS AND SPECIAL TOOLS LIST)

ALARM, AUDIBLE BZ-204/FSS-9 V NSN 6350-00-228-2514

DISTRIBUTION STATEMENT A. Approved for public release; distribution unlimited.

TM 5-6350-264-14&P-9, 30 September 1982 is updated as follows:

1. File this sheet front of the manual for reference.

2. This change implements Army Maintenance Transformation and changes the Maintenance Allocation Chart(MAC) to support field and sustainment maintenance.

3. New or updated text is indicated by a vertical bar in the outer margin of the page.

4. Added illustrations are indicated by a vertical bar adjacent to the figure number. Changed illustrations are indicated by a miniature pointing hand adjacent to the updated area and a vertical bar adjacent to the figure number.

5. Remove old pages and insert new pages as indicated below:

Remove Pages	Insert Pages
 i thru ii 1-1 thru 1-2 B-1 thru B-4 2028 (Page)	A/B Blank i thru iii/iv Blank 1-1 thru 1-3/1-4 Blank B-1 thru B-8 2028 (8 Pages)
Cover 1	Cover 1

NO. 4

By Order of the Secretary of the Army:

Official: Joyce E. Morrow JOYCE E. MORROW Administrative Assistant to the

Secretary of the Army 0803601

By Order of the Secretary of the Air Force:

GEORGE W. CASEY, JR General, United States Army Chief of Staff

JOHN P. JUMPER General, United States Air Force Chief of Staff

Official:

GEORGE T. BABBITT General, United States Air Force Commander, AFMC

By Order of the Secretary of the Navy:

WALTER H. CANTRELL Rear Admiral, United States Navy Commander, Space and Naval Warfare Systems Command

DISTRIBUTION:

To be distributed in accordance with the initial distribution number (IDN) 253883 requirements for TM 5-6350-264-14&P-9.

HEADQUARTERS DEPARTMENT OF THE ARMY. NAVY AND THE AIR FORCE WASHINGTON, D.C., 29 July 1994

Operator's, Organizational, Direct Support and General Support Maintenance Manual (including Repair Parts and Special Tools List)

ALARM, AUDIBLE BZ-204/FSS-9(V) NSN 6350-00-2282514

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

- TM 5-6350-264-14&P-9/NAVELEX EE 181 -AA-OMI-100/E121 DZ-204/T.O. 31 S9-2FSS9-1-9, 30 September 1982, is changed as follows:
- Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the 1. margin. An illustration change is indicated by a miniature pointing hand.

Remove pages Insert pages i and ii i and ii 1-1 and 1-2 C-9 through C-16

- 2. Retain this sheet in front of manual for reference purposes.
- 3. Attention Navy Users: This is Change B EE 181-AA-OMI-1OB. Technical Manual Stock Number 0913-LP-004-4302.

CHANGE

NO. 3

1-1 and 1-2 C-9 through C-16

TM 5-350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O. 31 S9-2FSS9-1-9 C3

By Order of the Secretaries of the Army, Air Force, and Navy (Including the Marine Corps):

GORDON R. SULLIVAN General, United States Army Chief of Staff

Mitte of Auntho Official:

MILTON H. HAMILTON Administrative Assistant to the Secretary of the Army 07151

> MERRILL A. MCPEAK General, USAF Chief of Staff

RONALD W. YATES General, USAF Commander, Air Force Materiel Command

DAVID E. BOTTORFF

Rear Admiral, CEC, US Navy Commander Navy Facilities Engineering Command

D. R. BLOOMER Colonel, USMC Director, Program Support Marine Corps Systems Command

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25-E, block no. 3883, requirements for TM 5-6350-264-14&P-9.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O. 31S9-2FSS9-1-9

HEADQUARTERS DEPARTMENTS OF THE ARMY, AIR FORCE AND NAVY WASHINGTON, D.C., 17 SEPTEMBER 1992

Operator's, Organizational, Direct Support and General Support Maintenance Manual (Including Repair Parts and Special Tools List)

ALARM, AUDIBLE BZ-204/FSS-9(V) NSN 6350-00-2282514

Approved for public release; Distribution is unlimited

TM 5-6350-264-14&P-9/NAVELEX EE 181 -AA-OMI-1000/E121 DZ-204/T.O. 31 S9-2FSS9-1-9, 30 September 1982 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

C-9 through C-12 C-15 and C-16

Retain this sheet in front of manual for reference purposes. 2.

Insert pages

C-9 through C-1 2 C-15 and C-16

CHANGE

NO.2

C2

TM 5-6350-264-14&P-9 NAVELEX EE 181-AAOMI-100/E121 DZ-204 T.O. 31 S9-2FSS91-9 C2

By Order of the Secretaries of the Army, Air Force, and Navy:

GORDON R. SULLIVAN General, United States Army Chief of Staff

MERRILL A. MCPEAK General, USAF Chief of Staff

Mitte of dunto MILTON H. HAMILTON Administrative Assistant to the

Secretary of the Army

Official:

Official:

CHARLES C. McDONALD

General, USAF Commander, Air Force Logistics Command

DAVID E. BOTTORFF

Rear Admiral, CEC, US Navy Commander Navy Facilities Engineering Command

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25-E, block 3883, Operator, Unit, Direct and General Support Maintenance requirements for TM 5-6350-264-14&P.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-10A/E121 DZ-204 T.O.31S9-2FSS9-1-9 CI

HEADQUARTERS DEPARTMENTS OF THE ARMY, NAVY, AND AIR FORCE WASHINGTON, D.C., 20 May 1986

CHANGE

NO. 1

Operator's, Organizational, Direct Support and General Support Maintenance Manual (Including Repair Parts and Special Tools List)

ALARM, AUDIBLE BZ-204/FSS-9(V) NSN 6350-00-228-2514

TM 5-6350-264-14&P-9, NAVELEX EE 181-AA-OMI-100/E121 DZ-204, T.O. 31S9-2FSS9-1-9, 30 September 1982, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
i and ii	i and ii
1-1 and 1-2	1-1 and 1-2
A-1 and A-2	A-1 and A-2
B-3 and B-4	B-3 and B-4
C-1 through C-6	C-1 through C-16
C-1 through C-6	C-1 through C-1

2. Retain this sheet in front of manual for reference purposes.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-10A/E121 DZ-204 T.O. 31S9-2FSS9-1-9 C 1

By Order of the Secretaries of the Army, the Navy, and the Air Force:

Official:

Official:

R. L. DILWORTH Brigadier General, United States Army The Adjutant General

Logistics Command

GLENWOOD CLARK Vice Admiral, United States Navy Commander, Naval Electronic Systems Command

JOHN A. WICKHAM, JR. *General, United States Army*

Chief of Staff

CHARLES A. GABRIEL, General USAF Chief of Staff

EARL T. O'LOUGHLIN General, USAF, Commander, Air Force

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Operator, Organizational and Direct Support and General Support Maintenance requirements for Detection System, Joint Service, Interior Intrusion (JSIIDS).

LIST OF EFFECTIVE PAGES

NOTE: The portion of text affected by the changes is indicated by a vertical bar in the outer margins of the page. Zero in the "Change No" column indicates an original page.

Dates of issue for original manual and change pages are:

Original30 September 1982Change 120 May 1986Change 217 September 1992Change 329 July 1994Change 41 March 2008

TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 38

Page No.	Change No.	Page No.	Change No.
Front Cover 1 (1 Pg)	4		
Inside Front Cover Blank	0		
i thru iii (3 Pgs)	4		
iv Blank	4		
1-0 Figure (1 Pg)	0		
Blank (1Pg))	0		
1-1 thru 1-3 (3 Pgs)	4		
1-4 Blank	4		
2-1 (1 Pg)	0		
2-2 Blank	0		
3-1 (1 Pg)	0		
3-2 Blank	0		
4-1 (1 Pg)	0		
4-2 Blank	0		
5-1 thru 5-30 (30 Pgs)	0		
6-1 (1 Pg)	0		
6-2 (1 Pg)	0		
A-1 thru A-3 (3Pgs)	0		
A-4 Blank	0		
B-1 thru B-5 (5 Pgs)	4		
B-6 Blank	4		
B-7 thru B-8 (2 Pg)	4		
B-9 Blank	0		
C-1 thru C-6 (6Pgs)	1		
C-7 thru C-8 (2 Pgs Omi	itted) 3		
C-9 thru C-16 (13 Pgs)	3		
Inside Back Cover Blank	0		
Back Cover	0		

ARMY TECHNICAL MANUALTM 5-6350-264-14&P-9NAVY PUBLICATIONSNAVALEX EE 181-AA-OMI-100/E121 DZ-204AIR FORCE TECHNICAL ORDERT.O. 31S9-2FSS9-1-9

HEADQUARTERS DEPARTMENTS OF THE ARMY, NAVY, AND AIRFORCE WASHINGTON, D.C., 30 September 1982

Operators, Organizational, Direct Support, and General Support Maintenance Manual (Including Repair Parts and Special Tools List)

> ALARM, AUDIBLE BZ-204/FSS-9(V) NSN 6350-00-228-2514

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know.

For the Army, mail letter or DA Form 2028(Recommended Changes to Publications and Blank Forms) located in back of this manual, directly to: Commander, U.S. Army CECOM Life Cycle Management Command(LCMC) and Fort Monmouth, ATTN:AMSEL-LC-LEO-E-ED, Fort Monmouth, NJ 07703-5006. You may also send your recommened changes via electronic mail or by fax. Our fax number is 732-532-1556. DSN 992-1556, e-mail address is <u>MONMAMSELLEOPUBSCHG</u> @conus.army.mil. Our online web address for entering and submitting DA Form 2028 is http://edm.monmouth.army.mil/pubs/2028.html.

For Air Force, completed AFTO Form 22(Technical Order Publication Improvement Report and Reply) should be forwarded to:CPSG/LGLI, 230 Hall BLVD. STE 104L, San Antonio,TX 782433-7081.

For Navy, mail comments to the Commander, Space and Naval Warfare Systems Command, ATTN: SPAWAR 8122, Washington, DC 20363-5100.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

Paragraph Page
CHAPTER 1. INTRODUCTION
Section 1 General......1-1 – 1-7 1-1

Change 4

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E 121 DZ-204 T.O. 31S9-2FSS9-1-9

	Paragraph	Page
Section 11. Description and data	1-8, 1-9	1-1
CHAPTER 2. OPERATING INSTRUCTION		
Section 1. Operating procedures	2-1, 2-4	2-1
II. Theory of operation	2-5	2-1
CHAPTER 3. OPERATOR MAINTENANCE INS	STRUCTIONS(Not	
Applicable)		
CHAPTER 4. ORGANIZATIONAL MAINTENA	NCE INSTRUCTIONS(Not	
Applicaple)		
CHAPTER 5. DIRECT SUPPORT AND GENER.	AL SUPPORT	
MAINTENANCE INSTRUCTIONS		
Section l. Operating Procedures		5-1
ll. Troubleshooting		5-1
Section III. General Maintenance		5-29
Section IV. Removal and Replacement of majo	r components	
and assemblies	5-5	5-29
CHAPTER 6. REPAIR OF SIGNAL MODULE (Not Applicable)	
ADDENDLY & DEEEDENCE		Λ 1
B MAINTENANCE ALLOCATION	СНАРТ	A-1 R 1 ■
C OPGANIZATIONAL DIPECT A		D-1
MAINTENANCE DEDAID DADT	S AND SPECIAL TOOLS LIST	C_{1}
MAINTENANCE REFAILT ART	5 AND 51 ECIAL TOOLS LIST	C -1
List of Illustra	tions	
Figure Title		Page
		1.0
1-1 Audible Alarm.		1-0
1-2 Identification Plate		1-2
2-1 Audible Alarm Simplified Block Diagram		2-1
5-1 Audible Alarm with Troubleshooting Test Point	nts	5-4
5-2 Audible Alarm Wiring Diagram	••••••	5-4
C-1 Audible Alarm BZZ-204/FS-g(V)		C-9
List of Tab	les	
Number Title		Page
5-1 Troubleshooting Procedure		
Change 4 ii		

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E 121 DZ-204 T.O. 31S9-2FSS9-1-9

HOW TO USE THIS MANUAL

Manual Overview

The chapters within this manual are divided into specific functional information. Chapter types include General Information, Maintenance Information, Troubleshooting Information, Parts Information, and This manual tells you how to operate and maintain the Audible Alarm BZ-204/FSS-2514.

Warnings and cautions listed throughout the manual are summarized beginning on page a. Make sure that you read and understand all of these before attempting any repair or maintenance function.

Significant subject headings are listed by page numbers in the table of contents.

Individual subjects/terms are found by referring to the subject index in the rear of this manual.

WARNING

Warning highlights an essential operating or maintenance procedure, practice, condition, statement, etc, which, if not strictly observed, could result in injury to, or death of, personnel or long term health hazards.

CAUTION

Highlights an essential operating or maintenance procedure, practice, condition, statement, etc, which, if not strictly observed, could result in damage to, or destruction of, equipment or loss of mission effectiveness.

NOTE

Highlights an essential operating or maintenance procedure, condition, or statement.

NOTE

Changes in this manual introduces the Two-Level Maintenance (TLM) concept which is located in APPENDIX B. TLM Concept changed the maintenance levels from five(Operator, Crew, Direct Support, General Support, and Depot to two(Field and Sustainment. Field maintenance occurs either on the equipment or where it is located. Sustaintment occurs off the equipment and is usually performed at a different location.

iii/(ivBlank)

Change 4

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O.31S9-2FSS9-1-9



Figure 1-1. Audible Alarm

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-100/E 121DZ204 T.O. 31S9-2FSS9-1-9

CHAPTER 1

INTRODUCTION

Section l. GENERAL

1-1. SCOPE.

This manual is for your use in operating the Audible Alarm(AA), Model BZ-204/ FSS(V). The audible Alarm is an integral part of the Joint Services Interior Intrusion Detection System(J-SIIDS). For information on other major assemblies of the JSIIDS, refer to the applicable manuals listed in appendix A.

1-2. CONSOLIDATED INDEX OF ARMY PUBLICATIONS AND BLANK FORMS

Refer to the latest issue of DA Pam 25-30 to determine whether there are new editions, changes, or additional publications pertaining to the equipment.

1-3. MAINTENANCE FORMS, RECORDS, AND REPORTS

a. Reports of Maintenance and Unsatisfactory Equipment. Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 750-8, as contained in Maintenance Management Update. Air Force personnel will use AFR 66-1 for maintenance reporting and TO-00-35D54 for unsatisfactory equipment reporting. Navy personnel will report maintenance performed utilizing the Maintenance Data Collection Subsystem (MDCS) IAW OPNAVINST 4790.2, Vol 3 and unsatisfactory material/conditions (UR) IAW OPNAVINST 4790.2, Vol 2, chapter 17. Marine Corps maintains forms and procedures as prescribed by TM 4700-15/1.

b. Reporting of Item and Packaging Discrepancies. Fill out and forward SF 364 (Supply Discrepancy Report (SDR)) as prescribed in AR 735-11-2/DLAR 4140.55/SECNAVINST 4355.18/AFR 400-54/MCO 4430.3J.

c. Transportation Discrepancy Report (TDR) (SF 361). Fill out and forward Transportation Discrepancy Report (TDR) (SF 361) as prescribed in AR 55-38/NAVSUPINST 4610.33C/AFR 75-18/MCO P4610.19D/DLAR 4500.15.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-100/E 121DZ204 T.O. 31S9-2FSS9-1-9

1-4. DESTRUCTION OF ARMY ELECTRONICS MATERIEL

Destruction of Army electronics materiel to prevent enemy use shall be in accordance with TM 750-244-2.

1-5. ADMINISTRATIVE STORAGE

Administrative storage of equipment issued to and used by Army activities will have Preventive Maintenance Checks and Services (PMCS) performed before storing. When removing the equipment from administrative storage, the PMCS checks should be performed to assure operational readiness.

1-6. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR)

- a. Army. If your equipment needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368 (Product Quality Deficiency Report). Mail it to: Commander, U.S. Army Communications-Electronics Life Cycle LC-LEO-D-SS Fort Monmouth, New Jersey 07703-5006. We'll send you a reply.
- b. *Air Force.* Air Force personnel are encouraged to submit EIR's in accordance with AFR 900-4.
- c. *Navy.* Navy personnel are encouraged to submit EIR's through their local Beneficial Suggestion Program.

Section II. DESCRIPTION AND DATA

- **1-7. DESCRIPTION.** The AA is an integral part of the J-SIIDS Control Unit. It receives operating power from and sends signals to the J-SIIDS Control Unit. The AA(fig II) consists of a sounding device(speaker), a battery for emergency power supply, battery charger, signal circuit, and tamper alarm switches. The The AA is protected by a doubled-walled, steel enclosure, with a lockable hinged cover.
- **1-8. TABULATED DATA.** a. An identification plate(fig. 1-2) is mounted on the inside of the Audible Alarm access door.

Change 4

TM 5- 6350-264-14&P-9 NAVELEX EE 181-AA- OMI-100/E121 DZ-204 T.O. 31S9-2FSS9-1-9



Figure 1-2. Identification Plate

b.Equipment characteristics.

(1) Enclosure. Weight (without battery) 23.50 pounds(10.65 kg) Dimensions(overall) 15.13 inches(38.43 cm) Height Width 12.31 inches(31.26 cm) Depth 5.95 inches (15.11 cm) Color (enclosure) Gray per Federal I Standard 595, color chip 36440 MIL-C-22751 Environmental (Operational) Temperature range -20° to +150°F (-29° to +650C) Relative humidity.....Up to 95% Environmental(non-operational and storage) Temperature range -30° to+ 165F(-34° to +740C) Relative humidity.....Up to 95° Shock...........20 g for 11 ms duration plus bench handling shock(w/o battery) Audible alarm output......108 db, referenced to 0.0002 microbar Power requirements......110 - 125 vac, 48-62 Hz Tamper alarm criteria......Movement of cover 1/4 inch(0.635 cm) or more Weather resistance......Designed for exterior installation (2) Battery Weight......6,00 pounds (2.2.72 kg) Height.....2.55 inches (6.477 cm) Depth......9.15 inches (23.241 cm) Voltage capacity...... 24 vdc, 2.5 ampere hours

1-3/(1-4Blank)

OPERATING INSTRUCTIONS

Section I. OPERATING PROCEDURES

2-1. CONTROLS AND INDICATORS. There are no operator controls or indicators applicable to this equipment.

2-2. NORMAL OPERATING PROCEDURES.

The AA is ready for operation after it is installed, tested, and connected to the J-SIIDS Control Unit. Since the startup and shutdown of the AA is dependent upon the presence or absence of power from the J-SIIDS Control Unit, no operating procedures are required. **2-3. EMERGENCY OPERATION**. Operation with incomplete surveillance coverage or faulty tamper circuit should be held to a minimum. Extended periods of operation on battery (stand-by) power should be avoided.

2-4. UNUSUAL OPERATING CONDITIONS. Relocation or storage of large objects within close proximity of equipment cabinet will reduce effectiveness of audible signal.

Section II. THEORY OF OPERATION

2-5. FUNCTIONAL DESCRIPTION. The Audible Alarm provides an audible indication of an alarm condition when it receives an alarm signal from the J-SIIDS Control Unit. An alarm signal switches on electronic circuitry that produces a loud (min 108 db @ 10 ft), varying (500 to 2, 000 Hz) tone. This alarm indication will continue until the cause of the alarm has been removed and the Control Unit (CU) has been reset. Primary ac power is provided by the CU. This ac power is rectified to dc and

used to operate all electronic circuitry including the battery charger. Emergency power is provided by the battery. If ac power fails, the AA will automatically draw operating power from the battery. A tamper alarm is automatically initiated if the AA enclosure door is opened, if the enclosure is pried away from its mounting surface, or if the inner and outer enclosures are shorted together. Figure 2-1 is a simplified block diagram.



Figure 2-1. Audible Alarm Simplified Block Diagram

2-1/(2-2 blank)

OPERATOR MAINTENANCE INSTRUCTIONS

This chapter is not applicable to this equipment.

3-1/(3-2 blank)

ORGANIZATIONAL MAINTENANCE INSTRUCTIONS

This chapter is not applicable to this equipment.

4-1/(4-2 blank)

DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE INSTRUCTIONS

Section I. OPERATING PROCEDURES

5-1. SPECIAL TOOLS. No special tools or equipment are required for the Audible Alarm.

5-2. REPAIR PARTS. Repair parts are listed and illustrated in the repair parts and special tools list covering direct and general support maintenance for this equipment in appendix C of this manual.

Section II. TROUBLESHOOTING

5-3. GENERAL.

- a. This section contains troubleshooting information for locating and correcting most of the operating troubles which may develop in the Audible Alarm. Each malfunction or trouble for an individual component, unit, or system is followed by a probable causes and a list of tests or inspections which will help you to determine corrective actions to take. You should perform the test/inspections in the corrective actions column 'in the order listed.
- b. Table 5-1 does not list all malfunctions that may occur, nor all tests or inspections and corrective actions to be made. If a malfunction is not listed or is not corrected by listed corrective actions, notify your supervisor.
- c. The table lists the common malfunctions which you may find during the operation or maintenance of the Audible Alarm. You should perform the test/ inspections in the corrective actions column in the order listed.

NOTE

Before you use table 5-1, be sure you have performed all applicable operating checks.

- d. Check all available information on the equipment for aid in diagnosing problems.
- e. Make a visual inspection of the equipment.
 - (1) Inspect the equipment for evidence of physical damage.
 - (2) Inspect terminal strips for clean and secure connections.
 - (3) Inspect all wiring and cabling for worn or frayed insulation and broken wires.
 - (4) Inspect all resistors for discoloration due to overheating.
 - (5) Inspect the complete subsystem for the presence of dirt, corrosion,

5-1

moisture, and bits of wire or solder inside the housings.

NOTE

Touchup paint is recommended instead of refinishing whenever practical.

(6) Inspect all metal surfaces intended to be painted for condition of finish and legibility of panel lettering.

WARNING

HIGH VOLTAGE is used in the operation of this equipment DEATH ON CONTACT may result if personnel fail to observe safety precautions Learn the areas containing high voltage in the equipment. Be careful not to contact high voltage connections when installing or operating this equipment Never work on electronic equipment unless there is another person nearby who is familiar with the hazards of the equipment and is competent in administering first aid.

WARNING

Power to the J-SIID system must be shut down before any repairs or replacements can be performed on the Audible Alarm.

WARNING

The Audible Alarm presents a noise hazard to personnel in the area The noise level exceeds the allowable limits for unprotected personnel. Authorized ear protective equipment must be worn by all personnel in the work area Before any troubleshooting procedures are at tempted the Audible Alarm must be disabled.

CAUTION

While performing maintenance or troubleshooting on the Audible Alarm, ensure that test points and terminals are never grounded or shorted to each other or to the chassis This will cause serious damage to the internal components.



When taking measurements with a multimeter, ensure that the meter is set to the proper scale and range before inserting probes into the circuit.

f. To disable the Audible Alarm (AA) for maintenance or troubleshooting, notify proper installation/site authorities security per procedures Enter the Control Unit area and turn the operating mode switch (key operated) to TEST/RESET position If the audible signal device in the CU sounds, ignore it for a moment. Inspect the Control Unit door to ensure that it is flat, straight, and completely closed. Open the door, pull the Tamper Alarm Switch (TAS) plunger all the way out, and ensure that there is no debris between the door and enclosure.

NOTE

There are six Light Emitting Diodes (LED's) on PC board A12 in the upper right corner of the Control Unit Note any of these LED's that are on Any LED that is on indicates a sensor that has been activated and should be investigated before troubleshooting the Audible Alarm.



Turn the operating mode switch to ACCESS.

- (1) If the AA is silent, put on ear protection and open the AA door Pull the TAS plunger all the way out. Remove screws that secure faceplate, and remove faceplate Turn off power switch located in the upper left corner of the AA Tag, disconnect, and insulate speaker wire from TB3-7.
- (2) If the AA continues to sound, tag, disconnect, and insulate green wire (from status processor) from TB4-1 in the Control Unit Install a jumper between TB4-4 and TB4-1 AA should be silenced Put on ear protection and open AA door Pull the TAS plunger all the way out Remove screws that secure the faceplate, and remove the faceplate.

Turn off power switch located in the upper left corner of the AA. Tag, disconnect, and insulate speaker wire from TB3-7 in the Control Unit, remove the AA interconnecting wire from TB4-3 and connect a jumper wire from TB4-4 and TB43 Turn on power switch in AA. The AA speaker is now disabled and maintenance and troubleshooting may be performed.

- (3) When maintenance or troubleshooting has been completed, turn off power switch in AA In the Control Unit, remove jumper wire from TB4-4 and TB4-3 Connect AA interconnecting wire to TB4-3 In the AA, connect speaker wire to TB3-7; turn on power switch Install and secure faceplate Close door on AA On Control Unit, turn operating mode switch to TEST/ RESET and then to SECURE.
- g Inspect varistors for evidence of physical damage or overheating Disconnect one lead from each varistor from TB1. Set multimeter to ohms and connect one lead to each varistor lead Meter should indicate over 100, 000 ohms. Check both varistors.
- h Refer to figure 5-1 for all test points found in troubleshooting table 5-1 Figure 5-2 is a wiring diagram of the Audible Alarm Step-by-step troubleshooting procedures, including Trouble, Probable Cause, and Corrective Action, are listed in table 5-1.

5-3

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O 31S9-2FSS9-1-9



Figure 5-1. Audible Alarm with Troubleshooting Test Points



TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O 31S9-2FSS9-1-9

5-5 5

NOTE

Troubleshooting procedures listed in table 5-1 may require more than one person to perform corrective action.

Covers should be removed as necessary to perform troubleshooting procedures.

Never disconnect a wire without first marking that wire to assure proper reconnection.

Table 5-1 Troubleshooting Procedures

Trouble	Probable cause	Corrective action
1 Constant alarm.	a Poor or broken ground con- nectors	 a Set multimeter to dc volts Connect positive meter lead to TB2-1 and negative meter lead to TB2-2. Meter should indicate more than 1 vdc. (1) If meter does not indicate more than 1 vdc for both tests, turn power switch S3 to POWER OFF. (2) Set multimeter to ohms Connect leads to TB2-1 and TB2-2, and then to TB2-2 and TB2-3 Meter should indicate 100, 000 ohms or more for both tests. (3) If the meter indicates less than 100, 000 ohms, inspect wiring and P1 for shorts, broken or loose connections, or bent pins. b Connect meter leads to the following points: TB2-1 to P1-25; TB2-3 to P1-3; TB2-2 to outer enclosure; TB2-2 to outer enclosure; TB2-2 to P1-23; TB2-2 to D1-23; TB2-2 to D1-23; TB2-2 to TB3-3. Meter should indicate 0 ohms at each point. c If the multimeter reads more than 0 ohms at any of the above points, inspect wiring for broken or loose connections. Repair or replace defective wiring or connectors.
5-6		
Table 5-1. Troubleshooting Procedures - Continued		
---	---	---
Trouble	Probable cause	Corrective action
1. (Cont)	b. Defective electronics assembly or power transformer.	 Turn on switch S3 on power supply. Set multimeter to dc volts. Connect positive meter lead to TB2-1 and negative meter lead TB2-2. Meter should in- dicate less than 1 vdc.
		 If meter indicates 1 vdc or more replace the elec- tronics assembly.
		CAUTION
		Inner enclosure is heavy. Use caution when removing from outer enclosure.
		 (1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Remove screws, lock washers, and washers and disconnect connector J1 from P1. Remove mounting screws from rear of inner enclosure and remove electronics assembly. (2) To install new electronics assembly, position assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure into outer enclosure. Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to conduits. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
		c. Set multimeter to dc volts. Connect positive meter lead to TB2-3 and negative meter lead to TB2-2. Meter should indicate 5 i0.5 vdc.
		d. If meter indicates less than 1 vdc, connect positive meter lead to P1-13 and negative meter lead to TB2-2.
		5-7

Trouble	Probable cause	Corrective action
1. (Cont)	b. (Cont)	e. If meter indicates 5 +0.5 vdc, inspect wiring from TB2 to P1 for broken or loose connections. Repair or replace defective wiring.
		f. If meter indicates less than 1 vdc, connect positive meter lead to P1-24 and negative meter lead to TB2-2.
		g. If meter indicates less than 1 vdc, replace the electronics assembly.
		CAUTION
		Inner enclosure is heavy. Use caution when removing from outer enclosure.
		(1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Remove screws, lock washers, and washers and disconnect connector J1 from P1. Remove mounting screws from rear of inner enclosure and remove electronics assembly.
		(2) To install new electronics assembly, position assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure into outer enclosure. Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to conduits. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
		 h. Turn off switch S3 on power supply. Set the multi-meter to ohms. Tag, remove, and isolate terminals of C15 and C16. Set multimeter to ohms and connect
		5-8

Trouble	Probable cause	Corrective action
1. (Cont)	b. (Cont)	leads to inner enclosure and negative terminal of C15. Note indication. Connect meter leads to inner enclosure and negative terminal of C16. Meter should indicate less than 100,000 ohms in both tests. Meter may not give correct indication immediately.
		i. If either indication is greater than 100,000 ohms, replace electronics assembly.
		CAUTION
		Inner enclosure is heavy. Use caution when removing from outer enclosure.
		(1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Remove screws, lock washers, and washers and disconnect connector J1 from P1. Remove mounting screws from rear of inner enclosure and remove electronics assembly.
		(2) To install new electronics assembly, position assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure into outer enclosure. Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to conduits. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
		 Reconnect leads to negative terminals of C15 and C16. Turn on switch S3 on power supply. Set multimeter to ac volts. Connect positive lead to P1-I and negative lead to P1- 2.
		5-9

Table 5-1. Troubleshooting Procedures - Continued

Trouble	Probable cause	Corrective action
Trouble 1. (Cont)	Probable cause b. (Cont)	 Corrective action k. If meter indicates 68 +7 vac, turn off power switch S3. Disconnect Pi/J1 and connect meter leads to P1-1 and P1-2. Turn on switch S3. 1. If voltage is not within tolerance (68 +7 vdc), replace power transformer. (1) To remove transformer, note length and connection points of transformer wires. Disconnect wires. Remove mounting screws and washers. Remove transformer. (2) To install new transformer, cut transformer wires to proper length and install crimp lugs. Position transformer on inner enclosure and install mounting screws and washers. m. If voltage is within tolerance, replace electronics assembly.
		 Inner enclosure is heavy. Use caution when removing outer enclosure. (1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Remove screws, lock washers, and washers and disconnect connector J1 from P1. Remove mounting screws from rear of inner enclosure and remove electronics assembly.
		(2) To install new electronics assembly, position assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washer, and washers. Slide inner enclosure into outer enclosure.
		5-10

_		
l rouble	Probable cause	Corrective action
1. (Cont)	b. (Cont)	Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to conduits. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
	c. Defective power switch, S3.	 Ensure that power switch S1 in Control Unit is turned off. Slide inner enclosure part way out. Remove screws that secure switch bracket. Lower switch bracket to gain access to switch terminals. Ensure that power switch S3 is on. Set multi-meter to ohms. Connect meter leads to S3-1 and 2 (red wires). Note meter indication. Connect meter leads to S3-3 and 4 (black wires). Note meter indication.
		b. If meter indicates over 100,000 ohms, replace switch S3.
		(1) To remove switch S3, unscrew and remove knurled nut from front of switch bracket. Push switch through hole in bracket. Tag wires and use a soldering iron of 50 watts maximum to remove wires from switch terminals.
		(2) To install new switch S3, use a soldering iron of 50 watts maximum to connect wires to switch terminals. Insert switch through hole in switch bracket. Place knurled nut over switch and tighten to secure switch. Place switch bracket in position inside upper left corner or inner enclosure. Insert screws through enclosure and tighten to secure switch bracket. Slide inner enclosure all the way into outer enclosure.
	d. Defective power trans- former T1	 Ensure that power switch S1 in Control Unit is turned off. Disconnect negative lead from battery. Slide inner enclosure part way out. Remove screws that secure switch bracket. Lower switch bracket to gain access to terminals on
		5-11

Table 5-1. Troubleshooting Procedures - Continued

Trouble	Probable cause	Corrective action
Trouble 1. (Cont)	Probable cause d. (Cont)	 Corrective action switch S3. Ensure that switch S3 is on. Set multimeter to ohms. Connect meter leads to S3-1 and 2 (red wires). Note meter indication. Connect meter leads to S3-3 and 4 (black wires). Note meter indication. b. If meter indicates 0 ohms, inspect wiring for broken or loose connections at the following points: fuse F1 to S3-4; S3-3 to T1; T1 to TB3-1 and 2; TB3-1 and 2 to P1-1 and 2; battery red lead to S3-2; S3-1 to PI-19. c. If wiring connections are good, replace power transformer. (1) To remove transformer, note length and connection points of transformer wires. Disconnect wires. Remove mounting screws and washers. Remove transformer. (2) To install new transformer, cut transformer wires to proper length and install crimp lugs. Position transformer on inner enclosure and install mounting screws and washers. Connect P1/J1 and connect meter leads to P1-i and P1-2. Turn on switch S3. If voltage is not within tolerance, 68 +7 vac), replace power transformer.
		 Inner enclosure is heavy. Use caution when removing from outer enclosure. (1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner 5-12

Table 5-1. Troubleshooting Procedures - Continued

Trouble	Probable cause	Corrective action
1. (Cont)	d. (Cont)	enclosure out of the outer enclosure. Place inner enclosure on bench. Remove screws, lock washers, and washers and disconnect connector J1 from P1. Remove mounting screws from rear of inner enclosure and remove electronics assembly.
		(2) To install new electronics assembly, position assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure into outer enclosure. Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to conduits. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
	e. Defective tamper switch.	 Set multimeter to dc volts. Connect positive meter lead to P1-24 and negative meter lead to TB2-2.
		 b. If meter indicates 6 +0.5 vdc, connect positive meter lead to P1-12 and negative meter lead to TB2-2.
		 c. If meter indicates less than 1 vdc, turn power switch S3 to POWER OFF. Remove P2 from J2.
		d. Set the multimeter to ohms. Connect leads to tamper switch terminals that have wires connected.
		 Depress the switch plunger. Meter should indicate 0 ohms.
		(2) Release the switch plunger. Meter should indicate more than 100,000 ohms.
		e. If meter indications are not correct, replace tamper switch.
		5-13

Table 5-1. Troubleshooting Procedures - Continued

Τ

Troublo	Drobable cause	Corrective action
TTOUDIE	FIODADIe Cause	
1. (Cont)	e. (Cont)	(1) To remove door tamper switch, remove tamper switch support mounting screws. Push switch through outer enclosure. Tag wires. Use a soldering iron of 50 watts maximum to unsolder wires. Unscrew switch from switch support and remove.
		(2) To install new door tamper switch, screw switch into switch support. Solder wires. Position switch and support on outer enclosure. Install tamper switch support mounting screws.
		(3) To remove pry-off tamper switch, remove mounting screws from tamper switch bracket. Remove snap on button cap. Remove hex nut and push switch through switch bracket. Tag wires. Use a soldering iron of 50 watts maximum to unsolder wires. Remove pry-off tamper switch.
		(4) To install new pry-off tamper switch, solder wires and position switch in switch bracket. Install hex nut and snap on button cap. Position switch and switch bracket on inner enclosure mounting bracket and install mounting screws.
	f. Defective capacitor.	 Set multimeter to dc volts. Connect positive meter lead to P1-12 and negative meter lead to TB2-2.
		b. If the meter indicates 6 +0.5 vdc, turn power switch S3 to POWER OFF.
		c. Turn off power switch S3. Set multimeter to ohms. Connect leads to inner enclosure and outer enclosure. Ensure that good contact is made, as paint will act as an insulator. Reverse the multi-meter leads and note indications in both directions.
		 If the highest multimeter indication is less than 9,500 ohms, remove P2 from J2 while checking enclosures with the multimeter.
		5-14

Table 5-1. Troubleshooting Procedures - Continued

Trouble	Probable cause	Corrective action
1. (Cont)	f. (Cont)	 e. If the highest multimeter indication is greater than 13,000 ohms, tag, remove, and isolate the yellow wires (-) from C15 and C16.
		 Connect leads to inner enclosure and negative ter- minal of C15, then to inner enclosure and negative terminal of C16.
		g. If either capacitor check is less than 100,000 ohms, replace the capacitor.
		 To remove capacitor, tag and remove wires. Loosen screw on mounting bracket and remove capacitor.
		(2) To install new capacitor, position capacitor in mounting bracket and tighten mounting screws. Connect wires to capacitor ter- minals.
		 If after removing P2 meter indicates less than 13,000 ohms, inspect enclosures for foreign matter, conduit contacting both enclosures, frayed wires, leaking battery or any other ma- terial that will allow continuity between enclosures.
		i. Set multimeter to ac volts. Connect leads to P1-I and P1-2. Meter should indicate 68 +7 vac.
		 If meter does not indicate 68 +7 vac, turn power switch S3 to POWER OFF.
		 (2) Tag, remove, and isolate white wire (+) from C15. Turn power switch S3 to POWER ON. Connect multimeter leads to P1-1 and P1-2. If meter does not indicate 68 +7 vac, turn power switch S3 to POWER OFF and install C15 white wire (+). If meter indicates 68 +7 vac, replace C15.
		 (a) To remove capacitor, tag and remove wires. Loosen screw on mounting bracket and remove capacitor.
		5-15

Trouble	Probable cause	Corrective action
1. (Cont)	f. (Cont)	 (b) To install new capacitor, position capacitor in mounting bracket and tighten mounting screw. Connect wires to capacitor terminals. j. Tag, remove, and isolate white wire (+) from C16. Turn power switch S3 to POWER ON. Connect multimeter leads to P1-i and P1-2. If meter does not indicate 68 +7 vac, turn power switch S3 to POWER OFF and install C16 white wire (+). If meter indicates 68 +7 vac, replace C16. (1) To remove capacitor, tag and remove wires. Loosen screws on mounting bracket and capacitor. (2) To install new capacitor, position capacitor in mounting bracket and tighten mounting screw. Connect wires to capacitor terminals.
	g. Defective battery.	 a. Set multimeter to dc volts. Connect positive meter lead to red battery terminal and negative meter lead to black battery terminal. Ensure that power switch S3 is set to POWER ON. Meter should indicate 26 vdc or more. b. If meter indicates less than 26 vdc, disconnect red lead from battery. Ensure that red lead is not shorted to chassis. Connect positive meter lead to red wire and negative meter to lead to black battery terminal. Meter should indicate 27 + 1 vdc. c. If meter indicates 27 +1 vdc, replace battery. (1) To remove battery, disconnect battery wires from battery. Remove screw and washer from battery. (2) To install new battery, position battery and battery clamp bracket. Install screw and washer. Connect battery wires to battery.

Trouble	Probable cause	Corrective action
. (Cont)	h. Defective fuse.	a. Set multimeter to ohms.
		b. Remove fuse from fuse holder. Connect meter leads to each end of fuse.
		c. If meter indicates more than 100,000 ohms, replace fuse.
. Nuisance alarms.	a. Audible Alarm unit mounting.	Ensure that the Audible Alarm unit is mounted rigidly to a flat surface, that the door is flat, and there is no play when the door is locked.
	b. Defective tamper switch.	 Set the multimeter to ohms. Connect meter leads to tamper switch terminals that have wires con- nected.
		(1) Depress the switch plunger. Meter should read0 ohms.
		(2) Release the switch plunger. Meter should read more than 100,000 ohms.
		b. If meter indications are not correct, replace tamper switch.
		(1) To remove door tamper switch, remove tam- per switch support mounting screws. Push switch through outer enclosure. Tag wires and use a soldering iron of 50 watts maxi- mun to unsolder wires. Unscrew switch from switch support and remove switch.
		(2) To install new door tamper switch, screw switch into switch support. Use a solder- ing iron of 50 watts maximum to solder wires. Position switch enclosure support bracket and install tamper switch support mounting screws.
		 (3) To remove pry-off tamper switch, remove mounting screws from tamper switch brack- et. Remove snap on button cap. Remove hex nut and push switch through switch
		5-17

Trouble	Probable cause	Corrective action
2. (Cont)	b. (Cont)	 bracket. Tag wires and use a soldering iron of 50 watts maximum to unsolder wires. Remove pry-off tamper switch. (4) To install new pry-off tamper switch, solder wires and position switch in switch bracket. Install hex nut and snap on button cap. Position switch and switch bracket on inner enclosure mounting bracket and install mounting screws.
	c. Intermittent continuity between inner and outer enclosures.	 a. Set multimeter to dc volts. Connect positive meter lead to TB2-3 and negative meter lead to TB2-2. b. If meter indication changes during periods of nuisance alarms to below 1 vdc, place positive meter lead on outer enclosure and negative meter lead on outer enclosure. Ensure good contact is made at the outer enclosure. c. If meter indication drops below 0.9 vdc, turn power switch S3 to POWER OFF. Remove P2 from J2. d. Set multimeter to ohms. Connect meter leads to inner and outer enclosure. e. If meter indicates less than 13,000 ohms, inspect enclosures for foreign matter, conduit contacting both enclosures, frayed wires, leaky battery, or any other material that will allow continuity between enclosures.
	d. Defective capacitor.	 a. Set multimeter to ohms. Connect meter leads to inner and outer enclosure. b. If meter indicates more than 13,000 ohms, tag, remove, and isolate the yellow wires (-) from C15 and C16. c. Connect leads to inner enclosure and negative terminal of C15, then to inner enclosure and negative terminal of C15, then to inner enclosure and negative terminal of C16. 5-18

Table 5-1. Troubleshooting Procedures - Continued

<u>_</u>		
l rouble	Probable cause	Corrective action
2. (Cont)	d. (Cont)	 d. If either capacitor check is less than 100,000 ohms, replace the capacitor. (1) To remove capacitor, tag and remove wires. Loosen screw on mounting bracket and remove capacitor. (2) To install new capacitor, position in mount-
		ing bracket and tighten mounting screw. Connect wires to capacitor terminals.
	e. Defective electronics assembly.	 a. Tag, remove, and isolate the yellow wires (-) from C15 and C16. b. Set the multimeter to ohms. Connect leads to inner enclosure and negative terminal of C15, then to inner enclosure and negative terminal of C16. If the multimeter indications at C15 and C16 are
		greater than 100,000 ohms, replace the electronics assembly.
		CAUTION
		Inner enclosure is heavy. Use caution when removing from outer enclosure.
		(1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 de- grees and disconnect P2 from J2. Tag and dis- connect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Remove screws, lock washers, and washers. Disconnect connector J1 from P1. Remove electronic assembly mounting screws from rear of inner enclosure. Remove elec- tronics assembly.
		(2) To install new electronics assembly, position assembly on inner enclosure. Install mount- ing screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure
		5-19

Trouble	Probable cause	Corrective action
2. (Cont)	e. (Cont)	into outer enclosure. Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to con- duits. Align notch on P2 with J2 and con- nect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
	f. Poor ground connections.	Set multimeter to ohms. Connect meter leads to each of the following points:
		TB2-2 to outer enclosure;
		TB2-2 to TB3-3;
		TB2-2 to P1-3, 4, 16, 17;
		TB2-2 to battery negative lead.
		If the multimeter indicates more than 0 ohms at any of the above points, inspect wiring for broken or loose connections, inspect plugs for bent or broken pins, and inspect conduit for poor connections.
3. No alarms.	a. Shorted or bro- ken wires, loose con- nections, or bent pips	 Set multimeter to dc volts. Connect positive meter lead to TB1-2 and negative meter lead to TB2-2. Ensure that an alarm condition is being presented by the Control Unit.
		 b. If meter indicates 5 +0.5 vdc, turn power switch S3 to POWER OFF. Inspect wiring and Pi/J1 for shorts, frayed wires, bent pins, or foreign material. P1-12, 13, and 24 carries 5 vdc, which is shorted to P1-25 will not allow an alarm to be received by the Audible Alarm.
		 Set multimeter to ac volts. Connect leads to P1-9 and P1-23. If meter indicates 12 +2 vac, inspect wiring from P1 to TB3 and T2 for broken wires, loose connections, or bent pins.
		 Connect meter leads to TB3-6 and TB3-7. If meter indicates 18 ±2 vac, inspect wiring from T2 to TB3 and speaker DS1.
		5-20

Table 5-1. Troubleshooting Procedures - Continued

	Table 5-1. Trouble	eshooting Procedures - Continued
Trouble	Probable cause	Corrective action
Trouble 3. (Cont)	Probable cause b. Defective electronics assembly.	 Corrective action a. Set multimeter to dc volts. Connect positive meter lead to TB2-3 and negative meter lead to TB2-2. b. If meter indicates 5 +0.5 vdc, replace the electronics assembly. CAUTION Inner enclosure is heavy. Use caution when removing from outer enclosure. (1) To remove electronics assembly, loosen collar on connect P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure on bench. Remove screws, lock washers, and washers and disconnect connect or J1 from P1. Remove electronics assembly. (2) To install new electronics assembly, position assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure into outer enclosure. Route wires through
		into outer enclosure. Route wires through hole in rear of inner enclosure. Connect wires that run from terminal boards to con- duits. Align notch on P2 to J2. Lock metal tabs together and tighten collar on con- nector P2.
		c. Set multimeter to ac volts. Connect leads to P1-9 and P1-23.
		d. If meter indicates less than 1 vac, replace electro- nics assembly.
		5-21

Trouble	Probable cause	Corrective action
3. (Cont)	c. Defective audio output transformer T2.	 a. Set multimeter to ac volts. Connect leads to TB3-6 and TB3-7. b. If meter indicates less than 1 vac, replace audio output transformer.
		 (1) To remove audio output transformer, note length and location of transformer wires. Disconnect wires. Remove mounting screws and lock washers and remove transformers.
		(2) To install new transformer, cut transformer wires to proper length and install crimp terminals. Position transformer on inner enclosure and install mounting screws and lock washers. Connect wires to terminal board.
	d. Defective speaker.	 Set multimeter to ac volts. Connect leads to TB3-6 and TB3-7.
		b. If meter indicates 18 +2 vac replace speaker.
		(1) To remove speaker loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Note length and location of speaker wires. Disconnect wires from terminal board. Remove mounting screws from rear of enclosure and remove speaker.
		(2) To install new speaker, cut speaker wires to proper length and install crimp lugs. Posi- tion speaker on inner enclosure. Install mounting screws through rear of inner enclosure. Connect wires to terminal board.
	e. Defective tamper switch.	 Set the multimeter to ohms. Connect meter leads to tamper switch terminals that have wires con- nected. Depress the switch plunger. Meter
		5-22

Trouble	Probable cause	Corrective action
3. (Cont)	e. (Cont)	should indicate 0 ohms. Release the switch plunger. Meter should indicate more than 100,000 ohms.
		per switch.
		(1) To remove door tamper switch, remove tamper switch support mounting screws. Push switch through outer enclosure. Tag wires. Use a soldering iron of 50 watts maximum to unsolder wires. Unscrew switch from switch support and remove switch.
		(2) To install new door tamper switch, screw switch into switch support. Solder wires. Position switch and support on outer enclosure. Install tamper switch support mounting screws.
		(3) To remove pry-off tamper switch, remove mounting screws from tamper switch brack- et. Remove hex nut and push switch through switch bracket. Tag wires. Use a soldering iron of 50 watts maximum to un- solder wires. Remove pry-off tamper switch.
		 (4) To install new pry-off tamper switch, solder wires and position switch in switch bracket. Install hex nut and snap on button cap. Position switch and switch bracket on inner enclosure and install mounting screws.
	f. Poor or unbro- ken ground connections.	 Set multimeter to ohms. Connect meter leads to each of the following points:
		TB2-2 to outer enclosure;
		TB2-2 to TB3-3;
		TB2-2 to P1-3, 4, 16, 17;
		TB2-2 to P1-23;
		TB2-2 to battery negative lead.
		5-23

Trouble	Probable cause	Corrective action
3. (Cont)	f. (Cont)	b. If the multimeter indicates more than 0 ohms at any of the above points, inspect wiring for broken or loose connections, inspect plugs for bent or broken pins, and inspect conduit for poor connections.
	g. Defective power trans- former T1.	 a. Ensure that power switch S1 in Control Unit is turned off. Slide inner enclosure part way out. Remove screws that secure switch bracket. Lower switch bracket to gain access to terminal on switch S3. Ensure that switch S3 is on. Set multimeter to ohms. Connect meter leads to S3-1 and 2 (red wires). Note meter indication. Connect meter leads to S3-3 and 4 (black wires). Note meter indication.
		 b. If meter indicates 0 ohms, inspect wiring for broken or loose connections at the following points: fuse F1 to S3-4; S3-3 to T1; T1 to TB3-1 and 2; TB3-1 and 2 to P1-I and 2; battery red lead to S3-2; S3-1 to P1-19.
		 c. If wiring connections are good, replace power trans- former.
		 To remove transformer, note length and con- nection points of transformer wires. Discon- nect wires. Remove transformer.
		(2) To install new transformer, cut transformer wires to proper length and install crimp lugs. Position transformer on inner enclosure and install mounting screws and washers. Con- nect transformer wires.
	h. Defective battery.	a. Interrupt ac power from Control Unit. Set multi- meter to dc volts. Connect positive meter lead to red battery terminal and negative meter lead to black battery terminal. Ensure that power switch S3 is set to POWER ON. Meter should in- dicate 26 vdc or more.
		5-24
	Î.	

Table 5-1. Troubleshooting Procedures - Continued

	Table 5-1. Troubles	shooting Procedures - Continued
Trouble	Probable cause	Corrective action
3. (Cont)	h. (Cont)	 b. If meter indicates less than 21 vdc, replace battery. (1) To remove battery, disconnect battery wires from battery. Remove screw and washer from battery clamp bracket and remove battery. (2) To install new battery, position battery and battery clamp bracket. Install screw and washer. Connect battery wires to battery.
4. Low Audible Alarm sound level.	a. Defective battery.	 a. Interrupt ac power from Control Unit. Set multimeter to dc volts. Connect positive meter lead to red battery terminal and negative meter lead to black battery terminal. Ensure that power switch S3 is set to POWER ON. Meter should indicate 21 vdc or more. b. If meter indicates less than 21 vdc, replace battery. (1) To remove battery, disconnect battery wires from battery. Remove screw and washer from battery clamp bracket and remove battery. (2) To install new battery, position battery and battery clamp bracket. Install screw and washer. Connect battery wires to battery.
	b. Defective power trans- former T1.	 a. Set multimeter to ac volts. Connect leads to TB3-1(+) and TB3-2(-). b. If meter indicates less than 60 vac, replace defective power transformer. (1) To remove transformer, note length and connection location of transformer wires. Disconnect wires. Remove mounting screws and washers. Connect transformer wires. (2) To install new transformer, cut transformer wires to proper length and install crimp terminals. Position transformer on inner enclosure and install mounting screws and washers. Connect transformer wires.
		j-2j

Trouble	Probable cause	Corrective action
4. (Cont)	c. Defective electronics assembly.	 a. Set multimeter to ac volts. Connect leads to P1-9 (+) and P1-23 (-). b. If meter indicates less than 10 vac, replace the electronics assembly.
		CAUTION
		Inner enclosure is heavy. Use caution when removing from outer enclosure.
		(1) To remove electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner en- closure on bench. Remove screws, lock washers, and washers and disconnect con- nector J1 from P1. Remove electronics assembly mounting screws from rear of of inner enclosure. Remove electronics assembly.
		(2) To install new electronics assembly, position electronics assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers, and washers. Slide inner enclosure into outer enclosure. Route wires through closure. Connect wires that run from terminal boards to conduits. Align notch on P2 to J2. Connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.
	d. Broken wires, loose con- nections, or bent pins.	 a. Set multimeter to ac volts. Connect leads to P1-9 (+) and P1-23(-). b. If meter indicates 12 +2 vac, inspect wiring from P1 to TB3 and T2 for broken wires, loose con-
		 nections, or bent pins. c. Connect leads to TB3-6 and TB3-7. If meter indicates 18 +2 vac, inspect wiring from T2 to TB3 and the speaker.
		5-26

Trouble	Probable cause	Corrective action
4. (Cont)	e. Defective audio out- put trans- former T2.	 a. Set multimeter to ac volts. Connect leads to TB3-6 and TB3-7. If meter indicates less than 16 vac, replace audio output transformer. (1) To remove transformer, note length and location of transformer wires. Disconnect wires. Remove mounting screws and lock washers and remove transformer. (2) To install new transformer, cut transformer wires to proper length and install crimp terminals. Position transformer on inner enclosure and install mounting screws and lock washers.
	f. Defective speaker.	 Set multimeter to ac volts. Connect leads to TB3-6 and TB3-7. If meter indicates 18 +2 vac, replace speaker.
		 To remove speaker, loosen collar on connector P2. Turn metal tab 90 degrees and discon- nect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide the inner enclosure out of the outer enclosure. Place inner enclosure on bench. Note length and location of speaker wires. Disconnect wires from terminal board. Re- move mounting screws from rear of enclo- sure and remove speaker. To install new speaker, cut speaker wires to proper length and install crimp lugs. Posi- tion speaker on inner enclosure. Install mounting screws through rear of inner en- closure. Connect wires to terminal board.
		5-27

Table 5-1. Troubleshooting Procedures - Continued

Section III. GENERAL MAINTENANCE.

5-4. MAINTENANCE ACTION. The extent of direct and general support maintenance is governed by the Maintenance Allocation Chart (MAC), Appendix B. The MAC authorizes onsite test and replacement of the electronics assembly, fuse holder assembly, speaker, audible output transformer, power switch, tamper switches, power transformer, battery, capacitors, and connectors. The MAC also

authorizes inspection and replacement of the fuse holder assembly, battery, and connectors. Periodic testing of the Audible Alarm is not scheduled because the J-SIIDS is maintained in continuous operation. Cleaning the exterior of equipment cabinets is required periodically to maintain equipment free of debris. Maintain louvers in cabinet door and holes in face plate in an open and free condition.

Section IV. REMOVAL AND REPLACEMENT OF MAJOR COMPONENTS AND ASSEMBLIES

WARNING

Before removing any components turn off power switch S1. After replacement of components, turn on power switch S1.

5-5. REMOVAL AND INSTALLATION PROCEDURES.

- a. To remove the electronics assembly, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide inner enclosure out of outer enclosure. Place inner enclosure on bench. Remove screws, lock washers and washers, and disconnect connector J2 from P1. Remove electronics assembly mounting screws from rear of inner enclosure.
- b. To install, position new electronics assembly on inner enclosure. Install mounting screws through rear of inner enclosure. Connect J1 to P1 and install screws, lock washers and washers. Slide inner enclosure into outer enclosure. Route wires through hole in rear of inner enclosure. Connect

wires running from terminal boards to conduits. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.

- c. To remove speaker, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Tag and disconnect wires that run from terminal boards to conduit. Slide inner enclosure out of outer enclosure. Place inner enclosure on bench. Note length and location of speaker wires. Disconnect wires from terminal board. Remove mounting screws from rear of enclosure and remove speaker.
- d. To install new speaker, cut speaker wires to same length as wires on old speaker. Trim insulation from 1/8 inch (3.175 mm) of end of wires and install crimp lugs. Insert mounting screws from rear of enclosure and tighten to secure. Connect wires to terminal boards.
- e. To remove audio output transformer, note length and location of transformer wires. Disconnect wires. Remove mounting screws and lock washers, and remove transformer.

- f. To install new transformer, cut transformer wires to proper length and terminals. install crimp Position transformer on inner enclosure and mounting screws and lock install Connect wires to terminal washers. board.
- g. To remove capacitor, tag and remove wires. Loosen screw on mounting bracket and remove capacitor.
- h. To install, position new capacitor in mounting bracket and tighten mounting screw. Connect wires to capacitor terminals.
- To remove door tamper switch, remove tamper switch support mounting screws.
 Push switch through outer enclosure.
 Tag wires and use a soldering iron of 50 watts maximum to unsolder wires.
 Unscrew switch from switch support and remove switch.
- j. To install new door tamper switch, screw switch into switch support. Solder wires to switch terminals. Position switch and support on outer enclosure. Install tamper switch support mounting screws.
- k. To remove pry-off tamper switch, remove mounting screws from tamper switch bracket. Remove snap on button cap. Remove hex nut and push switch through switch bracket. Tag wires and use a soldering iron of 50 watts maximum to unsolder wires. Remove tamper switch.
- To install new pry-off tamper switch, solder wires to switch terminals and position in switch bracket. Install hex nut and snap on button cap. Position switch and switch bracket on inner enclosure mounting bracket and install mounting screws.

- m. To remove power transformer, note length and connector location of transformer wires. Disconnect wires. Remove mounting screws and washers and remove transformer.
- n. To install new transformer, cut transformer wires to proper length and install crimp terminals. Position transformer on inner enclosure and install mounting screws and washers. Connect transformer wires.
- o. To remove power switch, slide inner enclosure part way out of outer enclosure. Remove screws from switch bracket. Lower switch bracket to gain access to power switch. Tag wires and use a soldering iron of 50 watts maximum to unsolder wires. Remove knurled nut and remove power switch.
- p. To install, position new power switch bracket and install knurled nut. Solder switch wires to switch terminals. Position switch bracket on inner enclosure and install mounting screws. Slide inner enclosure into outer enclosure.
- q. To remove battery, disconnect battery wires from battery. Remove screw and washer from battery clamp bracket and remove battery.
- r. To install, position new battery and battery clamp bracket. Install screw and washer. Connect battery wires to battery.
- s. To remove connector P2/J2, loosen collar on connector P2. Turn metal tab 90 degrees and disconnect P2 from J2. Unscrew collar and tag wires. Use a soldering iron of 50 watts maximum to unsolder wires on P2 and J2. Remove hex nut and remove connector.

t. To install new connector P2/J2, position J2 on inner enclosure mounting bracket and install hex nut. Position collar and metal tab on wire. Solder wires on P2/ J2. Align notch on P2 with J2 and connect P2 to J2. Lock metal tabs together and tighten collar on connector P2.

5-29

- u. To remove connector P1, loosen screws and disconnect P1 from J2. Tag wires. Use a soldering iron of 50 watts maximum to unsolder wires. Remove connector P1.
- v. To install new connector P1, solder wires to connector. Connect to J1 and tighten screws.
- w. To remove fuse holder assembly, slide inner enclosure part way out of outer enclosure. Remove screws from switch bracket. Lower switch bracket to gain access to fuse holder assembly. Tag wires and use a soldering iron of 50 watts maximum to unsolder wires. Remove hex nut and remove fuse holder assembly.
- x. To install new fuse holder assembly, position assembly in switch bracket and install hex nut. Solder wires. Position switch bracket on inner enclosure and install mounting screws. Slide inner enclosure into outer enclosure.
- y. To remove varistor, remove screws from barrier strip cover and remove barrier strip cover. Note varistor wire connection on TB1. Loosen terminal screws and remove varistor.
- To install new varistor, install insulation tubing on varistor wires. Connect wires to TB1 and tighten terminal screws. Position barrier strip cover and install mounting screws.

WARNING

Operation of this equipment presents a noise hazard to personnel in the area. The noise level exceeds the allowable limits for <u>unprotected</u> personnel. Authorized protective equipment must be worn by all personnel in the work area.

aa. After replacing major components or assemblies, test the Audible Alarm for proper operation. Set Control Unit POWER switch to ON. Set Control Unit mode switch to SECURE. Initiate an intrusion alarm. The alarm should sound after expiration of time-delay period. Set Control Unit mode switch to TEST/ RESET and then to ACCESS. The alarm should stop. Using the key, unlock and slowly open Audible Alarm outer enclosure door. The Audible Alarm should sound when door is opened 1/8 to 1/4 inch. Place the door tamper switch in the maintenance Set the Control Unit mode position. switch to TEST/RESET and then to The alarm should stop. ACCESS. Short the outer enclosure to the inner enclosure. The Audible Alarm should sound. Remove the short. Set the Control Unit mode switch to TEST/ RESET and then to ACCESS. The alarm should stop. Using the key, close and lock the Audible Alarm outer The Audible Alarm enclosure door. Set the Control Unit should sound. mode switch to TEST/RESET and then to ACCESS. The alarm should stop.

CHAPTER 6

REPAIR OF AUDIBLE ALARM

This chapter is not applicable to this equipment.

6-1

APPENDIX A

REFERENCES

1. DEMOLITION TM 750-244-3

- 2. FIRE PROTECTION TB5-4200-200-10
- 3. MAINTENANCE DA PAM 738-750.
- 4. TRI-SERVICE MANUALS

DMWR 5-6350-264 NAVELEX EE181-AA-MMD-010/E121 J-SIIDS MWR AIR FORCE T.O. 31S9-4-1-213

TM 5-6350-264-14-1 NAVELEX EE181-AA-INM-020/E121 J-SIIDS INS AIR FORCE T.O. 31S9-4-1-201

TM 5-6350-264-14&P-2 NAVELEX EE181-AA-OMI-030/E121 RT1161 M9443 AIR FORCE T.O. 31S9-2FSS9-1-2

TM 5-6350-264-14&P-3 NAVELEX EE181-AA-OMI-040/E121 R1860 M9443 AIR FORCE T.O. 31S9-2FSS9-1-3

TM 5-6350-264-14&P-4 NAVELEX EE181-AA-OMI-050/E121 DT546 M9442 AIR FORCE T.O. 31S9-2FSS9-1-4

TM 5-6350-264-14&P-5 NAVELEX EE181-AA-OMI-060/E121 SA-1955 AIR FORCE T.O. 31S9-2FSS9-1-5

TM 5-6350-264-14&P-6 NAVELEX EE181-AA-OMI-070/E121 DT-545 AIR FORCE T.O. 31S9-2FSS9-1-6

TM 5-6350-264-14&P-7 NAVELEX EE181-AA-OMI-080/E121 DT-548 AIR FORCE T.O. 31S9-2FSS9-1-7 Procedures for Destruction of Equipment to Prevent Enemy Use

Hand Portable Fire Extinguishers Approved for Army Users

The Army Maintenance Management System

Depot Maintenance Work Requirement

Installation, Operation and Checkout Procedures

Transceiver, Ultrasonic Signal and Processor, Ultrasonic Motion Signal

Receiver Passive Signal, Ultrasonic and Processor, Passive Signal, Ultrasonic

Detector, Vibration Signal and Processor, Vibration Signal

Switch, Balanced Magnetic

Sensor, Grid Wire

Sensor, Capacity Proximity

TM 5-6350-264-14&P-8 NAVELEX EE181-AA-OMI-090/E121 SA-1954 AIR FORCE T.O. 31S9-2FSS9-1-8	Switch, Alarm Latching
TM 5-6350-264-14&P-9 NAVELEX EE181-AA-OMI-100/E121 DZ-204 AIR FORCE T.O. 31S9-2FSS9-1-9	Alarm, Audible
TM 5-6350-264-14&P-10 NAVELEX EE181-AA-OMI-110/E121 C-9412 AIR FORCE T.O. 31S9-2FSS9-1-10	Control Unit, Alarm Set
TM 5-6350-264-14&P-11 NAVELEX EE181-AA-OMI-120/E121 C-7359-60-1 AIR FORCE T.O. 31S9-2FSS9-1-11	Cabinet, Monitor, Type A, Type B, Type C and Monitor Module, Status, Monitor Module, Alarm
TM 5-6350-264-14&P-12 NAVELEX EE181-AA-OMI-130/E121 R1861-T1257 AIR FORCE T.O. 31S9-2FSS9-1-12	Receiver, Data and Transmitter, Data
TM 5-6350-264-14&P-13 NAVELEX EE181-AA-OMI-140/E121 DT-547 AIR FORCE T.O. 31S9-2FSS9-1-13	Sensor, Magnetic Weapons (DT-547)
TB 5-6350-264 NAVELEX EE181-AB-OMI-010/E121 J-SIIDS AIR FORCE T.O. 3159-4-1-111	Selection and Application of Joint Services Interior Intrusion Detection System

Change 1 A-2

5. PAINTING SB 11-573

TM 43-0139

- 6. RADIOACTIVE MATERIAL TB 43-0141
- 7. SHIPMENT AND STORAGE TM 740-90-1

Painting and Preservation Supplies Available for Field Use for Electronic Equipment

Painting Instructions for Field Use

Instructions for Safe Handling, Maintenance, Storage, and Disposal of Radioactive Commodities

Administrative Storage of Equipment

A-3/(A-4 blank)

APPENDIX B

MAINTENANCE ALLOCATION CHART

Section 1. INTRODUCTION

B-1 The Army Maintenance System MAC

This introduction provides a general explanation of all maintenance and repair functions authorized at the two maintenance levels under the Two-Level Maintenance System concept.

This MAC (immediately following the introduction) designates overall authority and responsibility for the performance of maintenance functions on the identified end item or component. The application of the maintenance functions to the end item or component shall be consistent with the capacities and capabilities of the designated maintenance levels, which are shown on the MAC in column (4) as:

Field – includes three subcolumns, Crew maintenance
 (C), Service maintenance(O), and Field maintenance (F).
 Sustainment – includes two subcolumns, Below Depot (H) and Depot(D).

The tools and test equipment requirements (immediately following the MAC) list the tools and test equipment (both special tools and common tool sets) required for each maintenance function as referenced from the MAC.

The remarks (immediately following the tools and test equipment requirements) contain supplemental instructions and explanatory notes for a particular maintenance function.

B-2 Maintenance Functions

Maintenance functions are limited to and defined as follows:

- 1. **Inspect**. To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination (e.g., by sight, sound, or feel). This includes scheduled inspection and gagings and evaluation of cannon tubes.
- 2. **Test**. To verify serviceability by measuring the mechanical, pneumatic, hydraulic, or electrical characteristics of an item and comparing those characteristics with prescribed standards on a scheduled basis, i.e., load testing of lift devices and hydrostatic testing of pressure hoses.

Change 4

B-1

3. **Service**. Operations required periodically to keep an item in proper operating condition; e.g., to clean (includes decontaminate, when required), to preserve, to drain, to paint, or to replenish fuel, lubricants, chemical fluids, or gases. This includes scheduled exercising and purging of recoil mechanisms.

The following are examples of service functions:

- a. Unpack. To remove from packing box for service or when required for the performance of maintenance operations.
- b. Repack. To return item to packing box after service and other maintenance operations.
- c. Clean. To rid the item of contamination.
- d. Touch up. To spot paint scratched or blistered surfaces.
- e. Mark. To restore obliterated identification.
- 4. **Adjust**. To maintain or regulate, within prescribed limits, by bringing into proper position, or by setting the operating characteristics to specified parameters.
- 5. **Align**. To adjust specified variable elements of an item to bring about optimum or desired performance.
- 6. **Calibrate**. To determine and cause corrections to be made or to be adjusted on instruments of test, measuring, and diagnostic equipment used in precision measurement. Consists of comparisons of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.
- 7. **Remove/Install**. To remove and install the same item when required to perform service or other maintenance functions. Install may be the act of emplacing, seating, or fixing into position a spare, repair part, or module (component or assembly) in a manner to allow the proper functioning of an equipment or system.
- 8. **Paint** (ammunition only). To prepare and spray color coats of paint so that the ammunition can be identified and protected. The color indicating primary use is applied, preferably, to the entire exterior surface as the background color of the item. Other markings are to be repainted as original so as to retain proper ammunition identification.
- 9. **Replace**. To remove an unserviceable item and install a serviceable counterpart in its place "Replace" is authorized by the MAC and assigned maintenance level is shown as the third position code of the Source, Maintenance and Recoverability (SMR) code.

Change 4

10. **Repair**. The application of maintenance services, including fault location/troubleshooting, removal/installation, disassembly/assembly procedures and maintenance actions to identify troubles and restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

NOTE

The following definitions are applicable to the "**Repair**" maintenance function:

Services. Inspect, test, service, adjust, align, calibrate, and/or replace.

Fault location/troubleshooting. The process of investigating and detecting the case of equipment malfunctioning; the act of isolating a fault within a system or Unit Under Test (UUT)

Disassembly/assembly. The step-by-step breakdown (taking apart) of a spare/functional group coded item to the level of its least component, that is assigned an SMR code for the level of maintenance under consideration (i.e., identified as maintenance significant).

Actions. Welding, grinding, riveting, straightening, facing, machining, and/or resurfacing

- 11. **Overhaul**. That maintenance effort (service/action) prescribed to restore an item to a completely serviceable/operational condition as required by maintenance standards in appropriate technical publications. Overhaul is normally the highest degree of maintenance performed by the Army. Overhaul des not normally return an item to like new condition.
- 12. Rebuild. Consists of those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of material maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (e.g., hours/miles) considered in classifying Army equipment/components.

Change 4

B-3 Explanation of Columns in the MAC

Column (1) Group Number. Column (1) lists Functional Group Code (FGC) numbers, the purpose of which is to identify maintenance significant components, assemblies, subassemblies, and modules with the Next Higher Assembly (NHA

Column (2) Component/Assembly. Column (2) contains the item names of components, assemblies, subassemblies, and modules for which maintenance is authorized.

Column (3) Maintenance Function. Column (3) lists the functions to be performed on the item listed in column (2). (For a detailed explanation of these functions refer to "Maintenance Functions" outlined above).

Column (4) Maintenance Level. Column (4) specifies each level of maintenance authorized to perform each function listed in column (3), by indicating work time required (expressed as manhours in whole hours or decimals) in the appropriate subcolumn. This work time figure represents the active time required to perform that maintenance function at the indicated level of maintenance. If the number or complexity of the tasks within the listed maintenance function varies at different maintenance levels, appropriate work time figures are to be shown for each level. The work time figure represents the average time required to restore an item (assembly, subassembly, component, module, end item, or system) to a serviceable condition under typical field operating conditions. This time includes preparation time (including any necessary disassembly/assembly time), troubleshooting/fault location time, and quality assurance time in addition to the time required to perform the specific tasks identified for the maintenance functions authorized in the MAC. The symbol designations for the various maintenance levels are as follows:

Field – includes three subcolumns, Crew maintenance (C), Service maintenance (O), and Field maintenance (F).

Sustainment – includes two subcolumns, Below Depot (H) and Depot Maintenance (D).

NOTE

The "L" maintenance level is not included in column (4) of the MAC. Functions to this level of maintenance are identified by work time figure in the "H" column of column (4), and an associated reference code is used in the REMARKS column (6). This code is keyed to the remarks and the SRA complete repair application is explained there.

Change 4

Column (5) Tools and Equipment Reference Code. Column (5) specifies, by code, those common tool sets (not individual tools), common Test, Measurement and Diagnostic Equipment (TMDE), and special tools, special TMDE and special support equipment required to perform the designated function. Codes are keyed to the entries in the tools and test equipment table.

Column (6) Remarks Code. When applicable, this column contains a letter code, in alphabetical order, which is keyed to the remarks table entries

B-4 Explanation of Columns in the Tools and Test Equipment Requirements

Column (1) Tool or Test Equipment Reference Code. The tool or test equipment reference code correlates with a code used in column (5) of the MAC.

Column (2) Maintenance Level. The lowest level of maintenance authorized to use the tool or test equipment.

Column (3) Nomenclature. Name or identification of the tool or test equipment.

Column (4) National Stock Number (NSN). The NSN of the tool or test equipment.

Column (5) Tool Number. The manufacturer's part number, model number, or type number.

B-5 Explanation of Columns in the Remarks

Column (1) Remarks Code. The code recorded in column (6) of the MAC.

Column (2) Remarks. This column lists information pertinent to the maintenance function being performed as indicated in the MAC

B-5/(B-6 Blank)

Change 4
TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-10A/E121 DZ-204 T.O. 31S9-2FSS9-1-9

Section II. MAINTENANCE ALLOCATION CHART

For

Audible Alarm (BZ-204)

(1)	(2)	(3)			(MAINTENA	(5)	(6)		
				F	FIELD	SUSTAINMENT		TOOLS AND	
	COMPONENT/		_					EQPT REF	REMARKS
NOMBER	AGGEMBET		С	0	F	н	D	CODE	CODE
01	Audible Alarm	Inspect Test Repair Replace			0.4 2.3 7.4 1.5			1 1	
	Eelectronics Assy	Test Replace			0.4 0.9			1	

NOTE

The "L" maintenance level is not included in column(4) of the MAC Functions to this level of maintenance are identified by work time figures in the "H" column, and an associated reference code is used in the REMARKS column (6). This code is keyed to the remarks and the SRA complete application is explained when required.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-10A/E 121 DZ-204 T.O. 31S9-2FSS9-1-9

Section III. TOOL AND TEST EQUIPMENT REQUIREMENTS

for

Audible Alarm(BZ-204)

TOOLS OR TEST EQUIPMENT	MAINTENANCE LEVEL	NOMENCLATURE	NATIONAL STOCK NUMBER	TOOL NUMBER
1.	F	Multimeter	6625-00019-0815	Vom

APPENDIX C

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, general support of the Audible Alarm. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:



*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end/equipment. Explanations of source codes follows:

Code





Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.

Explanation

**NOTE: Items coded PC are subject to deterioration.

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-1OA/E121 DZ-204 T.O.31S9-2FSS9-1-9



Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.

Explanation

Explanation

- XA Do not requisition an "XA" -coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
- XB If an "XB" item is not available from salvage, order it using the FSCM and part number given.
- XC Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
- XD Item is not stocked. Order an "XD" -coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 70042.

- (2) Maintenance Code. Maintenance codes tells you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR Code as follows:
 - (a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

Code

Application/Explanation

- C -Crew or operator maintenance done within organizational or aviation unit maintenance.
- 0 -Organizational or aviation unit category can remove, replace, and use the item.
- F -Direct support or aviation intermediate level can remove, replace, and use the item.
- H -General support level can remove, replace, and use the item.
- L -Specialized repair activity can remove, replace, and use the item.
- D -Depot level can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions.) NOTE: Some limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes. This position will contain one of the following maintenance codes.

Code Application/Explanation

- O -Organizational or (aviation unit) is the lowest level that can do complete repair of the item.
- F -Direct support or aviation intermediate is the lowest level that can do complete repair of the item.

Code

- Application/Explanation
- H -General support is the lowest level that can do complete repair of the item.
- L -Specialized repair activity repair of the item.
- D -Depot is the lowest level that can do complete repair of the item.
- Z -Nonreparable. No repair is authorized.
- B -No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B" coded item). However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

(3) **Recoverability Code**. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

Recoverability Codes

Application/Explanation

- Z -Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in 3d position of SMR Code.
- O -Reparable item. When uneconomically reparable, condemn and dispose of the item at organizational or aviation unit level.
- F -Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support or aviation intermediate level.
- H -Reparable item. When uneconomically reparable, condemn and dispose of the item at the general support level.

Recoverability Codes

Application/Explanation

- D -Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item not authorized below depot level.
- L -Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A -Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. FSCM (Column (3)). The Federal Supply Code for Manufacturer (FSCM) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.

d. PART NUMBER (Column (4)). Indicates the primary number used by the manufacturer, (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.

NOTE

When you use a NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. DESCRIPTION AND USABLE ON CODE (UOC) (Column (5)). This column includes the following information:

- (1) The Federal item name and, when required, a minimum description to identify the item.
- (2) The physical security classification of the item is indicated by the parenthetical entry, e.g., Phy Sec C1 Confidential, Phy Sec C1 (S) Secret, Phy Sec C1 (T) Top Secret.
- (3) Items that are included in kits and sets are listed below the name of the kit or set.
- (4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.
- (5) Part numbers for bulk materials are referenced in this column in the line item entry for the item to be manufactured/fabricated.
- (6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).
- (7) The usable on code, when applicable (see paragraph 5, Special Information).

- (8) In the Special Tools List section, the basis of issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipments supported exceeds density spread indicated in the basis of issue, the total authorization is increased proportionately.
- (9) The statement "END OF FIGURE" appears just below the last item description in Column 5 for a given figure in both Section II and Section III.

f. **QTY** (*Column (6)*). The QTY (quantity per figure column) indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that the quantity is variable and may vary from application to application.

4. EXPLANATION OF COLUMNS (SECTION IV).

a. NATIONAL STOCK NUMBER (NSN) INDEX.

(1) STOCK NUMBER column. This column lists the NSN by National item identification number NSN

(NIIN) sequence. The NIIN consists of the last nine digits of the NSN, i.e. (5305-01-5741467).

NIIN

When using this column to locate an item, ignore the first 4 digits of the NSN. However, the complete NSN should be used when ordering items by stock number.

- (2) FIG. column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.
- (3) **ITEM column.** The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. PART NUMBER INDEX. Part numbers in this index are listed by part number in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9 and each following letter or digit in like order).

- (1) **FSCM column.** The Federal Supply Code for Manufacturer (FSCM) is a 5digit numeric code used to identify the manufacturer, distributor, or Government agency, etc., that supplies the item.
- (2) **PART NUMBER column.** Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements to identify an item or range of items.
- (3) STOCK NUMBER column. This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and FSCM columns to the left.
- (4) FIG. column. This column lists the number of the figure where the item is identified/located in Sections II and III.
- (5) **ITEM column.** The item number is that number assigned to the item as it appears in the figure referenced in adjacent figure number column.

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O.31 S9-2FSS9-1-9



Figure C-1. Audible Alarm BZ-204/FSS-9(V) (Sheet 1 of 2)



Figure C- 1. Audible Alarm BZ-204/FSS-9(V) (Sheet 2 of 2)

SECTION II

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O.31 S92FSS9-1-9

(1)	(2)	(2)	(4) DADT	(5) DESCRIPTION AND LISARIE	(6)
NO	CODE	FSCM	NUMBER	ON CODE (UOC)	QTY
1 2 3	XBFZZ PAFZZ XBFZ7	97403 96906 97403	13220E3721 MS35206-230 13220E3718	GROUP 01 AUDIBLE ALARM FIG. C-1 AUDIBLE ALARM BZ-204/FSS-9 (V) COVER, INNER HOUSING SCREW, MACHINE, PNH	1 9
4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	PAFZZ XBFZZ XBFZZ XDFZZ XDFZZ PAFZZ PAFZZ PAFZZ XBFZZ XDFZZ XDFZZ XDFZZ XDFZZ XBFZZ XBFZZ XBFZZ XBFZZ PAFZZ	97403 97403 97403 97403 97403 96906 97403 96906 96906 13511 13511 97403 96906 97403 96906 97403 96906 97403 97403 97403 24153	MS35190-250 13220E3705 13220E3742 13220E3743 MS35 190-234 13220E3767 MS 16106-1 MS3367-4-9 126-214-1000 126-215-1002 13220E3726 MS35335-29 13220E3726 MS35206-21 2 13220E3766 13220E3740 13220E3713 60-4055-104- 1012	SCREW, MACHINE SUPPORT, HOUSING SUPPORT, ENCLOSURE ENCLOSURE, AUDIBLE SCREW, MACHINE SUPPORT, SPACER SWITCH, SENSITIVE STRAP, TIEDOWN CONNECTOR, RECEPTACLE CONNECTOR, RECEPTACLE PLUG, HOLE WASHER, LOCK TERMINAL SCREW, MACHINE PLATE, CAUTION PLATE COVER, LOCK COVER, LOCK	12 3 3 1 2 1 2 35 1 1 2 26 2 1 1 1 1
22 23 24	PCFZZ PAFZZ XDFZZ	97403 00779 81348	13220E3712 41274 ZZ-R-765	BATTERY, AUDIBLE ALARM TERMINAL QUICK DISC RUBBER, SILICONE CLASS I B-GRADE40, 50, 600R70-COLOR, GRAY-SIZE, I IN X I INX062TK	1 1 2
25 26 27 28 29 30 31 32 33 34	XBFZZ XDFZZ PAFZZ PAF7Z PAF7Z PAFZZ PAFZZ PAFZZ PAFZ7 PAF7Z	97403 97403 97403 96906 07618 97403 97403 97403 96906 96906 96906	13220E376 I1 13220E3623 MS35206-245 MS27183-41 34A013-1 13220E3708 13220E3714 MS35206-233 MS35206-213 MS35338-40	CLAMP, BATTERY TAB, CRIMP SCREW, MACHINE, PNH WASHER, FLAT TRANSFORMER, POWER LOUDSPEAKER, PERMANENT PLATE, SPEAKER. SCREW, MACHINE, PNH SCREW, MACHINE, PNH WASHER, LOCK	1 7 6 1 1 1 18 2
			Cha	nge 3 C-11	

SECTION II

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O.31 S92FSS91-9

(1) ITEM NO	(2) SMR CODE	(3) FSCM	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODE (UOC)	(6) QTY
35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62	PAFZZ PAFZZ XDFZZ XBFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ PAFZZ XBFZZ XBFZZ XBFZZ XBFZZ XBFZZ	97403 97403 97403 97403 97403 97403 96906 97403 81349 96906 81349 81349 97403 27193 96906 96906 96906 96906 96906 96906 96906 96906 97403 97403 97403 97403 97403 97403	13220E3732-2 13220E3701 13220E398-6 13220E3823-7 13220E3840-7 MS35206-227 13220E3621-3 MS35431-7 13220E37 15-1 MIL-1-695 TYPE F MS35338-41 MS27183-6 FO2B250V2A FHN-20G 13220E3717 7590K6 MS27183-4 MS35649-262 MS24629-46 MS21266-2N 34A012-1 13220E3725-3 VISOLAIOA 13220E3405 13220E3405 13220E3840-5 13220E3840-5 13220E3840-5	CONNECTOR ELECTRONICS ASSEMBLY RIVET, BLIND BARRIER STRIP STRIP, MARKER SCREW, MACHINE CLAMP, CABLE TERMINAL LUG CAPACITOR INSULATION ELEC PAPER 2.50 X .75 X.005 THK WASHER, FLAT FUSE HOLDER BRACKET, SWITCH, ALARM SWITCH, TOGGLE WASHER, FLAT NUT, PLAIN-HEXAGON SCREW GROMMET, NONMETALLIC TRANSFORMER, AUDIO STRIP, MARKER RESISTOR, VOLTAGE SE TERMINAL, LUG BARRIER STRIP COVER, BARRIER STRIP, MARKER BARRIER STRIP COVER, BARRIER STRIP, MARKER BARRIER STRIP COVER, BARRIER STRIP, MARKER	$ \begin{array}{c} 1\\ 1\\ 6\\ 1\\ 7\\ 3\\ 4\\ 2\\ 8\\ 8\\ 1\\ 1\\ 1\\ 4\\ 6\\ 1\\ 1\\ 2\\ 3\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\$

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-1OA/E121 DZ-204 T.O.31S9-2FSS9-1-9

Section III. SPECIAL TOOLS LIST

(Not Applicable)

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O.31 S9-2FSS9-1-9

SECTION IV

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NATIONAL STOCK NUMBER INDEX

STOCK NUMBER	FIG.	ITEM	STOCK NUMBER	FIG.	ITEM
5935-00-018-6256	1	12			
5310-00-045-4007	1	45			
5310-00-082-1404	1	46			
6140-00-111-0512	1	22			
5920-00-228-7882	1	47			
6350-00-360-7750	1	29			
6350-00-360-7751	1	55			
5965-00-368-8204	1	30			
6350-00-368-8206	1	36			
5905-00-487-1614	1	57			
5930-00-519-8144	1	10			
5310-00-543-2410	1	34			
5930-00-655-1575	1	50			
5940-00-683-4339	1	42			
5975-00-727-5153	1	11			
5305-00-855-0957	1	53			
5940-00-874-9033	1	23			
5305-00-889-3000	1	2			
5305-00-889-3116	1	33			
5310 00-934-9747	1	52			
5310-00-950-1310	1	51			
5305-00-958-5474	1	4			
5305-00-984-4984	1	40			
5305-00-984-4993	1	32			
5305-00-993-0191	1	17			
5325-01-024-4930	1	54			
5935-01-044-8620	1	13			
5935-01-094-1875	1	35			
9905-01-116-4497	1	18			

NATIONAL STOCK NUMBER AND PART NUMBER INDEX

PART NUMBER INDEX

FSCM	PART NUMBER	STOCK NUMBER	FIG.	ITEM
81349	FHN-20G		1	48
81349	F02B250V2A	5920-00-228-7882	1	47
81349	M11-1-695 TYPE F		1	44
	2.50x.75x.005THK			
96906	MS 16106-1	5930-00-519-8144	1	10
96906	MS21266-2N	5325-01-024-4930	1	54
96906	MS24629-46	5305-00855-0957	1	53
96906	MS27183-41		1	28
		5310-00-950-1310	1	51
96906	MS27183-6	5310-00-082-1404	1	46
96906	MS3367-4-9	5975-00-727-51531	1	11
96906	MS35190-234		1	8
96906	MS35 190-250	5305-00-958-5474	1	4
96906	MS35206-212	5305-00-993-0191	1	17
96906	MS35206-213	5305-00-889-3116	1	33
96906	MS35206-227	5305-00-984-4984	1	40
96906	MS35206-230	5305-00-889-3000	1	2
96906	MS35206-233	5305-00-984-4993	1	32
97403	MS35206-245		1	27
96906	MS35335-29		1	15
96906	MS35338-40	5310-00-543-2410	1	34
96906	MS35338-41	5310-00-045-4007	1	45
96906	MS35431-7	5940-00-683-4339	1	42
96906	MS35649-262	5310-00-934-9747	1	52
03508	V1501A10A	5905-00-487-1614	1	57
81348	ZZ-R-765		1	24
13511	126-214-1000	5935-00-018-6256	1	12
13511	126-215-1002	5935-01-044-8620	1	13
97403	13220E2998-6		1	37
97403	13220E3621-3		1	41
97403	13220E3623		1	26
97403	13220E3701	6350-00-368-8206	1	36
97403	13220E3705		1	5
97403	13220E3708	596500-368-8204	1	30
97403	13220E3712	6140-00-111-0512	1	22
97403	13220E3713		1	20
97403	13220E3714		1	31
97403	13220E3715-1		1	43
97403	13220E3717		1	49
97403	13220E3718		1	3
97403	13220E3721		1	1
97403	13220E3725-3		1	56
97403	13220E3726		1	14
97403	13220E3732-2	5935-01-094-1875	1	35
97403	13220E3740		1	19

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-100/E121 DZ-204 T.O.31S9-2FSS9-1-9

FSCM	PART NUMBER	STOCK NUMBER	FIG.	ITEM
97403	13220E3742		1	6
97403	13220E3743		1	7
97403	13220E3761		1	25
97403	13220E3766	9905-01-116-4497	1	18
97403	13220E3767		1	9
97403	13220E3769		1	60
97403	13220E3823-5		1	62
97403	13220E3823-7		1	38
97403	13220E3829-1		1	16
97403	13220E3840-5		1	61
97403	13220E3840-7		1	39
97403	13220E4026-3		1	59
07618	34A012-1	6350-00-360-7751	1	55
07618	34A013-1	6350-00-360-7750	1	29
00779	41274	5940-00-874-9033	1	23
24153	60-4055-104-1012		1	21
27193	7590K6	5930-00-655-1575	1	50

☆U.S. GOVERNMENT PRINTING OFFICE: 1994 - 555-028/00360

TM 5-6350-264-14&P-9 NAVELEX EE 181-AA-OMI-10A/E121 DZ-204 T.O.31S9-2FSS9-1-9

FSCM	PART NUMBER	STOCK NUMBER	FIG.	ITEM
97403	13220E3742		1	6
97403	13220E3743		1	8
97403	13220E3761		1	29
97403	13220E3766	9905-01-116-4497	1	21
97403	13220E3767		1	10
97403	13220E3769		1	63
97403	13220E3823-5		1	65
97403	13220E3823-7		1	42
97403	13220E3829-1		1	19
97403	13220E3840-5		1	64
97403	13220E3840-7		1	43
97403	13220E4026-3		1	62
07618	34A012-1	6350-00-360-7751	1	58
07618	34A013-1	6350-00-360-7750	1	33
00779	41274	5940-00-874-9033	1	27
24153	60-4055-104-1012		1	24
27193	7590K6	5930-00-655-1575	1	53
06001	88F235ALA		1	47

By Order of the Secretaries of the Army, the Navy, and the Air Force:

E. C. MEYER General, United States Army Chief of Staff

Official:

Official:

ROBERT M. JOYCE Major General, United States Army The Adjutant General

> H. D. ARNOLD Rear Admiral, United States Navy Commander, Naval Electronic Systems Command

CHARLES A. GABRIEL, *General, USAF Chief of Staff*

JAMES P. MULLINS General, USAF, Commander, Air Force Logistics Command

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25A, Operator Maintenance requirements for Intrusion Detection.

☆ U.S. GOVERNMENT PRINTING OFFICE: 1982-564029/1317

R	For use of this	IDED CHAN BLAI s form, see AR 2	GES TO PU NK FORMS 5-30; the propo	JBLICATION	N S AND DAASA	Use Part II (revers Special Tool Lists Catalogs/Supply N	se) for Repair Parts an (RPSTL) and Supply Manuals (SC/SM).	d DATE 30 August 2002
TO: (For Comma ATTN: J Fort Mc	ward to pro ander, US AMSEL-L onmouth,	ponent of pu Army C-E .C-LEO-E- NJ 07703	iblication or E LCMC -ED -5006	form) (Inclue	de ZIP Code)	FROM: (Activity a Jane Q. Doe, 3 1234 Any Stre Anytown, AL 3	and location) (Include 2 SFC et 34565	ZIP Code)
			PART I - Al		TIONS (EXCE	PT RPSTL AND SC/S	SM) AND BLANK FOR	RMS
PUBLICA TM 11-	TION/FOR 1234-567	M NUMBER '-14			1 1	^{АТЕ} 6 Sep 2001	TI Op Su Ra	TLE perator, Field and Sustainment pport Maintenance Manual for Idio, AN/ABC-123
ITEM	PAGE	PARA-	LINE	FIGURE	TABLE	REC	OMMENDED CHANG	ES AND REASON
1	WP0005	GRAPH	2	NU.	T	est or Correctiive Action colu	mn should identify a different	NP number.
TYPED N	IAME, GRA	DE OR TITL	E	TELE	PHONE EXCL	HANGE/AUTOVON,	SIGNATURE	
				PLUS	S EXTENSION			
Jane Q	. Doe, SF	C		123	-4567			
DA FO	RM 2028,	, FEB 74	R	EPLACES D	DA FORM 2028	8, 1 DEC 68, WHICH \	WILL BE USED.	APD V4.00

TO : (Fo	rward to pi	roponent o	f publication or fo	rm) (Includ	e ZIP Cod	le)	FROM: Code)	: (Activit	ty and lo	ocatio	on) (Include ZIP	DATE	
		PART	II- REPAIR PAR	IS AND SE	PECIAL T		LISTS A				LOGS/SUPPLY	MANUALS	
PUBLIC	ATION/FO	RM NUMB	BER		200/21	DAT	TE				TITLE		
PAGE	COLM		NATIONAL S	TOCK	REFER		F FIC	SURF	ITEN	и	OF MAJOR		J
NO.	NO.	NO.	NUMBE	R	NC	С. Э.		NO.	NO.			RECOMMENDED ACTION	•
											SOLLOKIED		
									•				
									aaatia	no fo	r improvement of	nublications and	
	F/	AR I III - R	bla <u>fo</u> r	n dditi	onal	Ċ	n y k	be used	if more a	space	e is needed.)	publications and	
TYPED I	NAME, GR	ADE OR 1	TITLE	TELEPH	ONE EXC	HANC	GE/AUT	OVON,		SIGN	NATURE		
				PLUS EX	TENSION	١							

R	ECOMMEN	IDED CHAN BLAI s form, see AR 2	GES TO PONK FORMS	UBLICATION onent agency is C	IS AND DAASA	Use Part II (revers Special Tool Lists Catalogs/Supply N	e) for Repair Part (RPSTL) and Sup Januals (SC/SM).	s and oply	DATE	
TO: (For	ward to pro	ponent of pu	iblication or	⁻ form) (Incluc	le ZIP Code)	FROM: (Activity a	and location) (Inclu	ude ZIP	Code)	
			PARTI-A		TIONS (EXC			FORM	۹	
PUBLICA	TION/FOR					DATE		TITLE	5	
ITEM	PAGE	PARA- GRAPH	LINE	FIGURE NO.	TABLE	REC	OMMENDED CH	ANGES	AND REASON	
TYPED N	IAME, GRA	DE OR TITL	E	TELE	PHONE EXC	HANGE/AUTOVON,	SIGNATURE			
				PLUS	S EXTENSION	J				
DA FO	RM 2028.	FEB 74	F	REPLACES D	DA FORM 202	8, 1 DEC 68, WHICH \	VILL BE USED.			APD V4.00

TO : (Fo	rward to p	roponent o	f publication or fo	rm) (Include	e ZIP Code	e)	FROM: Code)	(Activit	ty and lo	ocation,) (Include ZIP	DATE
		PART	II- REPAIR PAR	TS AND SP	ECIAL TO		ISTS AI	ND SUF	PLY CA	ATALC	OGS/SUPPLY	MANUALS
PUBLIC	ATION/FO	RM NUMB	ER			DATE	Ξ			TI	ITLE	
PAGE NO.	COLM NO.	LINE NO.	NATIONAL S NUMBE	STOCK R	REFERI NO	ENCE).	FIG N	URE O.	ITEM NO.	1	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
	P	ART III - R	EMARKS (Any ge blank for	eneral rema ms. Additic	arks or reco onal blank	omme sheet:	endation s may b	s, or su e used i	ggestion if more s	ns for in space i	mprovement of is needed.)	publications and
	PART III - REMARKS (Any general remarks or recommendations, or suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)											
TYPED	NAME, GR	ADE OR 1	TITLE	TELEPHONE EXCHANGE/AUTOVON, PLUS EXTENSION					5	SIGNATURE		

R	ECOMMEN	IDED CHAN BLAI s form, see AR 2	GES TO P NK FORMS 5-30; the propo	UBLICATION onent agency is C	IS AND AASA	Use Part II <i>(revers</i> Special Tool Lists Catalogs/Supply M	e) for Repair Part (RPSTL) and Sup Januals (SC/SM).	s and oply	DATE	
TO: (For	ward to pro	ponent of pu	iblication or	⁻ form) (Incluc	le ZIP Code)	FROM: (Activity a	and location) (Inclu	ude ZIP	Code)	
					TIONS (EXC			FORM	s	
PUBLICA	TION/FOR	M NUMBER				DATE		TITLE	5	
ITEM	PAGE	PARA- GRAPH	LINE	FIGURE NO.	TABLE	REC	OMMENDED CH	ANGES	AND REASON	
TYPED N	AME, GRA	DE OR TITL	E	TELE		HANGE/AUTOVON,	SIGNATURE			
						·				
DA FORM 2028, FEB 74 REPLACES DA FORM 20						8, 1 DEC 68, WHICH V	VILL BE USED.			APD V4.00

TO : (Fo	rward to pi	roponent o	f publication or fo	rm) (Include	FROM: (Activity and location) (Include ZIP Code)				DATE			
		PART	II- REPAIR PAR	TS AND SP	ECIAL TO		ISTS AI	ND SUF	PLY CA	ATALC	OGS/SUPPLY	MANUALS
PAGE NO.	COLM NO.	LINE NO.	NATIONAL S NUMBE	STOCK R	REFERI NO	ENCE).	FIG N	URE O.	ITEM NO.	1	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
	P	ART III - R	EMARKS (Any ge blank for	eneral rema ms. Additic	arks or reco onal blank	omme sheet:	endation s may b	s, or su e used i	ggestion if more s	ns for in space i	mprovement of is needed.)	publications and
Dependence op and op and a remaining of recommendations, of suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)												
TYPED NAME, GRADE OR TITLE TELI PLU					EPHONE EXCHANGE/AUTOVON, S EXTENSION					SIGNATURE		

R	ECOMMEN	IDED CHAN BLAI s form, see AR 2	GES TO P NK FORMS 5-30; the propo	UBLICATION onent agency is C	IS AND AASA	Use Part II <i>(revers</i> Special Tool Lists Catalogs/Supply M	e) for Repair Part (RPSTL) and Sup Januals (SC/SM).	s and oply	DATE	
TO: (For	ward to pro	ponent of pu	iblication or	⁻ form) (Incluc	le ZIP Code)	FROM: (Activity a	and location) (Inclu	ude ZIP	Code)	
					TIONS (EXC			FORM	s	
PUBLICA	TION/FOR	M NUMBER				DATE		TITLE	5	
ITEM	PAGE	PARA- GRAPH	LINE	FIGURE NO.	TABLE	REC	OMMENDED CH	ANGES	AND REASON	
TYPED N	AME, GRA	DE OR TITL	E	TELE		HANGE/AUTOVON,	SIGNATURE			
						·				
DA FORM 2028, FEB 74 REPLACES DA FORM 20						8, 1 DEC 68, WHICH V	VILL BE USED.			APD V4.00

TO : (Fo	rward to pi	roponent o	f publication or fo	rm) (Include	FROM: (Activity and location) (Include ZIP Code)				DATE			
		PART	II- REPAIR PAR	TS AND SP	ECIAL TO		ISTS AI	ND SUF	PLY CA	ATALC	OGS/SUPPLY	MANUALS
PAGE NO.	COLM NO.	LINE NO.	NATIONAL S NUMBE	STOCK R	REFERI NO	ENCE).	FIG N	URE IO.	ITEM NO.	1	TOTAL NO. OF MAJOR ITEMS SUPPORTED	RECOMMENDED ACTION
	P	ART III - R	EMARKS (Any ge blank for	eneral rema ms. Additic	arks or reco onal blank	omme sheet:	endation s may b	s, or su e used i	ggestion if more s	ns for in space i	mprovement of is needed.)	publications and
Dependence op and op and a remaining of recommendations, of suggestions for improvement of publications and blank forms. Additional blank sheets may be used if more space is needed.)												
TYPED NAME, GRADE OR TITLE TELI PLU					EPHONE EXCHANGE/AUTOVON, S EXTENSION					SIGNATURE		

The Metric System and Equivalents

Linear Measure

1 centimeter = 10 millimeters = .39 inch

- 1 decimeter = 10 centimeters = 3.94 inches 1 meter = 10 decimeters = 39.37 inches
- 1 dekameter = 10 decimeters = 32.8 feet
- 1 hectometer = 10 dekameters = 328.08 feet
- 1 kilometer = 10 hectometers = 3,280.8 feet

Weights

1 centigram = 10 milligrams = .15 grain 1 decigram = 10 centigrams = 1.54 grains 1 gram = 10 decigram = .035 ounce 1 dekagram = 10 grams = .35 ounce 1 hectogram = 10 dekagrams = 3.52 ounces 1 kilogram = 10 hectograms = 2.2 pounds 1 quintal = 100 kilograms = 220.46 pounds 1 metric ton = 10 quintals = 1.1 short tons

Liquid Measure

- 1 centiliter = 10 milliters = .34 fl. ounce 1 deciliter = 10 centiliters = 3.38 fl. ounces 1 liter = 10 deciliters = 33.81 fl. ounces 1 dekaliter = 10 liters = 2.64 gallons 1 hectoliter = 10 dekaliters = 26.42 gallons
- 1 kiloliter = 10 hectoliters = 264.18 gallons

Square Measure

- 1 sq. centimeter = 100 sq. millimeters = .155 sq. inch 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres
- 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

Cubic Measure

- 1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches
- 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

Approximate Conversion Factors

To change	To	Multiply by	To change	To	Multiply by
inches	centimeters	2.540	ounce-inches	newton-meters	.007062
feet	meters	.305	centimeters	inches	.394
verde	meters	.914	meters	feet	3.280
milee	kilometers	1.609	meters	yards	1.094
annes annes inches	square centimeters	6.451	kilometers	miles	.621
square menes	square meters	093	square centimeters	square inches	.155
square reet	square meters	836	square meters	square feet	10.764
square yarus	square kilometere	2 590	square meters	souare vards	1.196
aquare miles	square bostometers	405	square kilometers	square miles	.386
acres	subie metore	.400	square bectometers	80798	2.471
	cubic meters	.020	cubic meters	cubic feet	35.315
cubic yards		20 573	cubic meters	cubic varda	1.308
fiuld ounces		472	millilitare	fluid ounces	.034
pints	liters	.413	litone	ninte	2 1 1 3
quarts	liters	.940	124	pints	1.057
gallons	liters	3.785	liters	quarts	264
ounces	grams	28.349	liters	gallons	.201
pounds	kilograms	.454	grams	ounces	.035
short tons	metric tons	.907	kilograms	pounds	2.205
pound-feet	newton-meters	1.356	metric tons	short tons	1.102
pound-inches	newton-meters	.11296			
-					

Temperature (Exact)

°F	Fahrenheit	5/9 (after	Celsius	°C
	temperature	subtracting 32)	temperature	

PIN: 051534-000

This fine document...

Was brought to you by me:



Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<u>http://www.liberatedmanuals.com/</u>>Free Military and Government Manuals

Sincerely
 Igor Chudov
 <u>http://igor.chudov.com/</u>
 Chicago Machinery Movers