TM 9-2320-211-10-4 T.O. 36A12-1C-421-4

TECHNICAL MANUAL

MAINTENANCE

OPERATOR LEVEL

5-TON, 6X6, M39 SERIES TRUCKS (MULTIFUEL) Chapter 1 Equipment Group Maintenance

Chapter 2 Equipment Group Maintenance

M61A2, M63A2; TRUCK, CARGO: M54A2, M54A2C, M55A2; TRUCK, DUMP: M51A2; TRUCK, TRACTOR: M52A2; TRUCK, WRECKER, MEDIUM: M543A2

TRUCK, CHASSIS: M40A2C,

DEPARTMENTS OF THE ARMY AND THE AIR FORCE

SEPTEMBER 1980

WARNING

EXHAUST GASES CAN BE DEADLY

Exposure to exhaust gases produces symptoms of headache, dizziness, loss of muscular control, apparent drowsiness, and coma. Permanent brain damage or death can result from severe exposure.

Carbon monoxide occurs in the exhaust fumes of fuel burning heaters and internal combustion engines, and becomes dangerously concentrated under conditions of inadequate ventilation. The following precautions must be observed to insure the safety of personnel whenever fuel burning heater(s) or engine of any vehicle is operated for maintenance purposes or tactical use.

Do not operate heater of engine of vehicle in an enclosed area unless it is adequately ventilated.

Do not idle engine for long periods without maintaining adequate ventilation in personnel compartments.

Do not drive any vehicle with inspection plates or cover plates removed unless necessary for maintenance purposes.

Be alert at all times during vehicle operation for exhaust odors and exposure symptoms. If either are present, immediately ventilate personnel compartments. If symptoms persist, remove affected personnel from vehicle and treat as follows: expose to fresh air; keep warm; do not permit physical exercise; if necessary, administer artificial respiration.

If exposed, seek prompt medical attention for possible delayed onset of acute lung congestion. Administer oxygen if available.

The best defense against exhaust gas poisoning is adequate ventilation.

Use extreme care when removing radiator cap, especially when temperature gage shows above 180°F.

Always wear leather gloves when handling winch cable never allow cable to slip through hands. Do not operate winch with less than four turns of cable drum.

Do not drive truck until the low air pressure warning buzzer is silent and the air pressure gage shows at least 65 PSI. This is the minimum pressure required for safe braking action.

Do not use hand throttle to drive the vehicle.

Do not park truck with front transmission gearshift lever in gear.

When used to carry flammables, explosives, or other hazardous material, equip truck with a fire extinguisher.

If your vehicle class number is greater than the bridge class number, your vehicle is too heavy for the bridge; DO NOT CROSS.

TM 9-2320-211-10-4 TO 36A12-1C-421-4 C1

HEADQUARTERS DEPARTMENTS OF THE ARMY AND THE AIR FORCE Washington D.C., 26 February 1992

TECHNICAL MANUAL

SCHEDULED MAINTENANCE

OPERATOR LEVEL

5-TON, 6X6, M39 SERIES TRUCKS (MULTIFUEL)

TRUCK, CHASSIS: M40A2C, M61A2, M63A2, TRUCK, CARGO: M54A2, M54A2C, M55A2: TRUCK, DUMP: M51A2; TRUCK, TRACTOR: M52A2; TRUCK, WRECKER, MEDIUM: M543A2

TM 9-2320-211-10-4, dated 5 September 1980 is changed as follows:

1. Remove old pages and insert new pages as indicated below.

2. New or changed material is indicated by a vertical bar in the margin of the page.

Remove Pages	Insert Pages
none	b (c blank)
2-7 and 2-8	2-7 and 2-8
2-13 and 2-14	2-13 and 2-14

File this change sheet in front of the publication for reference purposes.

Approved for public release; distribution is unlimited.

CHANGE NO.1 By Order of the Secretary of the Army:

Official:

Mitta A. Acueltas

MILTON H. HAMILTON Administrative Assistant to the Secretary of the Army

By Order of the Secretary of the Air Force:

MERRILL A. McPEAK General, United States Air Force Chief of Staff

CHARLES C. McDONALD General, United States Air Force Commander, Air Force Logistics Command

Distribution:

To be distributed in accordance with DA Form 12-38-E, Block 0509, Operator maintenance requirements for TM 9-2320-211-10-4.

GORDON R. SULLIVAN General, United States Army Chief of Staff

WARNINGS (CONT)

If NBC exposure is suspected, all air filter media should be handled by personnel wearing protective equipment. Consult your Unit NBC Officer or NBC NCO for appropriate handling instructions.

Wear safety glasses or goggles when checking batteries. Always check electrolyte level with engine stopped. Do not smoke or use exposed flame when checking battery, explosive gases are present and severe injury to personnel can result.

Remove all jewelry such as rings, dog tags, bracelets, etc. If jewelry contacts battery terminal, a direct short will result in instant heating of tools, causing damage to equipment and injury to personnel.

TECHNICAL MANUAL NO. 9-2320-211-10-4 TECHNICAL ORDER NO. 36A12-1C-421-4 DEPARTMENTS OF THE ARMY AND THE AIR FORCE Washington, DC, 5 September 1980

TECHNICAL MANUAL

MAINTENANCE

OPERATOR LEVEL

5-TON, 6X6, M39 SERIES TRUCKS (MULTIFUEL)

Model		NSN without Winch	NSN with Winch
Chassis	M40A2C M61A2 M63A2	2320-00-969-4114 2320-00-055-9264 2320-00-226-6251	2320-00-965-0321 2320-00-285-3757
Truck, Cargo	M54A2 M54A2C M55A2	2320-00-055-9266 2320-00-926-0874 2320-00-073-8476	2320-00-055-9265 2320-00-926-0874 2320-00-055-9259
Truck, Dump	M51A2	2320-00-055-9262	2320-00-055-9263
Truck, Tractor	M52A2	2320-00-055-9260	2320-00-055-9261
Truck, Wrecker, Medium	M543A2		2320-00-055-9258

Current as of 25 March 1980.

*This manual, together with TM 9-2320-211-10-1, 5 September 1980; -10-2, 5 September 1980; and -10-4, 5 September 1980 supersedes so much of TM 9-2320-211-10, 20 November 1977 as pertains to multifuel vehicles.

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedure, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publication and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank Automotive Materiel Readiness Command, ATTN: DRSTA-MB, Warren, Michigan 48090. A reply will be furnished to you.

Paragraph Page

CHAPTER 1.	GENERAL MAINTENANCE INFORMATION		
	Scope	1-1	1-1
	General Maintenance	1-2	1-1
	Cleaning	1-3	1-1
	Lubricating	1-4	1-1
CHAPTER 2.	EQUIPMENT GROUP MAINTENANCE		
Section I.	Scope		2-1
	Equipment Items Covered	2-1	2-1
	Equipment Items Not Covered	2-2	2-1
II.	Engine Equipment Items Maintenance		2-2
	Access to Engine Compartment	2-3	2-2
	Open Hood and Side Panel	2-3a	2-2
	Close Hood and Side Panel	2-3b	2-5
III.	Fuel System Equipment Items Maintenance		2-8
	Air Cleaner Element Removal and Replacement	2-4	2-8
	Removal	2-4a	2-8
	Replacement	2-4b	2-10
IV.	Electrical System Equipment Items Maintenance		2-12
	Battery Inspection	2-5	2-12
v.	Wheels Equipment Items Maintenance		2-15
	Spare Wheel Removal and Replacement	2-6	2-15
	Removal	2-ба	2-15
	Replacement	2-6b	2-18
	Jacking Procedure	2-7	2-21
	Raising Truck	2-7a	2-21
	Lowering Truck	2-7b	2-22
	Inner Rear Wheels Removal and Replacement	2-8	2-23
	Preliminary Procedures	2-8a	2-23
	Removal	2-8b	2-24
	Replacement	2-8c	2-25
	Front and Outer Rear Wheels Removal		
	and Replacement	2-9	2-27
	Preliminary Procedures	2-9a	2-27
	Removal	2-9b	2-27
	Replacement	2-9c	2-30

Paragraph Page

Section VI.	Special Purpose Kits Equipment Items		
	Maintenance		2-33
	Installation and Removal of Bow and Tarp Kits .	2-10	2-33
		2-10a	2-33
		2-10b	2-35
		2-10c	2-36
		2-10d	2-39
		2-10e	2-42
		2-10f	2-43

CHAPTER 1

GENERAL MAINTENANCE INFORMATION

1-1. SCOPE. This volume of the technical manual covers maintenance tasks, authorized at the operator's level of maintenance, for the 5-ton, $6 \ge 6$, M39 series trucks that have multifuel engines. The tasks given in this volume do not include those maintenance tasks done on a scheduled basis (PMCS).

1-2. GENERAL MAINTENANCE. The following technical manuals have general maintenance information for this type of equipment. Refer to these manuals if you need more information.

a. For operation and maintenance in cold weather (0 to $-60^{\circ}F$), refer to TM 9-243.

- b. For deep water fording, refer to TM 9-238.
- c. For care and use of handtools and measuring tools, refer to TM 9-243.

1-3. CLEANING. General cleaning instructions for this type of equipment are given in TM 9-247.

1-4. LUBRICATING. Refer to LO 9-2320-211-12 for materials to be used and instructions for lubrication of the equipment covered in this technical manual.

CHAPTER 2

EQUIPMENT GROUP MAINTENANCE

Section I. SCOPE

2-1. EQUIPMENT ITEMS COVERED. This chapter gives equipment maintenance procedures for which there are authorized corrective maintenance tasks at operator's level. Procedures are given in equipment functional groups by sections and include the following tasks:

Access to Engine Compartment Air Cleaner Filter Element Removal and Replacement Battery Inspection Spare Wheel Removal and Replacement Jacking Procedure Inner Rear Wheels Removal and Replacement Front and Outer Rear Wheels Removal and Replacement Installation and Removal of Bow and Tarp Kits

2-2. EQUIPMENT ITEMS NOT COVERED. All equipment items for which corrective maintenance is authorized at operator's maintenance level are covered in this chapter except for the Portable Decontaminating Apparatus. Refer to TM 3-4230-204-12&P for operating and maintenance instructions for this equipment.

Section II. ENGINE EQUIPMENT ITEMS MAINTENANCE

2-3. ACCESS TO ENGINE COMPARTMENT.

TOOLS: None

SUPPLIES: None


PERSONNEL: One

EQUIPMENT CONDITION: Truck parked, engine off, handbrake set.

a. Open Hood and Side Panel.

FRAME 1 1. Turn two side panel latches (1) to the up position. 2. Lower left side panel (2). GO TO FRAME 2
<image/>

frame 2	
2. Push and	on each hood holddown latch (1) until they clear each hood catch (2). hold in hood latch (3). d (4) and then let go of hood latch (3). E 3
	Image: constraint of the second sec

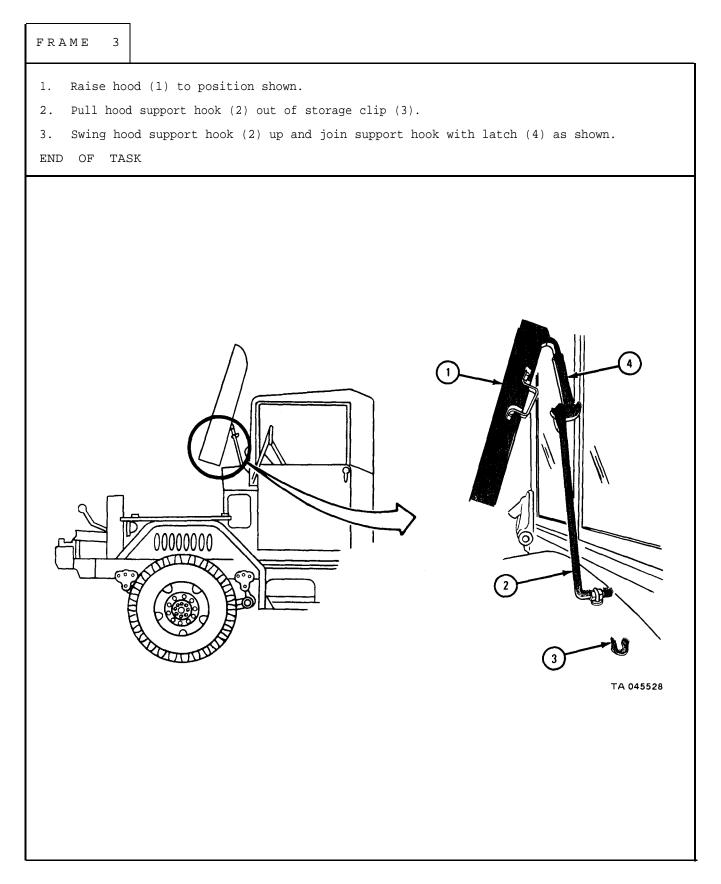

b. Close Hood and Side Panel.

FRAME 1 Push back on hood (1) so that latch (2) clears support hook (3). 1. 2. Hold hood (1) and swing support hook (3) down into storage clip (4). WARNING Keep hands and feet clear of hood and body when closing the hood. Lower hood (1). 3. GO TO FRAME 2 2 1 00000000 4 TA 045533

FRAME 2
 Push down on hood (1) to lock hood latch (2). Pull up on each holddown latch (3) and join them to hood catches (4). GO TO FRAME 3
Image: Constraint of the second se

<pre>FRAME 3 1. Raise side panel (1). 2. Turn two side panel latches (2) to the down position. END OF TASK</pre>
END OF TASK
TA 045532

Section III. FUEL SYSTEM EQUIPMENT ITEMS MAINTENANCE

2-4. AIR CLEANER ELEMENT REMOVAL AND REPLACEMENT. TOOLS: None SUPPLIES: None PERSONNEL: One EQUIPMENT CONDITION: Truck parked, engine off, handbrake set.


WARNING

If NBC exposure is suspected, all air filter media should be handled by personnel wearing protective equipment. Consult your unit NBC Officer or NBC NCO for appropriate handling or disposal instructions.

a. <u>Removal.</u>

FRAME 1

- 1. Open three latches (1) holding cover (2) to air cleaner housing (3). Take off cover.
- GO TO FRAME 2

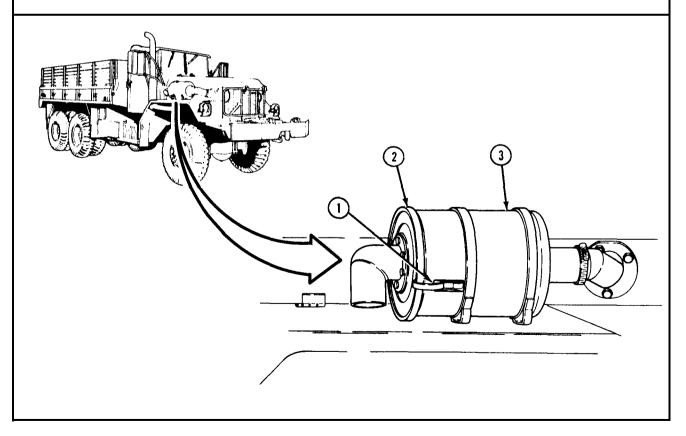

FRAME 2
 Turn locking device (1) to left until it is free of clamps (2). Pull out locking device. Pull air cleaner element (3) from air cleaner housing (4). END OF TASK
The of FAR

b. Replacement.

FRA	AME 1		
1. 2. 3. GO	Press l	Thir cleaner element (1) in air cleaner housing (2). Tocking device (3) into air cleaner housing (2). Tocking device (3) to right until it is locked in clamps (4). ME 2	
		<image/>	

FRAME 2
 Place cover (1) on air cleaner housing (2). Lock three latches (3). END OF TASK
(1) (3) (2)
TA 053556

Section IV. ELECTRICAL SYSTEM EQUIPMENT ITEMS MAINTENANCE

2-5. BATTERY INSPECTION.


TOOLS: 9/16-inch wrench open end (2) 1/2-inch wrench open end (2) SUPPLIES: None

PERSONNEL: One

EQUIPMENT CONDITION: Truck parked, engine off, handbrake set.

FRAME 1

- 1. Open battery compartment door (1).
- 2. Loosen two thumbscrews (2) and push two clamps (3) down to clear battery box (4).
- 3. Pull battery box (4) out onto running board (5).
- GO TO FRAME 2

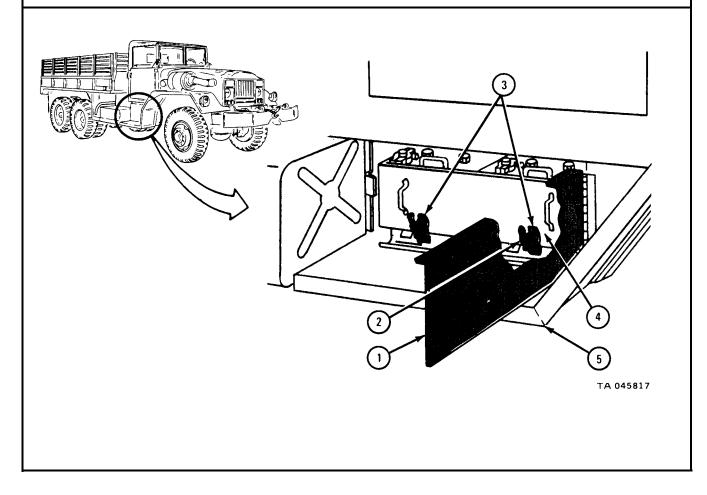

FRAME 2 WARNING Wear safety glasses or goggles when checking batteries. Always check electrolyte level with engine stopped. Do not smoke or use exposed flame when checking battery; explosive gases are present and severe injury to personnel can result. Remove all jewelry such as rings, dog tags, bracelets, etc. If jewelry contacts battery terminal, a direct short will result in instant heating of tools, causing damage to equipment and injury to personnel. Unscrew and take off 12 battery filler caps (1). 1. 2. Check the electrolyte level in each cell. Electrolyte level should be to the level/split ring in the battery filler opening. If fluid is low, fill with distilled water to the level ring. If fluid is boiling, notify next higher maintenance. 3. Screw on and tighten 12 battery filler caps (1). 4. Check tightness of cables (2) to clamps (3) and clamps (2) to terminal posts (4). Tighten connections if needed. GO TO FRAME 3 2

FRAME 3	
	of running board (2) into battery compartment. thumbscrews (4) and tighten thumbscrews. t door (5).
3	
	TA 047169

Section V. WHEELS EQUIPMENT ITEMS MAINTENANCE

2-6. SPARE WHEEL REMOVAL AND REPLACEMENT.

TOOLS: Wheel stud nut wrench and handle

SUPPLIES: None

PERSONNEL: TWO

EQUIPMENT CONDITION: Truck parked, engine off, handbrake set.

a. <u>Removal.</u>

F

(1) Trucks M54A2 without winch, M54A2C with winch, and M54A2C without winch.


FRAME 1	
Soldier A 1.	Hold spare wheel (1) in place.
	Using wheel stud nut wrench and handle, unscrew and take off two nuts (2).
Soldiers 3. A and B	Take off spare wheel (1).
END OF TASK	
	Transfer

(2) Trucks M54A2 with winch and M55A2 with winch.

FRAME 1	
Soldiers A and B END OF	 Using wheel stud nut wrench, unscrew and take off two nuts (1), two washers (2), and one spring (3) from two tire bolts (4). Lift out two tire bolts (4). Slide out spare wheel (5) from carrier (6).

(3) Truck M51A2.


FRAME 1	
Soldier A 1.	Hold spare wheel clamp assembly (1) so it does not fall.
Soldier B 2.	Using wheel stud nut wrench, unscrew and take off nut (2). Take out bolt (3) and lower spare wheel clamp assembly (1).
Soldiers 3. A and B	Take spare wheel (4) off truck.
END OF TASK	

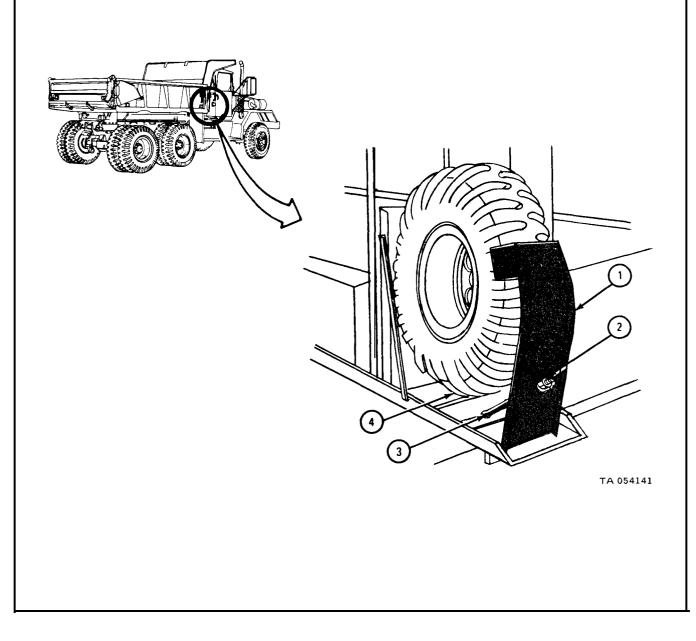

b. Replacement.

(1) Trucks M54A2 without winch, M54A2C with winch, and M54A2C without winch.

FRAME 1	
	Lift spare wheel (1) into truck and slide spare wheel (1) onto two studs (2).
Soldier A 2.	Hold spare wheel (1) in place,
Soldier B 3.	Using wheel stud nut wrench, screw on and tighten two nuts (3).
END OF TASK	

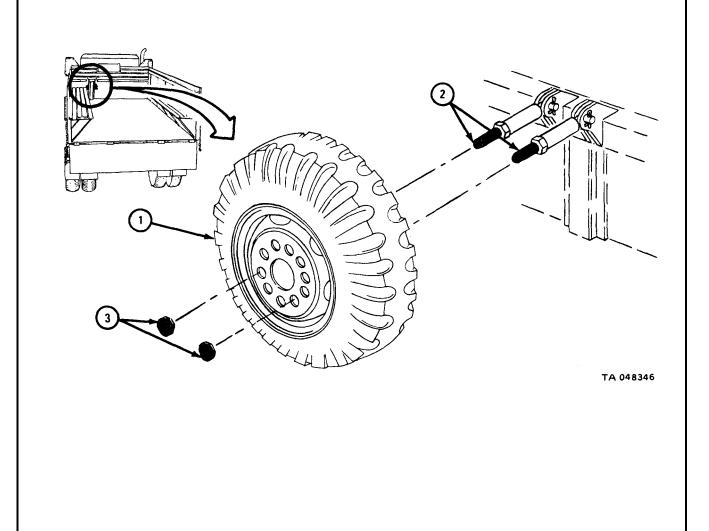


(2) Trucks M54A2 with winch and M55A2 with winch.

FRAME 1		
Soldiers A and B	1. Lift spare wheel (1) and slide :	it into carrier (2).
Soldier A	 Place two tire bolts (3) throug carrier (2) as shown. 	gh holes in wheel (1) and
	3. Slide spring (4) and washer (5 Screw on nut (6).	5) onto forward tire bolt (3).
	4. Slide washer (7) onto rear tir	re bolt (3). Screw on nut (8).
	5. Using wheel stud nut wrench,	tighten nuts (6 and 8).
END OF T	ASK	
		Image: Constrained state stat

(3) Truck M51A2.

FRAME 1	
Soldiers 1. A and B	Lift spare wheel (1) onto carrier (2).
Soldier A 2.	Put spare wheel clamp assembly (3) in place at end of carrier (2).
Soldier B 3.	Hook bolt (4) into hole in bottom of carrier (2) and through hole in spare wheel clamp assembly (3) .
Soldier A 4.	Using wheel stud nut wrench, screw on and tighten nut (5).
END OF TASK	

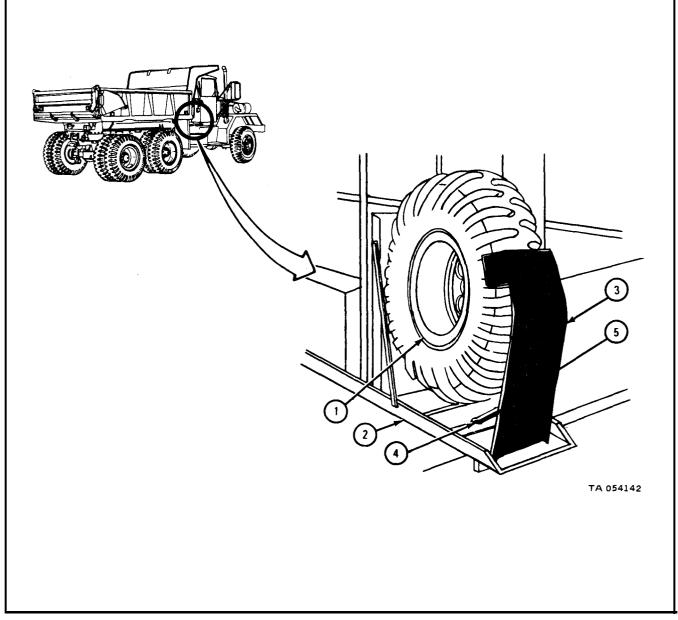

2-7. JACKING PROCEDURE

ΝΟΤΕ

This task is the same for all wheels. This task is shown for the left rear-rear wheel.

TOOLS: Hydraulic screw jack with handle.

SUPPLIES: Wood block

PERSONNEL: One

EQUIPMENT CONDITION: Truck parked, engine off, handbrake set, wheels chocked.

WARNING


Never get underneath truck that is held up by jack only. Jack may slip, causing truck to fall resulting in severe injury to personnel.

a. Raising Truck.

FRAME 1

- 1. Take hydraulic screw jack (1) and handle (2) out of stowage compartment above left running board.
- Put wood block (3) on the ground under spring seat (4) and put screw jack
 (1) on wood block.
- 3. Turn out screw jack (1) until it touches spring seat (4).
- 4. Using slotted end of jack handle (2), turn bleeder valve (5) to the right. Put jack handle in screw jack (1).

5. Moving jack handle (2) up and down, raise wheel assembly (6) off ground. END OF TASK

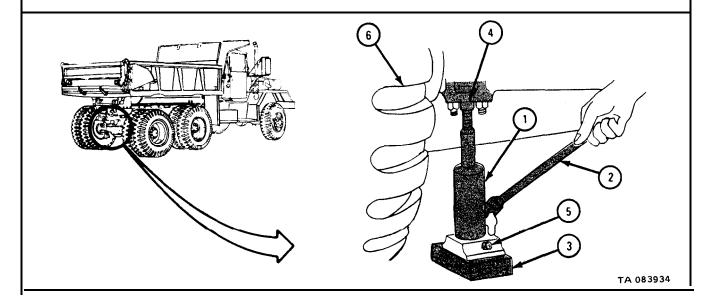

b. Lowering Truck.

FRAME 1
 FRAME 1 Take jack handle (1) out of hydraulic screw jack (2). Using slotted end of jack handle (1), turn bleeder valve (3) to the left. When wheel assembly (4) is firmly on the ground, take screw jack (2) out from under truck. Take wood block (5) away from truck. Put screw jack (2) and handle (1) into stowage compartment above left running board. END OF TASK
TA 083935

2-8. INNER GEARWHEELS REMOVAL AND REPLACEMENT.

ΝΟΤΕ

This task is the same for all four inner rear wheels.

TOOLS: Wheel stud nut wrench Hydraulic screw jack with handle

SUPPLIES: None

EQUIPMENT CONDITION: Truck parked on level ground, engine off, handbrake set, wheels chocked.

a. Preliminary Procedures.

- Remove spare wheel if needed to replace damaged wheel. Refer to para 2-6.
- (2) Jack up truck and remove outer rear wheel. Refer to para 2-7.

b. <u>Removal.</u>

FRAME 1
1. Using spare end of wheel stud nut wrench (1), unscrew and take off six inner wheel nuts (2).
CAUTION
Do not slide wheel assembly on threaded studs. Sliding wheel assembly may damage threads.
NOTE
Nuts have left-hand threads on left wheel assembly and right-hand threads on right wheel assembly. Studs and nuts are stamped (L) left and (R) right.
2. Put fingers through vent holes (3) and grip wheel (4) as shown. Lift up on wheel, pull it toward you, and take it off.
END OF TASK
<image/>

c. Replacement.

FRAME 1	
1. Check th	hat truck is jacked up at wheel to be replaced.
	CAUTION
	Do not slide wheel assembly on threaded studs. Sliding wheel assembly may damage threads.
2. Lift whe	eel assembly (1) up and onto wheel studs (2).
	NOTE
	Nuts have left-hand threads on left wheel assembly and right-hand threads on right wheel assembly. Stud and nuts are stamped (L) left and (R) right.
3. Screw or	n and hand tighten nuts (3) on wheel studs (2).
shown.	quare end of wheel stud nut wrench (4), tighten nuts (3) in order As soon as you can, take truck to organizational maintenance and eel stud nuts torqued to 450 to 500 pound-feet.
5. Put on (outer rear wheel and jack down truck. Refer to para 2-7.
	TIGHTENING ORDER TA 053552

FRAME 2	
I	NOTE
	Follow-on Maintenance Action Required:
end of ta	 If damaged wheel was replaced, take damaged wheel to organizational maintenance shop for repair or re- placement as soon as possible. If damaged wheel cannot be taken immediately to or- ganizational maintenance, store damaged wheel on spare mounting bracket. Refer to para 2-6.
END OF IA	

2-9. FRONT AND OUTER REAR WHEELS REMOVAL AND REPLACEMENT.

ΝΟΤΕ

The following task is the same for both front wheels and all four outer rear wheels.

TOOLS: Wheel stud nut wrench and handle Hydraulic screw jack and handle

SUPPLIES: None

PERSONNEL: One

EQUIPMENT CONDITION : Truck on level ground, engine off, handbrake set, wheels chocked.

a. Preliminary Procedures. Remove spare wheel if needed to replace damaged wheel. Refer to para 2-6.

b. Removal.


FRAME 1

1. Using wheel stud nut wrench (1), loosen 10 wheel stud nuts (2). Do not take off wheel stud nuts.


NOTE

Wheel stud nuts (2) on left side have left hand threads and must be turned to the right to loosen them. Wheel stud nuts on right side have right hand threads and must be turned to the left to loosen them.

GO TO FRAME 2

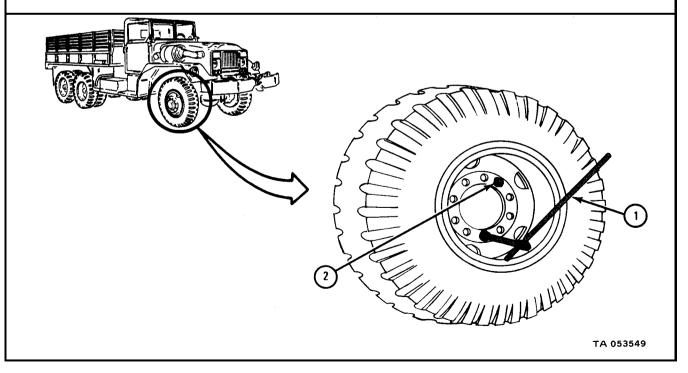


FRAME	2
1. Tu	urn out jack screw (1) about three inches.
	sing slotted end of jack handle (2), turn bleeder valve (3) to right to close it.
3. Pu	It hydraulic jack (4) under axle housing (5) near wheel assembly (6) to be taken off. It jack handle (2) into hydraulic jack.
	NOT E
	Place a block between jack base and ground when truck is on loose or soft ground.
4. Mo [.]	we jack handle (2) up and down until wheel assembly (6) is off ground.
GO TO	FRAME 3
	<image/>

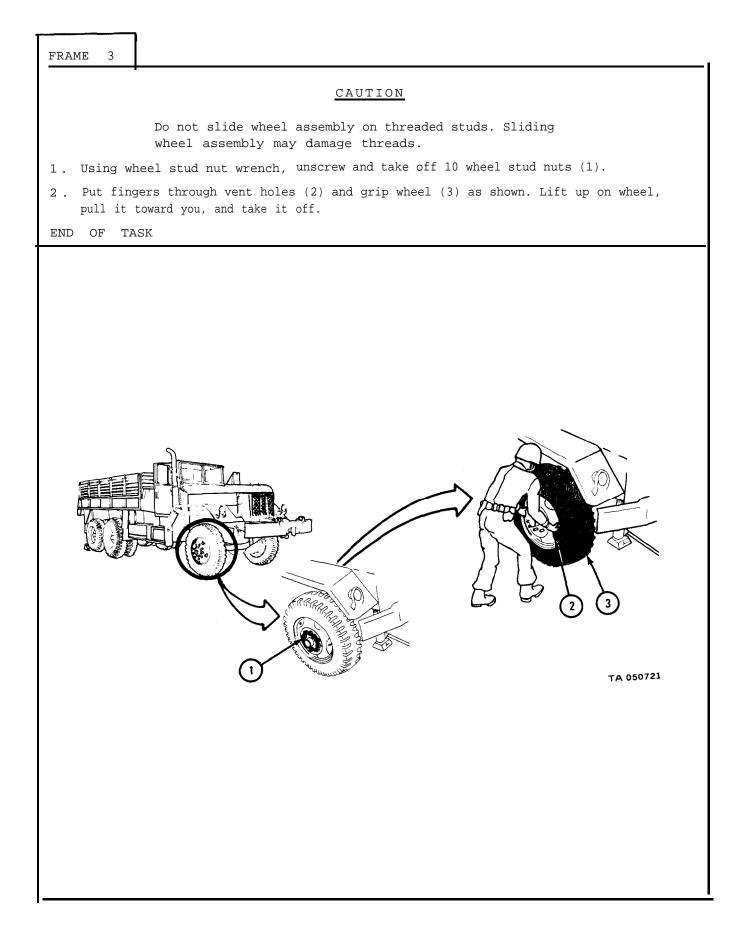

c. Replacement.

FRAME 1	
1. Check tha	t truck is jacked up at wheel to be replaced.
	CAUTION
	Do not slide wheel assembly on threaded studs. Sliding wheel assembly may damage threads.
2. Put wheel	(1) over hub and drum assembly (2) onto wheel studs (3).
	NOTE
	Tire threads of rear wheels must be matched as closely as possible and tire valves (4) must be across from each other as much as possible.
3. Screw on	and finger tighten 10 wheel stud nuts (5).
GO TO FRAME	2 2
	<image/>

FRAME 2	
2. Take hyd	otted end of jack handle (1) turn bleeder valve (2) to left to open it. raulic jack (3) from under axle housing (4) when tire (5) touches ground. k screw (6) into hydraulic jack (3). ME 3
<u> </u>	
	6 2 TA 050723

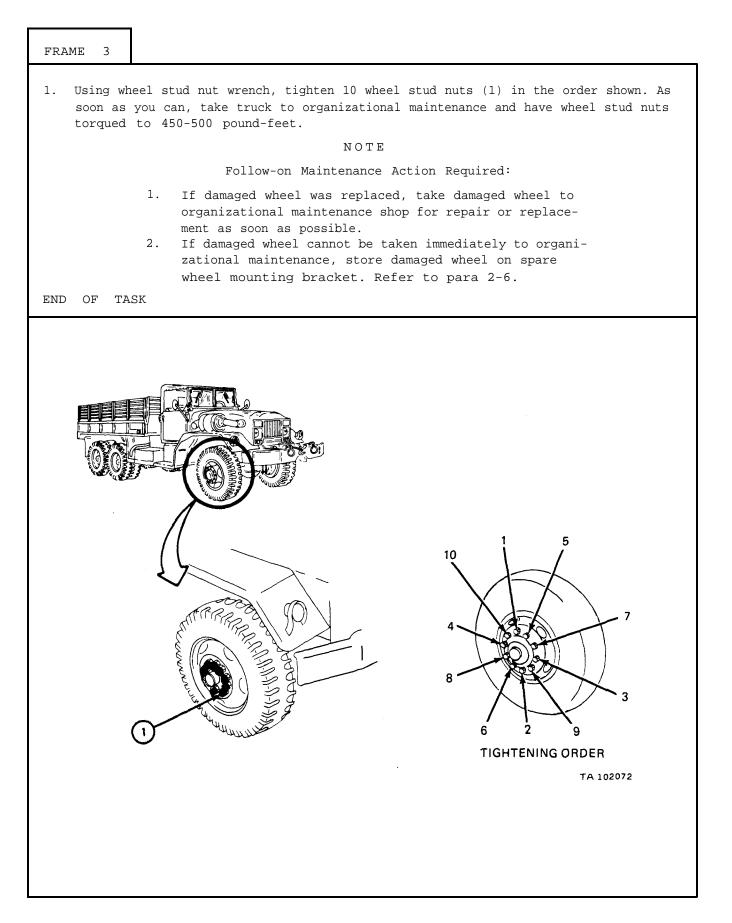

Section VI. SPECIAL PURPOSE KITS EQUIPMENT ITEMS MAINTENANCE

2-10. INSTALLATION AND REMOVAL OF BOW AND TARP KITS. TOOLS: Cross-tip screwdriver (Phillips type) SUPPLIES: Chalk PERSONNEL: Two

EQUIPMENT CONDITION: Truck parked, engine off, handbrake set.


CAUTION


Do not fold or stow paulin or end curtains if they are wet. When folding, make sure surface they are spread on is dry. Canvas can be damaged if it is stowed while wet.

a. Installation of Bow Assemblies:

FRAME 1

- 1. Take corner and stake assemblies and bows (1) out of cargo bed.
- GO TO FRAME 2

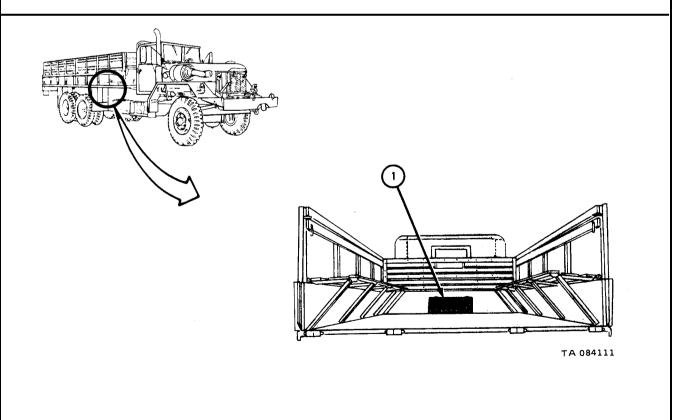

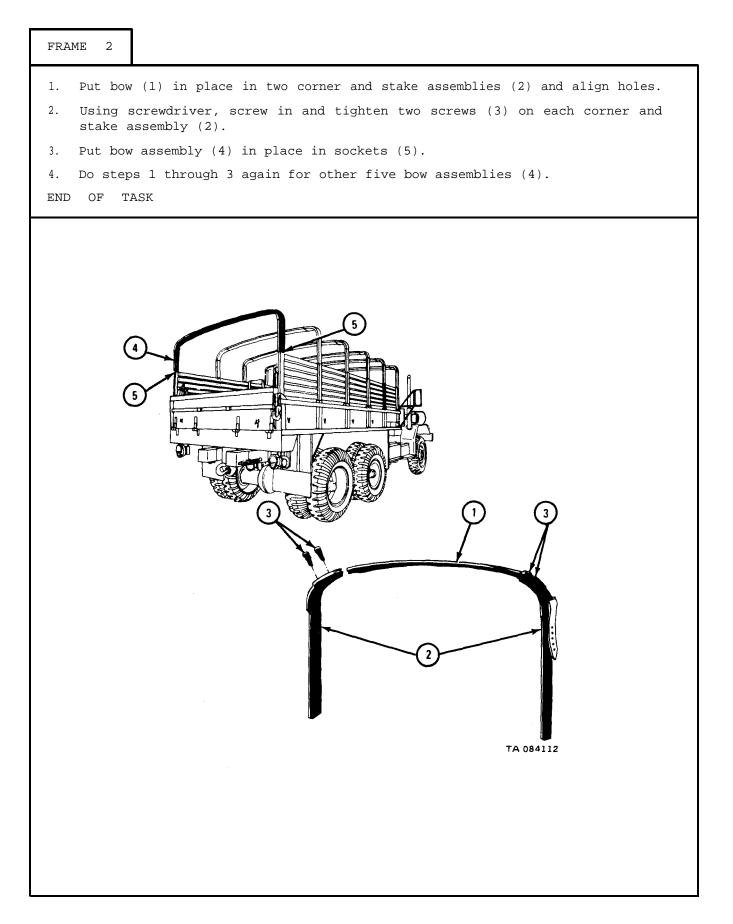

b. Installation of End Curtains.

FRAME 1
 Put two lashing ropes (1) through two eyelets (2) on rear end curtain (3) and pull them through until knots at ends of lashing ropes are against eyelets.
 Put rear end curtain (3) in place on bow (4). Lace on lashing rope (1) around bow (4) and through all eyelets (2) on one side of rear end curtain (3). Do the same thing with other lashing rope.
 Loop lashing rope (1) around hook (5) and pull lashing rope tight and tie it onto hook (6). Do the same thing with other lashing rope.
NOTE
Do not tie or lash bottom of rear end curtain when carrying passengers.
5. Join safety strap (7) to two eyelets (8) on top of side rail ends.
6. Do steps 1 through 4 again for front end curtain.
END OF TASK
<image/> <image/>

c. Installation of Paulin.

FRAME 1	
Soldiers 1. A and B	Put paulin (1) on middle of center bow (2) with the word FRONT on top and open end facing to rear of truck as shown.
Soldier A 2.	Hold paulin (1) so it does not fall or slide.
Soldier B 3.	Unfold end of paulin (1) marked FRONT to front bow (3) and let it hang over bow as shown.
4.	Hold paulin (1) in place on bows so that it does not move.
Soldier A 5.	Unfold end of paulin marked REAR to rear bow (4) and let it hang over bow.
GO TO FRAME	2


FRAME 2
Soldier A 1. Hold paulin (1) so that it does not move on bows. Soldier B 2. Unfold side (2) of paulin (1), then unfold side (3). GO TO FRAME 3
<image/>

d. <u>Removal of Paulin</u>.

FRAME 1	
	lashing ropes (1) from hooks (2) on four sides of truck body (3). 2

FRAME 2 Soldiers 1. Take paulin (1) off truck and spread it out on a flat dry surface, A and B with buckles (2) up. Starting from one side of paulin (1), fold it to center, making each 2. fold (3) about two feet wide. 3. Do step 2 again on other side of paulin (1) until two sides (4) meet. 4. Fold one side (4) of paulin (1) over the other. GO TO FRAME 3 3 1 TA 084117

frame 3		
Soldiers A and B		Starting from front or back of paulin (1), fold end to center, making each fold (2) about two feet wide.
	2.	Do step 1 again on the other side of paulin (1) until two ends (3) meet. Fold one end over the other.
	3.	Put front end of paulin (1) up. Using chalk, mark FRONT on paulin. Turn paulin over and mark REAR on the other side.
	4.	Stow paulin (1).
END OF	TAS	к

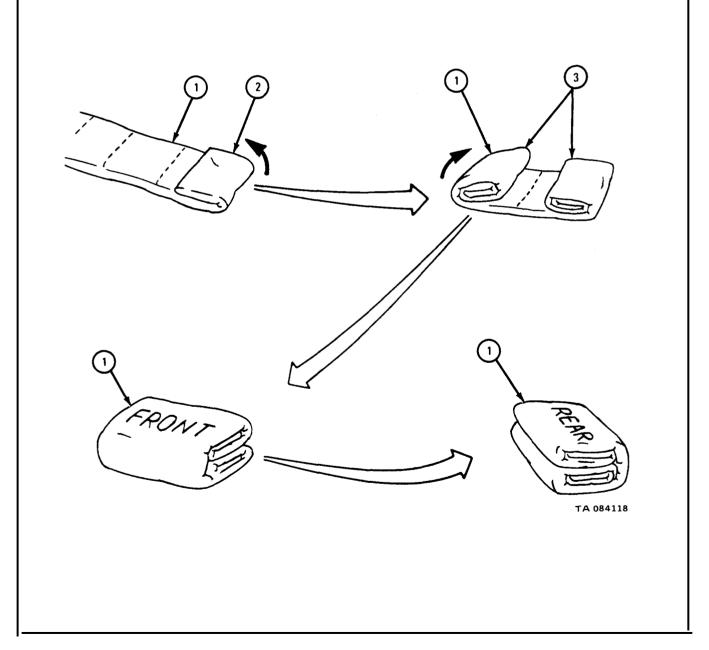

e. <u>Removal of End Curtains</u>.

FRAME 1
 Untie two lashing ropes (1) from two hooks (2). Unwind lashing ropes (1) from rear end curtain eyelets (3) and end bow (4) and take out two lashing ropes. Take safety strap (5) out of two eyelets (6). Put end curtain (7) on a flat dry surface and put coiled ropes (1) on rear end curtain. Fold end curtain to about same size as folded paulin. Do steps 1 through 3 again for front end curtain. Stow end curtains with paulin. END OF TASK

f. <u>Removal of Bow Assemblies</u>.

<pre>FRAME 1 1. Lift bow assembly (1) out of two sockets (2). 2. Using phillip screwdriver, unscrew and take out two screws (3) from two corners and stake assemblies (4). 3. Pull bow (5) out of two corner and stake assemblies (4). 4. Do steps 1 through 3 again for other five bow assemblies (1). GO TO FRAME 2</pre>
Image: constrained state stat

-

	d bows on cargo bed.	<image/>
	semblies (1)	
	stake ass	
	orner and ASK	
IE 2		
FRAM	1. END	

By Order of the Secretaries of the Army and Air Force:

E. C. MEYER General, United States Army Chief of Staff

Official:

J. C. PENNINGTON Major General, United States Army The Adjutant General

Official:


LEW ALLEN, JR., General, USAF Chief of Staff

VAN L. CRAWFORD, JR., Colonel, USAF Director of Administration

DISTRIBUTION:

To be distributed in accordance with DA Form 12-38, Operator maintenance requirements for 5-Ton Truck Chassis: 5-Ton, 6x6, M39A2.

₽ U.S. GOVERNMENT PRINTING OFFICE: 1980-603128/279

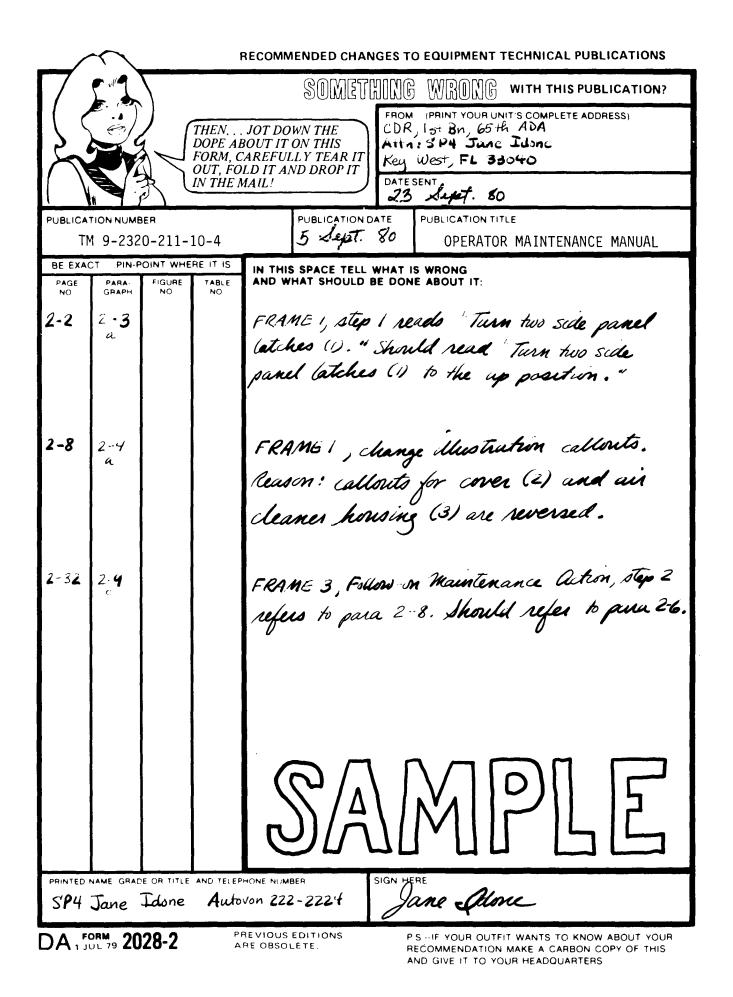

	RECOMMENDED CHANGES TO	D EQUIPMENT TECHNICAL PUBLICATIONS
	Somethine	
DOPE AL FORM, C	JOT DOWN THE BOUT IT ON THIS CAREFULLY TEAR IT DLD IT AND DROP IT MAIL!	
PUBLICATION NUMBER	PUBLICATION DATE	PUBLICATION TITLE
TM 9-2320-211-10-4	5 SEPT 80	OPERATOR MAINTENANCE MANUAL
BE EXACT PIN-POINT WHERE IT IS	IN THIS SPACE TELL WHAT I	
PAGE GRAPH FIGURE TABLE NO GRAPH NO NO	AND WHAT SHOULD BE DON	• ABOUT 11:
PRINTED NAME GRADE OR TITLE AND TELEP	HONE NUMBER SIGN HE	RE
	RE OBSOLETE, R	SIF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR ECOMMENDATION MAKE A CARBON COPY OF THIS ND GIVE IT TO YOUR HEADQUARTERS

COMMANDER U.S. ARMY TANK – AUTOMOTIVE MATERIEL READINESS COMMAND ATTN: DRSTA-MB WARREN, MI 48090

OFFICIAL BUSINESS PENALTY FOR PRIVATE USE \$300 POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314



L

TEAR ALONG PERFORATED LINE

1

FILL IN YOUR

DEPARTMENT OF THE ARMY


FOLD BACK

- --- --- -

REVERSE OF DA FORM 2028-2

7	21111 I				SOMET	nine	WRONG WITH THIS PUBLICATION
			DOPE AE FORM, C.	BOUT IT AREFUL	WN THE ON THIS LY TEAR IT ND DROP IT	FROM	I: (PRINT YOUR UNIT'S COMPLETE ADDRESS)
N		R I	IN THE			DATE	SENT
UBLICAT		BER			PUBLICATION	DATE	PUBLICATION TITLE
TM 9	-2320-2	211-10-	4		5 SEPT 80		OPERATOR MAINTENANCE MANUAL
-		OINT WHE			S SPACE TELL		
NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.	AND	HAT SHOULD		IE ABOUT IT:
			{				
i							
			ł I				
			{				
			ļ				
	1						
			[]				
RINTED	IAME, GRAC	E OR TITLE.	AND TELEP	HONE NUM	IBER	SIGN H	ERE:

REVERSE OF DA FORM 2028-2

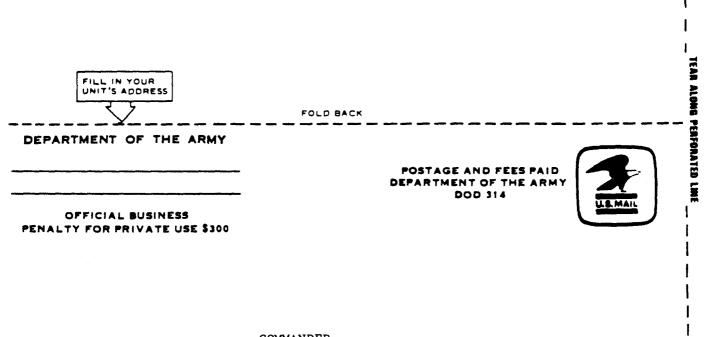

COMMANDER U.S. ARMY TANK-AUTOMOTIVE MATERIEL READINESS COMMAND ATTN: DRSTA-MB WARREN, MI 48090

THE METRIC SYSTEM AND EQUIVALENTS

LINEAR MEASURE

1 Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches 1 Meter = 100 Centimeters = 1,000 Millimeters = 39.37 Inches 1 Kilo Meter = 1,000 Meters = 0.621 Miles

WEIGHTS

1 Gram = 0.001 Kilograms = 1,000 Milligrams = 0.035 Ounces

Kilometers Per Liter

- 1 Kilogram = 1,000 Grams = 2.2 Lb
- 1 Metric Ton = 1,000 Kilograms = 1 Megagram = 1.1 Short Tons

LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces 1 Liter = 1,000 Milliliters = 33.82 Fluid Ounces

SQUARE MEASURE

1 Sq Centimeter = 100 Sq Millimeters = 0.155 Sq Inches 1 Sq Meter = 10,000 Sq Centimeters = 10.76 Sq Feet 1 Sq Kilometer = 1,000,000 Sq Meters = 0.386 Sq Miles

CUBIC MEASURE

1 Cu Centimeter = 1,000 Cu Millimeters = 0.06 Cu Inches 1 Cu Meter = 1,000,000 Cu Centimeters = 35.31 Cu Feet

TEMPERATURE

5/9 (° F -32) = °C 212° Fahrenheit is equivalent to 100° Celsius 90° Fahrenheit is equivalent to 32.2° Celsius 32° Fahrenheit is equivalent to 0° Celsius 9/5 C° +32 = F°

APPROXIMATE CONVERSION FACTORS

MULTIPLY BY **TO CHANGE** то Inches 2.540 0.305 Yards..... 0.914 Kilometers.... 1.609 Square Centimeters 6.451 0.093 0.836 2.590 Square Hectometers 0.405 Cubic Meters. 0.028 Cubic Meters. 0.765 Fluid Ounces Milliliters. 29.573 Liters. 0.473 0.946 Gallons. Liters. 3.785 28.349 0.454 0.907 1.356 Kilopascals. 6.895 Kilometers Per Liter 0.425 Miles Per Hour. Kilometers Per Hour 1.609 TO CHANGE то MULTIPLY BY 0.394 3.280 Yards..... 1.094 Kilometers. 0.621 0.155 Square Feet 10.764 1.196 Square Kilometers 0.386 Square Hectometers 2.471 Cubic Meters. 35.315 1.308 0.034 Liters.... 2.113 1.057 Liters..... Gallons.... 0.264 0.035 2.205 1.102 0.738 Pounds Per Square Inch 0.145 Kilopascals.

Miles Per Hour.

2.354

0.621

This fine document...

Was brought to you by me:



Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<u>http://www.liberatedmanuals.com/</u>>Free Military and Government Manuals

Sincerely
 Igor Chudov
 <u>http://igor.chudov.com/</u>
 Chicago Machinery Movers