

OPERATOR'S MANUAL



TOWBAR

MOTOR VEHICLE

**OCT
1972**

WARNING

TO AVOID DAMAGE OR INJURY

- ◆ NEVER ATTEMPT TO HOOK UP THE TOWBAR ALONE,
(USE TWO PEOPLE) .
- ◆ NEVER USE THE TOWBAR WITHOUT THE CLEVISES.
- ◆ TENSION ADJUSTING NUTS MUST BE TIGHT,
USE A WRENCH.

TOWING IS SERIOUS BUSINESS

WARNING

TO AVOID DAMAGE OR INJURY

- ◆ THE M715 OR M725, 1-1/4 TON VEHICLES CANNOT BE TOWED USING THIS TOWBAR. THESE VEHICLES MUST BE LIFT TOWED BY A WRECKER IN ACCORDANCE WITH FM 20-22 (JULY 1970), PARAGRAPH 90 b. "VEHICLE RECOVERY OPERATIONS".

TOWING IS SERIOUS BUSINESS

WARNING

TO AVOID **DAMAGE** OR **INJURY**



- ◆ WHEELED VEHICLES UP TO AND INCLUDING 14,000 LBS GROSS WEIGHT CAN BE TOWED WITH ALL WHEELS ON THE GROUND WITH THE TOWBAR IN ANY POSITION WHEN CONNECTED TO THE BUMPER SHACKLE BRACKETS. IT IS DESIRABLE TO KEEP THE TOWBAR EXTENSION AS CLOSE TO THE RETRACTED POSITION AS POSSIBLE.

WARNING

TO AVOID DAMAGE OR INJURY



WHEELED VEHICLES UP TO AND INCLUDING 42,000 LBS GROSS WEIGHT CAN BE TOWED WITH ALL WHEELS ON THE GROUND WITH THE TOWBAR IN THE RETRACTED POSITION WHEN CONNECTED TO THE BUMPER SHACKLE BRACKETS.

THIS ALLOWS TOWING OF ALL WHEELED VEHICLES UP TO AND INCLUDING EMPTY 5 TON TRUCKS. DO NOT EXCEED A SPEED OF 20 MPH OVER PRIMARY AND SECONDARY ROADS. THE 42,000 POUND GROSS WEIGHT LIMIT CAN BE APPLIED TO ANY LOADED VEHICLE THAT DOES NOT EXCEED 42,000 POUNDS GROSS WEIGHT.

JUST THE FACTS ON:

THE **MOTOR VEHICLE**

(FSN 4910-735-6056)



TOWING CAPACITY —————→ Extended - 14,000 Lbs gross weight
Retracted - 42,000 Lbs gross weight

MAXIMUM LEG EXTENSION —————→ 81 INCHES


MINIMUM LEG EXTENSION —————→ 53 INCHES

LEG SPREAD —————→ 37 INCHES


WEIGHT —————→ 165 LBS

VOLUME —————→ 3.3 CUBIC FEET

EVERY TOWBAR COMES FULLY

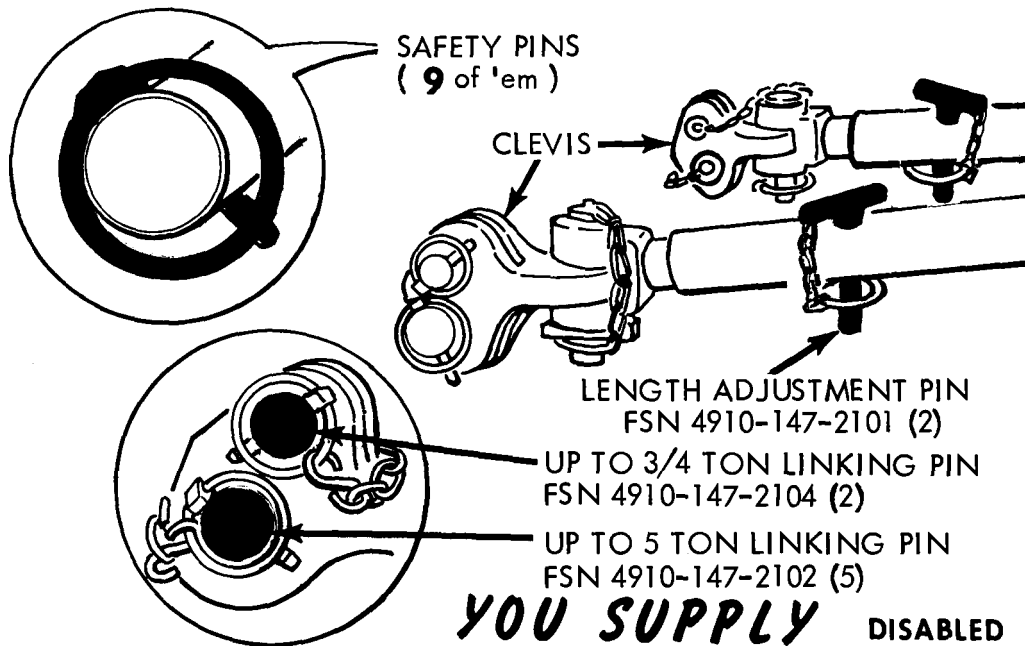

EQUIPPED WITH THE FOLLOWING:

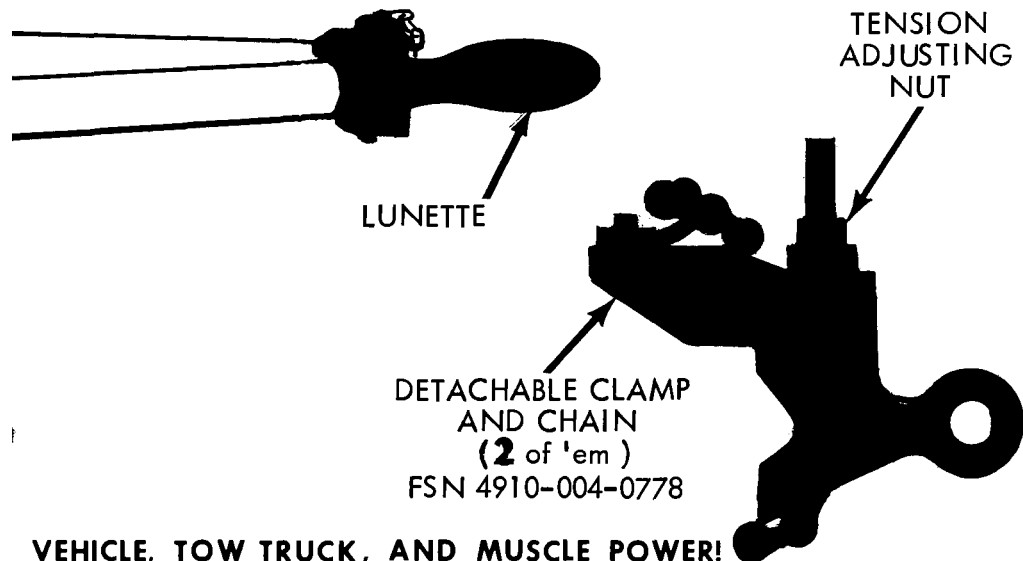


VEHICLE, TOW TRUCK, AND MUSCLE POWER!

OPERATING


YOUR TOWBAR

3 WAYS


- 1) By coupling onto bumper shackle brackets.

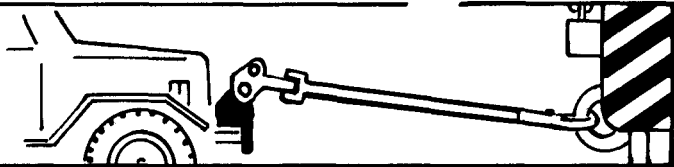

- 2) By attaching clamps and chains of towbar to front axle for lift tow operations.

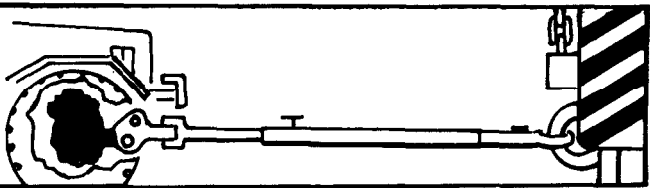


- 3) By using clamps and chains on bumper.

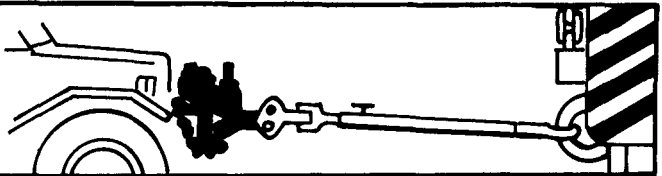

1 BRACKET TOWING

If your disabled vehicle has bumper shackle brackets (and steering, transmission, and front tires are O. K.) tow by coupling into brackets.

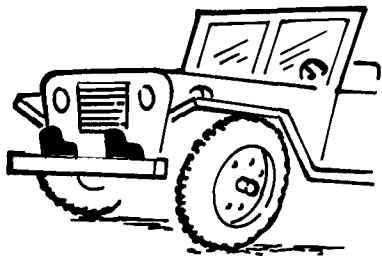


HERE'S HOW:



FIRST- Remembering that two are better than one, get a buddy to steer the disabled vehicle. Two drivers make the towing job **QUICKER, EASIER, and SAFER!**


SECOND- Select the linking pins you'll want to use, then couple onto bumper shackle brackets.

MORE  9

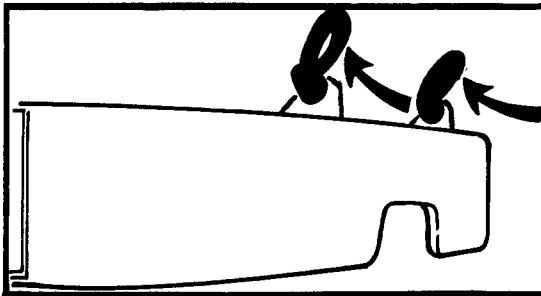

Remove towing pins
and lifting shackles from
brackets and set them aside.
They won't be used.

YOUR HOOK-UP SHOULD LOOK LIKE THIS ON THE 5 TON TRUCK

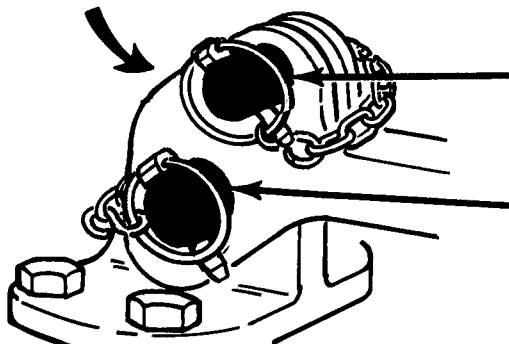


3/4 inch linking pin (smaller) is
used for vehicles up to 3/4 ton.


1 inch linking pin (larger) is
used for vehicles over 3/4 ton,
including 5 ton.

TWO RULES TO REMEMBER HERE:


- 1) The linking pin you're using will **ALWAYS** be on the **BOTTOM**.
- 2) The **TOP** of the "T" of length adjustment pin is **ALWAYS** on **TOP**.

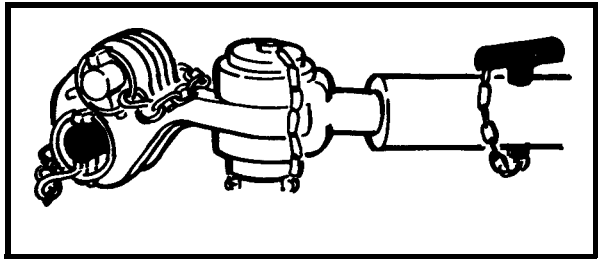


Rotate leg extension
and clevis 180°

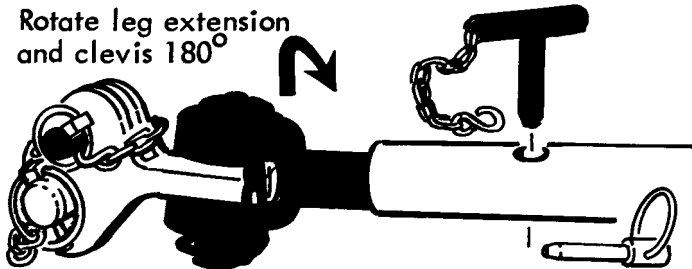

Presto !!

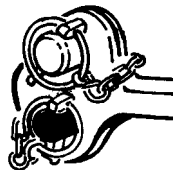

After clevises are connected to bumper shackle brackets attach lunette to the tow truck pintle.

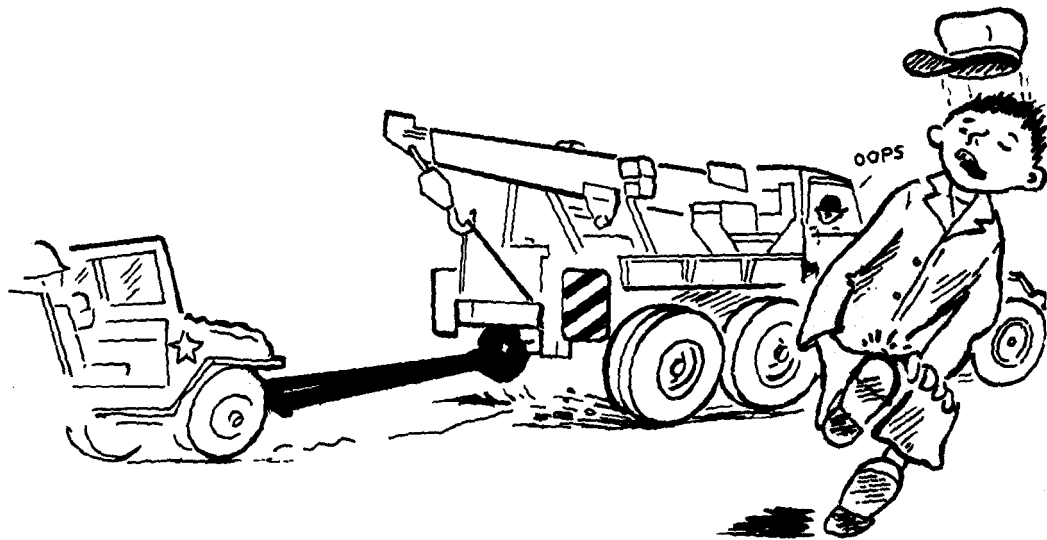


THE TOWBAR IS ALWAYS ATTACHED TO TOW TRUCK LAST!!
BACK the truck CAREFULLY and watch your toes !




DANGER

Be certain you have the proper linking pins in the clevis holes and always be sure your **9** safety pins are properly secured. (They snap shut automatically.)

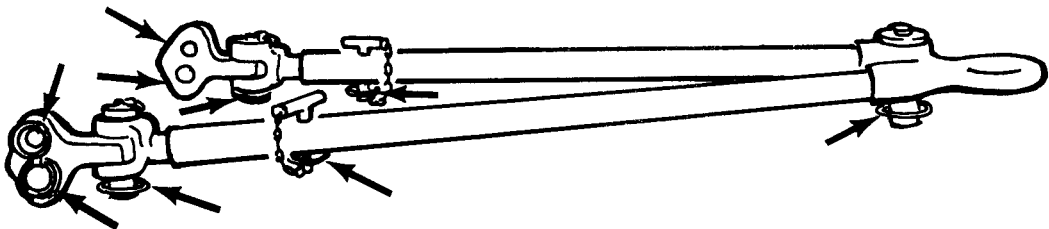

NOTE: PLIERS MAY BE NEEDED TO REMOVE SAFETY PINS.

SHOULDER

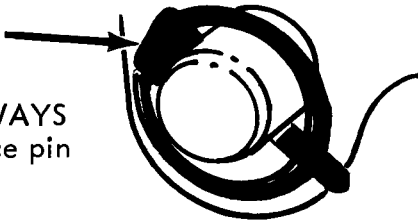


The shoulder of pin **ALWAYS** faces **AWAY** from surface pin lies against.

IT ONLY
goes in
ONE
way!!



Use only the equipment -- including safety pins-- that comes with your TOWBAR. Don't interchange linking pins, safety pins, etc., from your vehicles with those of your TOWBAR.

TOWBAR EXTENDED:

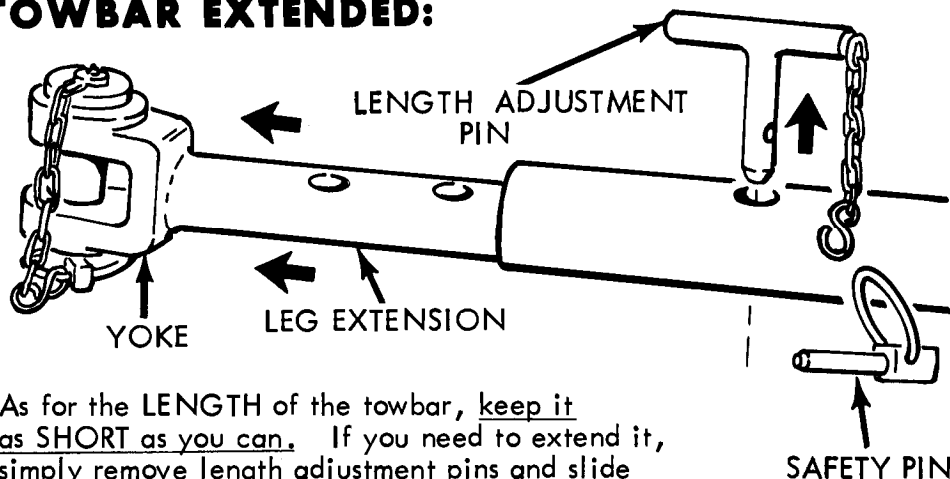

As for the LENGTH of the towbar, keep it as SHORT as you can. If you need to extend it, simply remove length adjustment pins and slide out leg extensions.

Whatever you do, don't use your TOWBAR without the CLEVISES !

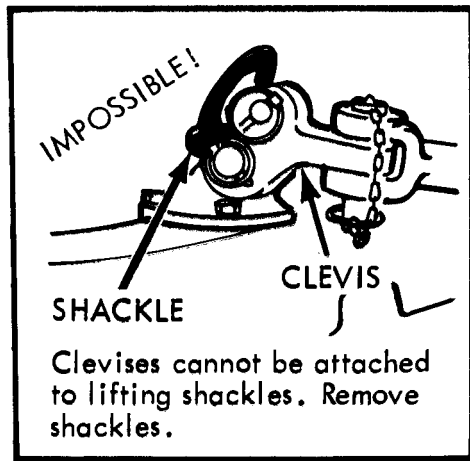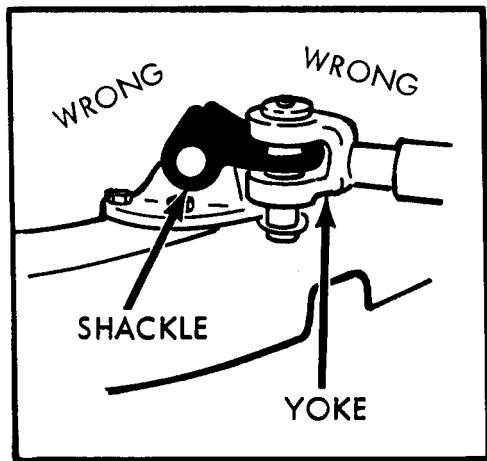


Hook it up right, or the results could be DISASTROUS ! !


THERE IS A LIST OF IMPORTANT WARNINGS AT THE FRONT
OF THIS MANUAL.

*When
You're
Through*


First, un-hook towbar's
lunette from tow truck's
pintle. . .

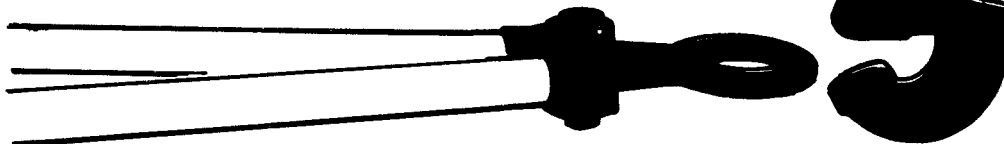

... then un-couple
clevises from brackets.

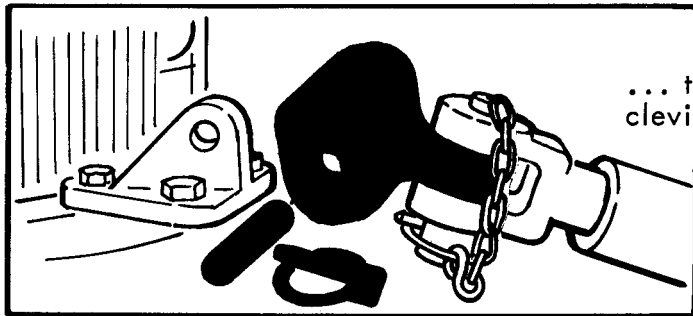

Put all pins, etc., back in place before storing. You'll use less space if you slide the leg extensions completely in.

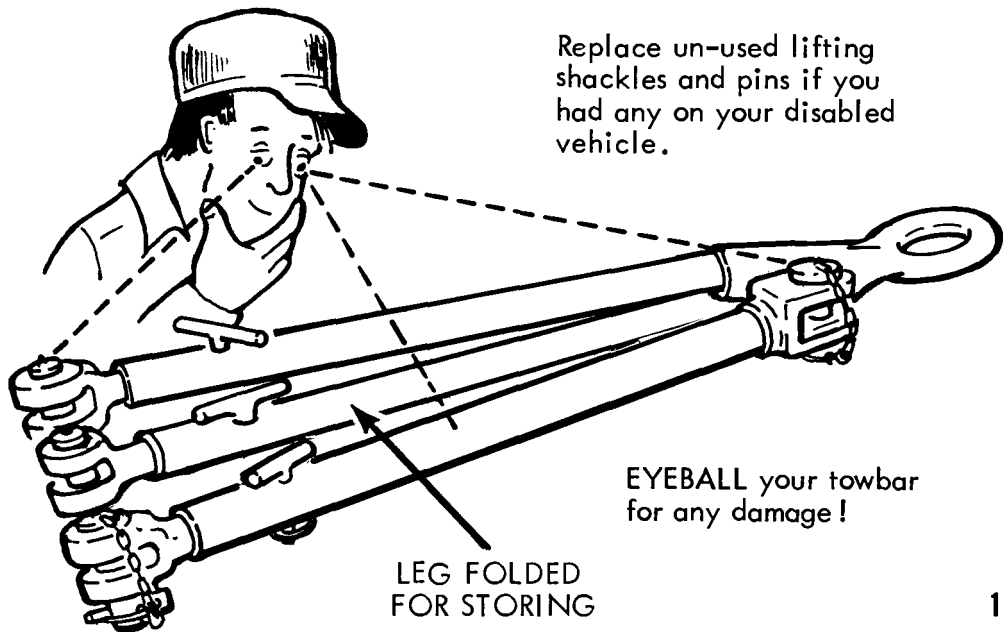


Replace un-used lifting shackles and pins if you had any on your disabled vehicle.

EYEBALL your towbar for any damage!

LEG FOLDED FOR STORING

2 LIFT-TOW OPERATIONS

If your disabled vehicle has NO towing brackets on its front bumper, or power steering, transmission, or front tires are somehow inoperable, lift-tow using a wrecker (see FM 20-22, Para. 90 b.).

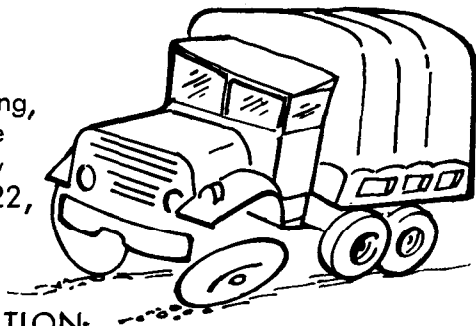


HERE'S WHAT YOU'LL DO IF
TOWBAR IS USED FOR STABILIZATION:

1

LENGTH ADJUSTMENT PIN


Remove length
adjustment pins
from the towbar's
legs...

SAFETY PIN

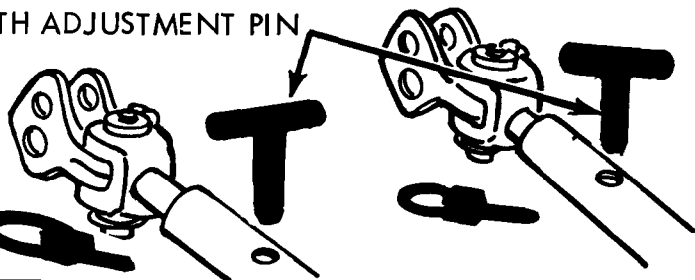

2

...and slide out leg extensions completely.

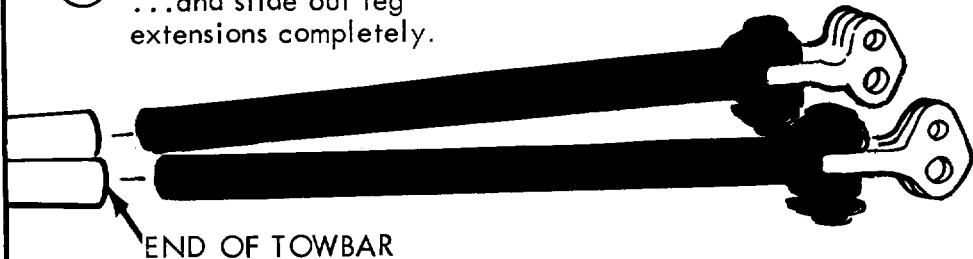

3

Now, attach clamps to clevis of each leg extension like this:





MORE

- 4 When lift-towing, the **LARGER** linking pin is **ALWAYS** on the **BOTTOM**.

Rotate clevis 180° to change pin.


If everything looks O.K., you're ready to attach clamps and chains to axle.

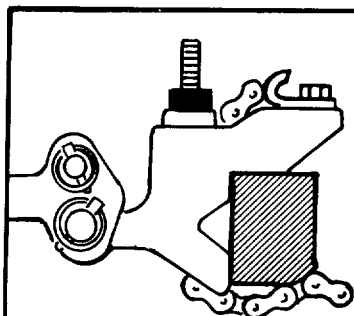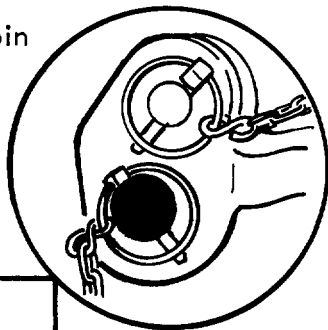

Clamp fits snugly against front of axle, with tension adjusting nut on **TOP**.


5

Loosen nut generously, but **DON'T** un-screw it completely.

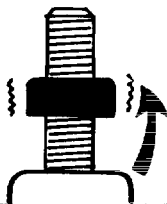

6


Now, pull chain around axle and up through clamp.

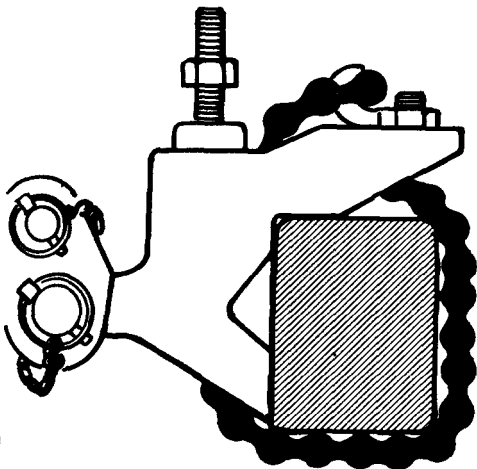

Pull it TIGHT and place it on hook.

7

Even you strongmen will now TIGHTEN the tension adjusting nuts with a WRENCH.

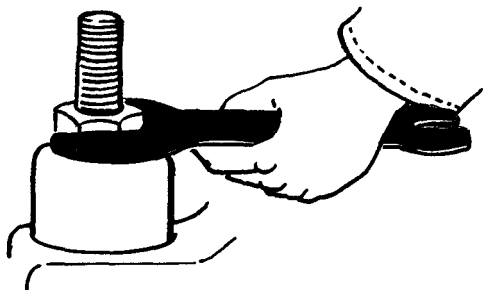


Make sure clamp and chain are firmly secured. A loose nut may allow them to work loose..

...THEN

8

When both clamps are secured, slide leg extensions back into legs as far as is necessary, and replace length adjustment pins, with top of "T" on TOP!

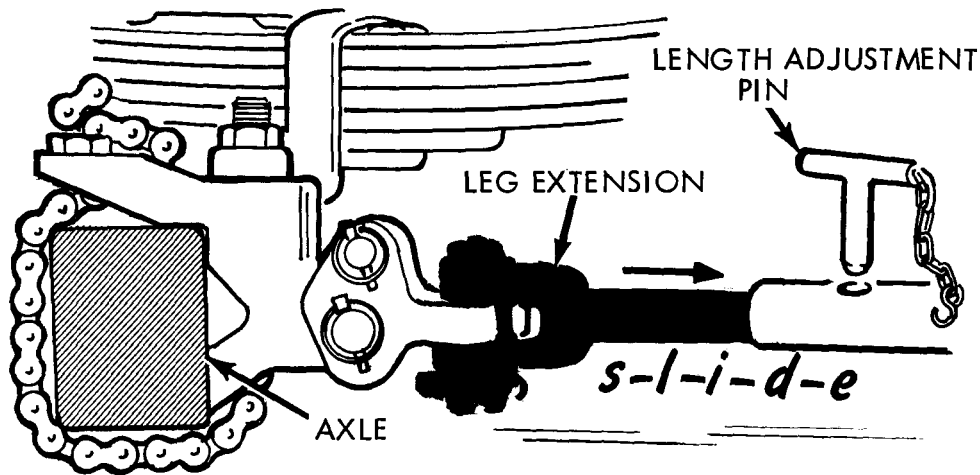


Keep LENGTH of TOWBAR as SHORT as you can.



BE SAFE!

Check to see that all 9 safety pins are in place.

Now you're ready to attach towbar's lunette to tow truck's pintle. Back up the truck if necessary.

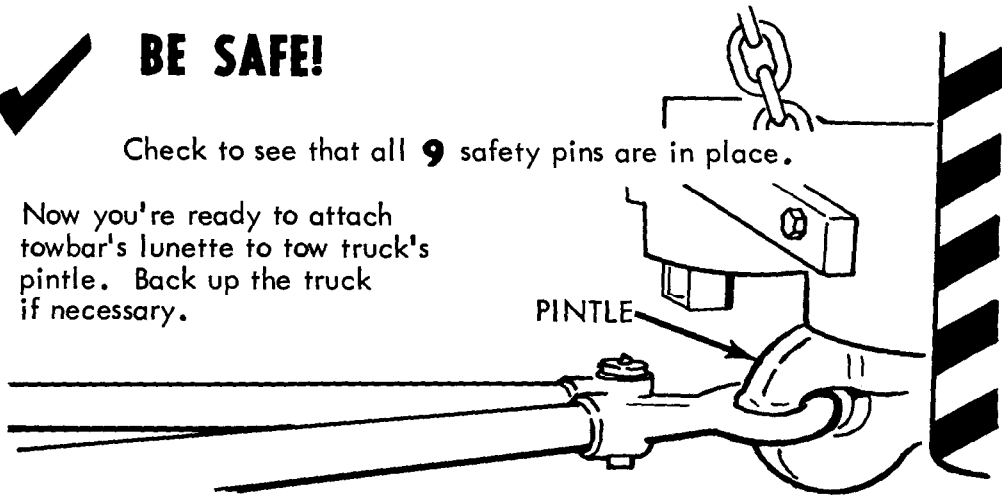


NOTE: When towing a vehicle by the axle, use a **WINCH** and **HOOK** along with the towbar, in order to raise the front wheels of the towed vehicle.


- Always completely attach towbar **FIRST** when using a winch with it.

MORE ►

TOWBAR BEING USED
WITH HOOK AND WINCH

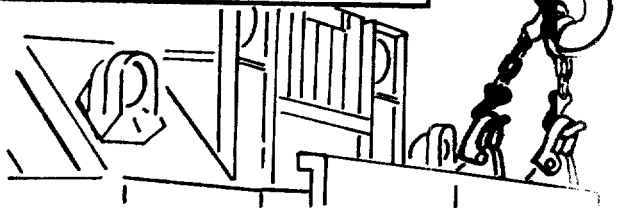

NOTE that towbar is fairly
parallel to the ground.

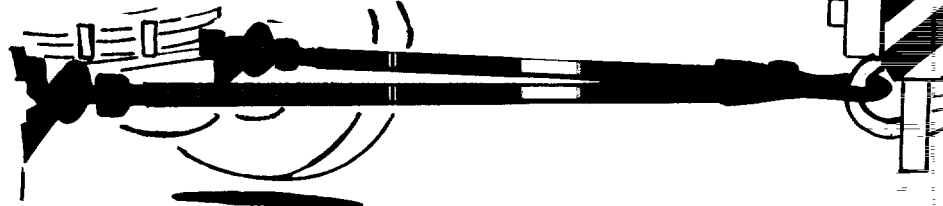

A BETTER TOW...

24 A set-up using both the TOWBAR and the WINCH offers
better maneuverability.

When you're through:

- ① Lower towed vehicle to ground, remove hook and chains, then disconnect towbar from truck pintle.)


- ② Out come length adjustment pins and legs of towbar.

- ③ Screw off tension adjusting nuts generously and remove clamps and chains from axle.

...NEXT ➡


4

Now slide leg extensions back in place and replace length adjustment pins.

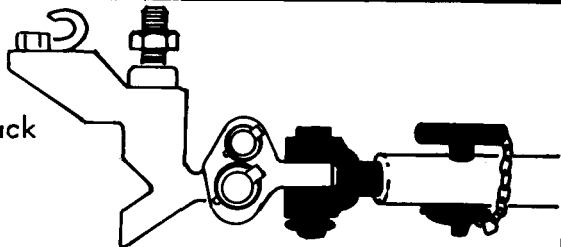

5

Finally, (whew!) remove clamps from towbar.

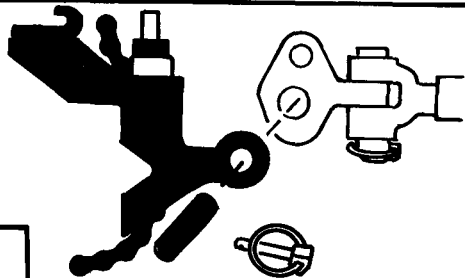


Make sure all pieces of towbar are back in place before storing!

TOWING can be **FUN!!**

3 BUMPER TOWING

If there are no towing shackle brackets on the disabled vehicle tow from the front bumper.

Follow the same procedures and precautions described in section 2 (lift-tow operations), EXCEPT you'll attach clamps and chains to bumper . . .

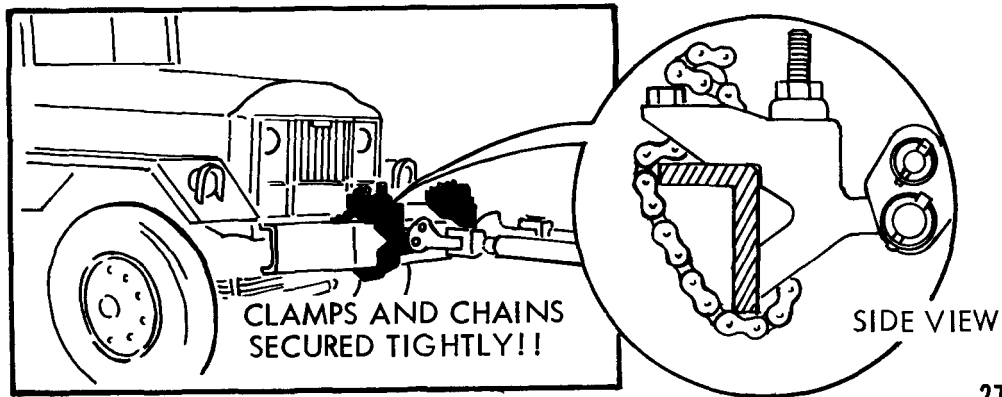

LUBRICATION ?

Maybe a rub-down
periodically to prevent
and, a dab or two of general purpose oil around your various
pins will make them easier to work with. Common sense is
the guide here.

RUSTING

A FINAL WORD **Safety!**

A sharply turned corner or a U-TURN can **CRACK**
the legs of your TOWBAR! Take these
kinds of turns SLOWLY! The vehicle you save...

**ANY OTHER TOWING RESTRICTIONS ARE IN YOUR
VEHICLES' MANUALS.**

... ANY QUESTIONS??

HAVE A SUGGESTION MAYBE?

WE AIM TO PLEASE.

Write to us.



COMMANDING GENERAL
U.S. ARMY WEAPONS COMMAND
ATTN: AMSWE - MAS
ROCK ISLAND, ILLINOIS 61201



TM 9-4910-496-10

This TM supersedes TM 9-4910-496-10, December 1971, and DA Messages WECOM 262016Z, Jul 72 (U) and 241721Z, Oct 72 (U); Subject: Interim Change to TM 9-4910-496-10 for Towbar, Motor Vehicle, FSN 4910-735-6056.

By Order of the Secretary of the Army:

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-21 (qty rqr block No. 132) Requirements for FSC Group 4910-IL.

This fine document...

Was brought to you by me:



[Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals

- Sincerely
Igor Chudov
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)