### TECHNICAL MANUAL

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS LIST
FOR

### **BLAST CLEANING MACHINE**

MODELS 15L, 25L, 35W, 100, 200E, 300LEA, 300-LA, & 600-LA P.K. LINDSAY COMPANY, INC.) (NSN 4940-00-277-2999)

#### **TECHNICAL MANUAL**

No. 9-4940-658-14&P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 10 April 1981

Operator's, Organizational, Direct Support And General Support Maintenance Manual Including Repair Parts List For

BLAST CLEANING MACHINE MODELS 15L, 25L, 35W, 100, 200E 300LEA, 300-LA AND 600-LA (P.K. LINDSAY COMPANY, INC.) (NSN (4940-00-277-2999)

### REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual direct to: Commander, US Army Armament Materiel Readiness Command, ATTN: DRSAR, Rock Island, IL 61299. A reply will be furnished direct to you.

#### NOTE

This manual is published for the purpose of identifying an authorized commercial manual for the use of the personnel to whom this blast cleaning machine is issued.

Manufactured by: P.K. Lindsay Company, Inc.

Deerfield, New Hampshire 03037

Procured under Contract No. DAAA09-77-C-6072

This technical manual is an authentication of the manufacturer's commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. This technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment.

# INSTRUCTIONS FOR REQUISITIONING PARTS NOT IDENTIFIED BY NSN

When requisitioning parts not identified by National Stock Number, it is mandatory that the following information be furnished the supply officer.

- 1 Manufacturer's Federal Supply Code Number 36367
- 2 Manufacturer's Part Number exactly as listed herein.
- 3 Nomenclature exactly as listed herein, including dimensions, if necessary.
- 4 Manufacturer's Model Number Model 15L, 25L, 35W, 100, 200E, 300LEA, 300-LA and 600-LA
- 5 Manufacturer's Serial Number (End Item)
- 6 Any other information such as Type, Frame Number, and Electrical Characteristics, if applicable.
- 7 If DO Form 1348 is used, fill in all blocks except 4, 5, 6, and Remarks field in accordance with AR 725-50.

Complete Form as Follows:

- (a) In blocks 4, 5, 6, list manufacturer's Federal Supply Code Number - 36367 followed by a colon and manufacturer's Part Number for the repair part.
- (b) Complete Remarks field as follows:

Noun: (nomenclature of repair part)

For: NSN: 4940-00-277-2999 Manufacturer: P.K. Lindsay Company, Inc.


Model: 15L, 25L, 35W, 100, 200E, 300LEA, 300-LA and 600-LA


Serial: (of end item)

Any other pertinent information such as Frame Number, Type, Dimensions, etc.

# MODELS 15L, 25L, 35W, 100, 200E, 300LEA, 300-LA & 600-LA OPERATING INSTRUCTIONS & PARTS LIST

- 1. The choice of nozzle size is limited by the c f m air capacity of the compressor. For fast cutting or cleaning, the nozzle should be no larger than will permit the compressor to maintain 80 pounds pressure when blowing continuously. Thus 3/32" or 7/64" nozzles should be used with a Model 15 compressor, 5/32" nozzles with Model 40, 3/16" nozzles with Model 55, 1/4" nozzles with Model SO or Model 125, 5/16" nozzles with Model 150-A and Model 150-P. For most work the operator should wear for protection a Model CH helmet and a glove for the hand holding the nozzle. To make sure that abrasive does not settle in the sand hose, use only 1/2" sand hose with 3/32", 7/64" and 5/32" nozzles. Use 3/4" hose with 3/16" and 1/4" nozzles and 1" hose with 5/16" and 3/8" nozzles. When heavy steel shot or grit is used, the next smaller sand hose size should be used.
- 2. When the sandblast is equipped with 3/32" or 7/64" nozzles, the sand should be dried and uniformly graded of about #30 screen, or #36 if electric furnace abrasive is used. With larger nozzles proportionately coarser grit may be used. The funnel screen is for removing foreign material from the abrasive and is not fine enough for grading the abrasive.
- 3. To fill the sandblast, close the nixing valve by pulling the control lever toward the moisture separator. Fill the tank with abrasive, using the sieve while doing so. Connect the air hose to the air inlet valve on the moisture separator and close the valve. On Models 15-L, 25-L, 35-W, 100 and 200-E, shake the filler plug to clean the abrasive off the rubber lip and pull the plug in place so that there is no leak and the pressure will hold it there as you open the air valve on the side of the moisture separator. On Models 300LEA, 300L-A and 600L-A, close the air inlet valve at the hose connection on the moisture separator, start the compressor and allow it to build to full pressure. After the compressor has reached full pressure, open the air inlet valve wide. The flow of air will automatically close the sandblast filler plug and pressurize the sand tank. To relieve the pressure in order to refill the tank or change nozzles, shut off the air inlet valve and open the pressure release valve on the top of the moisture separator. Relieve the pressure from the tank in this way every time you stop using it EVEN FOR TWO CR THREE MINUTES. The reason for this is that air standing in the tank under pressure condenses moisture which tends to clog the mixing valve. Open drain cock at bottom of moisture separator frequently to remove moisture. When using a compressor such as a rotary-type with an automatic blow-down feature, a check valve should be located between the compressor and the sandblast to prevent back flow of abrasive into the compressor when air is released by the automatic blow-down device.
- 4. When you are ready to sandblast, start opening the mixing valve by moving the control lever out-ward from the tank. The valve first passes air only, then increasing amounts of sand. Start by moving the lever gradually so as not to go past the correct position (particularly when using a long hose length). You can tell when it is cutting by the cutting effect of the abrasive when it hits the material and the feeling of force with which the abrasive rebounds from it. Occasionally the nozzle may become clogged and it will be necessary to remove it, clean it out, and blow out the sand hose.
- 5. You will note that a small amount of air continues to come through the nozzle when the control lever is If you desire to shut off the air completely, close the air inlet valve and open the pressure release valve as explained in paragraph #3. With considerable use the valve washers #-45 and valve plate #-36 wear enough to interfere with accurate regulation of the volume of sand. These parts, including valve cushions #-25, should then be replaced.
- 6. The nozzles should be changed whenever they wear sufficiently to lose their cutting power at lower than SO p s i.
- 7. To empty the sandblast, put the nozzle holder without the nozzle in a suitable container. To prevent abrasive from being blown out, cover the bucket with a board or burlap and reduce the pressure on the sandblast to about 10 pounds, by partly closing the air inlet valve and opening the drain cock. After this has been done, push the control lever to the position marked purge. When using steel shot, it is well to empty the tank every time you are through using it to avoid caking the shot from rust. Even sand should not be allowed to stand in the tank for long periods.
- 8. To test the entire outfit for loss of pressure due to an air leak, move the compressor and sandblast units close together and force the sandblast nozzle tightly against a flat rib on the rubber tire of the compressor. Allow the compressor to build up to SO pounds pressure on the sandblast gauge and shut it off. If the unit holds the same pressure for a reasonable length of tire while all the sandblast controls are in their operating positions, there are no serious air leaks.

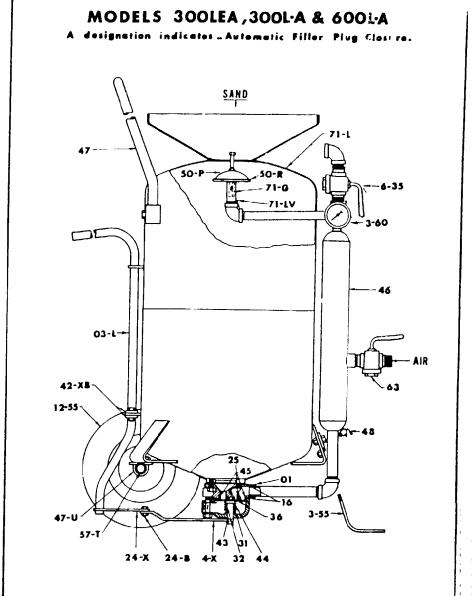

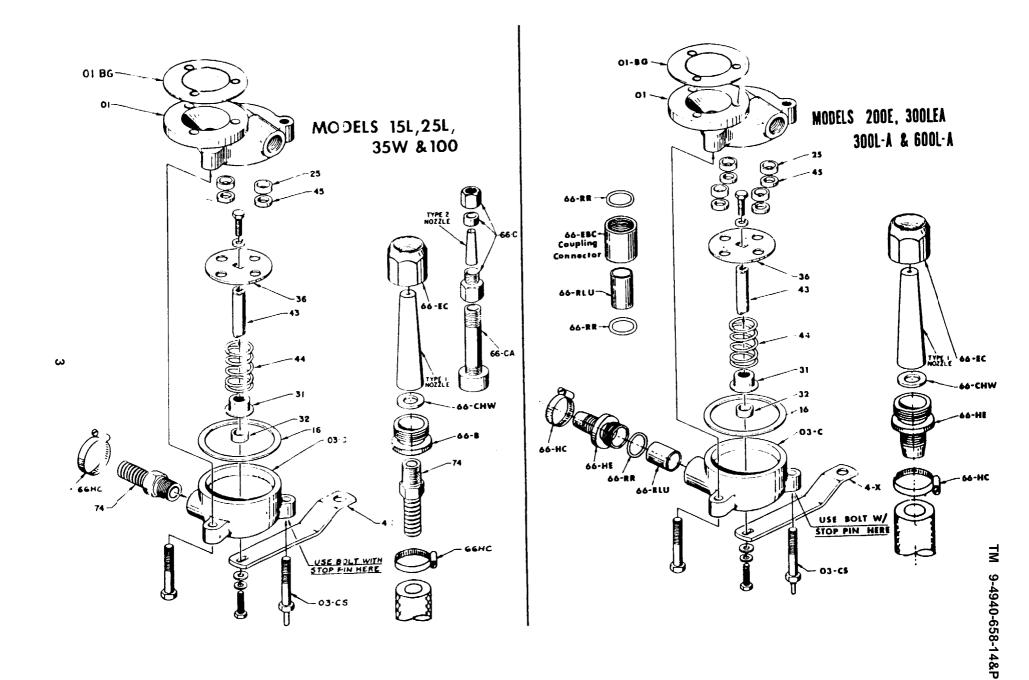

This sandblast is a Model 200 equippea with the mixing valve assembly used on a Model 100 sandblast to facilitate the use of 3/32", 7/64" and 1/8" nozzles and 1/21" I D sandblast hose.

PART NO.	DESCRIPTION	NO. USED
1-01	Valve Body, 3-1/2"Dia w/Screws	1
3-01-BG	Valve Body Gasket	1
1-03-LG	Control Lever Grip	1
1-03	Mixing Valve Assembly, 3½" Dia (Includes 3-36-A)	1
3-03-C	Valve Cover, 1/2" Pipe Thread, 3¼" Dia	1
3-03-CS	Valve Cover Screw w/Stop	1
2-03-L	Control Lever	1
C - 4 - X	Valve Spindle Arm	1
C-16	Valve Cover Gasket	1
C-24-B	Control Link Bolt, Sleeve and Nut	1
3-24-X	Control Link	1
C-25	Valve Cushion	2 1
C-31 C-32	Valve Spindle Packing Gland	1
3-35	Valve Spindle Packing Pressure Release Valve, 1/4"	1
3-36	Valve Plate, 2 5/8" Dia	1
3-36-A	Replacement Set: Valve Plate, Spindle,	·
	2 Washers, 2 Cushions & Cover Gasket	1
C-42-XB	Control Lever Bracket	2
3 - 4 3	Valve Spindle	1
3-44	Valve Spring	1
C-45	Valve Washer (3/8" hole)	2
1-46	Moisture Separator	1 1
3 - 4 7 1 5 - 4 7 - U	Handle U Bolt with Nuts	2
3 - 4 8	Drain Cock, 1/8"	∠ 1
C-50-G	Filler Plug Gasket	1
C-50-T	Top Filler Plug Washer	1
3-55	Spring Foot	1
12-55_	Semi-Pneumatic Tired Wheel	2
3-57-T	Axle with Nuts	1
3-60	Pressure Gauge	1
2-61-S	Replacement Screen, 9/64" Mesh, 12 3/4" Diameter	4
6-61	Sieve with Screen, 9/64" Mesh, 12 3/4"	1
0-01	Diameter	1
3-63	Air Inlet Valve (1/2")	1
2-71	Tank Assembly, includes Filler Plug	1
1 - 7 4	1/2" Sand Hose Nipple, 1/2" Pipe Thread	2
66-C	Nozzle Coupling (Type 2)	1
66-CA	Nozzle Coupling Adapter	1
66-CS	Rubber Sleeve for 66-C Coupling	1
6 6 - B 66-CHW	Nozzle Coupling Base (Type 1)	1
66-NW	Rubber Washer	1
66-EC	Rubber Washer	1
2-66-HC	Nozzle Cap, fits 3-66-HE, 4-66-HE & 66-B Hose Clamp for 1/2" Sand Hose	1 2
2 00 110	. Janu 11036	۷

By Order of the Secretary of the Army:

E. C. MEYER
General, United States Army
Chief of Staff

Official:

J. C. PENNINGTON
Major General, United States Army
The Adjutant General



# SOMETHING WRONG WITH THIS PUBLICATION?

THEN. JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL! FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

Your mailing address

DATE SENT

Date you filled out this form

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE Maintenance Manual for for Blast Cleaning Machine

10 Apr 81

TM 9-4940-658-14&P							
BE EXACT. PIN-POINT WHERE IT IS							
PAGE NO	PARA- GRAPH	FIGURE	TABLE				
7	1						
i							
		1					

# IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

Maintenance is misspelled. It is spelled maintnance...

Troubleshooting is incorrectly listed as being on Page 4. It should be on Page 7.

SAMPLE

PRINTED NAME, GRADE OR THILE, AND TELEPHONE NUMBER

John Smith

XXX-XXXX

SICH HERE

PREVIOUS EDITIONS ARE OBSOLETE. P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

DA 1 JUL 79 2028-2

TEAR ALONG PERFORATED LINE

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander

US Army Armament Materiel Readiness Command ATTN: DRSAR-MAS

Rock Island, IL 61299



SOMETHING WHONG WITH THIS PUBLICATION?

THEN. . JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATESENT

PUBLICATION NUMBER

TM 9-4940-658-14&P

PUBLICATION DATE 10 Apr 81

PUBLICATION TITLE Maintenance Manual for Blast Cleaning Machine

£						·		<u></u>	 <u></u>
Ţ	BE EXACT PIN-POINT WHERE IT IS				IN THIS	SPACE TEL	I. WHAT I	S WRONG	
Ì	PAGE NO	PARA- GRAPH	FIGURE NO	TABLE NO	AND W	HAT SHOUL	BE DON	E ABOUT IT:	
ı	l	1							
l	- 1	1							
ł	ł	1							
١	[								
ı	ł								
1									ì
1	-								
1	ļ								
1									
I	1								
ı	1								
١	j								
1					•				
			Ì						!
1			ļ	Ì					
Ì			į	}					
į				İ	Ī				
Į				}	}				
1	ļ				1				
			ł	Ì	ì				
			ĺ	]	j				
				ł					
			j	1	•				
			1	1	ļ				
			1	1	1				
			<u> </u>						
	PRINTED	AME. GRAC	DE OR TITLE	. AND TELEF	HONE NUM	BER	SIGN H	ERE.	 <del></del>

DA 1 JUL 79 2028-2

PREVIOUS EDITIONS

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAYE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander
US Army Armament Materiel Readiness Command
ATTN: DRSAR-MAS
Rock Island, IL 61299



## SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

THEN. JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

DATE SENT

PUBLICATION DATE

PUBLICATION TITLE Maintenance Manual for Blast Cleaning Machine

TM 9-4940-658-14&P	10 Apr 81	for Blast Cleaning Machine		
BE EXACT. PIN-POINT WHERE IT IS	N THIS SPACE TELL WHAT IS WRONG			
PAGE PARA- FIGURE TABLE A	ID WHAT SHOULD B	E DONE ABOUT IT:		
		!		
PRINTED NAME, GRADE OR TITLE, AND TELEPHO	IE NUMBER	SIGN HÉRÉ.		

DA 1 JUL 79 2028-2

PHEVIOUS EDITIONS ARE OBSOLETE.

RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314



TEAR ALLANGE PERFORATES LINE

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander

US Army Armament Materiel Readiness Command

ATTN: DRSAR-MAS

Rock Island, TL 61299



# SOMETHING WHONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

THEN. JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT. FOLD IT AND DROP IT IN THE MAIL!

DATESENT

PUBLICATION NUMBER

PUBLICATION DATE

10 Apr 81

PUBLICATION TITLE Maintenance Manual for Blast Cleaning Machine

TM 9-4940-658-14&P

PARA-GRAPH

BE EXACT. PIN-POINT WHERE IT IS

FIGURE NO TABLE

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

DA 1 70/1 70 2028-2

POINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

PREVIOUS EDITIONS

SIGN HERE

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID DEPARTMENT OF THE ARMY DOD 314



TEAR ALONG PERFORATED LINE

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander
US Army Armament Materiel Readiness Command
ATTN: DRSAR-MAS
Rock Island, IL 61299

1981

## This fine document...

Was brought to you by me:



## <u>Liberated Manuals -- free army and government manuals</u>

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=http://www.liberatedmanuals.com/>Free Military and Government Manuals</A>

- SincerelyIgor Chudov<a href="http://igor.chudov.com/">http://igor.chudov.com/</a>
- Chicago Machinery Movers