
DEPARTMENT OF THE ARMY TECHNICAL MANUAL

ORGANIZATIONAL MAINTENANCE REPAIR PARTS

AND SPECIAL TOOLS LISTS

CONVERTER TELEGRAPH-TELEPHONE SIGNAL

TA-182/U

FSN 5305-263-3326

Headquarters, Department of the Army, Washington, D.C.
19 October 1973

Current as of March 1973

SECTION		Paragraph	Page
I.	INTRODUCTION		
	Scope	1-1	2
	General	1-2	2
	Explanation of columns	1-3	2
	Special information	1-4	4
	Location of repair parts	1-5	4
	Abbreviations (Not applicable)	1-6	5
	Reporting of equipment publication improvements	1-7	5
II.	PRESCRIBED LOAD ALLOWANCE (Not applicable)		
III.	REPAIR PARTS LIST	6
IV.	SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
V.	INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER		
	CROSS-REFERENCE TO FIGURE AND ITEM NUMBER	7

*This manual supersedes so much of TM 11-5805-247-12, 9 November 1965, as pertains to organizational repair parts and special tools list.

SECTION I

INTRODUCTION

1-1. Scope

This manual lists repair parts and special tools required for the performance of organizational maintenance of the TA-182/U. The PCCN for the TA-182/U is GCWAAR for all models.

1-2. General

This repair parts and special tools list is divided into the following sections:

- a. *Prescribed Load Allowance (PLA—Section 11.* Not applicable.
- b. *Repair Parts List—Section III.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.
- c. *Special Tools, Test and Support Equipment—Section IV.* Not applicable.
- d. *Index—Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number—Section V.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

1-3. Explanation of Columns

The following provides an explanation of columns in the tabular lists—

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are—

<i>Code</i>	<i>Explanation</i>
PA—	Item procured and stocked for anticipated or known usage.
PB—	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC—	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.

<i>Code</i>	<i>Explanation</i>
PD—	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE—	Support equipment procured and stocked for initial issue or outfitting but to specified maintenance repair activities.
PF—	Support equipment which will be stocked which will be centralized and procured on demand.
PG—	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facility could prove uneconomical to reproduce at a later time.
KD—	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF—	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB—	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO—	Item to be manufactured or fabricated at organizational level.
MF—	Item to be manufactured or fabricated at direct support maintenance level.
MH—	Item to be manufactured or fabricated at general support maintenance level.
MD—	Item to be manufactured or fabricated at depot maintenance level.
AO—	Item to be assembled at organizational level.
AF—	Item to be assembled at direct support maintenance level.
AH—	Item to be assembled at general support maintenance level.
AD—	Item to be assembled at depot maintenance level.

<i>Code</i>	<i>Explanation</i>
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	Support items can be requisitioned with justification.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700 42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows-

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level of maintenance.

NOTE

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F	Support item is removed, replaced, used at the direct support maintenance level.
H	Support item is removed, replaced, used at the general support maintenance.
D	Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform

complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code—

<i>Code</i>	<i>Application/Explanation</i>
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is direct support.
H	The lowest maintenance level capable of complete repair of the support item is general support.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
L	Repair restricted to designated Specialized Repair Activity.
Z	Non-repairable. No repair is authorized.
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows—

<i>Code</i>	<i>Explanation</i>
Z	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.

L—Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.

A—Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

Code Explanation

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. Unit of Measure (U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two character alphabetical abbreviation; e.g., ea. in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. Quantity Incorporated in Unit. This column indicates the quantity of the item used in the equipment. Subsequent appearances of the same item in the same assembly are indicated by the letters "REF".

f. 15-Day Organizational Maintenance Allowance.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category, and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized. for use will be forwarded to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, N.J. 07703. Any changes approved will be reflected in a revision to the RPSTL.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other equipment.

g. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown in TM 11-5805-247-12 and TM 11-5805-247-35.

(2) *Item number.* Indicates the item number or reference designation used to reference the item in the illustration.

1-4. Special Information

a. Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are—

<i>Code</i>	<i>Used on</i>
ABG	TA-182/U

b. The following publications pertain to the TA-182/U and its components:

TM 11-5805-247-12	Organizational Maintenance Manual: Converter, Telegraph- Telephone Signal TA-182/U.
TM 11-5805-247-35	DS, GS, and Depot Maintenance Manual: Converter, Telegraph Telephone Signal TA-182/U.

1-5. Location of Repair Parts

a. This manual contains one cross-reference index (sec V) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (see V) and locate the Federal stock number or number are cross-referenced to the applicable reference number. The FSN and reference figure and item number or reference designation.

(2) Refer to the repair parts list (see III) and locate the figure number (col 7a) and item number or reference designation (col 7b) as noted in the FSN index.

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b of the repair parts list (see III) until the item is located.

d. When the FSN, reference number, figure number, item number and reference designation are not known, scrutinize column 3 of the repair parts list (see III), which is arranged in alphabetical order.

1-6. Abbreviations

Not applicable.

1-7. Reporting of Equipment Publication Improvements

The reporting of errors, omissions, and recommendations for improving this publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CW, Fort Monmouth, N.J. 07703.

(Next printed page is 6)

SECTION III

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE USABLE ON CODE		(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15 DAY ORGANIZATIONAL MAINTENANCE ALW				(7) ILLUSTRATION	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	20-50	51-100	FIG. NO.	ITEM NO.
PAOZZ	5920-244-5150	CAP, ELECTRICAL 6 HOLDS FUSE IN FUSEHOLDER 94551-2 (800587)		EA	1	*	*	*	*		6
PAOZZ	5940-283-5393	CAP, ELECTRICAL NO-REF-DESIG BLACK SCC762021 (80063)		EA	8	*	*	*	*		
PAOZZ	5805-615-6503	CASE, ELECTRICAL EQUIPMENT CABINET NO-REF- DESIG CASE LESS COVER AND STRAP SCD98317 (80063)		EA	1	*	*	*	*		1
PAOZZ	5935-518-9653	CONNECTOR, PLUG, ELECTRICAL P1 2 STRAIGHT MALE CONT UP120M (81349)		EA	1	*	*	*	*		P1
PAOZZ	5805-625-5418	COVER ASSEMBLY NO-REF-DISIG P/O CASE ELECTRICAL EQUIP CABINET SCC98314 (80063)			1	*	*	*	*		2
PAOZZ	5960-166-7664	ELECTRON TUBE V1 12AX7 (81349)			1	*	*	*	*	4	V1
PAOZZ	5960-166-7663	ELECTRON TUBE V2 12AU7 (81349)			3	*	*	*	*	4	V2
PAOZZ	5960-166-7663	ELECTRON TUB V5 12AU7 (81349)			REF	*	*	*	*	4	V5
PAOZZ	5960-166-7663	ELECTRON TUBE V6			REF	*	*	*	*	4	V6
PAOZZ	5920-280-4465	FUSE, CARTRIDGE F1 1 AMP, 250V F02250V1AS (81349)			1	*	*	*	*	5	F1
PAOZZ	5355-160-6850	KNOB NO-REF-DESIG SETSCREW TYPE BAR WITH SINGLE POINTED SHAPED RD PHENOLIC BODY 1-1-4 IN. LG X 3-4 IN. W X 5-8 IN. THK O/A SCB98352 (80063)			2	*	*	*	*	1-1	5
PAOZZ	6240-143-3060	LAMP, INCANDESCENT DS1 DOUBLE CONT BAYONET CANDELABRA BASE 120 V, 6 W S-6 CLEAR BULB 6S6DC120 (08808)			1	*	*	*	*		DS1
PAOZZ	6130-076-3546	RECTIFIER, SEMICONDUCTOR DEVICE V7 6X4-X1DR SCC141343 (80063)			2	*	*	*	*	4	V7
PAOZZ	6130-076-3546	RECTIFIER, SEMICONDUCTOR DEVICE V8 6X4-X1DR SCC141343 (80063)			REF	*	*	*	*	4	V8
PAOZZ	6130-076-3545	RECTIFIER, SEMICONDUCTOR DEVICE V3 6AL5 X3DR SCC141342 (80063)			2	*	*	*	*	4	V3
PAOZZ	6130-076-3545	RECTIFIER, SEMICONDUCTOR DEVICE V4 6AL5 X3DR SCC141342 (80063)			REF	*	*	*	*	4	V4
PAOZZ	5960-264-3004	SHIELD, ELECTRON TUBE NO-REF-DESIG TS103U02 (81349)			4	*	*	*	*		3
PAOZZ	5340-356-4895	SLING, CARRYING, BAG AND CASE NO-REF-DESIG CARRING STRAP FOR CASE SCB98316 (80063)			1	*	*	*	*		

SECTION V

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5340-356-4895			5960-166-7663	4	V5
5355-160-6850	1-1	5	5960-166-7663	4	V6
5805-615-6503		1	5960-166-7664	4	V1
5805-625-5418		2	5960-264-3004		3
5920-244-5150		6	6130-076-3545	4	V3
5920-280-4465	5	F1	6130-076-3545	4	V4
5935-518-9653		P1	6130-076-3546	4	V7
5940-283-5393			6130-076-3546	4	V8
5960-166-7663	4	V2	6240-143-3060		DS1

By Order of the Secretary of the Army

CREIGHTON W. ABRAMS
General, United States Army
Chief of Staff

Official:

VERNE L. BOWERS
Major General, United States Army
The Adjutant General

Distribution:

Active Army:

USASA (2)
CNGB (1)
ACSC-E (2)
USAARENBD (2)
USAMB (10)
AMC (1)
TRADOC (2)
ARADOM (2)
ARADCOM Rgn (2)
OS Maj Comd (4)
LOGCOMDS (5)
MICOM (2)
TECOM (2)
USASTRATCOM (4)
HISA (ECOM) (18)
MDW (1)
Armies (2)
Corps (2)
Svc Colleges (2)
USASESS (5)
USAADS (2)
USAFAS (2)
USAARMS (2)
USAIS (2)
USAES (2)
USAINTS (3)
USACDCEC (5)

Instl (2) except
Ft Gordon (10)
Ft Huachuca (10)
WSMR (2)
Ft Carson (10)
Army Dep (2) except
LBAD (14)
SAAD (30)
TOAD (14)
LEAD (7)
ATAD (10)
Gen Dep (2)
Sig Sec Gen Dep (2)
Sig Dep (5)
SigFLDMS (1)
USAERDAA (1)
USAERDAW (1)
MAAG (1)
USARMIS (1)
Ft Richardson (ECOM Ofc) (2)
WRAMC (1)
Units org under fol TOE:
(1 cy each)
11-158
29-134
29-136

NG: State AG (3); Units-Same as Active Army

USAR: None

For explanation of abbreviations used, see AR 310-50

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN...JOT DOWN THE DOPE ABOUT IT ON THIS FORM. CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL.

SOMETHING WRONG WITH PUBLICATION

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

PUBLICATION DATE

PUBLICATION TITLE

BE EXACT PIN-POINT WHERE IT IS

PAGE NO.

PARA-GRAPH

FIGURE NO.

TABLE NO.

IN THIS SPACE, TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT.

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE AND TELEPHONE NUMBER

SIGN HERE

This fine document...

Was brought to you by me:



[Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals

- Sincerely
Igor Chudov
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)