

DEPARTMENT OF THE ARMY TECHNICAL MANUAL

---

**OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL  
SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL  
TOOLS LISTS (INCLUDING DEPOT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS)  
MAST BASE AB-15/GR  
FSN 5985-221-5544**

---

Headquarters, Department of the Army, Washington D.C.  
31 July 1973

---

*Current as of January 1973*

	Paragraph	Page
Section I. INTRODUCTION		
Scope	1-1	2
General	1-2	2
Explanation of columns . . . . .	1-3	2
Special information	1-4	4
Location of repair parts	1-5	4
Abbreviations (Not applicable)	1-6	4
Reporting of equipment manual improvements	1-7	5
Items comprising an operable equipment	1-8	5
II. BASIC ISSUE ITEMS LIST (Not applicable)		
III. ITEMS TROOP INSTALLED OR AUTHORIZED LIST (Not applicable)		
IV. PRESCRIBED LOAD ALLOWANCE (Not applicable)		
V. REPAIR PARTS LIST		6
VI. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
VII. REPAIR PARTS LIST		7
VIII. SPECIAL TOOLS, TEST AND SUPPORT EQUIPMENT (Not applicable)		
IX. INDEX-FEDERAL STOCK NUMBER AND REFERENCE NUMBER CROSS-REFERENCE TO FIGURE AND ITEM NUMBER		8

---

\* This manual supercedes TM 11-5985-230-12P, 2 March 1961 and TM 11-5985-230-35P, 2 March 1961.

# SECTION I INTRODUCTION

---

## 1.1. Scope

This manual lists basic issue items, items troop installed or authorized, repair parts, and special tools required by the crew/operator for operation and required for the performance of organizational, direct support, general support, and depot maintenance of the AB-15/GR. The PCCN for the AB-15/GR is GCMABA for all models.

## 1-2. General

This basic issue items, items troop installed or authorized, repair parts, and special tools list is divided into the following sections—

*a. Basic Issue Items List—Section II.* Not applicable.

*b. Items Troop Installed or Authorized List - Section III.* Not applicable.

*c. Prescribed Load Allowance (PLA)-Section IV.* Not applicable.

*d. Repair Parts List—Section V.* A list of repair parts authorized for the performance of maintenance at the organizational level. This repair parts list is arranged in alphabetical order.

*e. Special Tools, Test and Support Equipment—Section VI.* Not applicable.

*f. Repair Parts List—Section VII.* A list of repair parts authorized for the performance of maintenance at the direct support, general support, and depot level.

*g. Special Tools, Test and Support Equipment—Section VIII.* Not applicable.

*h. Index-Federal Stock Number and Reference Number Cross-Reference to Figure and Item Number-Section IX.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphabetic sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number or reference designation appearance.

## 1-3. Explanation of Columns

The following provides an explanation of columns found in the tabular list.

*a. Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Indicates the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are –

Code	Explanation
PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purposes because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PC	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which because of probable discontinuance or shutdown of production facilities would prove uneconomical to reproduce at a later time.
KD	An item of depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or direct support or general support levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at organizational level.
MF	Item to be manufactured or fabricated at direct support maintenance level.
MH	Item to be manufactured or fabricated at general support maintenance level.
MD	Item to be manufactured or fabricated at depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.

<i>Code</i>	<i>Explanation</i>
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
XC	Installation drawing, diagram instruction sheet, field service drawing, that is identified by manufacturers' part number.
XD	Support items can be requisitioned with justification.

**NOTE**

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code Format as follows —

(a) *Use (third position).* The maintenance code entered in the third position indicates the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position indicates one of the following levels of maintenance.

<i>Code</i>	<i>Application/Explanation</i>
O	Support item is removed, replaced, used at the organizational level of maintenance.

**NOTE**

A code "C" may be used in this position to denote crew or operator maintenance performed within organizational maintenance.

F	Support item is removed, replaced, used at the direct support maintenance level.
H	Support item is removed, replaced, used at the general support maintenance.
D	Support items that are removed, replaced, used at depot only.

(b) *Repair (fourth position).* The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). When a maintenance code is not used a dash (-) sign is entered. For multi-service

equipment/systems or when a code is entered, this position will contain one of the following maintenance codes as assigned by the service(s) that require the code—

<i>Code</i>	<i>Application/Explanation</i>
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is direct support.
H	The lowest maintenance level capable of complete repair of the support item is general support.
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
L	Repair restricted to designated Specialized Repair Activity.
Z	Non-repairable. No repair is authorized.
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the uniform SMR Code Format as follows—

<i>Code</i>	<i>Explanation</i>
Z	Nonrepairable item. When unserviceable, condemn and dispose at the level indicated in the first digit of the maintenance code.
O	Repairable item. When uneconomically repairable, condemn and dispose at organizational level.
F	Repairable item. When uneconomically repairable, condemn and dispose at the direct support level.
H	Repairable item. When uneconomically repairable, condemn and dispose at the general support level.
D	Repairable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Repairable item. Repair, condemnation, and disposal not authorized below depot/Specialized Repair Activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material).

b. *Federal Stock Number*. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. *Description*. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturer (FSCM ) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB 708-42.

d. *Unit of Measure (U/M)*. Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, e.g., ea, in, pr, etc., and is the basis used to indicate quantities and allowances in subsequent columns. When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

e. *Quantity Furnished with Equipment (Basic Issue Items Only)*. Not applicable.

f. *Quantity Authorized (Items Troop Installed or Authorized Only)*. Not applicable.

g. *Quantity Incorporated in Unit*. This column indicates the quantity of the item used in the equipment.

h. *15-Day Organizational Maintenance Allowances*.

(1) The repair parts indicated by an asterisk in the allowance column represent those authorized for use at the organizational category. and will be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Major Army commanders are authorized to approve reduction in the range of support items authorized for use in units within their commands. Recommendations for increase in range of items authorized for use will be forwarded to the Commanding General, US Army Electronics Command, ATTN: AMSEL-MA-CR, Fort Monmouth, N.J., 07703.

(3) Allowance quantities are indicated in the special tools list section for special tools, TMDE, and other support equipment.

i. *30-Day DS/GS Maintenance Allowances*.

#### NOTE

Allowance in GS column are for GS maintenance only.

(1) The repair parts indicated by asterisk entries in separate allowance columns for DS and GS represent those authorized for use at that category of maintenance to be requisitioned on an "as required" basis, until stockage is based on demand in accordance with AR 710-2.

(2) Allowance quantities are indicated in the

special tool lists section for special tools, TMDE, and other support equipment.

j. *1-Year Allowances Per 100 Equipments/Contingency Planning Purposes*. Column intentionally left blank.

k. *Depot Maintenance Allowance Per 100 Equipments*. This column indicates opposite the first appearance of each item the total quantity authorized for depot maintenance of 100 equipments.

1. *Illustration*.

(1) *Figure number*. Not applicable.

(2) *Item number*. Indicates the item number or reference designation used to reference the item.

## 1-4. Special Information

Usable on codes are included in column 3. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are –

Code	Used on
AEL	AB-15/GR

## 1-5. Location of Repair Parts

a. This manual contains one cross reference index (see IX) to be used to locate a repair part when either the Federal stock number or reference number (manufacturer's part number) is known. The first column in the index is prepared in numerical or alphanumeric sequence in ascending order. The reference numbers (manufacturer's part numbers) are listed immediately following the last listed Federal stock number in the index of Federal stock numbers.

b. When the Federal stock number or reference number is known, follow the procedures given in (1) and (2) below.

(1) Refer to the index of Federal stock numbers (see IX), and locate the Federal stock number or reference number. The FSN and reference number are cross-referenced to the applicable figure and item number or reference designation.

(2) Refer to the repair parts list (see V and VIII) and locate the figure number (col 7a—20P, 10a—34P) and item number or reference designation (col 7b—20P, 10b—34P, as noted in the FSN index).

c. When the figure and item number or reference designation are known, scrutinize columns 7a and 7b—20P and 10a and 10b—35P of the repair parts list (sec V and VII) until the item is located.

d. When the FSN, reference number, figure number, and item number are not known, scrutinize column 3 of the repair parts list (see V and VII), which is arranged in alphabetical order.

## 1-6. Abbreviations

Not applicable.

### **1-7. Reporting of Equipment Manual Improvements**

The reporting of errors, omissions, and recommendations for improving this Publication by the individual user is encouraged. Reports should be submitted on DA Form 2028 (Recommended Changes to

Publications) and forwarded direct to Commander, US Army Electronics Command, ATTN: AMSEL-MA-CR. Fort Monmouth, N.J., 07703.

### **1-8. Items Comprising An Operable Equipment**

Mast Base AB-15/GR FSN 5935-221-5554 1 ea.

## SECTION V

TM11-5985-230-14P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE      USABLE ON CODE		(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 15-DAY ORGANIZATIONAL MAINTENANCE ALW				(7) Illustration	
						(a)	(b)	(c)	(d)	(a)	(b)
						1-5	6-20	21-50	51-100	Figure NO.	ITEM NO.
PAOZZ	5820-264-9213	CAP,ANTENNA BASE NO-REF-DESIG CUP SHAPE 1X. 13-16 IN		EA	1	*	*	*	*		
PAOZZ	5340-396-3123	SCD19572-28 (80063) CLAMP,ELECTRICAL NO-REF-DESIG 1-3-8X3-4X1-5-6 IN		EA	1	*	*	*	*		
PAOZZ	5935-537-4288	HP8003 (82204) CONNECTOR,RECEPTACLE,ELECTRICAL NO-REF-DESIG. 1 RD FEMALE CONT PART 1,4,5,6 AND 7		EA	1	*	*	*	*		
PAOZZ	5310-189-8907	SCD12518L (80063) GASKET NO-REF-DESIG 3 X 1-29-32 X 1-16 IN. . . .		EA	2	*	*	*	*		
PAOZZ	5970-284-9627	SCD12520-2 (80063) INSULATOR,BOWL E11 UPPER FEMALE 2-1-4 IN. . .		EA	1	*	*	*	*		E11
PAOZZ	5970-405-8118	SCD12517-11 (80063) INSULATOR,BOWL E10 LOWER MALE 2 31-64 IN. . . LG		EA	1	*	*	*	*		E10
PAOZZ	5970-543-1791	SCD19572-12 (80063) INSULATOR,BUSHING 05 RD, 1-1-7 X 1-2 X 1-4. IN		EA	1	*	*	*	*		05
PAOZZ	5330-189-8908	SCD19572-29 (80063) INSULATOR,WASHER NO-REF-DESIG 11-16 X 11-32 X 1-16 IN		EA	1	*	*	*	*		
PAOZZ	5310-208-2605	SCD12520-3 (80063) NUT, JAM NO-REF-DESIG STEEL 5-16 IN 24 THD . . 1-2 IN ACROSS FLATS 3-16 IN THK (ORD STK H101- 84580521		EA	1	*	*	*	*		
PAOZZ	5940-283-8470	SCD12517M17 (80063) POST, BINDING E12 BINDING POST TM-145 (USED. ON ORDER 16816-PH-51 ONLY)		EA	1	*	*	*	*		E12
PAOZZ	5940-771-4665	SC530D (80063) POST BINDING E12 1-1-4 X 3-4 IN PARTS 2, 3.. AND 8 (USED ON ALL ORDERS EXCEPT 16816-PH-51)		EA	1	*	*	*	*		E12
PAOZZ	5985-405-1361	SCD122518L (80063) RING,BONDING NO-REF-DESIG 3-1-9 X 2 X 1 IN. . W-SLOTTED TERM 15-16 X 1-4 IN RIGHT ANGLE		EA	1	*	*	*	*		
PAOZZ	5985-174-2309	SCD12517-25 (80063) SUPPORT, ANTENNA NO-REF-DESIG C-O SOCKET. . . . . BODY, FLEXIBLE CASING, FERRULE 13-3-4 X 5-8 IN TOP 7-16 IN BASEPARTS 1, 2, 4, 6, 9, 10, 20, 21, 26, 28, 31		EA	1	*	*	*	*		
PAOZZ	5985-355-7530	SCD1217 (80063) WASHER, SLOTTED RIM NO-REF-DESIG RD 11-16 X . . 7-16 X 1-16 IN THK SCD12520-4 (80063)		EA	1	*	*	*	*		

## SECTION VII

TM11-5985-230-14P

(1) SMR CODE	(2) FEDERAL STOCK NUMBER	(3) DESCRIPTION REFERENCE NUMBER & MFR CODE      USABLE ON CODE		(4) UNIT OF MEAS	(5) QTY INC IN UNIT	(6) 30 DAY DS MAINT ALLOWANCE			(7) 30-DAY GS MAINT ALLOWANCE			(8) 1-YR ALW PER 100 EQUIP CNTGCTY	(9) DEPOT MAINT ALW PER 100 EQUIP	(10) ILLUSTRATION	
						(a)	(b)	(c)	(a)	(b)	(c)			(a)	(b)
						1-20	21-50	51-100	1-20	21-50	51-100			FIGURE NO.	ITEM NO.
PAOZZ	5820-264-9213	CAP, ANTENNA BASE NO-REF-DESIG CUP . . . . . SHAPE 1 X 13-16 IN SCD19572-28 (80063)		EA	1	.	.	.	.	.	.		2		
PAOZZ	5340-396-3123	CLAMP, ELECTRICAL NO-REF-DESIG 1-3-8x3- 4X1-5-6 IN. HP8003 (82204)		EA	1	.	.	.	.	.	.		3		
PAOZZ	5935-537-4288	CONNECTOR, RECEPTACLE, ELECTRICAL NO-REF- DESIG 1 RD FEMALE CONT PART 1,4,5,6 AND 7 SCD12518L (80063)		EA	1	.	.	.	.	.	.		1		
PAOZZ	5310-189-8907	GASKET NO-REF-DESIG 3 X 1-29-32 X 1-16. . IN SCD12520-2 (80063)		EA	2	.	.	.	.	.	.		5		
PAOZZ	5970-284-9627	INSULATOR, BOWL E11 UPPER FEMALE 2-1- 4 IN SCD12517-11 (80063)		EA	1	.	.	.	.	.	.		1		E11
PAOZZ	5970-405-8118	INSULATOR, BOWL E10 LOWER MALE 2 31-64 IN LG SCD119572-12 (80063)		EA	1	.	.	.	.	.	.		1		E10
PAOZZ	5970-543-1791	INSULATOR, BUSHING 05 RD, 1-1-2 X 1-2. x 1-4 IN SCD19572-29 (80063)		EA	1	.	.	.	.	.	.		3		05
PAOZZ	5330-189-8908	INSULATOR, WASHER NO-REF-DESIG 11-16 X. . 11-32 X 1-16 IN SCD12520-3 (80063)		EA	1	.	.	.	.	.	.		1		
PAOZZ	5310-208-2605	NUT, JAM NO-REF-DESIG STEEL 5-16 IN 24. THD 1-2 IN ACROSS FLATS 3-16 IN THK (ORD STK H101-8458052 SCD12517M17 (80063)		EA	1	.	.	.	.	.	.		3		
PAOZZ	5940-283-8470	POST, BINDING E12 BINDING POST TM-145 . (USED ON ORDER 16816-PH-51 ONLY) SCD530 (80063)		EA	1	.	.	.	.	.	.		1		E12
PAOZZ	5940-771-4665	POST, BINDING E12 1-1-4 X 3-4 IN PARTS 2,3 AND 8 (USED ON ALL ORDERS EXCEPT 16816-PH-511 SCD12518L (80063)		EA	1	.	.	.	.	.	.		1		E12
PAOZZ	5985-405-1361	RING NO-REF-DESIG 3-1-8 X 2X1 IN W-SLOTTED TERM 15-16 X 1-4 IN RIGHT ANGLE SCD12517-25 (80063)		EA	1	.	.	.	.	.	.		4		
PAOZZ	5985-174-2009	SUPPORT, ANTENNA NO-REF-DESIG C-O. SOCKET, BODY, FLEXIBLE, CASING, FERRULE 13-3-4 X 5-8 IN TOP 7-16 IN BASEPARTS 1, 2,4,6,9,10,29,21,26, 28, 31 SCD1217 (80063)		EA	1	.	.	.	.	.	.		3		
PAOZZ	5985-355-7530	WASHER, SLOTTED RIM NO-REF-DESIG RD 11- 16 X 7-16 X 1-16 IN THK SCD12520-4 (80063)		EA	1	.	.	.	.	.	.		5		

SECTION IX

TM11-5985-230-14P

INDEX - FEDERAL STOCK NUMBER AND REFERENCE NUMBER  
CROSS-REFERENCE TO FIGURE AND ITEM NUMBER

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.
5310-189-8907			5940-771-4665		E12
5310-208-2605			5970-284-9627		E11
5330-189-8908			5970-405-8118		E10
5340-396-3123			5970-543-1791		05
5820-264-9213			5985-174-2009		
5935-537-4288			5985-355-7530		
5940-283-8470		E12	5985-405-1361		

REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.	REFERENCE NO.	MFR CODE	FIG. NO.	ITEM NO.
HP8003	82204			SCD12520-2	80063		
SCD1217	80063			SCD12520-3	80063		
SCD12517-11	80063		E11	SCD12520-4	80063		
SCD12517-25	80063			SCD19572-12	80063		E10
SCD12517M17	80063			SCD19572-28	80063		
SCD12518L	80063			SCD19572-29	80063		05
SCD12518L	80063		E-12	SCD530	80063		E12



By Order of the Secretary of the Army:

**CREIGHTON W. ABRAMS**  
*General, United States Army*  
*Chief of Staff*

Official:

**VERNE L. BOWERS**

*Major General, United States Army*  
*The Adjutant General*

Distribution.

Active Army

USASA (2)  
CNGB (1)  
ACSC-E (2)  
USAARENBD (2)  
USAMB (10)  
AMC (1)  
CONARC (5)  
ARADCOM (2)  
ARADCOM RGn (2)  
OS Maj Comd (4)  
LOGCOMDS (5)  
MICOM (2)  
TECOM (2)  
USASTRATCOM (4)  
HISA (ECOM) (21)  
MDW (1)  
Armies (2)  
Corps (2)  
Svc Colleges (2)  
USASESS (5)  
USAADS (2)  
USAFAS (2)  
USAARMS (2)  
USAIS (2)  
USAES (2)  
USAINTS (3)  
USACDCEC (5)

Instl (2) except

Fort Carson (10)  
Fort Huachuca (10)  
Fort Gordon (10)  
Ft Richardson (ECOM Ofc) (2)  
WSMR (2)

Army Dep (2) except

LBAS (14)  
SAAD (20)  
TOAD (14)  
ATAD (10)  
LEAD (7)

USA Dep (2)

Sig Sec USA Dep (2)

Sig Dep (5)

Sig FLDMS (1)

USAERDAA (1)

USAERDAW (1)

MAAG (1)

USARMIS (1)

WRAMC (1)

Units org under fol TOE:

(1 copy each unit)

11-158

29-134

29-136

NG: None

USAR: None

For explanation of abbreviations used, see AR 310-50



This fine document...

Was brought to you by me:



## [Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to [liberatedmanuals.com](http://liberatedmanuals.com), so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals</A>

- Sincerely  
Igor Chudov  
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)