


**\*ARMY TM 9-2805-256-14  
AIR FORCE TO 38G2-102-2  
NAVY NAVFAC P-8-611-14E**

---

**TECHNICAL MANUAL**

**OPERATOR, UNIT, DIRECT SUPPORT,  
GENERAL SUPPORT MAINTENANCE MANUAL**

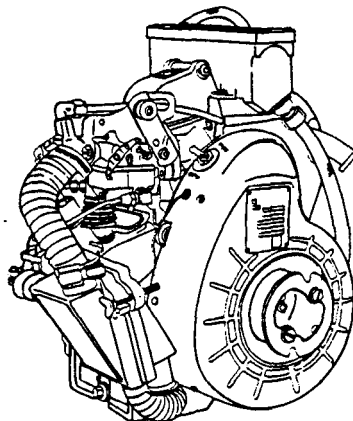

**ENGINE, GASOLINE, 1 1/2 HP,  
MILITARY STANDARD MODELS  
(MODEL 1A08-1, NSN 2805-00-601-5181)  
(MODEL 1A08-2, NSN 2805-00-714-8552)  
(MODEL 1A08-3, NSN 2805-00-068-7510)  
(MODEL 1A08-4, NSN 2805-01-182-8467)**

Approved for public release. Distribution is unlimited.

★ This manual supersedes (Army) TM 5-2805-256-14, (Air Force) TO 38G2-102-2, (Navy) NAVFAC P-8-611-14E dated 16 January 1976 in its entirety.

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY,  
THE AIR FORCE, AND THE NAVY**

**10 AUGUST 1990**

CHANGE

NO. 2

HEADQUARTERS, DEPARTMENTS OF ARMY  
THE AIR FORCE, AND THE NAVY  
WASHINGTON, D. C., 30 April 1997

Operator, Unit, Direct Support and General Support Maintenance Manual

**ENGINE, GASOLINE, 1 1/2 HP MILITARY STANDARD MODELS**

**(MODEL 1A08-1, NSN 2805-00-601-5181)**

**(MODEL 1A08-2, NSN 2805-00-714-8552)**

**(MODEL 1A08-3, NSN 2805-00-068-7510)**

**(MODEL 1A08-4, NSN 2805-01-182-8467)**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TM 9-2805-256-14/TO 38G2-102-2/NAVFAC P-8-611-14E, 10 August 1990, is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

i and ii

1-1 and 1-2

F-1/(F-2 blank)

Insert pages

i and ii

1-1 and 1-2

F-1/(F-2 blank)

2. Retain this sheet in front of manual for reference purposes.

ARMY TM 9-2805-256-14  
AIR FORCE TO 38G2-102-2  
NAVY NAVFAC P-8-611-14E

C 2

By Order of the Secretaries of the Army, Air Force and Navy:

**RONALD R. FOGELMAN**

*General, USAF*

*Chief of Staff*

**HENRY VICCELLIO, JR.**

*General, USAF*

*Commander, Air Force Materiel Command*

**J.E. BUFFINGTON**

*Rear Admiral, CEC, US Navy*

*Commander*

*Navy Facilities Engineering*

*Command*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25-E, block no. 0751, requirements for TM 9-2805-256-14.

CHANGE

NO. 1

HEADQUARTERS,  
DEPARTMENTS OF THE ARMY, NAVY AND AIR FORCE  
WASHINGTON, D. C., 15 October 1990

Operator, Unit, Direct Support, General Support Maintenance Manual

**ENGINE, GASOLINE, 1 1/2 HP,  
MILITARY STANDARD MODELS  
(MODEL 1 A08-1, NSN 2805-00-601-5181)  
(MODEL 1 A08-2, NSN 2805-00-714-8552)  
(MODEL 1 A08-3, NSN 2805-00-068-7510)  
(MODEL 1 A08-4, NSN 2805-01-182-8467)**

Approved for public release; distribution is unlimited

TM 9-2805-256-14, 10 August 1990 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages

Insert pages

4-3 and 4-4

4-3 and 4-4

2. Retain this sheet in front of manual for reference purposes.

ARMY TM 92805-256-14  
AIR FORCE TO 38G2-102-2  
NAVY NAVFAC P-8-611-14E  
C1

By Order of the Secretaries of the Army, Air Force, and Navy:

**CARL E. VUONO**

*General, United States Army  
Chief of Staff*

Official:

**THOMAS F. SIKORA**

*Brigadier General, United States Army  
The Adjutant General*

**MICHAEL J. DUGAN**

*General USAF  
Chief of Staff*

Official:

**CHARLES C. MCDONALD**

*General, USAF  
Commander, Air Force Logistics Command*

**DAVID E. BUTTORFF**

*Rear Admiral, CEC, US Navy  
Commander  
Navy Facilities Engineering Command*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25E, (qty rqr block no. 0751).

**WARNING**

Dry cleaning solvent, PD-680, used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

**WARNING**

Serious eye injury can result from the starter rope knot. Wear eye protection when pull starting engine.

Before starting engine or operating any of the components insure that no loose bars, tools, or parts are lying in or on any part of the equipment, as they could cause serious damage to equipment or bodily injury to personnel.

Never wear loose clothing, or hanging appendages from person or clothing, while inspecting running engine, moving shafts, or like machinery.

**WARNING**

If operating the engine or equipment inside or indoors insure that proper ventilation is provided. Carbon monoxide fumes are a colorless, odorless and deadly gas. These gases could cause permanent brain damage or death, if highly concentrated in any certain area. The symptoms are headache, dizziness, loss of muscular control, apparent drowsiness and coma. If exposure symptoms exist, move afflicted person or personnel to properly ventilated area and provide artificial respiration, if necessary.

**WARNING**

Always provide metal-to-metal contact between fuel container and fuel tank, while refueling, to avoid igniting fuel vapors with a static spark.

Do not refuel while engine is in operation.

Before refueling, insure that adequate fire fighting equipment is serviceable and is standing by for immediate use in event of fire or explosion.

During engine operation, proper fire fighting equipment should be serviceable and kept near in the event that fire is developed by electrostatic spark or detonation of the gas fumes. Do not smoke or use an open flame in the vicinity of these gasoline vapor hazards.

**WARNING**

Never touch engine or engine accessories with bare hands during operation, or before they have cooled sufficiently. Severe burns can be caused through carelessness.

**WARNING**

Do not touch the ignition system harness during starting or while in operation. Severe shocks or burns could result, and personnel maybe seriously injured.

Disconnect the spark plug cables prior to engine maintenance to prevent accidental starting and severe shock.

**WARNING**

Operation of the equipment presents a noise hazard to personnel in the area. The noise level exceeds the allowable limits for unprotected personnel. Wear ear muffs or earplugs which were fitted by a trained professional.

**WARNING**

Use extreme care when removing coil clamps. Flying clamps can cause serious eye injury. Cover work area with rag or hand when removing clamps.

TECHNICAL MANUAL 9-2805-256-14  
TECHNICAL ORDER 38G2-102-2  
NAVFAC P-8-611-14E

HEADQUARTERS, DEPARTMENTS OF THE ARMY  
THE AIR FORCE, AND THE NAVY,  
WASHINGTON, D. C., 10 August 1990

Operator, Unit, Direct Support and General Support Maintenance Manual

**ENGINE, GASOLINE, 1 1/2 HP MILITARY STANDARD MODELS**

(MODEL 1A08-1, NSN 2805-00-601-5181)

(MODEL 1A08-2, NSN 2805-00-714-8552)

(MODEL 1A08-3, NSN 2805-00-068-7510)

(MODEL 1A08-4, NSN 2805-01-182-8467)

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

For Air Force, submit AFTO Form, 22 (Technical Order System Publication Improvement Report and Reply) in accordance with paragraph 6-5, Section VI, T.O. 00-5-1. Forward direct to Commander, San Antonio Air Logistic Center, ATTN: SA-ALC-MMDDA, Kelly Air Force Base. Texas 78241-5000. For Navy, mail comments to the Commander, Naval Construction Battalion Center, ATTN: Code 15741 F, Bldg 43, Port Hueneme, California 93043-5000

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

**TABLE OF CONTENTS**

		PAGE
CHAPTER 1	INTRODUCTION .....	1-1
Section I	General Information .....	1-1
Section II	Equipment Description and Data .....	1-2
Section III	Principles of Operation .....	1-8
CHAPTER 2	OPERATING INSTRUCTIONS .....	2-1
Section I	Description and Use of Operator's Controls and Indicators .....	2-1
Section II	Preventive Maintenance Checks and Services .....	2-4
Section III	Operation Under Usual Conditions .....	2-7
Section IV	Operation Under Unusual Conditions .....	2-10

\*This manual supersedes (Army) TM 5-2805-256-14, (Air Force) TO 38G2-102-2, (Navy) NAVFAC P-8-611-14E dated 16 January 1976 in its entirety.

Change 2 i



## TABLE OF CONTENTS (cont)


CHAPTER 3	OPERATOR'S MAINTENANCE INSTRUCTIONS .....	3-1
Section I	Lubrication Instructions .....	3-1
Section II	Operator Troubleshooting Procedures .....	3-1
CHAPTER 4	UNIT MAINTENANCE .....	4-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment .....	4-1
Section II	Service Upon Receipt .....	4-2
Section III	Unit Preventive Maintenance Checks and Services (PMCS) .....	4-2
Section IV	Unit Troubleshooting .....	4-3
Section V	Unit Maintenance Procedures .....	4-7
Section VI	Preparation for Shipment or Storage .....	4-73
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS .....	5-1
Section I	Repair-Parts, Special Tools, TMDE, and Support Equipment .....	5-1
Section II	Direct Support Troubleshooting .....	5-1
Section III	Direct Support Maintenance Procedures .....	5-5
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS .....	6-1
Section I	Repair Parts, Special Tools, TMDE, and Support Equipment .....	6-1
Section II	General Support Troubleshooting.....	6-1
Section III	General Support Maintenance Procedures .....	6-3
APPENDIX A	REFERENCE.....	A-1
APPENDIX B	MAINTENANCE ALLOCATION CHART .....	B-1
APPENDIX C	COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS .....	C-1
APPENDIX D	EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST.....	D-1
APPENDIX E	TORQUE LIMITS.....	E-1
APPENDIX F	ADDITIONAL AUTHORIZATION LIST .....	F-1
INDEX .....		Index-1

# LIST OF ILLUSTRATIONS

Figure Number	Title	Page
1-1	Military Standard Engine . . . . .	1-0
1-2	Location and Description of Major Components Models 1A08-1, -2 . . . . .	1-4
1-3	Location and Description of Major Components Models 1A08-3, -4 . . . . .	1-6
2-1	Operators Controls and Indicators . . . . .	2-3
2-2	Starting Procedures . . . . .	2-8
2-3	Stopping Procedures . . . . .	2-9
4-1	Fuel Filter Disassembly and Reassembly . . . . .	4-9
4-2	Cylinder Head Covers Removal and Installation . . . . .	4-11
4-3	Lower Air Duct Removal and Installation . . . . .	4-13
4-4	Flywheel Cover Removal and Installation . . . . .	4-15
4-5	Ignition Switch Removal and Installation . . . . .	4-17
4-6	High Tension Cable Removal and Installation . . . . .	4-19
4-7	Spark Plug Removal and Installation . . . . .	4-21
4-8	Air Cleaner Assembly Service (Oil Bath) . . . . .	4-23
4-9	Air Cleaner Assembly Service (Dry) . . . . .	4-25
4-10	Air Cleaner Assembly Service (Dry) Removal and Installation . . . . .	4-27
4-11	Air Cleaner Assembly Service (Oil Bath) Removal and Installation . . . . .	4-29
4-12	Clamps and Hoses Replacement. . . . .	4-31
4-13	Air Cleaner Element Removal and Installation (Oil Bath) . . . . .	4-32
4-14	Element Removal and Installation (Dry) . . . . .	4-33
4-15	Relief Valve Removal and Installation . . . . .	4-35
4-16	Rocker Cover Removal and Installation . . . . .	4-37
4-17	Oil Fill Tube and Gage Assembly Removal and Installation . . . . .	4-39
4-18	Governor Adjustment . . . . .	4-41
4-19	Breaker Point Cover Removal and Installation . . . . .	4-43
4-20	Breaker Points Removal and Installation . . . . .	4-45
4-21	Breaker Points Adjustment . . . . .	4-47
4-22	Condenser Removal and Installation . . . . .	4-49
4-23	Breather Line Removal and Installation (Oil Bath Air Cleaner) . . . . .	4-51
4-24	Breather Line Removal and Installation (Dry Element Air Cleaner) . . . . .	4-53
4-25	Throttle Control Removal and Installation . . . . .	4-55
4-26	Carburetor Adjustment . . . . .	4-57
4-27	Carburetor Removal . . . . .	4-59
4-28	Carburetor Installation . . . . .	4-61
4-29	Fuel Line Removal and Installation . . . . .	4-63
4-30	Fuel Pump Pressure Test . . . . .	4-65
4-31	Fuel Pump Removal and Installation . . . . .	4-66
4-32	Starter Flange Removal and Installation . . . . .	4-67
4-33	Flywheel Fan Removal and Installation . . . . .	4-69
4-34	Intake Manifold Removal and Installation . . . . .	4-71
4-35	Exhaust Manifold Removal and Installation . . . . .	4-73
4-36	Bearing Cap Inspection . . . . .	4-74
5-1	Oil Pan Removal and Installation. . . . .	5-7
5-2	Governor Assembly Removal . . . . .	5-9

# LIST OF ILLUSTRATIONS (cont)

Figure Number	Title	Page
5-3	Governor Repair Breakerless Ignition. . . . .	5-11
5-4	Governor Repair Breaker Point Ignition . . . . .	5-13
5-5	Governor Assembly Installation ... . . . .	5-15
5-6	Ignition Timing . . . . .	5-17
5-7	Ignition Control Unit Removal and Installation . . . . .	5-19
5-8	Transformer Removal and Installation . . . . .	5-21
5-9	Ignition Module Removal and Installation . . . . .	5-23
5-10	Low Voltage Cable Removal and Installation . . . . .	5-25
5-11	Cylinder Head Removal . . . . .	5-27
5-12	Cylinder Head Assembly Repair.. . . .	5-29
5-13	Cylinder Head Installation . . . . .	5-30
5-14	Rockers Removal . . . . .	5-31
5-15	Rockers Installation . . . . .	5-33
5-16	Valve Adjustment . . . . .	5-35
5-17	Intake and Exhaust Valve Removal and Installation . . . . .	5-37
5-18	Piston and Connecting Rod Assembly Removal . . . . .	5-39
5-19	Piston and Connecting Rod Repair . . . . .	5-41
5-20	Piston and Connecting Rod Assembly Installation . . . . .	5-42
5-21	Rotating Magnet Removal and Installation . . . . .	5-43
5-22	Coil Removal and Installation . . . . .	5-45
5-23	Flywheel Side Oil Seal Removal and Installation . . . . .	5-47
5-24	Noise Suppression Filter Removal and Installation . . . . .	5-49
5-25	Crankshaft Side Oil Seal Removal and Installation . . . . .	5-51
5-26	CompressionTest . . . . .	5-53
5-27	Breakerless Ignition System Wiring Diagram . . . . .	5-54
5-28	Breaker Point Ignition Wiring Diagram . . . . .	5-55
6-1	Bearing Cap Removal . . . . .	6-5
6-2	Bearing Cap Repair . . . . .	6-6
6-3	Bearing Cap Installation . . . . .	6-7
6-4	Crankshaft Removal . . . . .	6-9
6-5	Crankshaft Inspection . . . . .	6-10
6-6	Crankshaft Installation . . . . .	6-11
6-7	Camshaft Removal . . . . .	6-13
6-8	Camshaft Inspection . . . . .	6-15
6-9	Camshaft Installation . . . . .	6-17
6-10	Crankcase Repair . . . . .	6-19

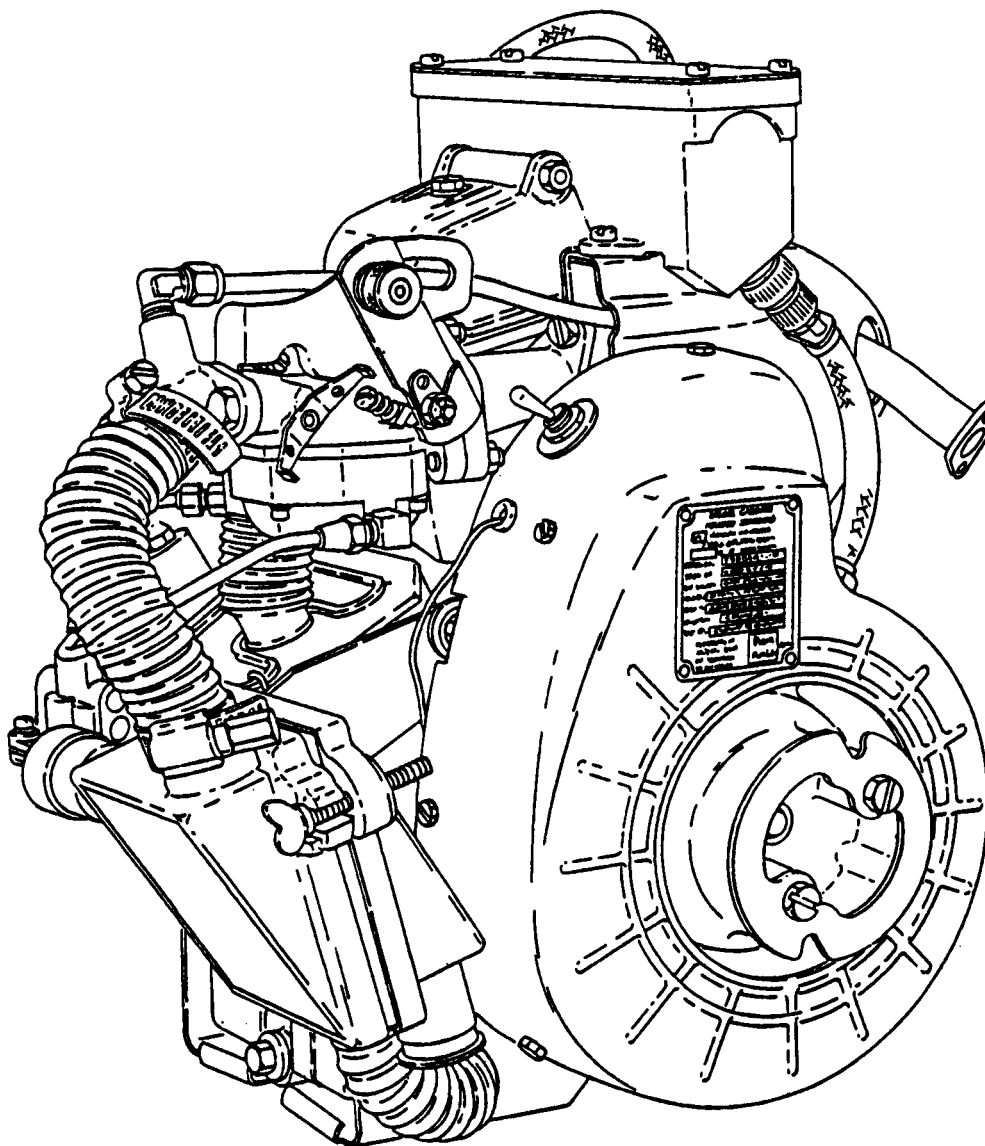

4886-001

Figure 1-1. Military Standard Engine.

## CHAPTER 1

### INTRODUCTION

	Page
OVERVIEW .....	1-1
Section I. General Information .....	1-1
Section II. Equipment Description and Data .....	1-2
Section III. Principles of Operation .....	1-8

### OVERVIEW

This chapter contains general information pertaining to 1 1/2 HP Military Standard Engine and its components.

#### Section I. GENERAL INFORMATION

Paragraph		Page
1-1	Scope.....	1-1
1-2	Consolidated Index of Army Publications and Blank Forms.....	1-1
1-3	Maintenance Forms, Records, and Reports.....	1-1
1-4	Reporting Equipment Improvement Recommendations (EIR's).....	1-2
1-5	Destruction of Army Materiel to Prevent Enemy Use .....	1-2
1-6	Preparation for Storage and Shipment.....	1-2
1-7	Glossary.....	1-2

**1-1. Scope.** This manual contains operator, unit, direct support and general support maintenance for the 1 1/2 HP Military Standard Engine, Models 1A08-1, -2, -3, and -4 (figures 1-1, 1-2, and 1-3).

**1-2. Consolidated Index of Army Publications and Blank Forms.** Refer to the latest issue of DA PAM 25-30 to determine whether there are new editions, changes, or additional publications pertaining to the equipment

**1-3. Maintenance Forms, Records and Reports.**

*a. Reports of Maintenance and Unsatisfactory Equipment.* Department of the Army forms and procedures used for equipment maintenance will be those prescribed by DA Pam 738-750, as contained in Maintenance Management Update. Air Force personnel will use AFR 66-1 (Air Force Maintenance Management Policy) for maintenance reporting and TO-00-35D54 for unsatisfactory equipment reporting. Navy personnel will report maintenance performed utilizing the Maintenance Data Collection Subsystem (MDCS) IAW OPNAVINST 4790.2, Vol 3 and unsatisfactory material/conditions (UR submissions) IAW OPNAVINST 4790.2, Vol 2, chapter 17.

*b. Reporting of Item and Packaging Discrepancies.* Fill out and forward SF 364 (Report of Discrepancy (ROD)) as prescribed in AR 735-11-2/DLAR 414-.55/SECNAVINST 4355.18/AFR 400-54/MCO 4430.3J.

c. Transportation Discrepancy Report (TDR) (SF 361). Fill out and forward Transportation Discrepancy Report (TDR) (SF 361) as prescribed in AR 55-28/NAVUSPINST 4610.33C/AFR 75-18/MCO P4610.19D/DLAR 4500.15.

1-4. **Reporting Equipment Improvement Recommendations (EIR).**

a. Army. If your Military Standard Engine needs improvment, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368 (Product Quality Deficiency Report). Mail it to us at: Commander, U.S. Army Troop Support Command, ATTN: AMSAT-I-MDO, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. We will send you a reply.

b. Air Force. Air Force personnel are encouraged to submit EIR's in accordance with AFR 900-4.

c. Navy. Navy personnel are encouraged to submit EIR's through their local Beneficial Suggestion Program.

1-5. **Destruction of Army Materiel to Prevent Enemy Use.** Refer to TM 750-244-3 for procedures to destroy equipment to prevent enemy use.

1-6. **Preparation for Storage or Shipment.** Refer to Chapter 4, Section VI, and TB 740-97-2 for procedure to place the equipment into storage.

1-7. **Glossary.** Not applicable.

Section II. EQUIPMENT DESCRIPTION AND DATA


Paragraph		Page
1-8	Equipment Characteristics, Capabilities and Features .....	1-2
1-9	Location and Description of Major Components (Models 1A08-1, -2 .....	1-3
1-10	Location and Description of Major Components (Models 1A08-3, -4) .....	1-5
1-11	Equipment Data .....	1-7
1-12	Differences Between Models .....	1-8
1-13	Safety, Care, and Handling .....	1-8

1-8. **Equipment Characteristics, Capabilities and Features.** The Military Standard Engine is an air cooled, single cylinder, four cycle gasoline engine. The engine is capable of developing 1 1/2 HP at 3600 RPM.

1-2 Change 2

1-9. **Location and Description of Major Components (Models 1A08-1, -2)** (figure 1-2).

- 1 Carburetor - Mixes air and fuel and delivers it to the engine
- 2 Air Cleaner - Cleans air going into the carburetor
- 3 Fuel Pump - Delivers fuel to carburetor
- 4 Crankshaft - Delivers power developed by engine to other external end items
- 5 Governor - Regulates maximum speed of engine
- 6 Spark Plug - Delivers spark to air fuel mixture
- 7 Flywheel Fan - Provides air for cooling engine during operation
- 8 Oil Pan - Serves as a reservoir for engine oil
- 9 High Tension Cable - Delivers high voltage electrical charge to spark plug
- 10 Starter Flange - Provides area for starter rope to be attached to the engine when pull starting engine
- 11 Starter Rope - Used to pull start engine
- 12 Fuel Filter - Cleans fuel going to engine
- 13 Oil Gage and Filler Tube - Provides the means to check engine oil level and to add oil as needed.

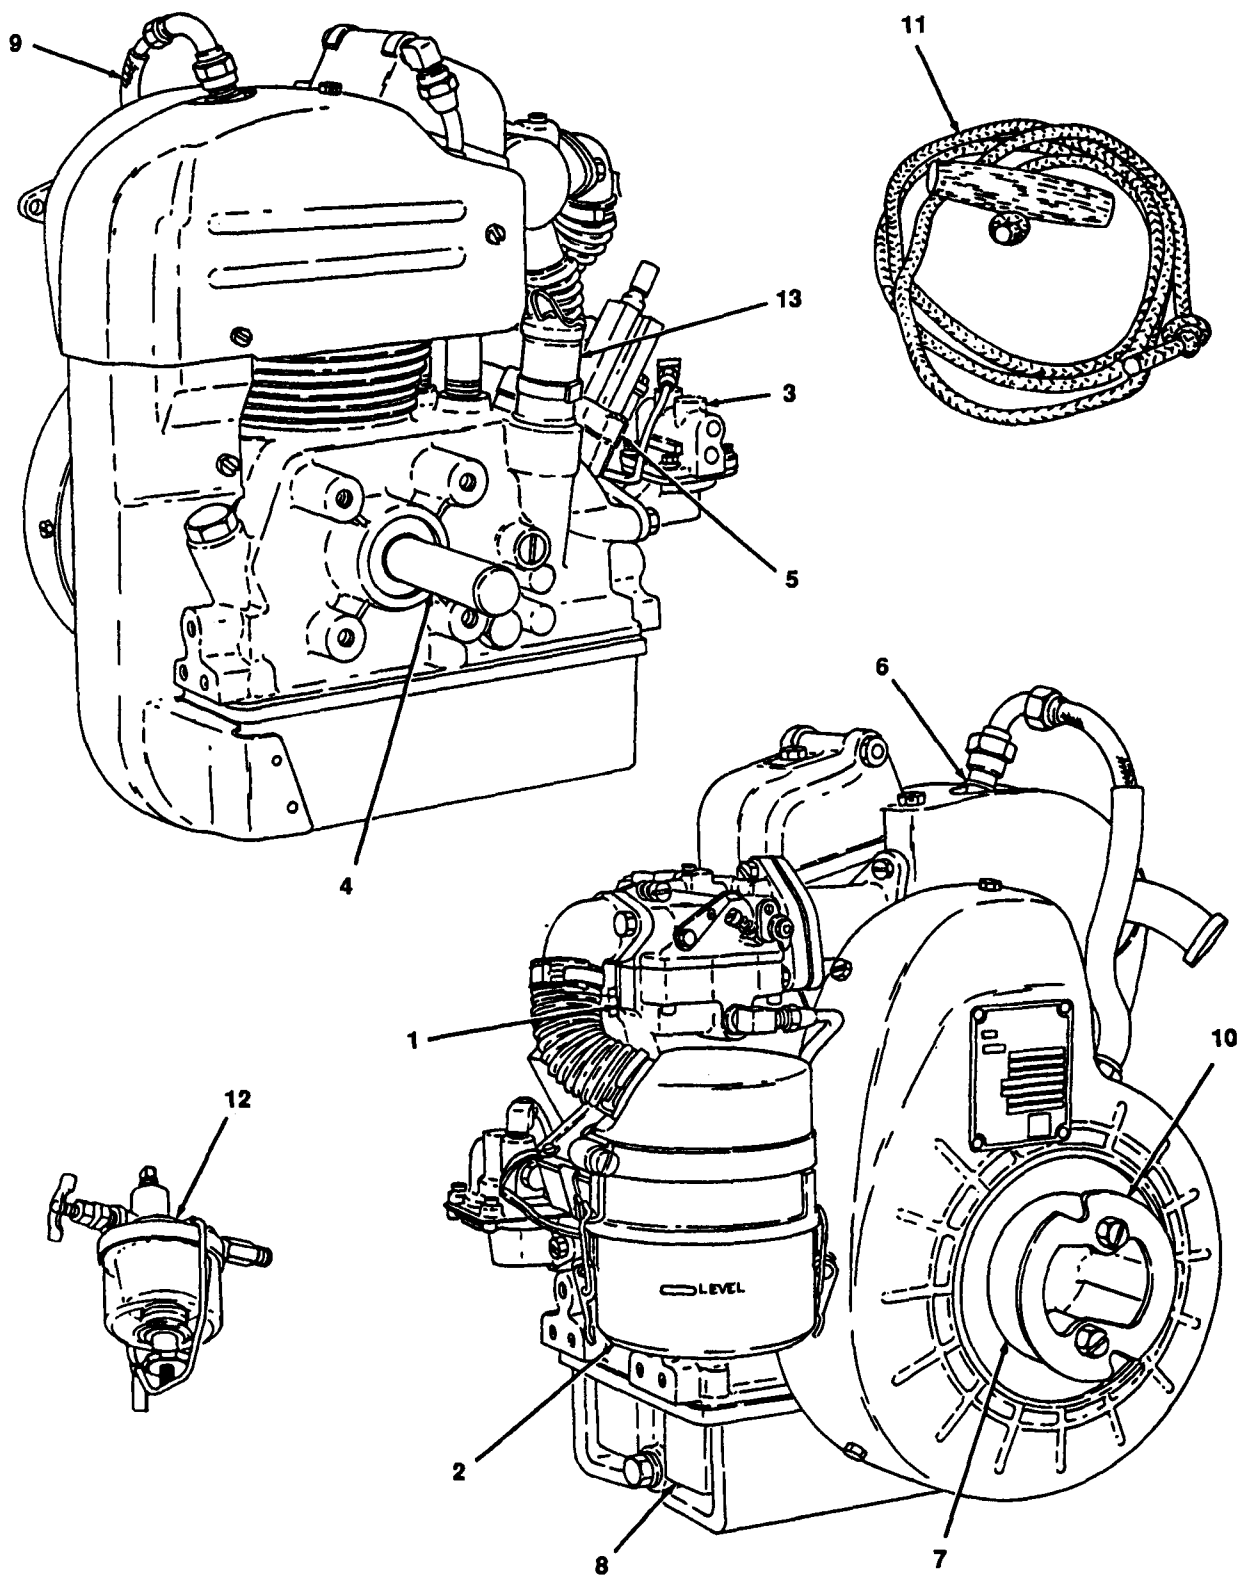


4866-002

Figure 1-2. Location and Description of Major Components Models 1A08-1, -2.



**1-10. Location and Description of Major Components (Models 1A08-3, -4) (figure 1-3).**

- 1 Carburetor - Mixes air and fuel and delivers it to the engine
- 2 Air Cleaner - Cleans air going into the carburetor
- 3 Fuel Pump - Delivers fuel to carburetor
- 4 Crankshaft - Delivers power developed by engine to other external end items
- 5 Governor - Regulates maximum speed of engine
- 6 Ignition Control Unit (Model 1A08-4) - Regulates spark delivery to spark plug
- 7 Spark Plug - Delivers spark to air fuel mixture
- 8 Flywheel Fan - Provides air for cooling the engine during operation
- 9 High Tension Cable - Delivers high voltage electrical charge to spark plug
- 10 Starter Rope - Used to pull start engine
- 11 Starter Flange - Provides area for starter rope to be attached to engine when pull starting engine
- 12 Fuel Filter - Cleans fuel going to engine
- 13 Low Voltage Cable - Delivers control voltage to ignition control unit
- 14 Service Indicator - Indicates when air cleaner assembly requires servicing
- 15 Throttle Control - Adjusts engine speed from idle to full governed position
- 16 Oil Pan - Serves as reservoir for engine oil
- 17 Oil Gage and Filler Tube - Provides the means to check engine oil level and to add oil as needed.

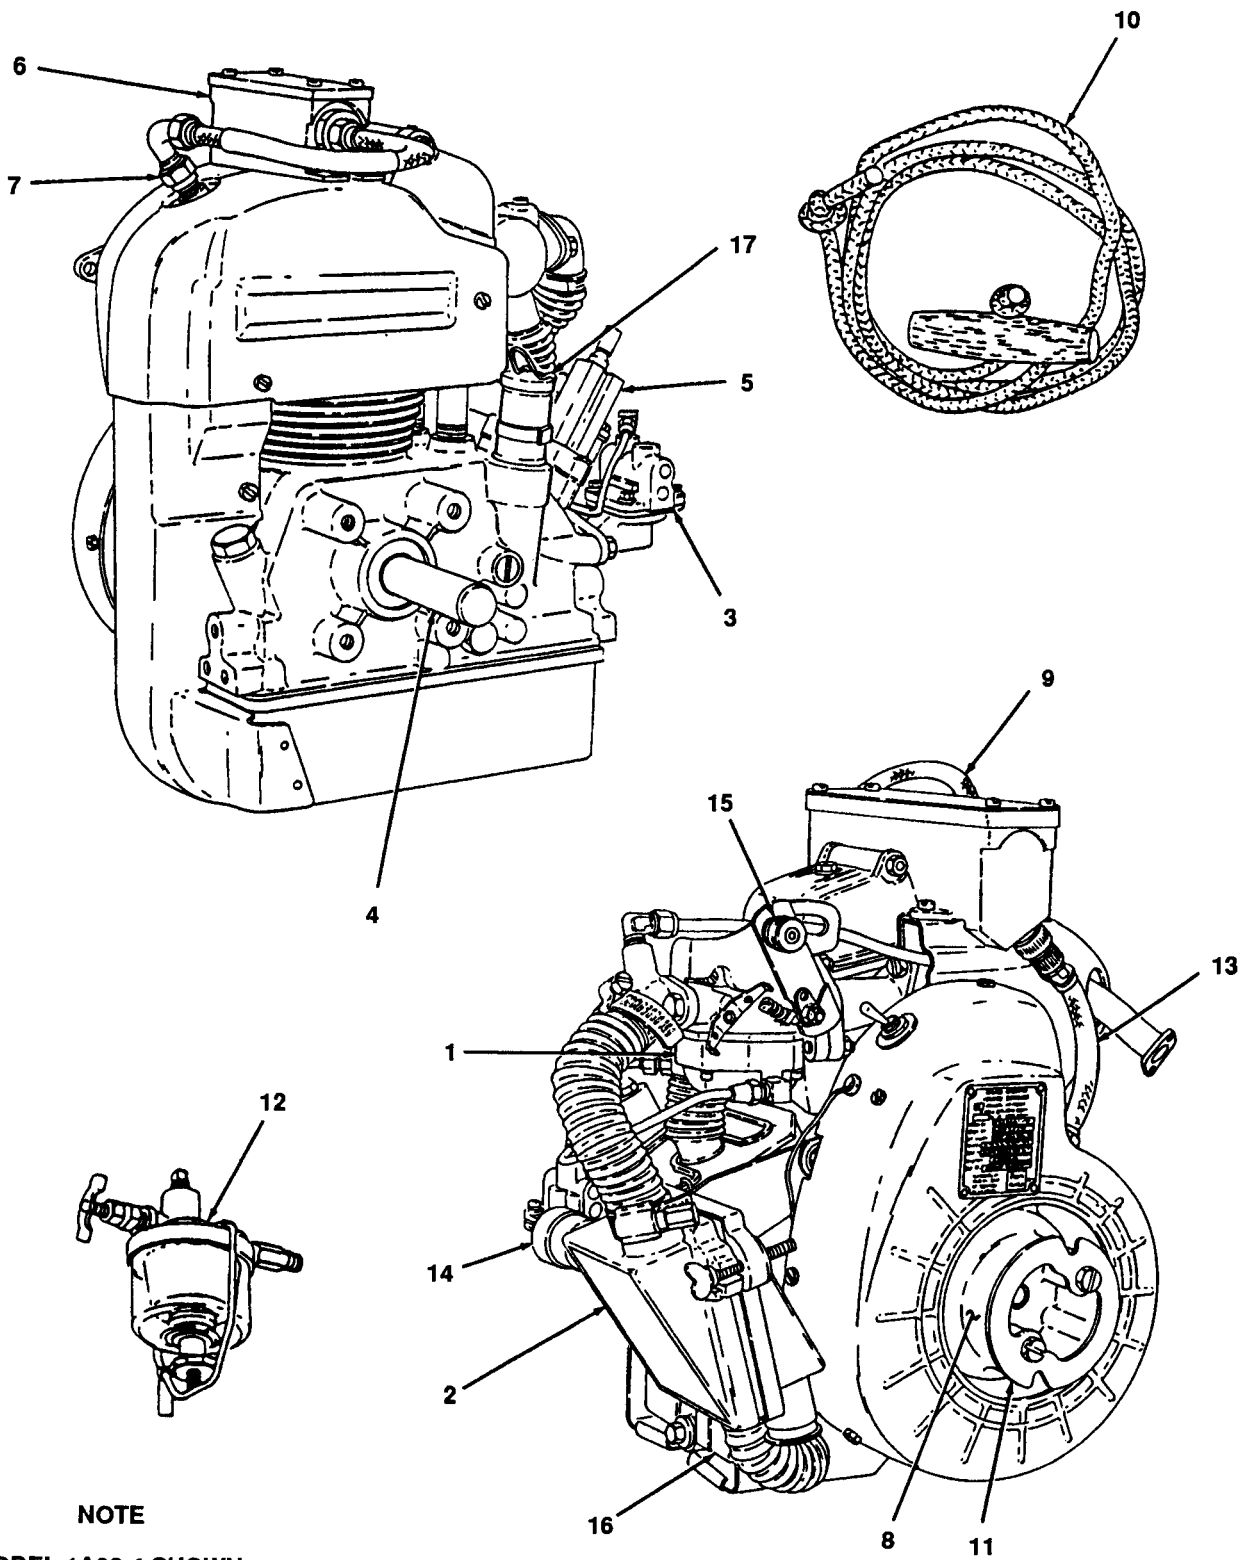

**NOTE**  
**MODEL 1A08-4 SHOWN.**

4866-003

Figure 1-3. Location and Description of Major Components Models 1A08-3, -4.

## 1-11. Equipment Data.

### a. General.

Engine model . . . . . 1A08-1, -2, -3, -4  
Type . . . . . 4 cycle gasoline powered air cooled  
Number of cylinders . . . . . 1  
Horse power rating . . . . . 1 1/2 at 3600 r.p.m.  
Fuel pump . . . . . Diaphragm 3.0-4.5 psi (20.7-31.0 kpa) outlet pressure  
Air cleaner . . . . . Oil bath models 1A08-1, -2  
Dry models 1A08-3, -4  
Spark plug . . . . . Shielded  
Gap . . . . . .028-.033 in. (.071-.083 cm)  
Breaker points . . . . .  
Gap (Models 1A08-1, -2, and -3) . . . . . .016-.020 in. (.040-.050 cm)  
Valve tappet clearance cold . . . . . .007-.009 in. (.017-.027 cm)  
(Intake and exhaust)  
Governor . . . . . Centrifugal  
Oil capacity . . . . . 1/2 quart

### b. Dimensions and Weight Model 1A08-1.

Length . . . . . 12.50 in. (31.75 cm)  
Width . . . . . 15.75 in. (40.00 cm)  
Height . . . . . 14.50 in. (36.75 cm)  
Weight . . . . . 28 lbs (12.69 kg)

### c. Dimensions and Weight Model 1A08-2.

Length . . . . . 12.50 in. (31.75 cm)  
Width . . . . . 15.75 in. (40.00 cm)  
Height . . . . . 14.50 in. (36.75 cm)  
Weight . . . . . 29.38 lbs (13.32 kg)

### d. Dimensions and Weight Model 1A08-3.

Length . . . . . 17.75 in (45.08cm)  
Width . . . . . 17.75 in. (45.08 cm)  
Height . . . . . 14.25 in. (36.19 cm)  
Weight . . . . . 29 lbs (13.15 kg)

### e. Dimensions and Weight Model 1A08-4.

Length . . . . . 17.75 in. (45.08 cm)  
Width . . . . . 17.75 in (45.08 cm)  
Height . . . . . 15.50 in. (39.37 cm)  
Weight . . . . . 30.20 in. (13.69 kg)

1-12. **Differences Between Models.** All four models of the Military Standard are the same except for the following differences:

- a. Models 1A08-1, -2 are equipped with wet air cleaners. Models 1A08-3, -4 have dry air cleaners with service indicators.
- b. Models 1A08-1, -2 are equipped with STOP buttons.
- c. Models 1A08-3, -4 are equipped with ignition switches.
- d. Model 1A08-4 has a breakerless ignition system. Models 1A 08-1, -2, -3 have a breaker point system with condenser.
- e. Models 1A08-3, -4 are equipped with throttle controls.

1-13. **Safety, Care, and Handling.** Observe all WARNINGS, CAUTIONS and NOTES in this manual. This equipment can be extremely dangerous if these instructions are not followed.

### Section III. PRINCIPLES OF OPERATION

1-14. **Principles of Operation.**

a. General. The 1 1/2 Hp Military Standard engine is a four cycle single cylinder, air cooled, gasoline powered internal combustion engine. The engine develops its full rated capacity at a governed 3600 r.p.m.

b. Simplified Principles of Operation. A starter flange, on the flywheel fan, provides a means to connect the starter rope for pull starting the engine. An inline fuel filter cleans the fuel supplied to the engine. The filter comes equipped with a fuel cutoff valve, that when closed, stops fuel flow to the engine. The engine comes equipped with either an oil bath or a dry element air cleaner. Both types of air cleaners provide the same amount of filtering, but the dry element air cleaner has two unique features, a built in service indicator and an air inlet control. The service indicator signals when the element requires cleaning. The inlet temperature control varies the amount of unheated air entering the air cleaner. On models 1A08-1 and -2 a stop button is used to terminate engine operation. On models 1A08-3 and -4 a two position ignition switch is used. When the switch is in the RUN position the engine can be started. Setting the switch to OFF terminates engine operation

c. Detailed Principles of Operation.

(1) *Fuel system.* The fuel system is composed of a fuel filter, fuel pump, fuel line, and carburetor. The fuel filter is a bowl type with a filtering screen. The screen filters dirt and other foreign materials from the fuel. The fuel pump drains fuel from an external fuel supply through the fuel filter, and delivers it to the carburetor. The fuel pump, a diaphragm type, is driven by the camshaft. The fuel pump can be operated manually, using the priming lever. This allows the fuel system, between the pump and the carburetor, to be primed before starting the engine. The carburetor mixes the air, from the air cleaner, and the fuel. This is then delivered to the combustion chamber where it is compressed and burned.

(2) *Cooling system.* The flywheel fan draws cool air into the flywheel fan cover, where it is then directed by the cylinder head covers, and oil pan cover. The air flows around the cylinder and cylinder head assembly and cools the engine.

(3) *Air supply.* The air cleaner, whether oil bath or dry element, cleans the air going to the carburetor. The oil bath air cleaner uses oil to remove dirt from the air. The dry element air cleaner uses a dry fiber element to remove dirt from the air. As the element gets dirty, air flow through it decreases and creates a vacuum in the air cleaner. When air flow decreases too much, the service indicator shows a red signal and indicates the element requires cleaning.

(4) *Speed regulation.* All four models of the engine are equipped with a centrifugal flywheel to the carburetor by a control rod. The governor determines the fastest speed at which the engine will run. Models 1A08-1 and -2 have no speed regulation other than the adjustment of the governor. Models 1A08-3 and -4 are equipped with throttle controls which overrides the function of the governor. The throttle control allows the engine speed to be adjusted between idle and full governed speed.

(5) *Ignition system.* There are two different types of ignition systems used on the engine. Models 1A08-1, -2, and -3, all use a breaker point ignition system. A set of breaker points triggers a condenser and coil to produce a high voltage electric charge. This charge is then delivered, through a shielded high tension cable, to the spark plug located in the cylinder head. This charge creates a spark at the spark plug electrode, and ignites the air/fuel mixture in the combustion chamber. Model 1A08-4 uses a breakerless ignition system. This system uses electronic components to generate the high voltage electric charge to ignite the air/fuel mixture.

(6) *Lubrication.* Lubrication of the rocker and valve assemblies is accomplished by drawing oil vapors from the crankcase into the cylinder head assembly. A breather line connects the cylinder head with the air intake elbow, mounted between the carburetor and air cleaner assembly. On Models 1A08-1, the breather line is connected directly to the air cleaner assembly. The vacuum in the breather line is sufficient to draw oil vapors from the crankcase, up through the push rod tubes, and into the cylinder head assembly.

CHAPTER 2

OPERATING INSTRUCTIONS

	Page
OVERVIEW . . . . .	2-1
Section I. Description and Use of Operator's Controls and Indicators . . . . .	2-1
Section II. Preventive Maintenance Checks and Services (PMCS) . . . . .	2-4
Section III. Operation Under Usual Conditions . . . . .	2-7
Section IV. Operation Under Unusual Conditions . . . . .	2-10

OVERVIEW

This chapter contains instructions and procedures required to operate the engine safely and efficiently.

Section I. DESCRIPTION AND USE OF OPERATORS' CONTROLS AND INDICATORS

Paragraph	Page
2-1 General . . . . .	2-1
2-2 Operator's Controls and Indicators . . . . .	2-1


2-1. **General.** This section contains a list of operator controls and indicators and a description of their use.

2-2. **Operator's Control and Indicators.** The following is a list of operator controls and indicators for all models of the engine. Although the appearance of the engine may vary between models the location and function of the controls and indicators are similar (figure 2-1).

Key	Control or Indicator	Function
1	Choke	Used during engine start-up to reduce airflow through carburetor, making starting easier.
2	Air Cleaner Service Indicator	Indicates to operator when air cleaner requires servicing.
3	Throttle Control Models 1A08-3, -4	Allows operator to regulate speed of engine between idle speed and governed speed.
4	Oil Filler Tube and Gage	Allows operator to check oil level in engine, and provides means for adding oil as needed.
5	Ignition Switch Models 1A08-3, -4	Used to stop engine.
6	Engine Stop Button Models 1A08-1, -2	Depressing button stops engine.

ARMY TM 9-2805-256-14  
AIR FORCE TO 38G2-102-2  
NAVY NAVFAC P-8-611-14E

Key	Control or Indicator	Function
7	Starter Rope	Used to pull start engine.
8	Fuel Shutoff Valve	Stops fuel flow from fuel filter.
9	Starter Flange	Provides area for starter rope to be attached when pull starting engine.
10	Fuel Primer Lever	Used to prime fuel system.
11	Inlet Temperature Control	Used to adjust amount of cold air entering air cleaner.

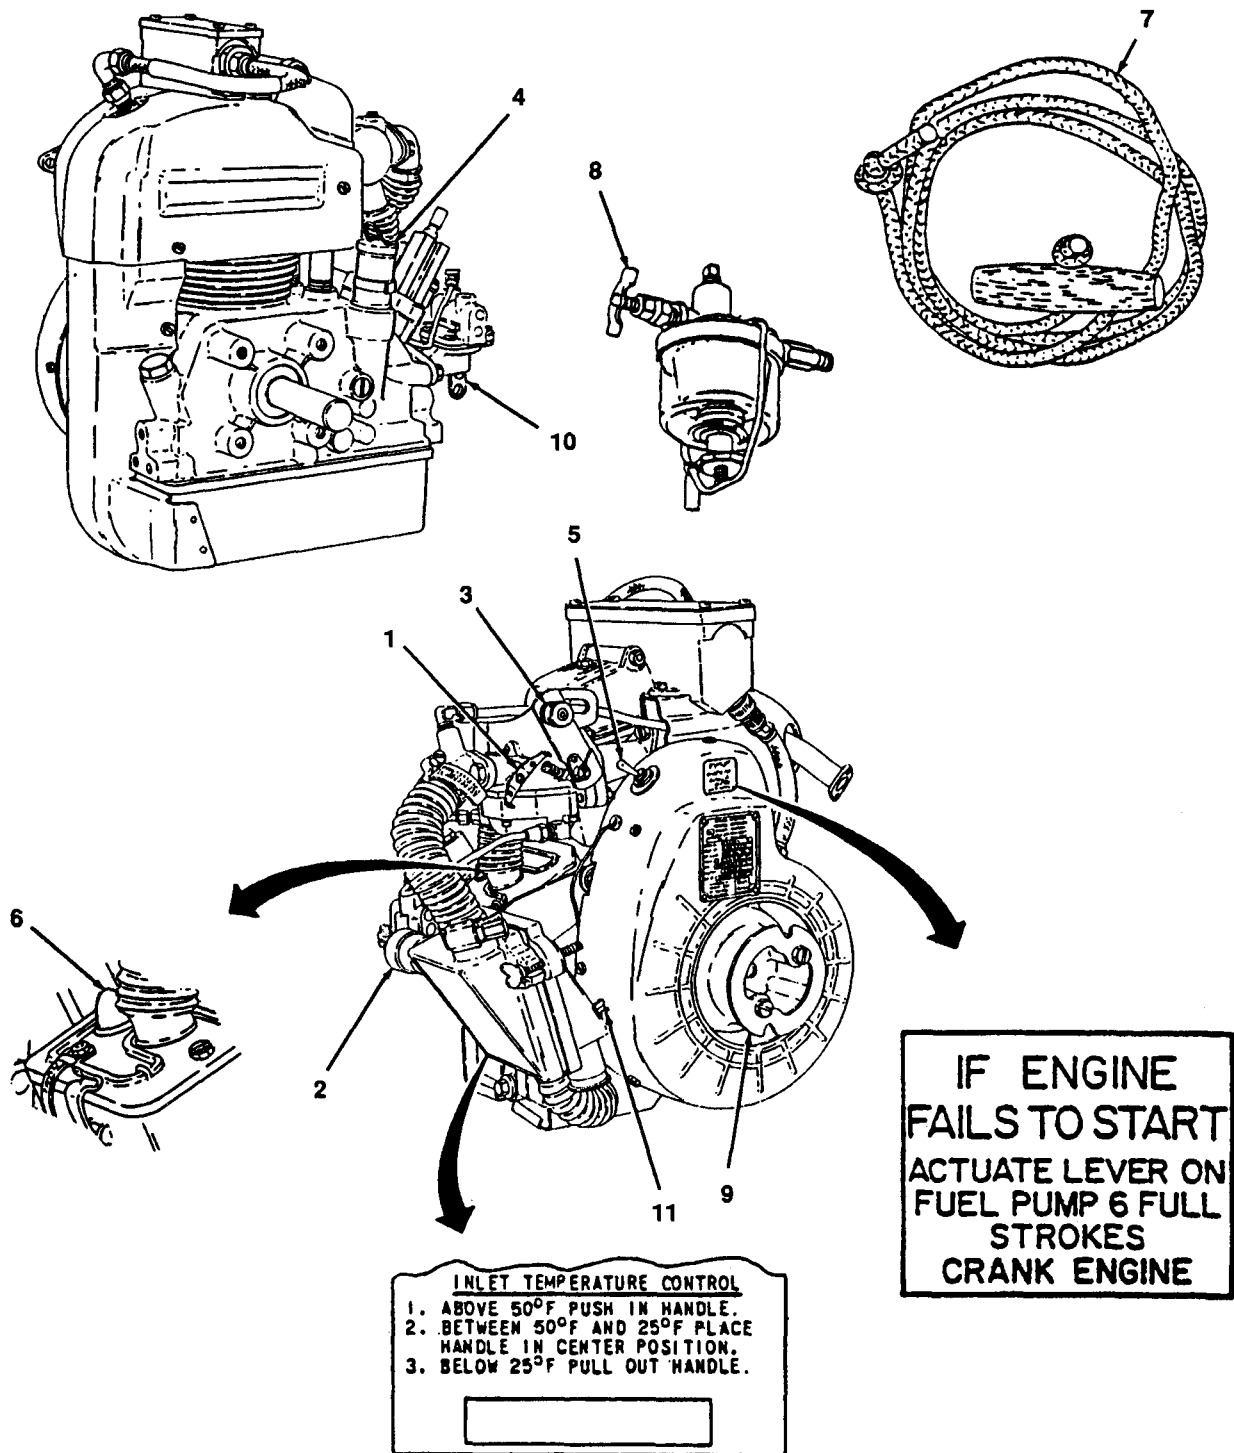

4866-004

Figure 2-1. Operator's Controls and Indicators.



## Section II. PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)

Paragraph		Page
2-3	General . . . . .	2-4
2-4	Purpose of PMCS Table . . . . .	2-4
2-5	Explanation of Columns . . . . .	2-4
2-6	Equipment is Not Ready/Available If Column . . . . .	2-4
2-7	Reporting Deficiencies . . . . .	2-5
2-8	Special Instructions . . . . .	2-5

2-3. **General.** Operator PMCS are performed to ensure that the engine is ready for operation at all times. Perform the checks and services at the specified intervals.

- a. Before you operate, perform your before (B) PMCS. Observe all CAUTIONS and WARNINGS.
- b. While you operate, perform your during (D) PMCS. Observe all CAUTIONS and WARNINGS.
- c. After you operate, be sure to perform your after (A) PMCS.
- d. If your equipment fails to operate, refer to paragraph 3-3.

2-4. **Purpose of PMCS Table.** The purpose of the PMCS table is to provide a systematic method of inspection and servicing the equipment. In this way, small defects can be detected early before they become a major problem causing the equipment to fail to complete its mission. The PMCS table is arranged with the individual PMCS procedures listed in sequence under assigned intervals. The most logical time (before, during, or after operation) to perform each procedure determines the interval to which it is assigned. Make a habit of doing the checks in the same order each time and anything wrong will be seen quickly. See paragraphs 2-5 and 2-6 for an explanation of the columns in table 2-1.

2-5. **Explanation of Columns.** The following is a list of the PMCS table column headings with a description of the information found in each column.

- a. Item No. This column shows the sequence in which the checks and services are to be performed, and is used to identify the equipment area on the Equipment Inspection and Maintenance Worksheet, DA Form 2404.
- b. Interval. This column shows when each check is to be done.
- c. Item to be Inspected/Procedures. This column identifies the general area or specific part where the check or service is to be done, and explains how to do them.
- d. Equipment is Not Ready/Available If. See paragraph 2-6.

2-6. **Equipment is Not Ready/Available If Column.** This column lists conditions that make the equipment unavailable for use because it is unable to perform its mission, or because it would represent a safety hazard. Do not accept or operate equipment with a condition in the "Equipment is Not Ready/Available If" column.

#### NOTE

The terms ready/available and mission capable refer to the same status: Equipment is on hand and is able to perform its combat mission. Refer to DA Pam 738-750.

**2-7. Reporting Deficiencies.** If any problem with the equipment is discovered during PMCS or while it is being operated that cannot be corrected at the operator/crew maintenance level, it must be reported. Refer to DA Pam 738-750 and report the deficiency using the proper forms.

**2-8. Special Instructions.** Preventive maintenance is not limited to performing the checks and services listed in the PMCS table.

#### WARNING

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F – 138°F (38°C - 60°C).

a. Keep it clean. Dirt, grease, oil, and debris get in the way and may cover up a serious problem. Clean as you work and as needed. Use drycleaning solvent on all metal surfaces. Use soap and water to clean rubber or plastic material.

b. Bolts, Nuts, and Screws. Check them all for obvious looseness, missing, bent, or broken condition. You can't try them all with a tool, but look for chipped paint, bare metal, or rust around boltheads. If you find one you think is loose, tighten it, or report it to unit maintenance if you can't tighten it.

c. Electrical Wires and Cable Connectors. Look for bare wires, and loose or broken connectors. Report defects to unit maintenance.

d. Fluid Lines. Look for wear, damage, and leaks. Make sure clamps and fittings are tight. Wet spots and stains around a fitting or connector can mean a leak. If a leak comes from a loose connector, tighten it. If something is broken or worn out, report it to unit maintenance.

e. Leakage Definitions. It is necessary for you to know how fluid leakage affects the status of your equipment. The following are definitions of the types/classes of leakage you need to know to be able to determine the status of your equipment. Learn and be familiar with them. When in doubt, NOTIFY YOUR SUPERVISOR!

#### Leakage Definitions:

Class I	See page of fluid (as indicated by wetness or discoloration) not great enough to form drops.
Class II	Leakage of fluid great enough to form drops but not enough to cause drops to drip from item being checked/inspected.
Class III	Leakage of fluid great enough to form drops that fall from the item being checked/inspected.

### CAUTION

Equipment operation is allowable with minor leakage (Class 1 or II) of any fluid except fuel. Of course, consideration must be given to the fluid capacity in the item being checked/inspected. When in doubt, notify your supervisor.

When operating with Class I or II leaks, continue to check fluid level more often than required in the PMCS. Parts without fluid will stop working and/or cause equipment damage.

Class III leaks should be reported to your supervisor or unit maintenance.

f. Painting. Touch-up engine as needed. Refer to TM 43-0139 for specific painting procedures.

Table 2-1. Operator Preventive Maintenance Checks and Services (PMCS).

Item No.	Interval			Item to be Inspected Procedure	Equipment is Not Ready/Available If
	B	D	A		
1	•			ENGINE	
	•	•		a. Visually inspect engine for signs of damage or missing parts.	
	•			b. Inspect engine for evidence of fuel or oil leaks.	Class III oil leak, or Class I fuel leak is detected.
	•			c. Check fuel filter for evidence of contaminated fuel. Notify unit maintenance if fuel is contaminated.	Fuel filter contains contaminated fuel.
	•		•	d. Perform lubrication on engine. Refer to LO 9-2805-256-12 for lubrication instructions.	
		•		e. Listen to engine for unusual sounds, rough running, or excessive exhaust smoke.	
2	•	•	•	AIR CLEANER SERVICE INDICATOR	
				Check indicator, and notify unit maintenance when indicator is in the red area.	Indicator is in the red area.
3	•			STARTER ROPE ASSEMBLY	
				Inspect starter rope for cuts or signs of fraying.	Starter rope assembly is worn or damaged.

### Section III. OPERATION UNDER USUAL CONDITIONS

Paragraph	Page
2-9 Starting Procedure . . . . .	2-7
2-10 Stopping Procedures . . . . .	2-9

#### 2-9. Starting Procedures. (figure 2-2)

- a. Open fuel shutoff valve (1) on fuel filter (2).
- b. Rotate choke control lever (3) counterclockwise and close choke.
- c. On models 1A08-3 and -4, place throttle control (4) approximately 1/4 in. from idle position.
- d. On models 1A08-3 and -4, set ignition switch (5) to RUN position.
- e. On models 1A08-3, -4, set inlet temperature control as follows:
  - (1) Above 50°F (10°C) push in handle (6).
  - (2) Between 50-25°F (10° (-4)°C), place handle (6) in center position.
  - (3) Below 25° (-4°C) pull out handle (6).

#### **WARNING**

Operation of the equipment presents a noise hazard to personnel in the area. The noise level exceeds the allowable limits for unprotected personnel. Wear ear muffs or ear plugs which were fitted by a trained professional.


Serious eye injury can result from the starting rope knot. Wear eye protection when pull starting engine.

- f. Wind starting rope clockwise around starter flange (7) and pull briskly.
- g. When the engine has started, rotate the choke control lever (3) clockwise until the choke is fully opened, and the engine will continue to run.

#### **NOTE**

It maybe necessary on models 1A08-3 and -4 to rotate the throttle control counterclockwise to obtain a smooth idle.

- h. Allow engine to warm-up for at least 3 minutes.
- i. On models 1A08-3 and -4, after warm-up, move throttle control counterclockwise to the full governed position.
- j. Apply end item load. Refer to End Item Operators Manual.

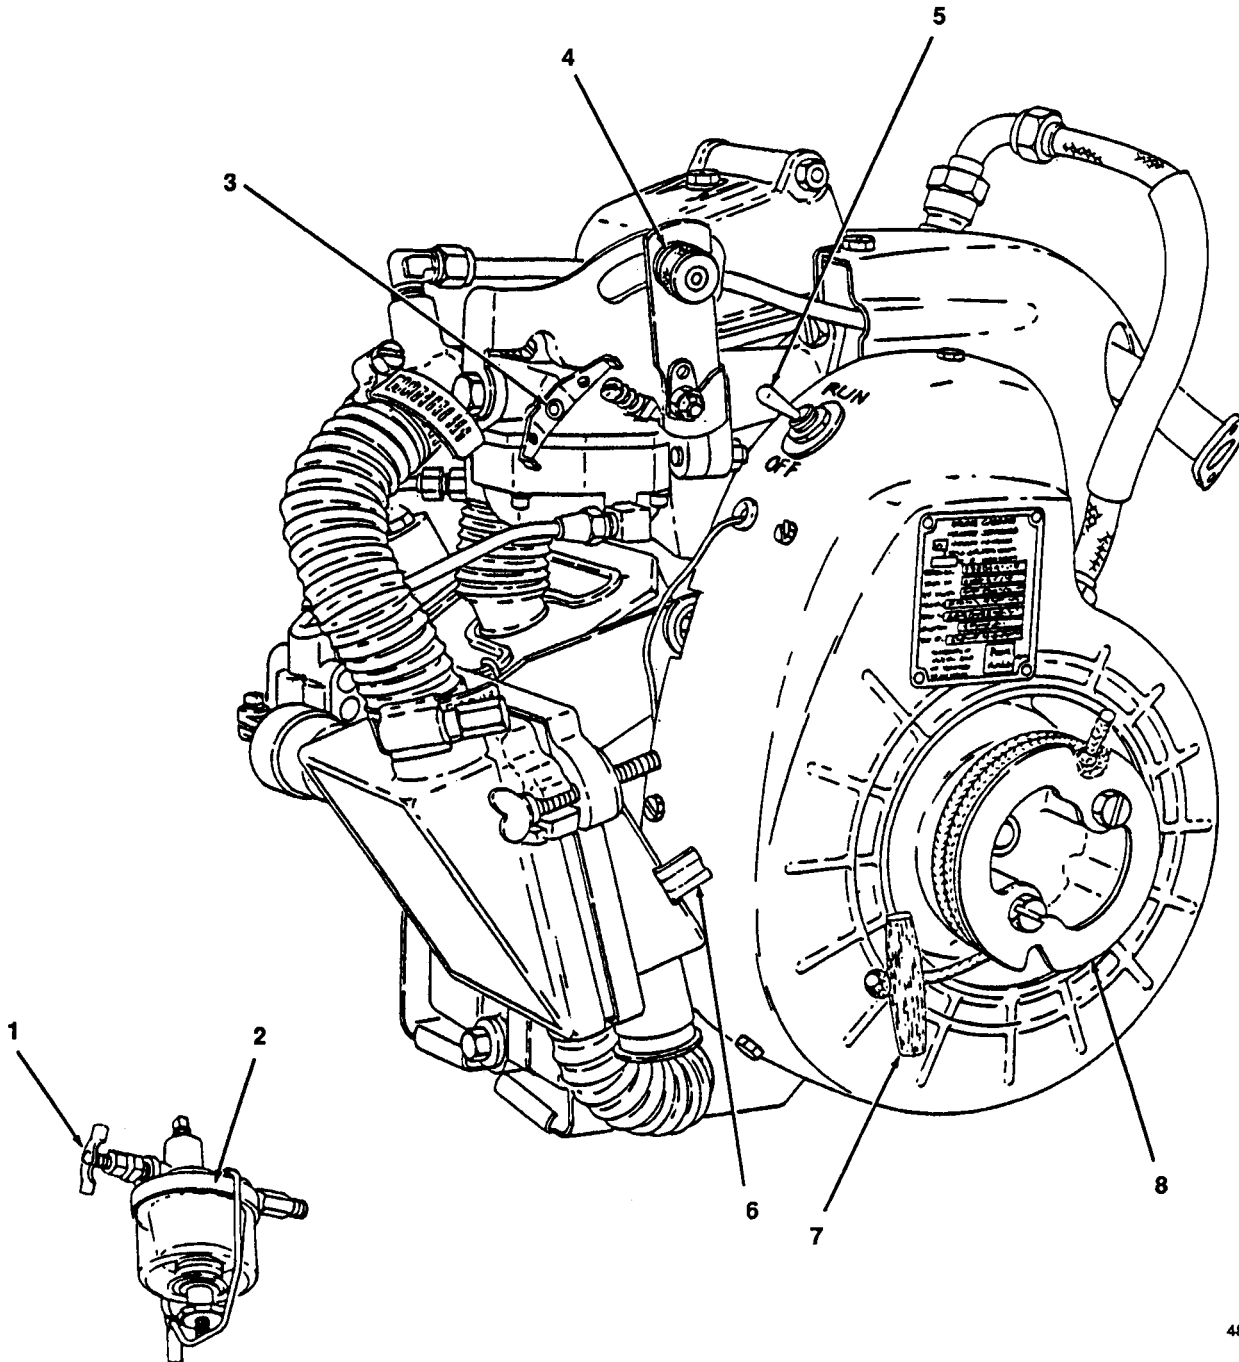

4866-005

Figure 2-2. Starting Procedures.

2-10. **Stopping Procedures.** (figure 2-3)

- a. Remove end item load. Refer to End Item Operators Manual.
- b. On models 1A08-3 and -4 move throttle control (1) to idle position, and let engine idle for at least 2 minutes.
- c. On models 1A08-1 and -2, depress engine STOP button (2), on Models 1A08-3 and -4, set ignition switch (3) to OFF.

- d. Close fuel shutoff valve (4) on fuel filter (5).
- e. Perform After Operation PMCS.

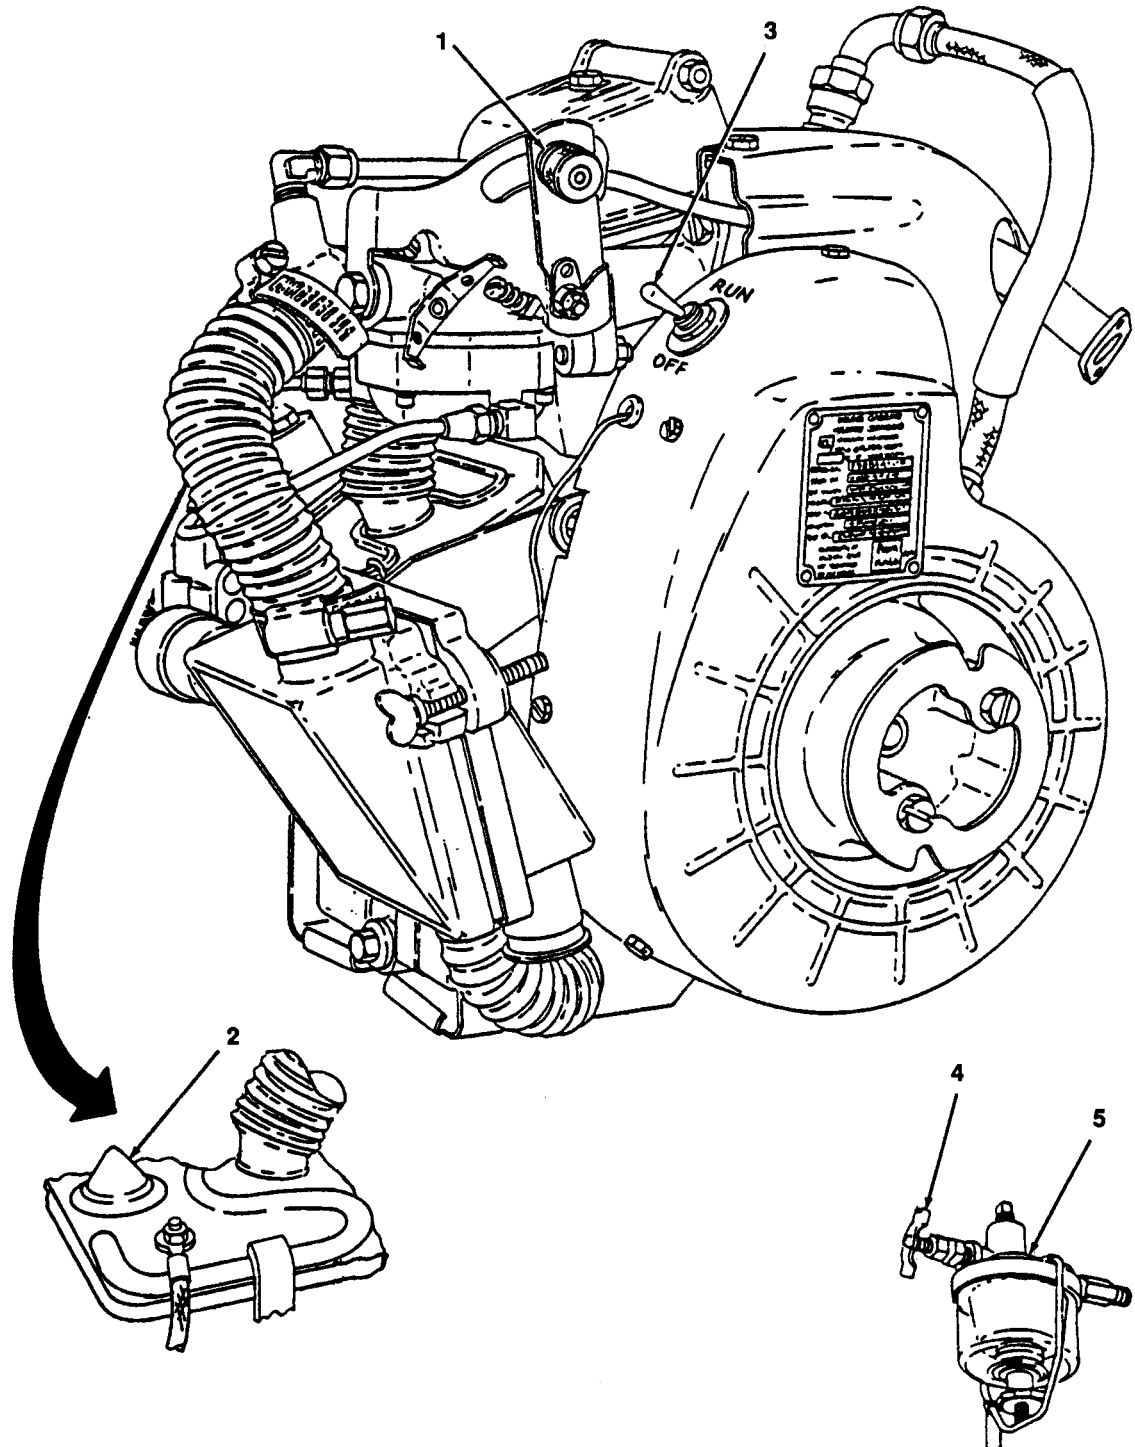


Figure 2-3. Stopping Procedure.

4866-006

## Section IV. OPERATION UNDER UNUSUAL CONDITIONS

Paragraph		Page
2-11	Operation in Dusty or Sandy Areas . . . . .	2-10
2-12	Operation in Rainy, Humid, or Salt Air Conditions . . . . .	2-10
2-13	Operation in Extreme Heat . . . . .	2-10
2-14	Operation at Different Altitudes . . . . .	2-10
2-15	Operation in Extreme Cold . . . . .	2-11

2-11. **Operation in Dusty or Sandy Areas.** The procedures for operating the engine are the same as under usual conditions except for the following special precautions:

- a. Keep fuel, lubrication, ignition and cooling systems free of dust and sand.
- b. Inspect air cleaner assembly more often when operating in dusty or sandy areas. Have unit maintenance service air cleaner element as needed.
- c. In the event of severe dust or sand storms, provide a well protected sheltering device for the engine.
- d. Remove all dust or sand from the engine and inspect for damage.

2-12. **Operation in Rainy, Humid, or Salt Air Conditions.** The procedures for starting and stopping the engine are the same as under usual conditions except for the following special precautions:

- a. Remove all visible signs of corrosion as soon as possible.
- b. Keep fuel lines, and ignition lines as dry as possible.
- c. If possible, store engine indoors.
- d. Use a thin layer of oil or desiccants to keep corrosion to a minimum.

2-13. **Operation in Extreme Heat.** The procedures for starting and stopping the engine are the same as under normal condition except for the following special precautions:

- a. Check oil level more often when operating in extreme heat.
- b. Allow engine to cool off longer after removing end item load.
- c. In extreme hot temperatures, the engine will run efficiently but at a reduced horse power rating. For each 10°F (12.2°C) above 60°F(15.5°C) a 1 percent loss of power should be expected.

2-14. **Operation at Different Altitudes.** The procedures for starting and stopping the engine are the same as under usual conditions. The engine will operate at altitudes of up to 5000 feet above sea level but at a reduced horse power rating. For every 1000 feet above sea level, a 3.5 percent power loss should be expected.

2-15. **Operation in Extreme Cold.** The engine can be operated in temperatures as cold as -25°F (-32°C). The procedures for starting and stopping are the same as under usual conditions excepts for the following special precautions.

- a. Protect the engine from icing. Remove ice and snow from engine as often as possible.
- b. Allow engine sufficient warm-up time before apply engine load.





CHAPTER 3

OPERATOR'S MAINTENANCE INSTRUCTIONS

	Page
OVERVIEW . . . . .	3-1
Section I. Lubrication Instructions . . . . .	3-1
Section II. Operator Troubleshooting Procedures . . . . .	3-1

OVERVIEW

This chapter contains operator level maintenance instructions.

Section I. LUBRICATION INSTRUCTIONS

Paragraph	Page
3-1 General . . . . .	3-1
3-2 Lubrication . . . . .	3-1

- 3-1. **General.** This section contains operator lubrication instructions.
- 3-2. **Lubrication.** Refer to LO 9-2805-256-12 and perform operator level lubrication procedures. Operate the engine (para. 2-9) for at least 5 minutes, after lubrication. Stop the engine (para. 2-10) and perform operator level after Operation Preventive Maintenance Checks and Services (PMCS).

Section II. OPERATOR TROUBLESHOOTING PROCEDURES

Paragraph	Page
3-3 General . . . . .	3-1
3-4 Operator Troubleshooting Procedures.. . . .	3-1

- 3-3. **General.** This section contains troubleshooting procedures to determine the probable cause of observed equipment malfunctions. Inspections are provided to isolate the faulty component and corrective actions are provided to eliminate the malfunction.
- 3-4. **Operator Troubleshooting Procedures.** Refer to the Symptom Index to locate the troubleshooting procedure for the observed malfunction.
- a. Table 3-1 lists the common malfunctions which you may find during operation of 1 1/2 HP Military Standard Gasoline Engine Models 1A08-1, -2, -3, and -4, and its components. Perform the test/inspections in the order listed.
  - b. This manual cannot list all malfunctions that may occur, nor all tests or inspections and corrective actions. If a malfunction is not corrected by listed corrective actions, notify your supervisor.

SYMPTOM INDEX

Symptom	Page
Engine will not start . . . . .	...3-2
Engine runs excessively hot . . . . .	...3-2
Engine starts but fails to keep running . . . . .	...3-3

Table 3-1. Operator Troubleshooting Procedures.

Malfunction	Test or Inspection	Corrective Action
1. ENGINE WILL NOT START		
	Step 1. Check end item fuel supply.	Replenish fuel supply if low.
	Step 2. Check fuel cutoff valve	Turn valve counterclockwise to open.
	Step 3. Check choke position.	Choke should be in closed position for starting.
	Step 4. Check ignition switch models 1A08-3, -4.	Set ignition switch to RUN position.
2. ENGINE RUN SHOT		
	Step 1. Check oil level.	Replenish oil if low.
	Step 2. Check that cooling system ducts, covers, and deflectors are present and serviceable.	Notify unit maintenance of damaged or missing items.

*Table 3-1. Operator Troubleshooting Procedures.*

---

Malfunction

Test or Inspection

Corrective Action

---

3. ENGINE STARTS BUT FAILS TO KEEP RUNNING.

**NOTE**

If engine is warm, the choke may not need to be closed completely.

Step 1. Check choke position.

If engine is cold, close choke.

If engine is warm, close choke halfway.

Step 2. Check fuel cutoff valve.

Turn valve counterclockwise to open.

---

## CHAPTER 4

### UNIT MAINTENANCE

	Page
OVERVIEW	4-1
Section I. Repair Parts; Special Tools; Test, Measurement, Diagnostic Equipment (TMDE); and Support Equipment . . . . .	4-2
Section II. Service Upon Receipt . . . . .	4-1
Section III. Unit Preventive Maintenance Checks and Services (PMCS) . . . . .	4-2
Section IV. Unit Troubleshooting . . . . .	4-3
Section V. Unit Maintenance Procedures . . . . .	4-7
Section VI. Preparation for Shipment or Storage . . . . .	4-68

#### OVERVIEW

This chapter contains those maintenance instructions that unit level maintenance is authorized to perform.

#### Section I. REPAIR PARTS; SPECIAL TOOLS; TEST, MEASUREMENT, DIAGNOSTIC EQUIPMENT (TMDE); AND SUPPORT EQUIPMENT

Paragraph	Page
4-1 Common Tools and Test Equipment . . . . .	4-1
4-2 Special Tools, TMDE, and Support Equipment . . . . .	4-1
4-3 Repair Parts.....	4-1

4-1. **Common Tools and Equipment.** For authorized common tools and equipment, refer to the Modified Table of Organization and Equipment (MTOE) applicable to your unit.

4-2. **Special Tools, TMDE and Support Equipment.** For a listing of special tools, TMDE, and support equipment authorized for use on this equipment, refer to the Repair Parts and Special Tools List, TM 5-2805-256-24P, and the maintenance allocation chart (MAC), appendix B of this manual.

4-3. **Repair Parts.** Repair parts are listed and illustrated in the Repair Parts and Special Tools List for 1 1/2 HP Military Standard Engine TM 5-2805-256-24P.

Section II. SERVICE UPON RECEIPT

Paragraph		Page
4-4	Inspection . . . . .	4-2
4-5	Lubrication . . . . .	4-2
4-6	Testing . . . . .	4-2

4-4. **Inspection.**

- a. Inspect the equipment for damage incurred during shipment. If the equipment has been damaged, report the damage on SF Form 364, Report of Discrepancy (ROD).
- b. Check the equipment against the packing slip to see if the shipment incomplete. Report all discrepancies in accordance with the instructions of DA PAM 738-750.
- c. Check to see whether the equipment has been modified.

4-5. **Lubrication.** Refer to LO 9-2805-256-12 and perform unit level and operator level lubrication on engine.

4-6. **Testing.** Perform unit level PMCS, and operator Before (B) PMCS before starting engine. Start engine, para. 2-9, and run for at least 15 minutes. Observe the engine during operation. If any malfunctions arise, troubleshoot using table 4-2.

Section III. UNIT PREVENTIVE MAINTENANCE CHECKS AND SERVICES (PMCS)

Paragraph		Page
4-7	General . . . . .	4-2
4-8	PMCS Procedures . . . . .	4-2

4-7. **General.** Unit level maintenance PMCS are done to ensure that the engine is in top operating condition. A comprehensive PMCS program reduces equipment downtime and increases the operational readiness of the engine.

4-8. **PMCS Procedures.** Unit level PMCS is contained in table 4-1. The numbers in the Item No. column show the order in which the check or service should be done. These numbers should be used when recording deficiencies and shortcomings on DA Form 2404, Equipment Inspection and Maintenance Worksheet. The Ž in the Interval column indicates when a check or service should be done, as follows:

Table 4- 1. Unit Preventive Maintenance Checks and Services (PMCS).

H - Hours				D - Daily		S - Semiannual (500 hours)	
Item No.	Interval			Item to be inspected	Procedures		
	H	D	S				
1			•	Spark Plug	Clean, inspect, and regap. Refer to para. 4-19.		
2			•	High Tension Cable	Inspect and test high tension cable (para. 4-18).		
3			•	Breaker Points and Condenser	Inspect, adjust breaker points. Refer to para. 4-30.		
4			•	Fuel Filter	Service fuel filter. Refer to para. 4-13.		
5			•	Crankcase Ventilation System	Remove, clean, and inspect relief valve. Refer to para. 4-24. Remove, clean, and inspect breather line. Refer to para. 4-32.		
6			•	Air Cleaner	Service air cleaner daily in extreme heat, dusty or sandy conditions. Refer to para. 4-20 and 4-21.		
7	15			Crankcase Oil	Drain and refill crankcase oil in extreme heat, dusty or sandy conditions. Refer to LO 9-2805-256-12.		

## Section IV. UNIT TROUBLESHOOTING

Paragraph	Page
4-9 General . . . . .	4-3
4-10 Troubleshooting . . . . .	4-3

4-9. **General.** This section contains troubleshooting procedures to determine the probable cause of observed equipment malfunctions. Tests or inspections are provided to isolate the faulty component and corrective actions are provided to eliminate the malfunction.

4-10. **Unit Troubleshooting Procedures.** Refer to the symptom index to locate the troubleshooting procedure for the observed malfunction. The table lists the common malfunctions that may occur during the operation or maintenance of the engine. Perform the tests or inspections, and the recommended corrective action in the order listed in the troubleshooting table. If the malfunction is corrected by a specific corrective action, do not continue with the remaining steps, if any, of the troubleshooting procedure. If the malfunction is not corrected by the listed corrective actions, notify your supervisor.

### SYMPTOM INDEX

Symptom	Page
Engine fails to start . . . . .	4-4
Engine starts but fails to keep running . . . . .	4-5
Engine misses or runs erratically . . . . .	4-6
Engine surges or overspeeds . . . . .	4-6
Engine overheats . . . . .	4-6

Table 4-2. Unit Troubleshooting Procedures.

Malfunction	Test or Inspection	Corrective Action
-------------	--------------------	-------------------

1. ENGINE FAILS TO START.

Step 1. Remove air cleaner cup on models 1A08-1, -2, or remove air cleaner element Model 1A08-3, -4. Start engine.

If engine starts, service air cleaner (para. 4-20).

Step 2. Check ignition switch models 1A08-3, -4 for continuity (para. 4-17).

Replace ignition switch if defective (para. 4-17).

Step 3. Inspect spark plug (para. 4-19).

Clean, regap, or replace spark plug as necessary (para. 4-19).

Step 4. Check breaker point gap (para. 4-30).

Adjust breaker point gap as needed (para. 4-30).

NOTE

This procedure may be performed with either a digital or analog multimeter.

Step 5. Check condenser as follows:

- a. Turn engine over so that breaker points (para. 4-30, figure 4-21) are in open position.
- b. Connect positive lead of multimeter to condenser terminal lead.
- c. Set multimeter to highest resistance setting and zero meter.
- d. Connect second lead of multimeter to ground while observing meter.

If meter shows a deflection, then goes to infinity, then go to next step.

If no deflection occurs, or does not go to infinity after deflection, replace condenser (para. 4-31).

If meter doesn't return to infinity, remove connection between points and condenser and retest. If deflection occurs, replace points (para. 4-29).



Table 4-2. Unit Troubleshooting Procedures (cont).

Malfunction	Test or Inspection	Corrective Action
		<p>Step 6. Check breaker points (para. 4-30).</p> <ul style="list-style-type: none"> <li>a. Turn engine over so that breaker points (para. 4-30, figure 4-21) close.</li> <li>b. Connect one lead of multimeter to condenser terminal.</li> <li>c. Set multimeter to lowest resistance setting and zero meter.</li> <li>d. Connect second lead of multimeter to ground while observing meter.</li> </ul> <p>If meter shows full scale deflection, go to next step. If no deflection or partial deflection occurs, then replace breaker point (para. 4-29).</p> <p>Step 7. Check fuel flow out of fuel filter.</p> <p>Service fuel filter if fuel does not flow (para. 4-13).</p> <p>Step 8. Check carburetor adjustments.</p> <p>Adjust carburetor as needed (para. 4-34).</p> <p>Step 9. Test high tension cable (para. 4-18).</p> <p>Replace a defective ignition cable (para. 4-18).</p>
2. ENGINE STARTS BUT FAILS TO KEEP RUNNING.		
		<p>Step 1. Remove air cleaner cup on models 1A08-1, -2 or remove air cleaner element models 1A08-3, -4. Start Engine.</p> <p>If engine stays running, service air cleaners (para. 4-20).</p> <p>Step 2. Check fuel flow out of fuel filter assembly.</p> <p>If fuel flow is not present or steady, service fuel filter assembly (para. 4-13).</p> <p>Step 3. Check carburetor adjustments.</p> <p>Adjust carburetor as needed (para. 4-34).</p> <p>Step 4. Check fuel pump pressure (para. 4-36).</p> <p>Replace fuel pump if pressure is inadequate (para. 4-36).</p>

Table 4-2. Unit Troubleshooting Procedures (cont).

Malfunction	Test or Inspection	Corrective Action
<b>3. ENGINE MISSES OR RUNS ERRATICALLY.</b>		
	Step 1. Check spark plug (para. 4-19).	Clean, regap, or replace worn spark plug (para. 4-19).
	Step 2. Check breaker point gap (para. 4-29).	Adjust or replace worn breaker points (para. 4-29).
	Step 3. Check fuel flow out of fuel filter assembly.	If fuel flow is not present or steady, service fuel filter assembly (para. 4-13).
	Step 4. Remove air cleaner cup on models 1A08-1, -2, or remove air cleaner element on models 1A08-3, -4 and start engine.	If engine runs properly, service air cleaner assembly (para. 4-20).
<b>4. ENGINE SURGES OR OVERSPEED.</b>		
	Step 1. Check Governor.	Adjust governor (para. 4-27).
	Step 2. Check carburetor adjustments.	Adjust carburetor as needed (para 4-34).
<b>5. ENGINE OVERHEATS.</b>		
	Step 1. Check oil level.	Add oil as needed.
	Step 2. Check cooling system.	Repair or replace a damaged or missing cooling system component (para. 4-14 thru 4-16).

## Section V. UNIT MAINTENANCE PROCEDURES

Paragraph		Page
4-11	General . . . . .	4-7
4-12	Painting . . . . .	4-7
4-13	Fuel Filter Assembly . . . . .	4-8
4-14	Cylinder Head Covers . . . . .	4-9
4-15	Lower Air Duct . . . . .	4-12
4-16	Flywheel Cover . . . . .	4-14
4-17	Ignition Switch . . . . .	4-16
4-18	High Tension Cable . . . . .	4-18
4-19	Spark Plug . . . . .	4-20
4-20	Air Cleaner . . . . .	4-22
4-21	Air Cleaner Assembly . . . . .	4-26
4-22	Clamps and Hoses. . . . .	4-30
4-23	Air Cleaner Element . . . . .	4-32
4-24	Relief Valve . . . . .	4-34
4-25	Rocker Cover . . . . .	4-36
4-26	Oil Fill Tube and Gage Assembly . . . . .	4-38
4-27	Governor Assembly . . . . .	4-40
4-28	Breaker Points Cover (Breaker Point Ignition) . . . . .	4-42
4-29	Breaker Points Assembly (Breaker Point Ignition) . . . . .	4-44
4-30	Breaker Points (Breaker Point Ignition) . . . . .	4-46
4-31	Condenser (Breaker Point Ignition). . . . .	4-48
4-32	Breather Line . . . . .	4-50
4-33	Throttle Control . . . . .	4-54
4-34	Carburetor . . . . .	4-56
4-35	Fuel Line . . . . .	4-62
4-36	Fuel Pump . . . . .	4-64
4-37	Starter Flange . . . . .	4-67
4-38	Flywheel . . . . .	4-68
4-39	Intake Manifold . . . . .	4-70
4-40	Exhaust Manifold . . . . .	4-72
4-41	Bearing Cap. . . . .	4-74

4-11. **General.** This section contains unit level maintenance procedures as authorized by the MAC in Appendix B of this manual. Refer to Appendix E, Torque Limits, when performing maintenance on engine. All maintenance procedures require only one person to perform.

4-12. **Painting.** Refer to TM 43-0139 for painting procedures.

---

#### 4-13. Fuel Filter Assembly.

---

This task covers:      a. Disassembly                      b. Cleaning                      c. Reassembly

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)

###### *Materials/Parts*

Rags, Wiping (Item 6, Appendix D)

Drycleaning Solvent (Item 7, Appendix D)

---

##### a. Disassembly. (figure 4-1)

- (1) Close fuel shutoff valve (1).
- (2) Loosen thumbscrew (2) and swing bail (3) out of way.
- (3) Remove bowl (4), gasket (5), and filter screen (6) from fuel filter head (7).

##### b. Cleaning.


#### **WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean fuel filter head (7) using drycleaning solvent.
- (2) Clean fuel filter screen (6) using drycleaning solvent and replace if torn or otherwise damaged.

##### c. Reassembly. (figure 4-1).

- (1) Install gasket (5) and filter screen (6) in fuel filter head (7).
- (2) Position bowl (4) on fuel filter head (7), swing bail (3) down and secure with thumbscrew (2).

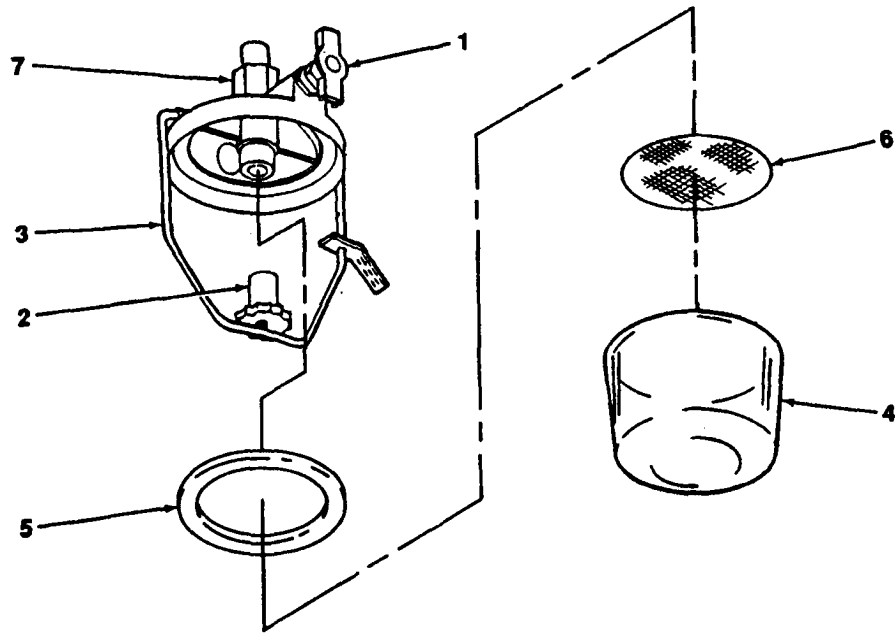

4866-007

Figure 4-1. Fuel Filter Disassembly and Reassembly.

---

#### 4-14. Cylinder Head Covers.

---

This task covers:      a. Removal                      b. Repair                      c. Installation

---

##### INITIAL SETUP

##### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)

---

#### 4-14. Cylinder Head Covers (cont).

a. Removal. (figure 4-2)

**NOTE**

Steps 1 and 2 are for engines equipped with breaker point ignitions.

- (1) Loosen connector nut (1) and disconnect high tension cable (2).
- (2) Remove five screws (3) and washers (4) and remove two cylinder head covers (5).

**NOTE**

Steps 3 through 5 are for engines equipped with breakerless ignition system.

- (3) Remove screw (6) and washer (7), loosen screw (8) and move ignition control unit (9) out of way.
- (4) Remove screw (8) and washer (10).
- (5) Remove remaining three screws (11 ) and washers (12) and remove two cylinder head covers (13).

b. Repair.

Repair all dents in cylinder head covers, and repaint as necessary.

c. Installation. (figure 4-2)

**NOTE**


Steps 1 through 3 are for engines equipped with breakerless ignition.

- (1) Install cylinder head covers (13) and secure with three screws (11) and washers (12).
- (2) Install screw (8) and washer (10) part way.
- (3) Position ignition control unit (9) and secure with two screws (6) and (8) and washers (7) and (10).

**NOTE**

Steps 4 and 5 are for engines equipped with breaker point ignition.

- (4) Install cylinder head covers (5) and secure with five screws (3) and washers (4).
- (5) Install high tension cable (2) and tighten connector nut (1).

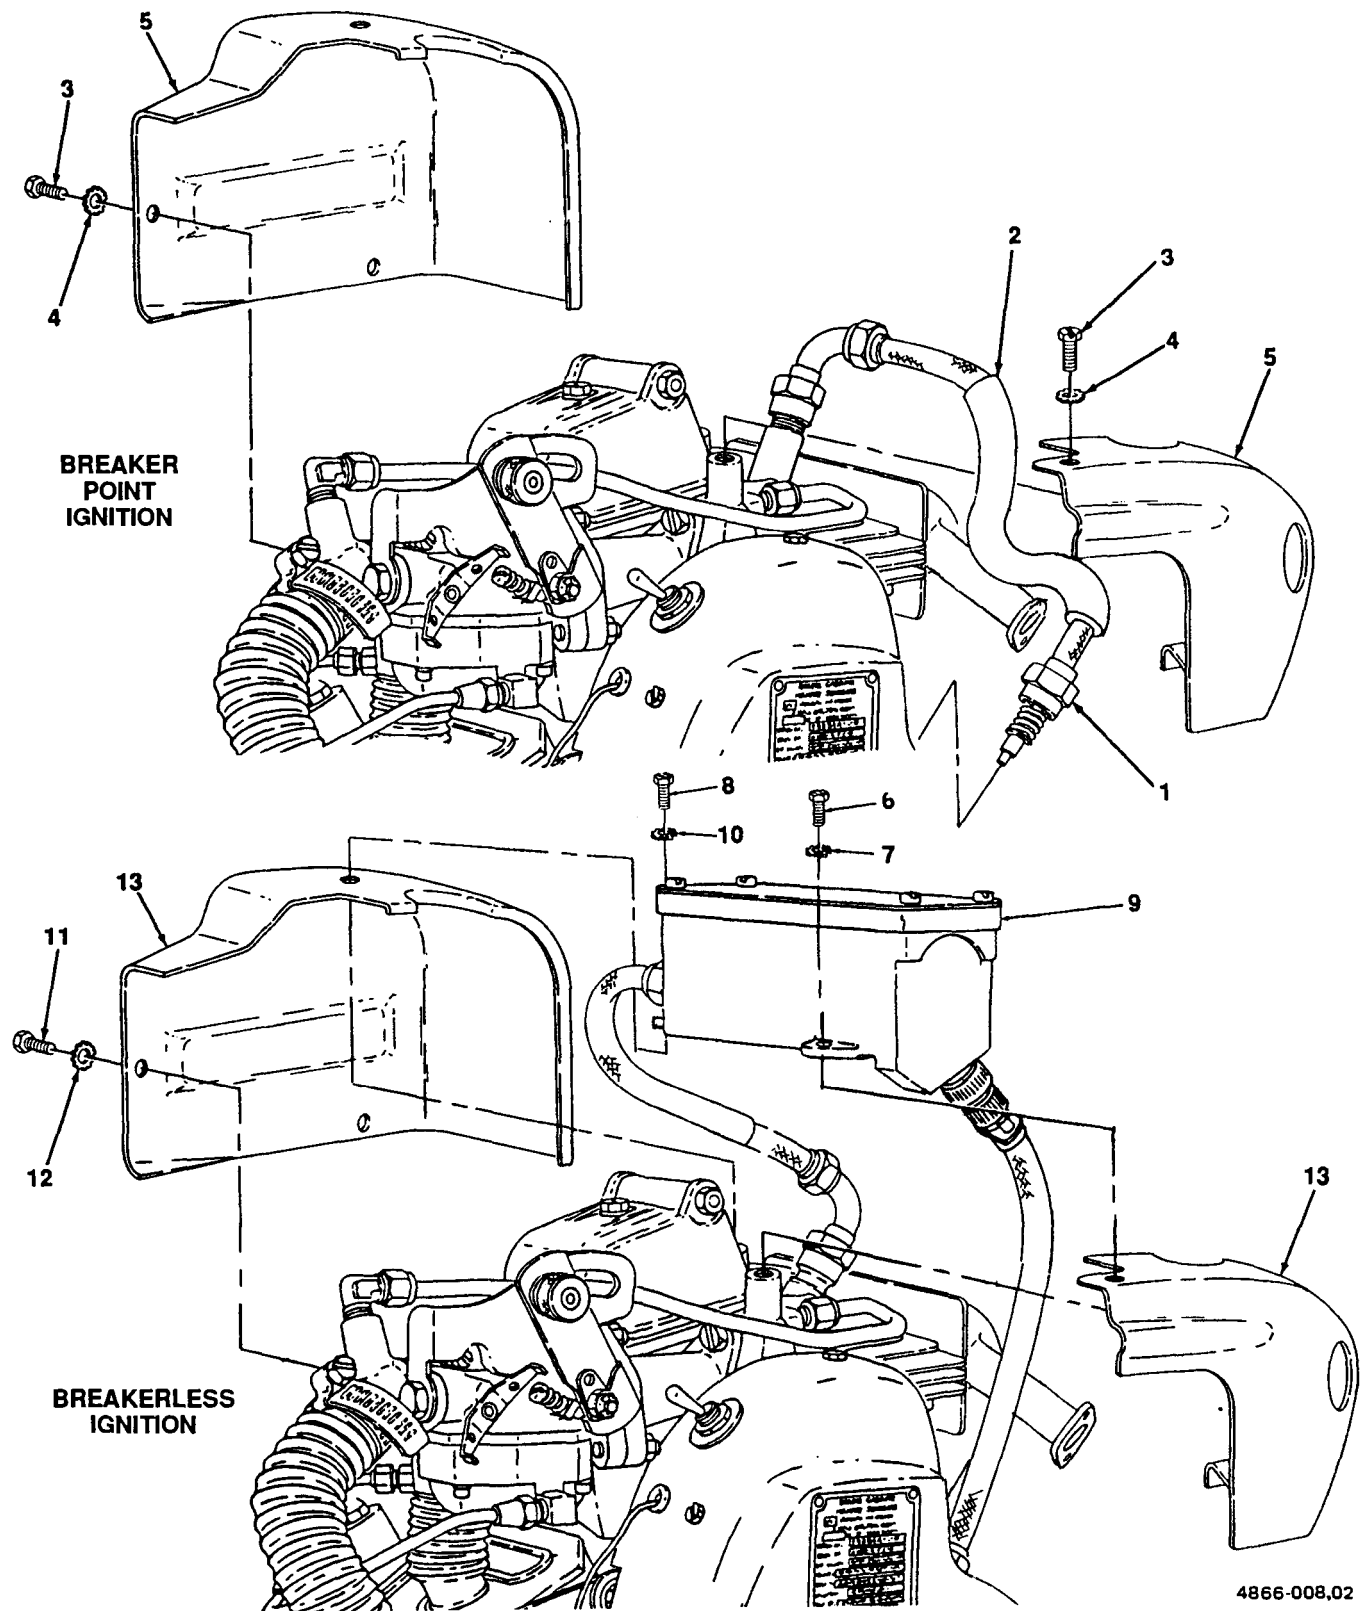

4866-008,02

Figure 4-2. Cylinder Head Covers Removal and Installation.

---

#### 4-15. Lower Air Duct

---

This task covers:      a. Removal                      b. Repair                      c. Installation

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)

###### *Materials/Parts*

Rags, Wiping (Item 6, Appendix D)

Solvent, Drycleaning (Item 7, Appendix D)

---

##### a. Removal (figure 4-3)

- (1) Remove screw (1), washers (2), and nut (3) securing lower air duct (4).
- (2) Remove remaining six screws (5) and washers (6) and remove lower air duct.

##### b. Repair

---

#### **WARNING**


Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean lower air duct with drycleaning solvent.
- (2) Repair all dents in lower air duct and repaint as necessary.

##### c. Installation (figure 4-3)

- (1) Position lower air duct (4) on engine and secure using five screws (5) and washers (6).
- (2) Install screw (1), washers (2), and nut (3) and secure lower air duct (4).



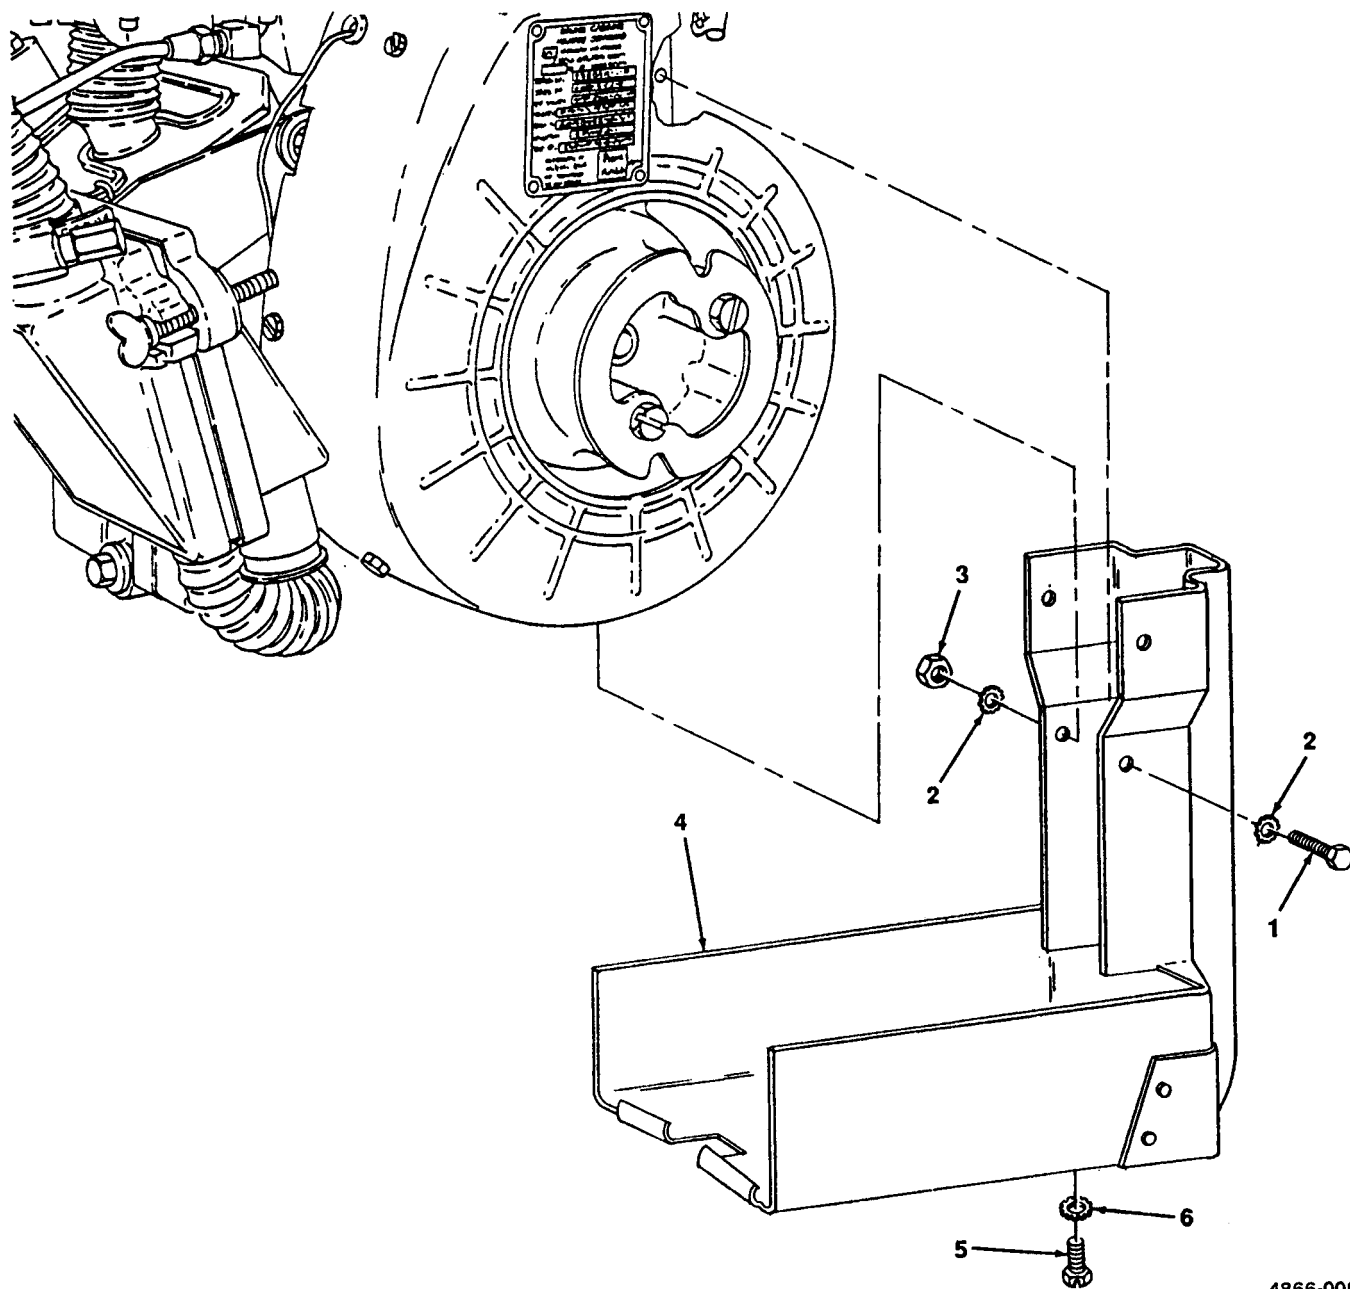

4866-009

Figure 4-3. Lower Air Duct Removal and Installation.

#### 4-16. Flywheel Cover.

---

This task covers:      a. Removal                      b. Repair                      c. Installation

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)

###### *Materials/Parts*

Rags, Wiping (Item 6, Appendix D)

Solvent, Drycleaning (Item 7, Appendix D)

---

##### a. Removal. (figure 4-4)

- (1) Remove seven screws (1) and washers (2) securing flywheel cover (3) to engine.

#### **NOTE**

The following procedure is for engines that have an ignition switch on flywheel cover.

- (2) Remove screw (4), washers (5) and nut (6) securing loop clamp (7).
- (3) Remove grommet (8).
- (4) Tag and remove ignition wire (9) from ignition switch (10) and remove ignition wire from flywheel cover (3).

##### b. Repair.

#### **WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean flywheel fan cover using dry cleaning solvent.
- (2) Inspect rubber grommet (8) and replace if torn or otherwise damaged.
- (3) Repair all dents in flywheel cover and repaint as necessary.


##### c. Installation. (figure 4-4)

#### **NOTE**

The following procedure is for engines that have an ignition switch on flywheel cover.

- (1) Install ignition wire (9) in flywheel cover (3) and connect wire to ignition switch (10) as tagged.

- (2) Install loop clamp (7), and secure with screw (4), washers (5) and nut (6).
- (3) Install grommet (8).
- (4) Position flywheel cover (3) on engine and secure with seven screws (1) and washers (2).

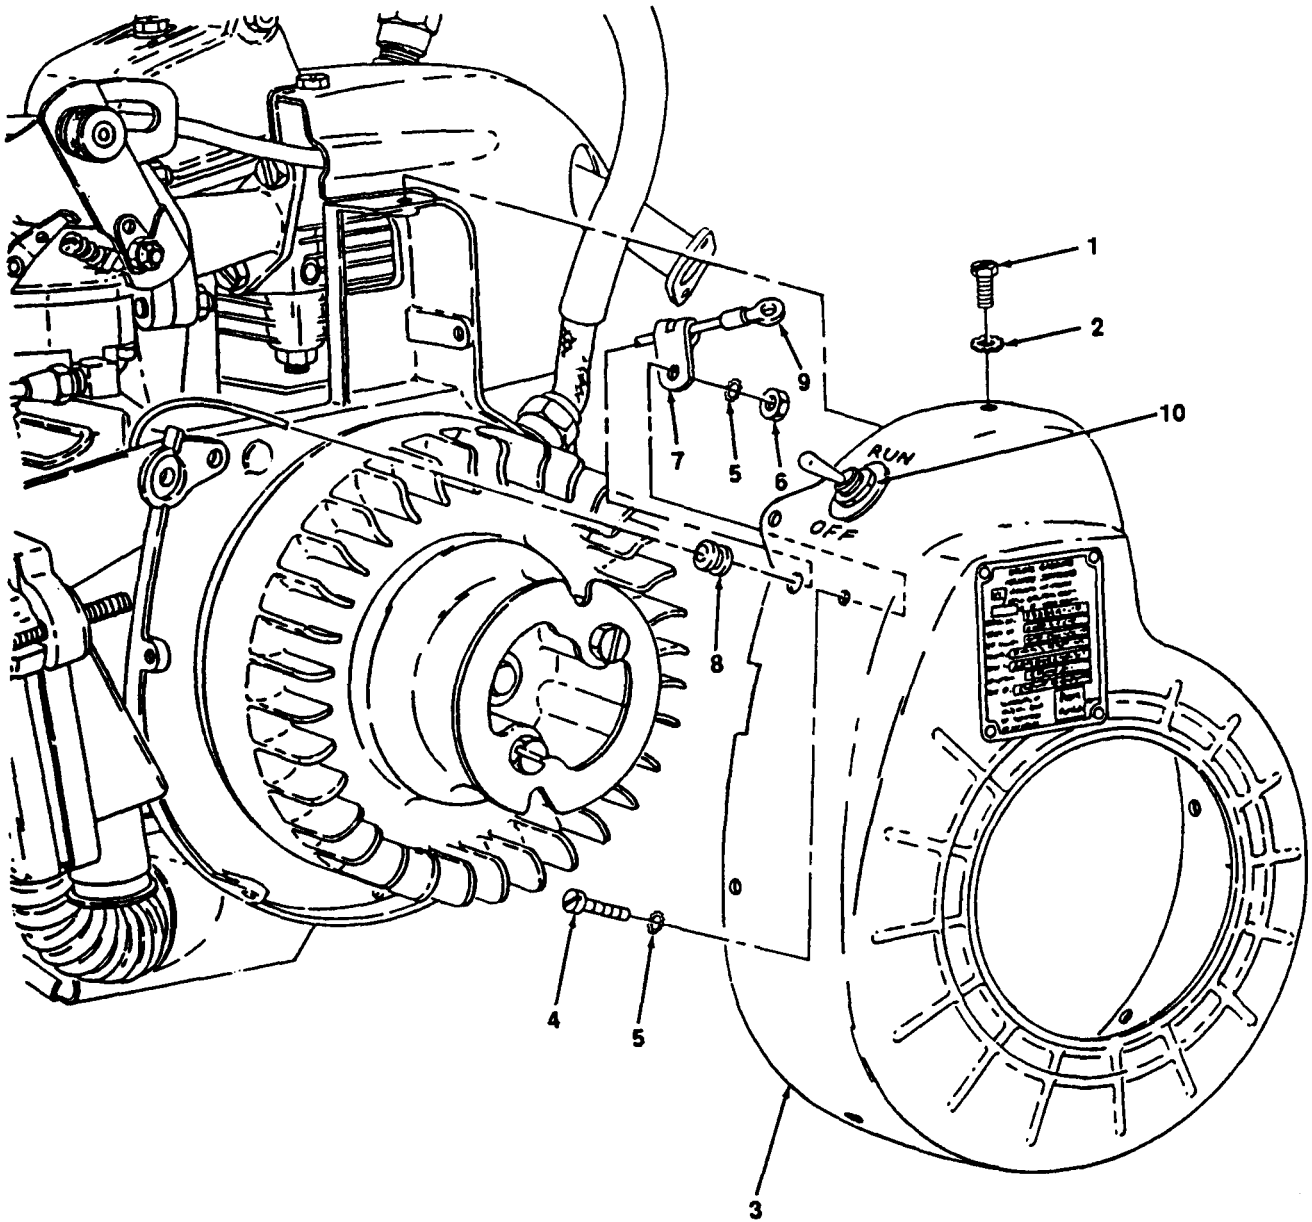

4866-010

Figure 4-4. Flywheel Cover, Removal and Installation.

---

#### 4-17. Ignition Switch.

---

This task covers:      a. Removal                      b. Test                      c. Installation

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Multimeter (NSN 6625-01-139-2512) (Item 2,  
Appendix B)

###### *Equipment Condition*

Flywheel cover removed from engine (para. 4-16).

---

a. Removal. (figure 4-5)

- (1) Tag and remove wiring from ignition switch (1).
- (2) Remove nut (2), lockwasher (3), washer (4) and remove ignition switch (1) from flywheel cover (5).

b. Test.

#### NOTE

The OFF position of switch is RUN position on flywheel cover.

- (1) Check for continuity between terminals of ignition switch with ignition switch in OFF position. There should be no continuity present, if there is, replace switch.
- (2) Check for continuity between terminals of ignition switch with switch in ON position. Continuity should be present. If continuity is not present, replace switch.


c. Installation. (figure 4-5)

- (1) Install washer (4) on ignition switch (1).

#### NOTE

When installing ignition switch, the OFF position of the switch is the RUN position on the flywheel cover.

- (2) Position ignition switch (1) in flywheel cover (5) and secure using nut (2) and washer (3).
- (3) Connect wiring to ignition switch (1) as tagged.

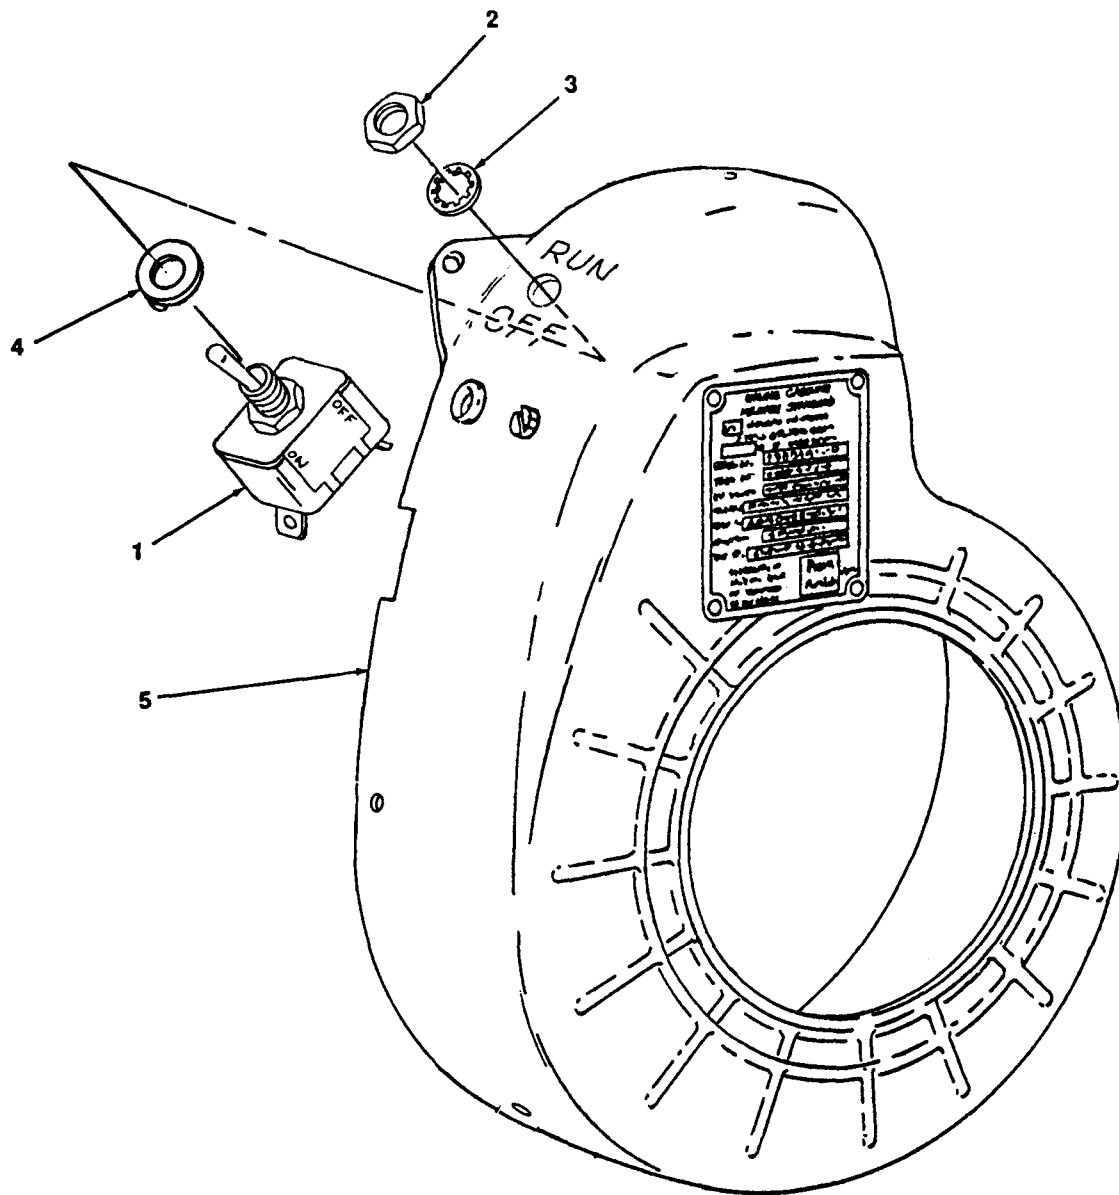

4866-011

Figure 4-5. Ignition Switch Removal and Installation.

#### 4-18. **High Tension Cable.**

---

This task covers:      a. Removal                      b. Test/Inspection                      c. Installation

---

##### INITIAL SETUP

##### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Multimeter NSN 6625-01-139-2512) (Item 2, Appendix B)

---

##### a. Removal. (figure 4-6)

#### **NOTE**

The basic removal and installation procedures are the same for all models of engine.


Loosen two connector nuts (1) on high tension cable (2) and remove cable.

##### b. Test/Inspection.

- (1) Perform continuity test between spring ends of cable. Replace cable if no continuity is found.
- (2) Perform continuity test between metal cable ends of cable. Replace cable if continuity is not found.
- (3) Perform continuity test between spring end and metal cable end. Replace cable if continuity is found.
- (4) Replace cable if cut or otherwise damaged.

##### c. Installation. (figure 4-6)

Position cable (2) and secure by tightening two connector nuts (1).

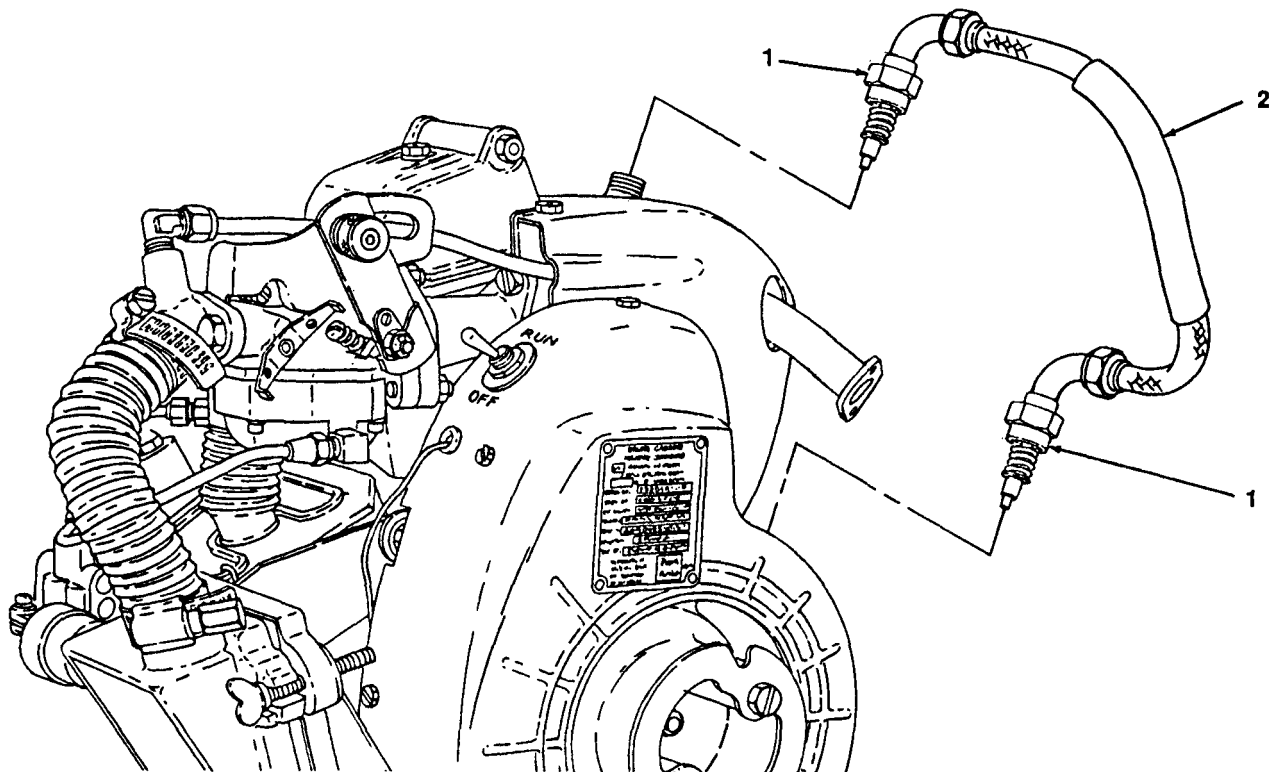

4866-012

Figure 4-6. High Tension Cable Removal and Installation.

---

#### 4-19. Spark Plug.

---

This task covers:      a. Removal                      b. Inspection/Test                      c. Installation

---

##### INITIAL SETUP

###### *Tools*

###### *Materials/Parts*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Wrench, Torque (NSN 5120-00-640-6364) (Item 2, Appendix B)

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, Appendix D)

---

##### a. Removal. (figure 4-7)

- (1) Loosen connector nut (1) on high tension cable (2) and remove cable from spark plug (3).
- (2) Remove spark plug (3) and gasket (4).

##### b. Inspection/Test.

---

#### **WARNING**

---


Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean spark plug using drycleaning solvent, and inspect plug for burning, cracked or broken ceramic insulation, and damaged thread. Replace plug if damaged.
- (2) Regap spark plug to .028 to .033 in. (.071 to .083 cm).

##### c. Installation. (figure 4-7)


- (1) Install spark plug (3) and gasket (4) and torque to 275-300 in.-lbs (49115-53580 gr cm).
- (2) Install ignition cable (2) on spark plug (3) and tighten connector nut (1).



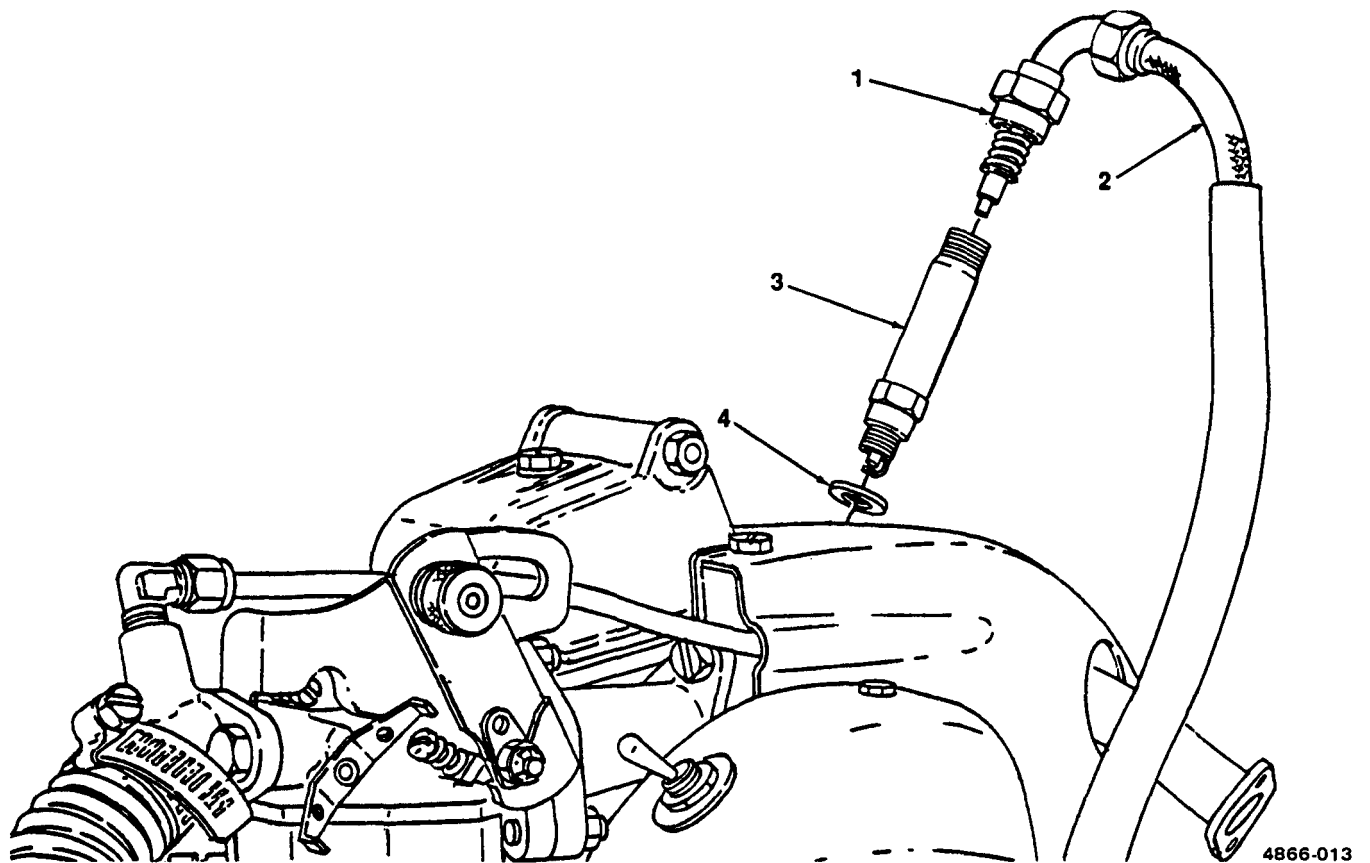

*Figure 4-7. Spark Plug Removal and Installation.*



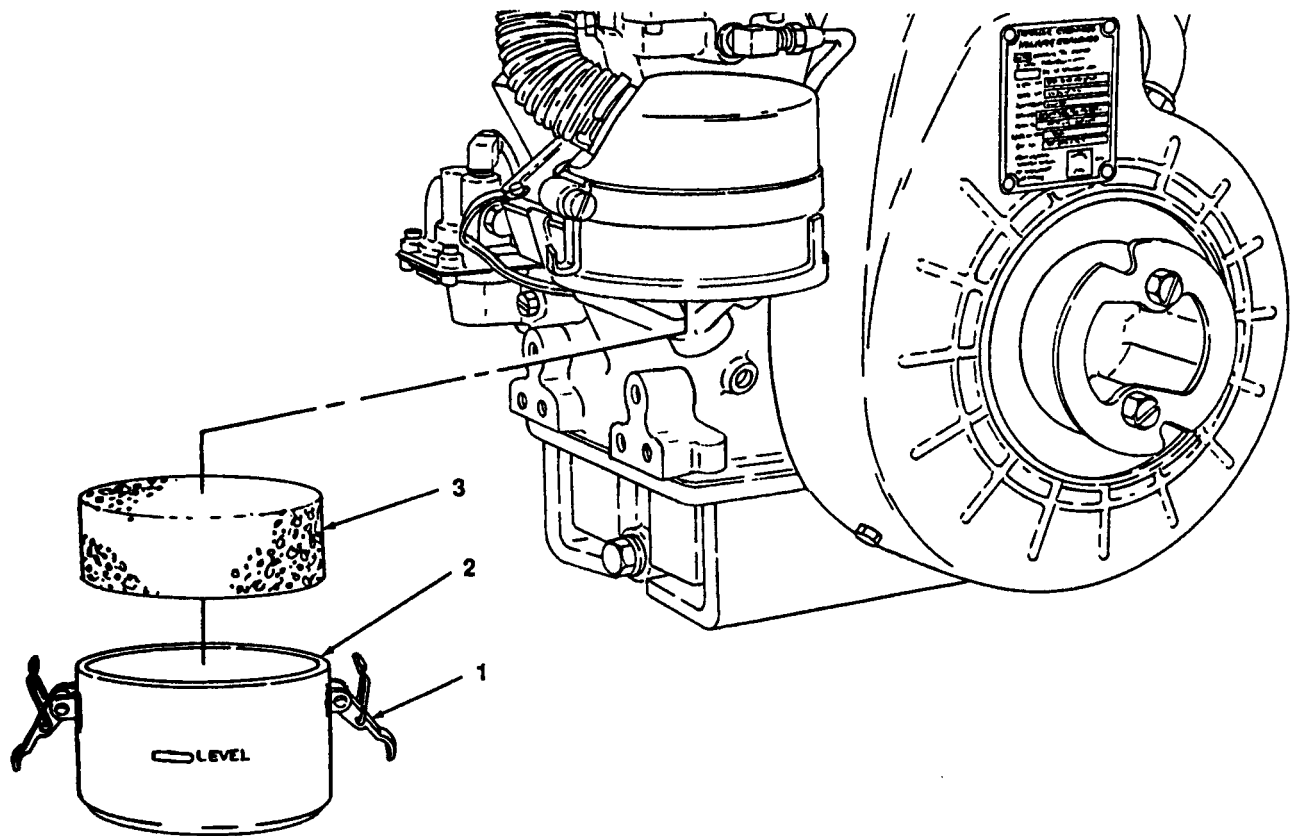

4866-014

Figure 4-8. Air Cleaner Assembly Service (Oil Bath).

4-20. **Air Cleaner (cont).**


b. Service. Dry. (figure 4-9)

- (1) Loosen two retaining screws (1), open air cleaner assembly (2), and remove element (3).

**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (2) Clean both halves of air cleaner assembly using drycleaning solvent.
- (3) Clean element in detergent and water.
- (4) Dry both halves of air cleaner assembly and element thoroughly.
- (5) Position element (3) in air cleaner assembly (2) and secure with two retaining screws (1).
- (6) Depress reset button (4) on service indicator (5).

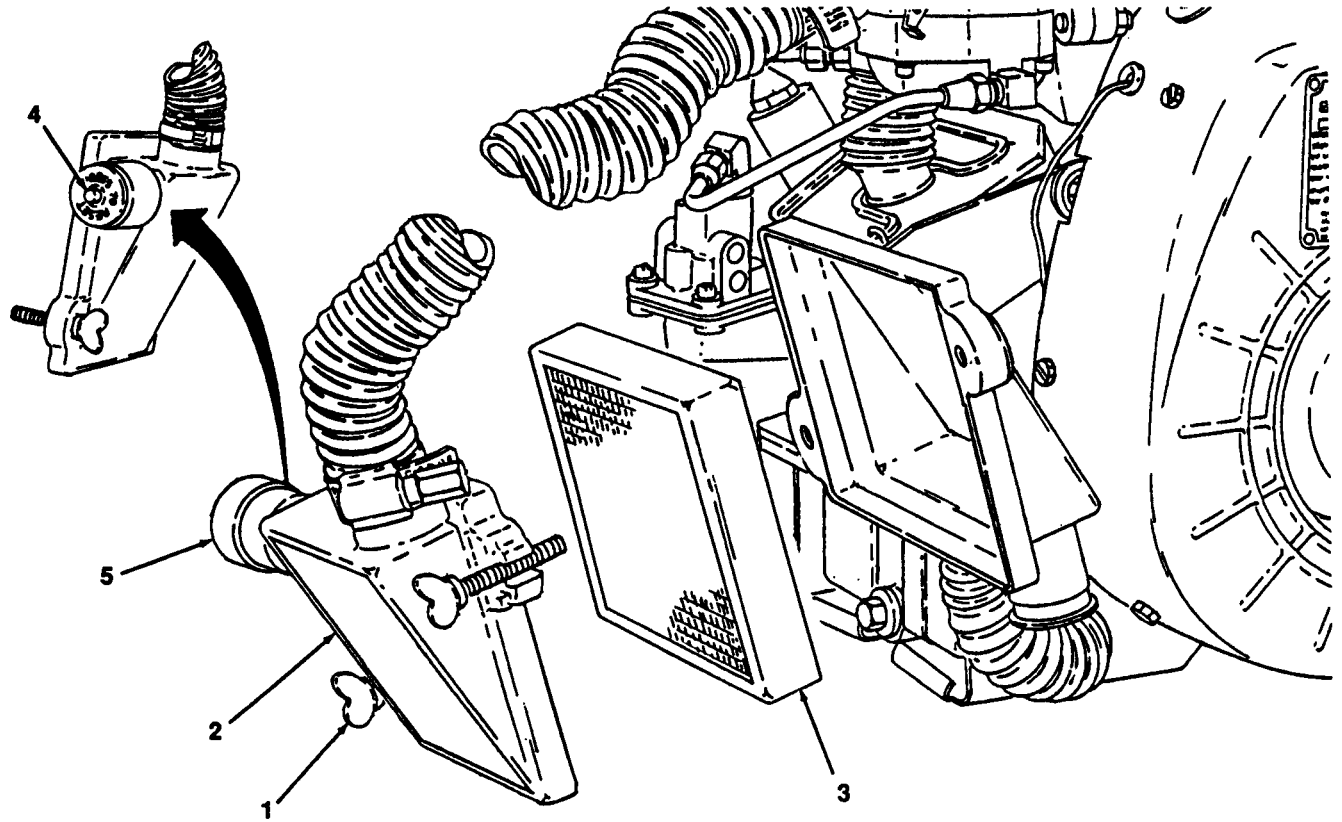

4866-015

Figure 4-9. Air Cleaner Assembly Service (Dry).

---

4-21. **Air Cleaner Assembly.**

---

This task covers:	a. Removal (dry)	c. Removal (oil bath)
	b. Installation (dry)	d. Installation (oil bath)

---

INITIAL SETUP

<i>Tools</i>	<i>Equipment Condition</i>
General Mechanic's Tool Kit (item 1, Appendix B)	Flywheel cover removed for removal of dry air cleaner (para. 4-16).


---

a. Removal. Dry. (figure 4-10)

- (1) Loosen clamp (1) and remove air cleaner duct (2) from intake elbow (3).
- (2) Remove two screws (4) and washers (5) securing air cleaner assembly (6) and remove.
- (3) Inspect service indicator (7) and replace if cracked or otherwise damaged.

b. Installation. Dry. (figure 4-10)

- (1) Position air cleaner assembly (6) on engine and secure with two screws (4) and washers (5).
- (2) Install air cleaner duct (2) on intake elbow (3) and tighten clamp (1).
- (3) Install lower air cleaner duct (8) in oil pan cover (9).

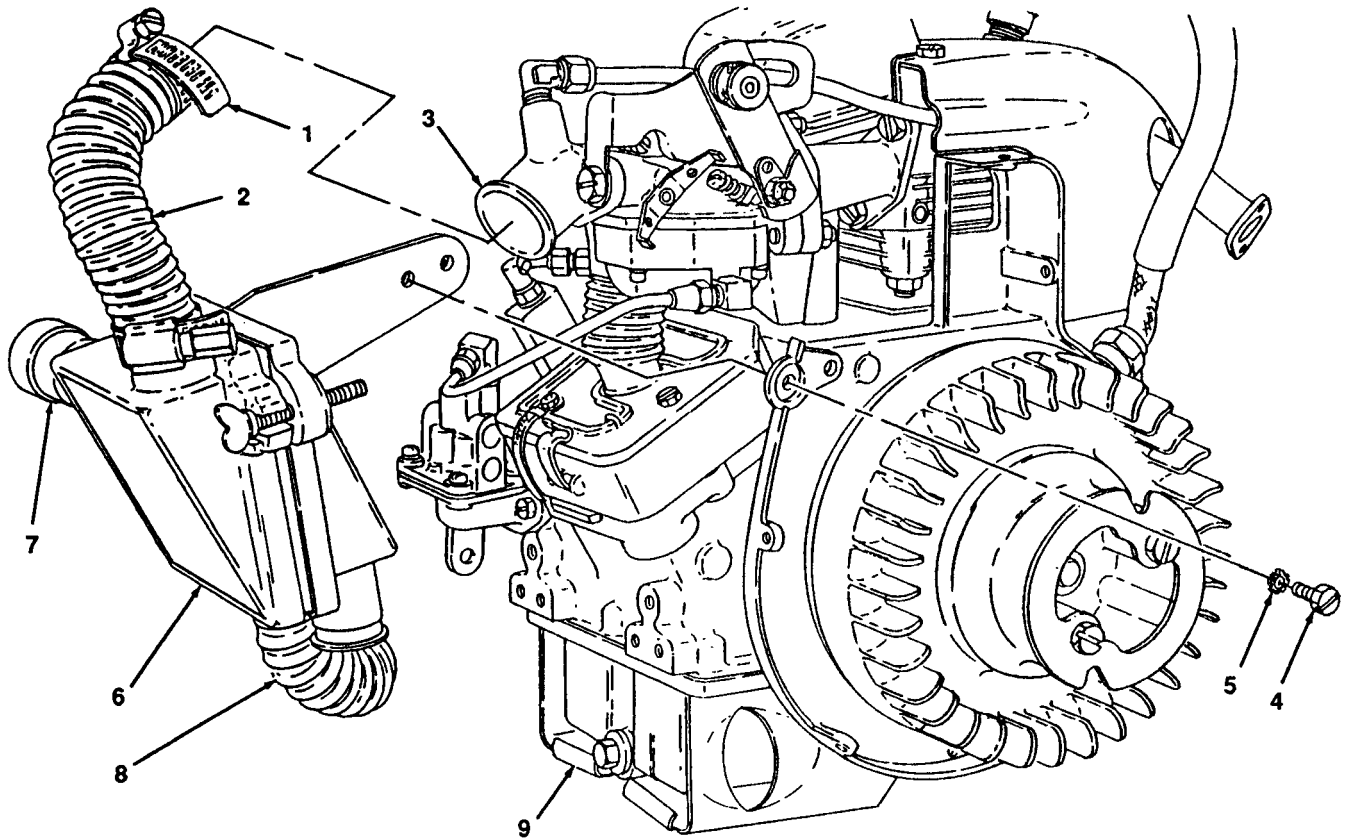

4866-035

Figure 4-10. Air Cleaner Assembly (Dry) Removal and Installation.

4-21. **Air Cleaner Assembly (cont).**


c. Removal. Oil Bath. (figure 4-11)

- (1) Disconnect breather line (1) from air cleaner assembly (2).
- (2) Loosen clamp (3) and remove air cleaner duct (4) from intake elbow (5).
- (3) Loosen mounting clamp (6) and remove air cleaner assembly (2).

c. Installation. Oil Bath. (figure 4-11)

- (1) Position air cleaner assembly (2) on engine and secure with mounting clamp (6).
- (2) Install air cleaner duct (4) on intake elbow (5) and tighten clamp (3).
- (3) Connect breather line (1) to air cleaner assembly (2).



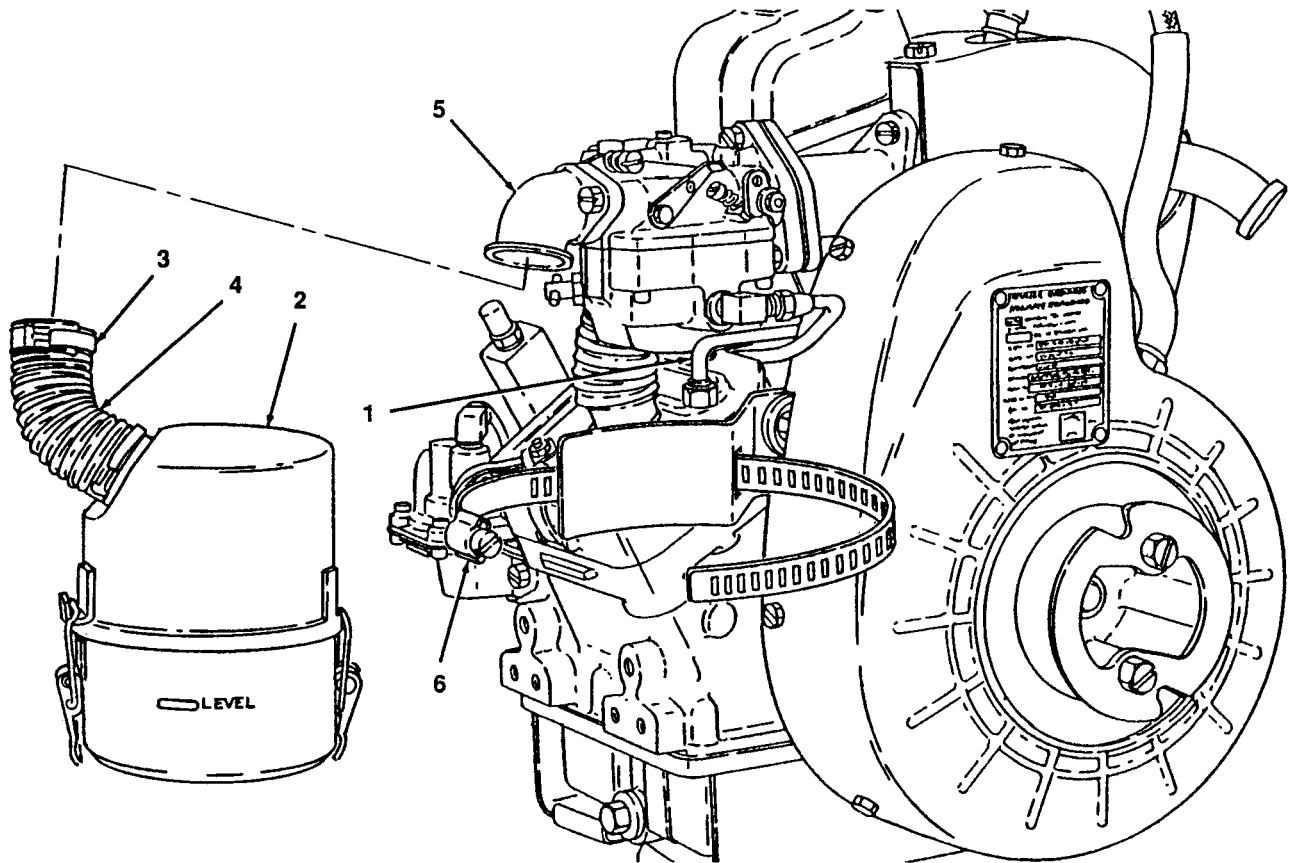

4866-034

Figure 4-11. Air Cleaner Assembly (Oil Bath) Removal and Installation.

This task covers:      a. Removal                                      b. Installation

## INITIAL SETUP

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 4-12)


## NOTE

The procedures for replacing hoses and clamps are the same for engines with either oil bath or dry air cleaner.

- (1) Loosen clamp (1) and remove hose (2) and clamp (1) from air intake elbow (3).
- (2) Loosen clamp (4) and remove hose (2) and clamp (4) from air cleaner (5).
- (3) Loosen clamp (6) and remove hose (7) and clamp (6).

b. Installation. (figure 4-12)

- (1) Install hose (7) and clamp (6).
- (2) Install hose (2) and clamp (4) on air cleaner (5)
- (3) Install hose (2) and clamp (1) on air intake elbow (3).

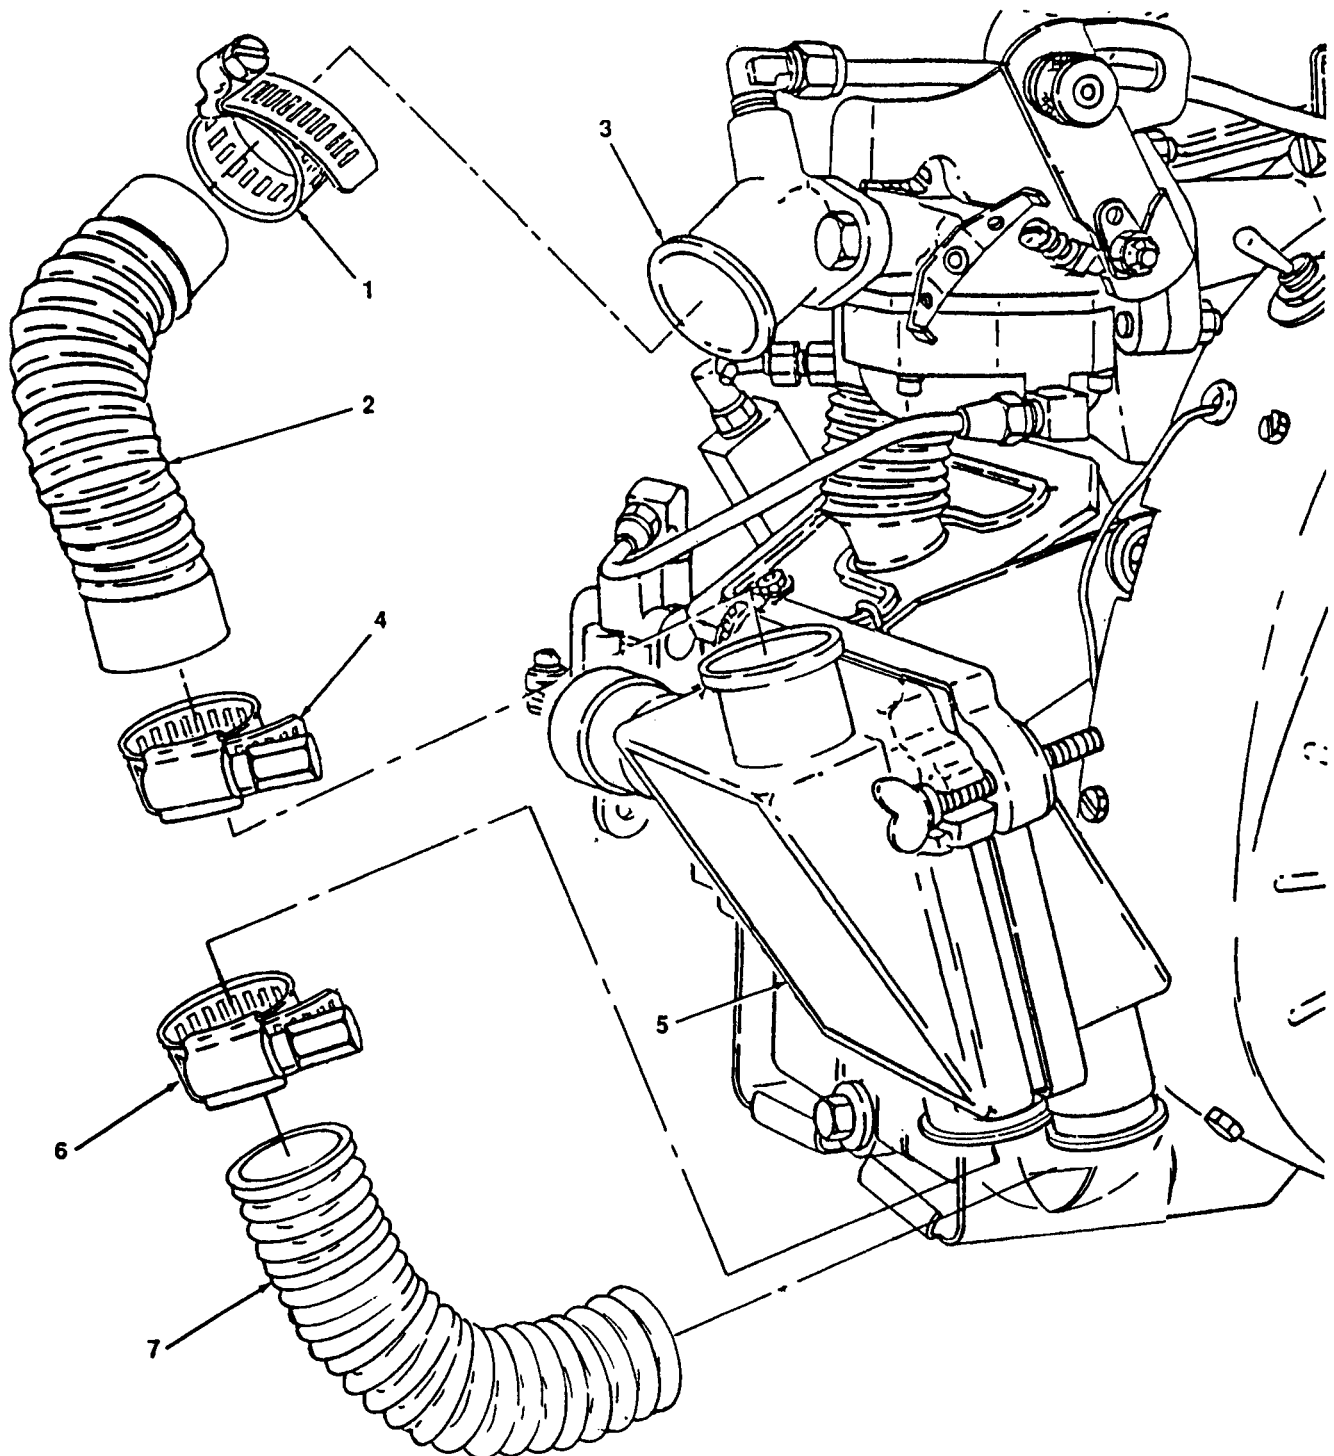

4866-075

Figure 4-12. Clamps and Hoses Replacement.

4-23. Air Cleaner Element.

This task covers:	a. Removal (oil bath)	c. Removal (dry)
	b. Installation (oil bath)	d. Installation (dry)

INITIAL SETUP

Tools	Materials/Parts
General Mechanic's Tool Kit (Item 1, Appendix B)	Rags, Wiping (Item 6, Appendix D)
	Solvent, Drycleaning (Item 7, appendix D)

a. Removal. Oil Bath. (figure 4-13)

- (1) Open two retaining clips (1) securing lower cup (2) and remove.
- (2) Pour out oil into suitable container and remove element (3) from lower cup (2).


**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F–138°F (38°C–60°C).

- (3) Clean lower cup with drycleaning solvent and dry thoroughly.

b. Installation. Oil Bath. (figure 4-13)

- (1) Place element (3) into lower cup (2) and fill with oil to FULL line.
- (2) Install lower cup (2) and secure with two retaining clips (1).

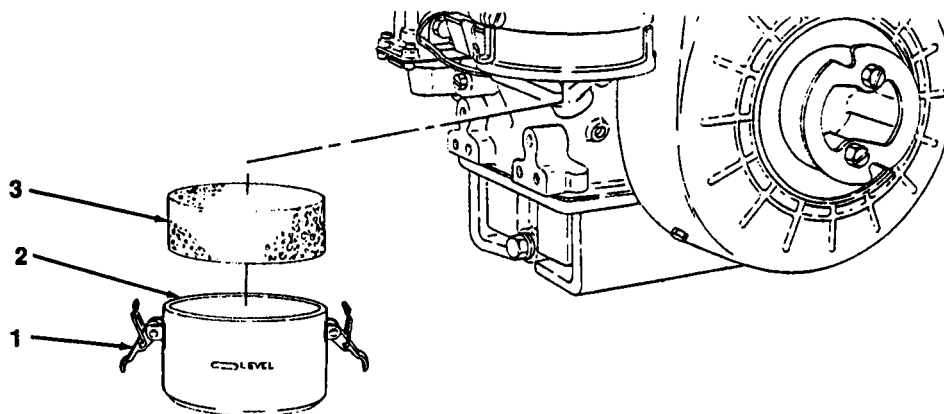

4866-016

Figure 4-13. Air Cleaner Element Removal and Installation (Oil Bath).

c. Removal. Dry. (figure 4-14)

- (1) Loosen two retaining screws (1), open air cleaner assembly (2), and remove element (3).


**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F–138°F (38°C–60°C).

- (2) Clean both halves of air cleaner assembly using drycleaning solvent.

b. Installation. Dry. (figure 4-14)


- (1) Position element (3) in air cleaner assembly (2) and secure with two retaining screws (1).
- (2) Depress reset button (4) on service indicator (5).

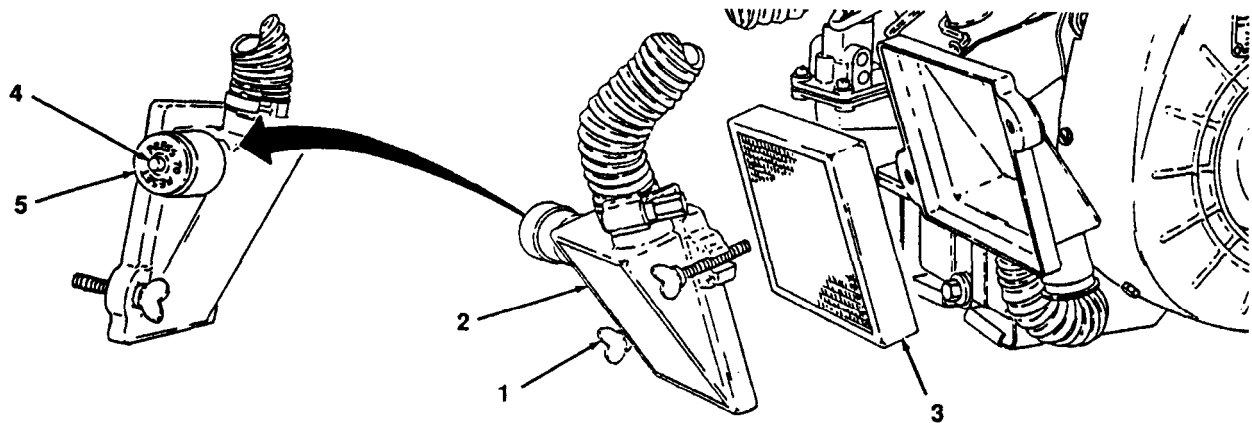

4866-017

Figure 4-14. Element Removal and Installation (Dry).

4-34

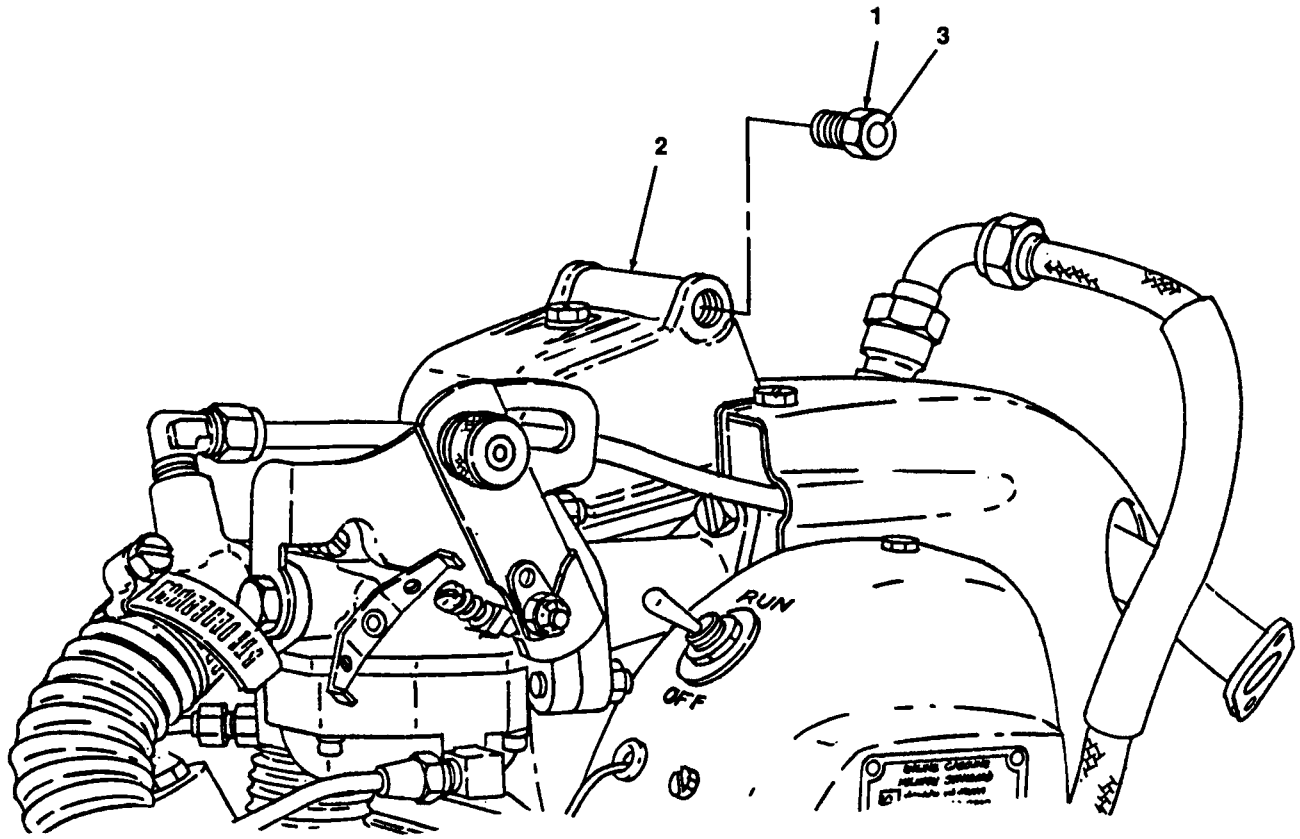

4866-018

Figure 4-15. Relief Valve Removal and Installation.

---

#### 4-25. **Rocker Cover.**

---

This task covers:      a. Removal                      b. Repair                      c. Installation

---

##### INITIAL SETUP

<i>Tools</i>	<i>Materials/Parts</i>
General Mechanic's Tool Kit (Item 1, Appendix B)	Rags, Wiping (Item 6, Appendix D)
	Solvent, Drycleaning (Item 7, appendix D)
	Gasket, Rocker Cover (NSN 5330-00-797-4642)

---

##### a. Removal. (figure 4-16)

Remove screw (1) and plastic washer (2) and remove cover (3) and gasket (4).

##### b. Repair.

#### **WARNING**


Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-13 8°F (38°C-60°C).

- (1) Clean rocker cover using drycleaning solvent.
- (2) Replace plastic washer (2) if cracked or otherwise damaged.
- (3) Inspect gasket (4) and replace if torn or otherwise damaged
- (4) Repair all dents, and paint cover as necessary.

##### c. Installation. (figure 4-16)

Position rocker cover (3) and gasket (4) on engine, and secure with screw (1) and plastic washer (2).



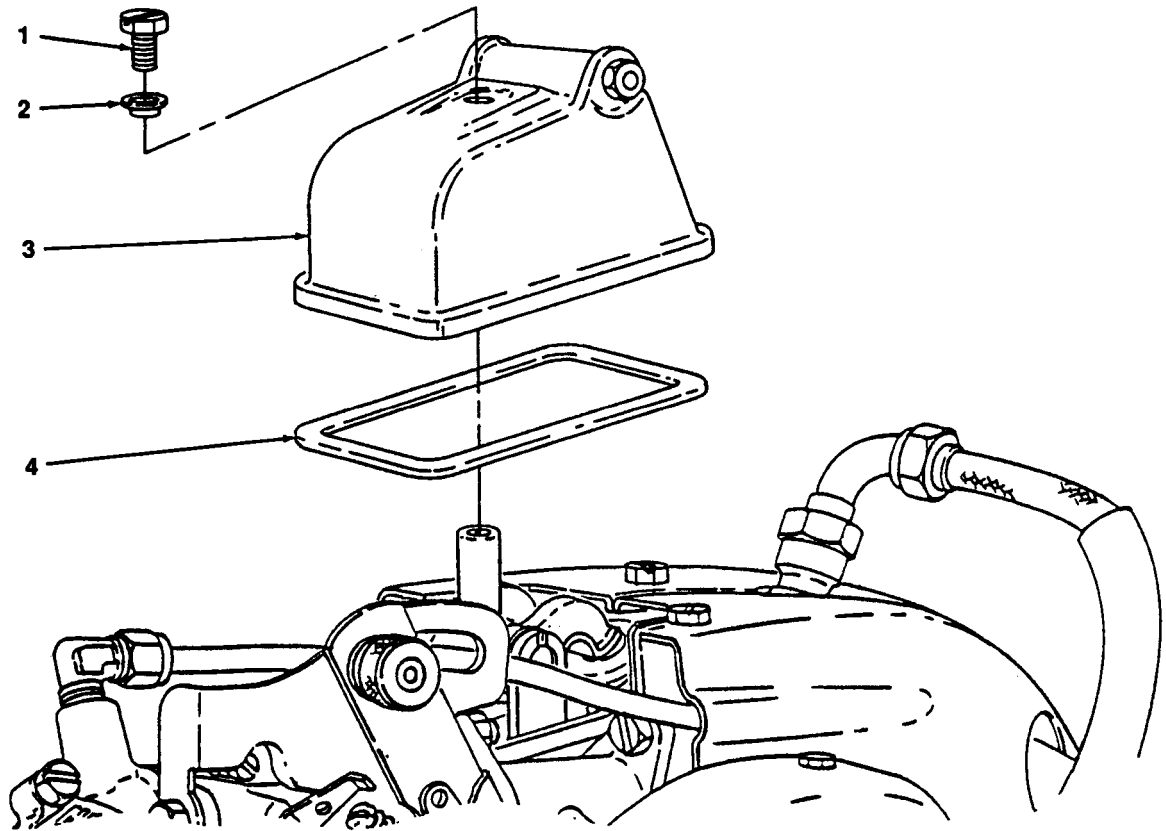

4866-019

Figure 4-16. Rocker Cover Removal and Installation.

This task covers:      a. Removal                                      b. Installation

## INITIAL SETUP

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 4-17)

- (1) Lift locking cam (1) on oil fill tube (2) and remove oil fill gage (3) from tube.

## NOTE

Remove oil fill tube only if it is damaged and needs to be replaced.


- (2) Gently tap oil fill tube on either side to loosen it and remove it from crankcase (4).

- (3) Inspect packing (5) on fill gage (3) and replace if torn or otherwise damaged.

b. Installation. (figure 4-17)

- (1) Position oil fill tube (2) in crankcase (4) and gently tap tube straight into crankcase.

- (2) Position oil fill gage (3) in fill tube (2) and secure with locking cam (1).

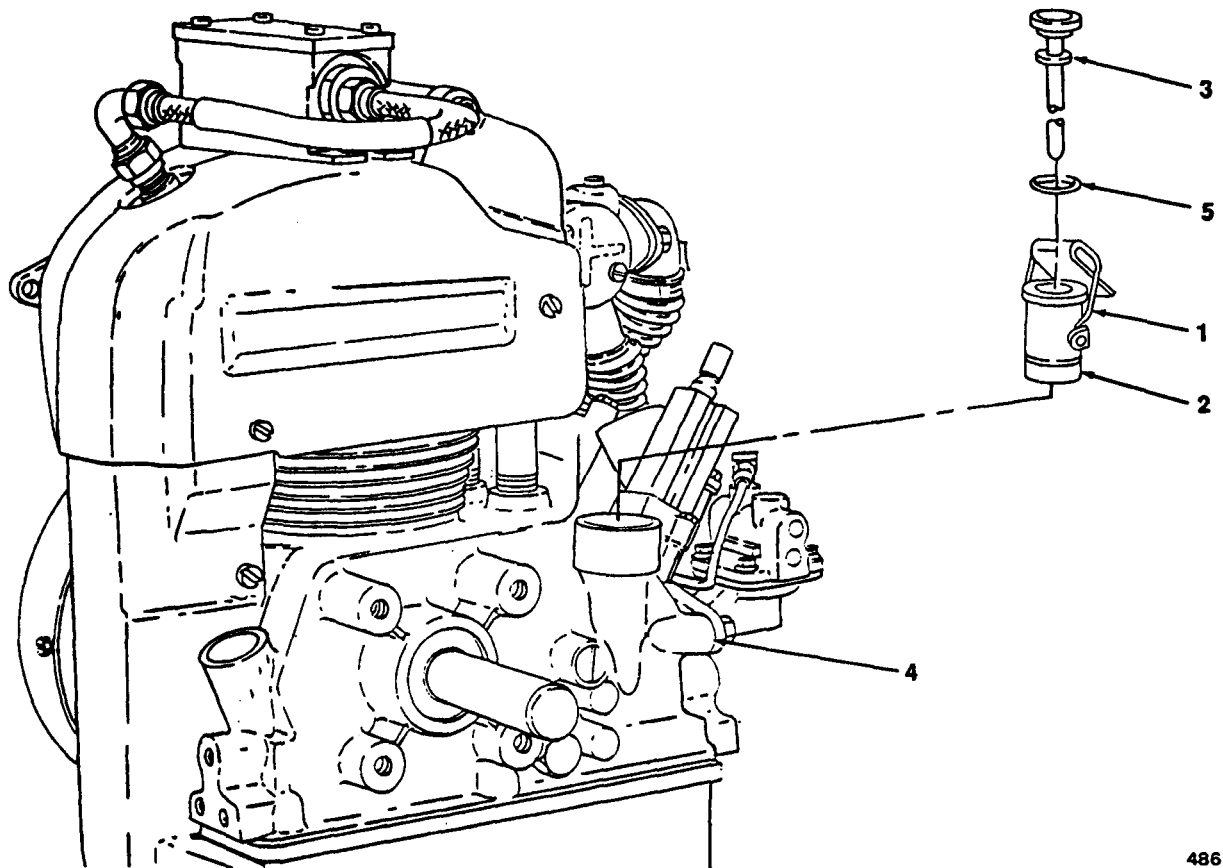

4866-020

Figure 4-17. Oil Fill Tube and Gage Assembly Removal and Installation.

4-27. Governor Assembly.


This task covers: Adjustment

INITIAL SETUP

Tools	Materials/Parts
General Mechanic's Tool Kit (Item 1, Appendix B)	Gasket, Throttle Housing to Carburetor (P/N 9786E65-4) Gasket, Throttle Housing Rear (P/N 9786E65-3) Gasket, Throttle Housing Front (P/N 9786E64-6)

a. Adjustment. (figure 4-18)

- (1) Remove two screws (1) and plastic washers (2) securing throttle housing cover (3) and remove cover (3) and gasket (4).
- (2) Remove screw (5) and washer (6) securing throttle lever (7) to carburetor throttle rod (8) and remove lever from rod.
- (3) Loosen clamp (9) on governor control rod housing (10) and remove control rod housing (10) from throttle housing (11).
- (4) Remove two screws (12) and washers (13) securing throttle housing (11) to carburetor (14) and remove throttle housing (11), gasket (15) rear cover (16), and gasket (17).
- (5) Hold carburetor throttle (18) 1/16 in. from idle position, loosen lock nut (19) on control rod (20), and adjust clevis (21) until throttle lever (7) fits onto carburetor throttle rod (8).
- (6) Tighten lock nut (19).
- (7) Install gasket (17), rear cover (16), gasket (15) and throttle housing (11), and secure using two screws (12) and washers (13).
- (8) Install governor control rod housing (10) on throttle housing (11) and secure with clamp (9).
- (9) Install throttle lever (7) on carburetor throttle rod (8) and secure with screw (5) and washer (6).
- (10) Install throttle housing cover (3) and gasket (4) on throttle housing (11) and secure with two screws (1) and plastic washers (2).
- (11) Start engine (para. 2-9).
- (12) To regulate engine governed speed, turn nut (22) clockwise to increase engine speed or counterclockwise to decrease engine speed.
- (13) Stop engine (para. 2-10).

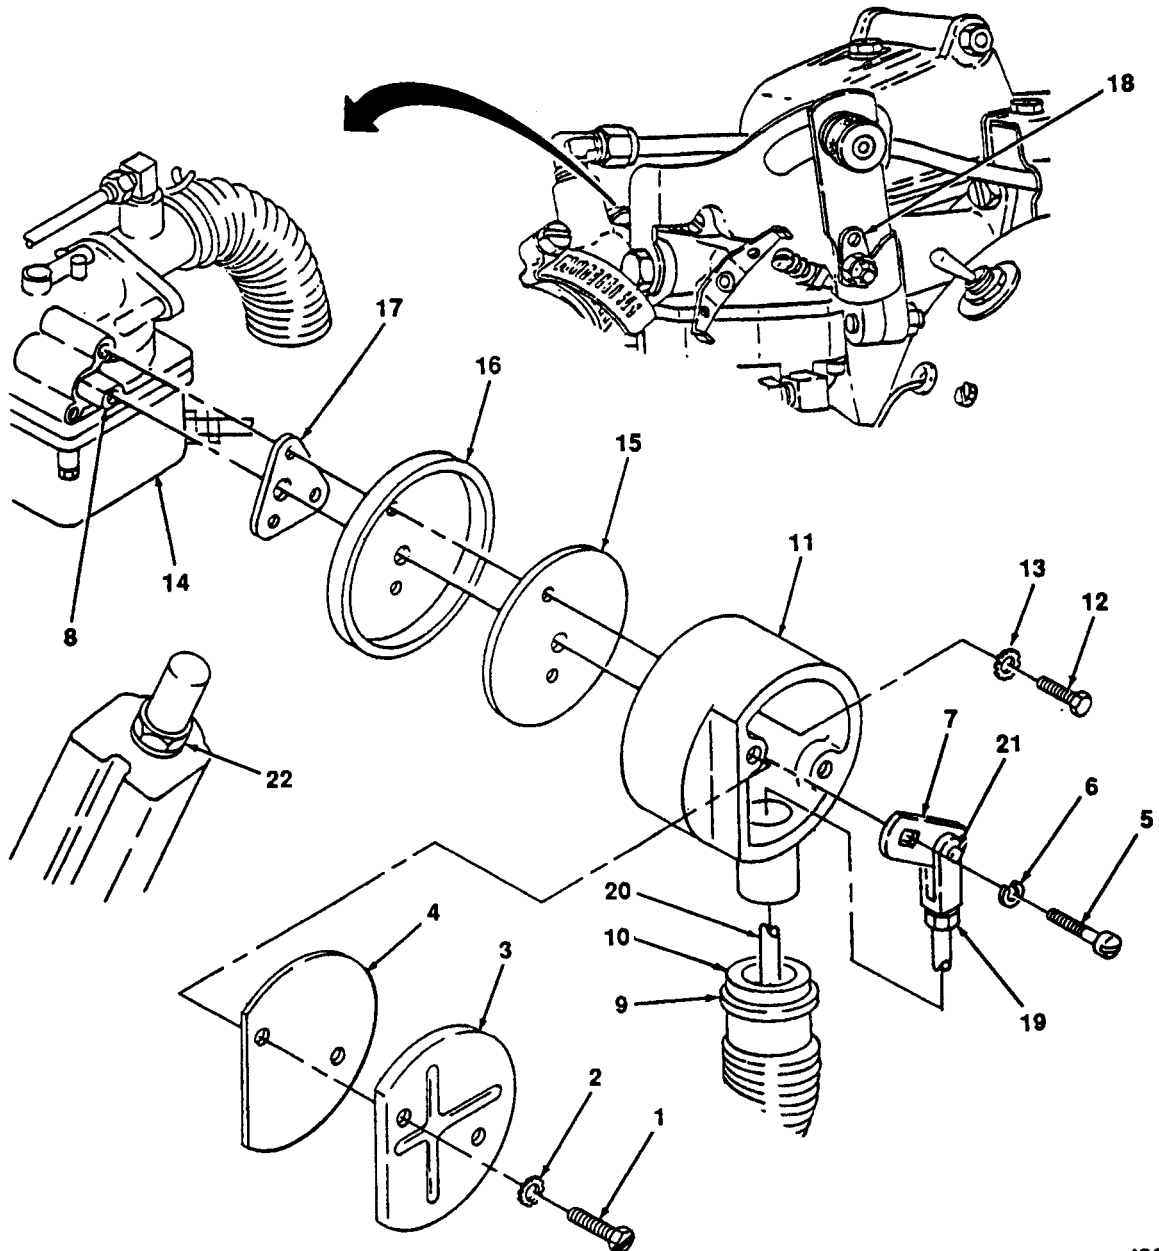

4866-021

Figure 4-18. Governor Adjustment.

---

#### 4-28. Breaker Points Cover (Breaker Point Ignition).

---

This task covers:      a. Removal                      b. Inspect                      c. Installation

---

##### INITIAL SETUP

###### *Tools*

###### *Materials/Parts*

General Mechanic's Tool Kit (Item 1, Appendix B)

Gasket, Breaker Point Cover (NSN 5330-00-103-8793)

---

a. Removal. (figure 4-19)


- (1) Unsnap two clips (1) securing breaker points cover (2) and remove cover (2) and gasket (3).
- (2) Remove nut (4) and washers (5) securing ground strap (6) to cover.
- (3) Remove screw (7) plastic washer (8), and nut (9).

b. Inspection.

- (1) Inspect gasket (3) for wear or other damage and replace as needed.
- (2) Inspect plastic washer (8) and replace if cracked or otherwise damaged.

c. Installation. (figure 4-19)

- (1) Install screw (7), plastic washer (8), and nut (9) in cover (2).
- (2) Install ground strap (6) on cover and secure with washer (5) and nut (4).
- (3) Position cover (2) and gasket (3) on engine and secure with two clips (1).

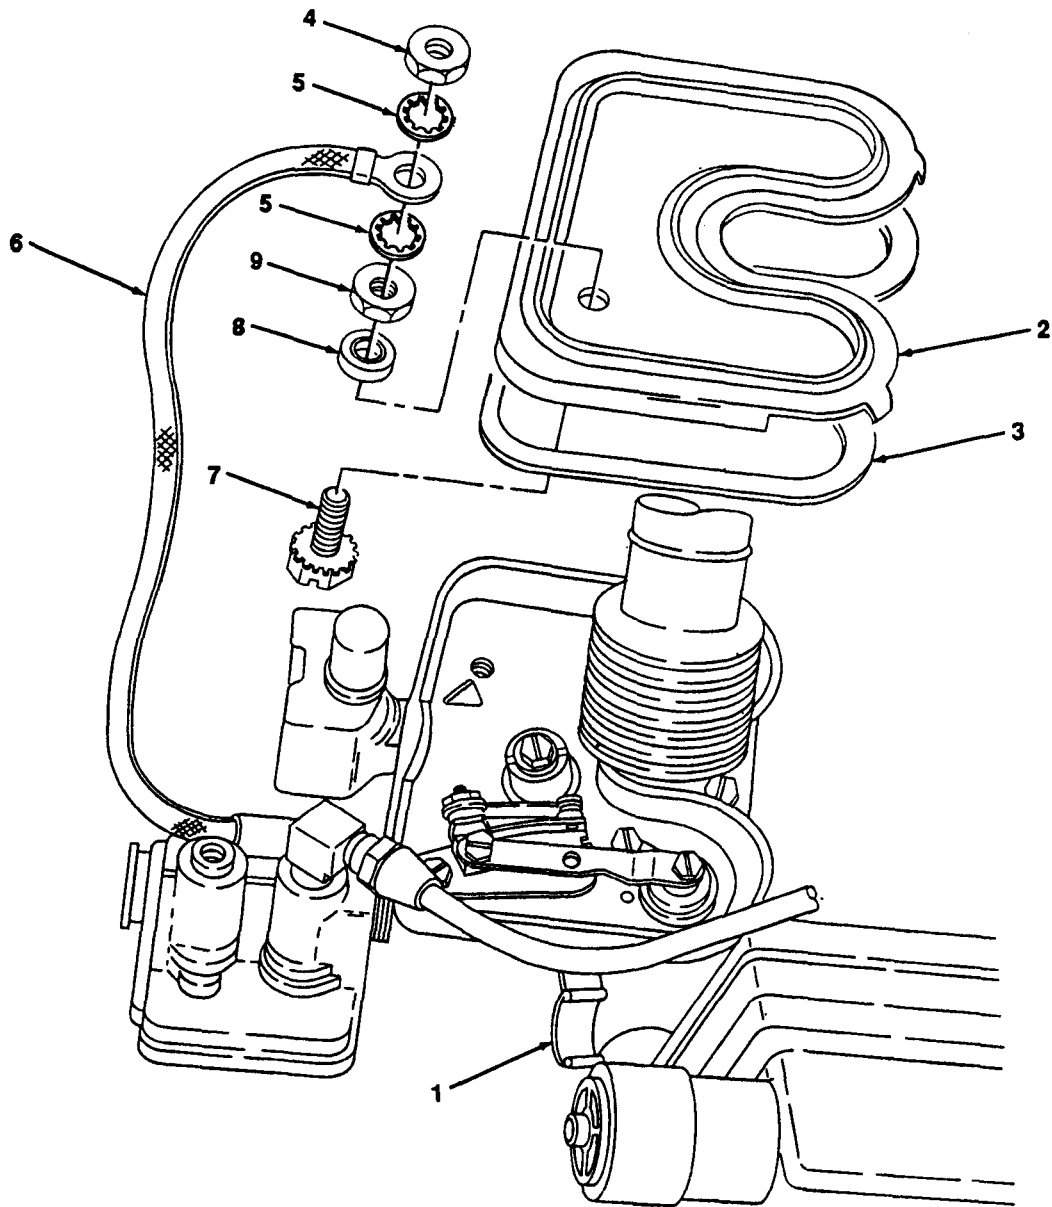

4866-022

Figure 4-19. Breaker Point Cover Removal and Installation.

---

#### 4-29. Breaker Points Assembly (Breaker Point Ignition).

---

This task covers:      a. Removal                      b. Inspection                      c. Installation

---

##### INITIAL SETUP

###### *Tools*

###### *Materials/Parts*

General Mechanic's Tool Kit (Item 1, Appendix B)

Engine Oil (Item 2, Appendix D)

---

##### a. Removal. (figure 4-20)

- (1) Unsnap two clips (1) securing breaker points cover (2) and move cover out of way.
- (2) Remove screw (3) and washer (4).
- (3) Loosen screw (5) and remove connector bar (6) from breaker points (7).
- (4) Remove two screws (8) and washers (9) and remove breaker points (7).

##### b. Inspection.

- (1) Inspect contacts (10) for pits or other signs of wear, and replace breaker points as needed.
- (2) Inspect cam follower (11) for cracks or wear. Replace breaker points as needed.

##### c. Installation. (figure 4-20)

#### NOTE

Do not tighten right hand screw completely at this time.

- (1) Position breaker points (6) in governor housing (12) and secure with two screws (7) and washers (8).
- (2) Rotate engine by hand until cam follower (11) is on highest point of ignition cam (13).
- (3) Set point gap at .016 to .020 in. (.040 to .050 cm) and tighten right hand screw.
- (4) Connect connector bar (6) to breaker points (7) and secure with screw (3) and washer (4).
- (5) Tighten screw (5).
- (6) Using clean engine oil, lubricate cam wick (14) sparingly.
- (7) Install breaker point cover (2) and secure with two clips (1).



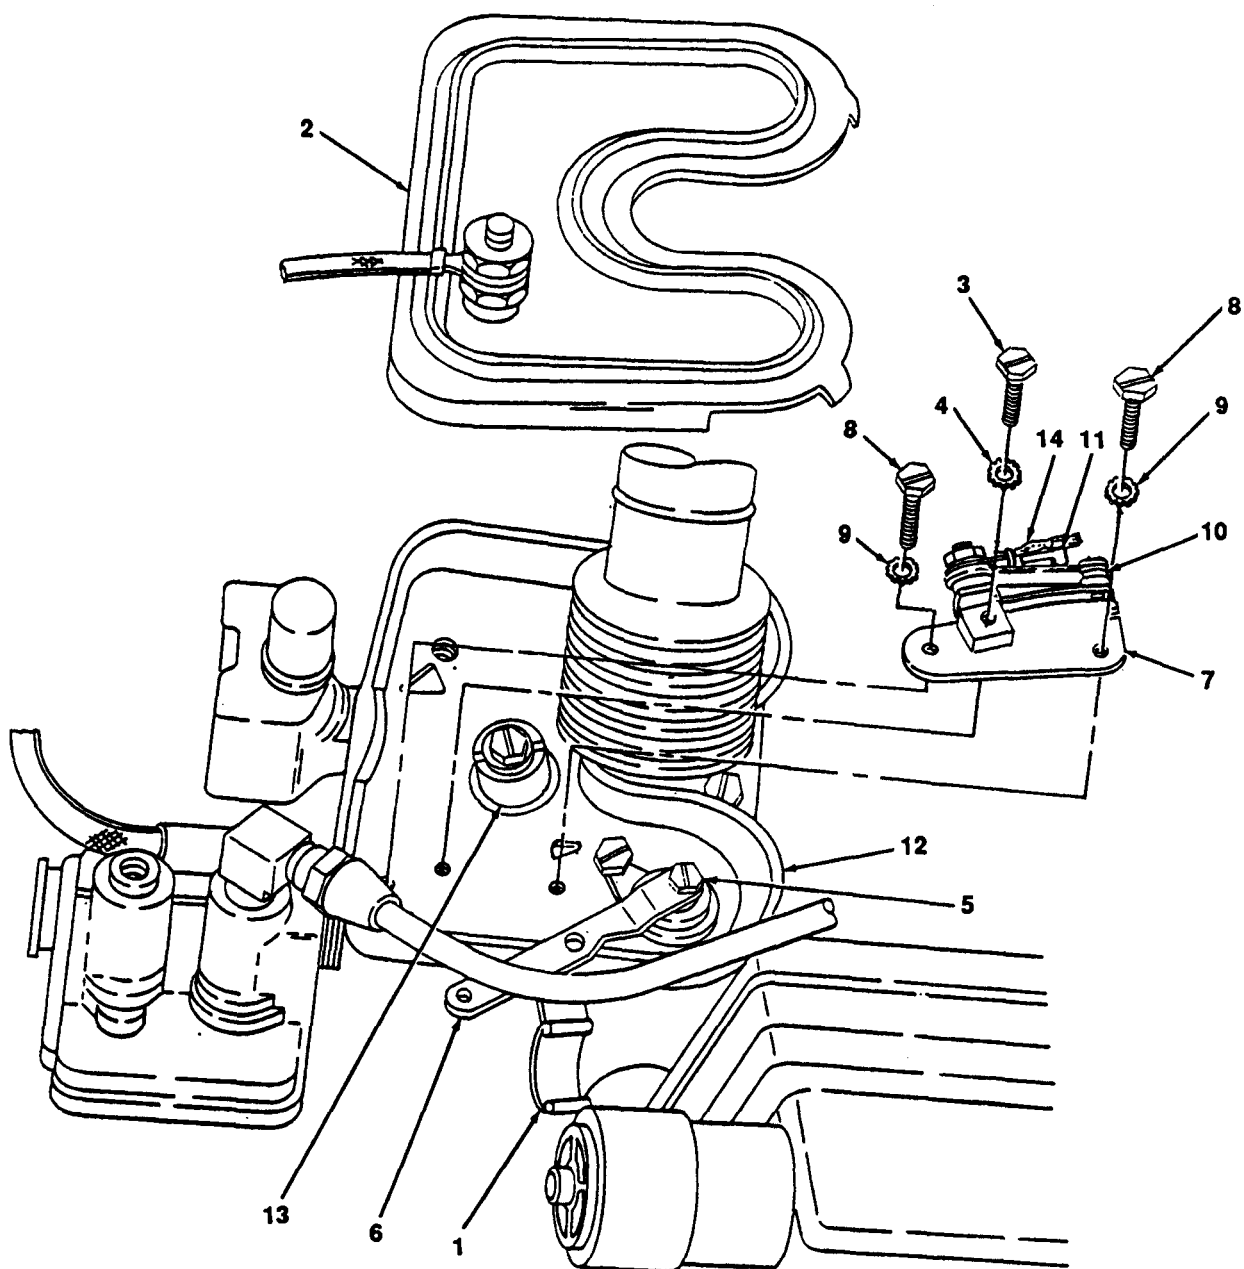


Figure 4-20. Breaker Points Removal and Installation

---

#### 4-30. Breaker Points (Breaker Point Ignition).

---

This task covers:      Adjustment

---

##### INITIAL SETUP

###### *Tools*

###### *Materials/Pads*


General Mechanic's Tool Kit (Item 1, Appendix B)

Engine Oil (Item 2, Appendix D)

---

##### Adjustment. (figure 4-21)

- (1) Unsnap two clips (1) securing breaker point cover (2) and move cover out of way.
- (2) Remove screw (3) and washer (4).
- (3) Loosen screw (5) and move connector bar (6) out of way.
- (4) Rotate engine by hand until cam follower (7) is on highest point of ignition cam (8).
- (5) Loosen screw (9) and adjust point gap to .016 to .020 in. (.040 to .050 cm), and tighten screw (9)
- (6) Recheck point gap and adjust as necessary.
- (7) Using clean engine oil, lubricate cam wick (10) sparingly.
- (8) Position connector bar (6) and secure with screw (3) and washer (4).
- (9) Tighten screw (5).
- (10) Install breaker point cover (2) and secure with two clips (1).

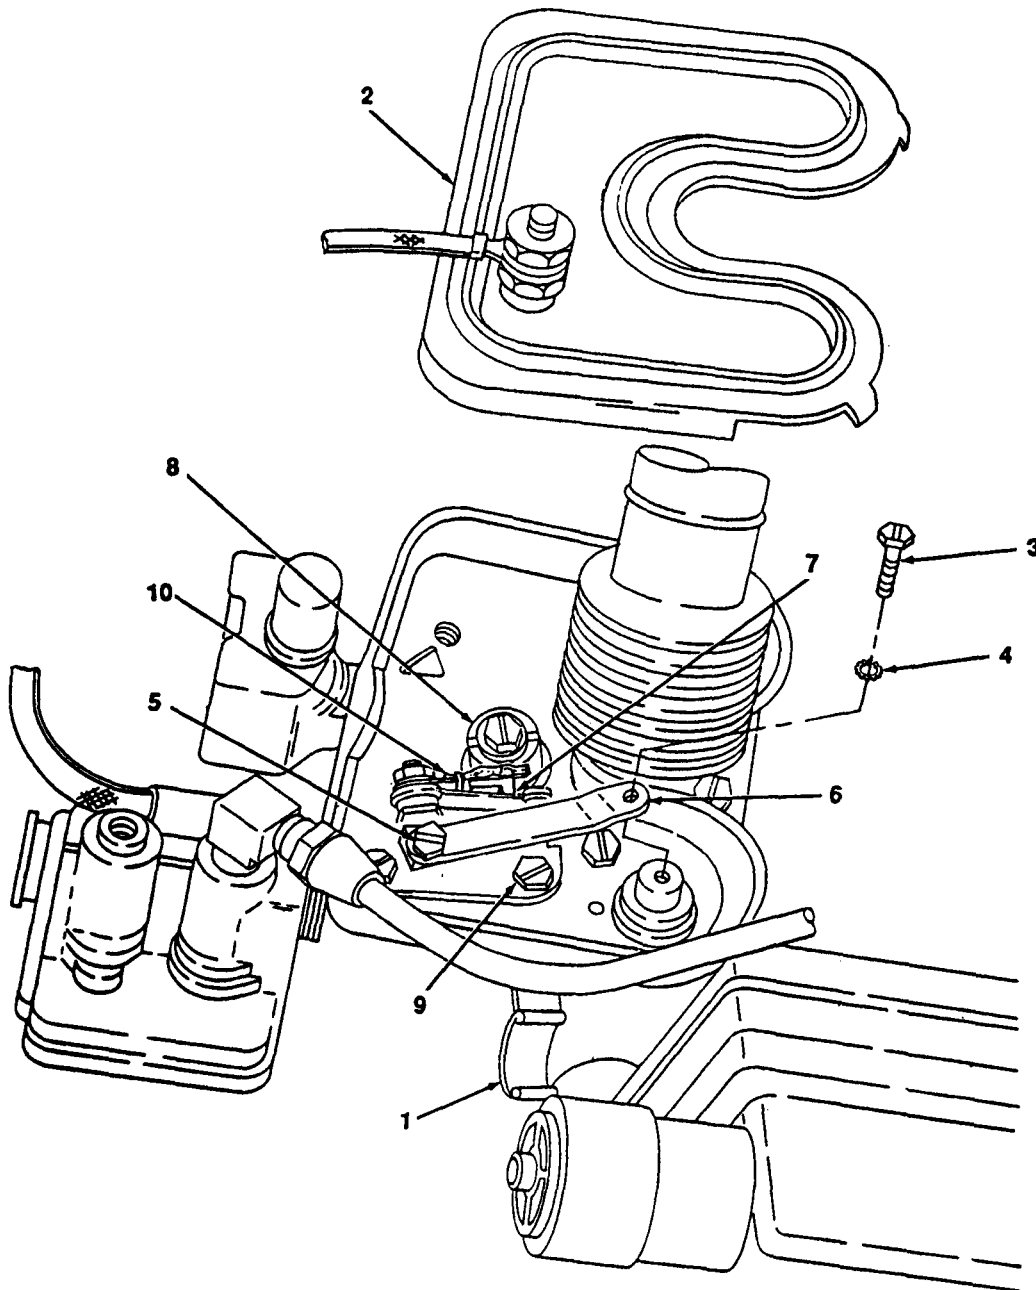

4866-024

Figure 4-21. Breaker Points Adjustment.

#### 4-31. Condenser (Breaker Point Ignition).

This task covers:      a. Removal                                      b. Installation

## INITIAL SETUP

## Tools


General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 4-22)

- (1) Unsnap two clips (1) securing breaker points cover (2) and move cover out of way.
- (2) Remove screw (3), washer (4) securing connector bar (5) to condensor (6), and move out of way.
- (3) Remove nut (7) and washer (8) securing wires to suppression unit (9).
- (4) Remove screw (10) and washer (11) securing condensor (6) and remove condensor.

b. Installation. (figure 4-22)

- (1) Install condensor (6) and secure using screw (10) and washer (11).
- (2) Install condensor lead onto suppression unit (9) and secure with nut (7) and washer (8).
- (3) Attach connector bar (5) to condensor (6) and secure with screw (3) and washer (4).
- (4) Install breaker points cover (2) and secure with two clips (1)

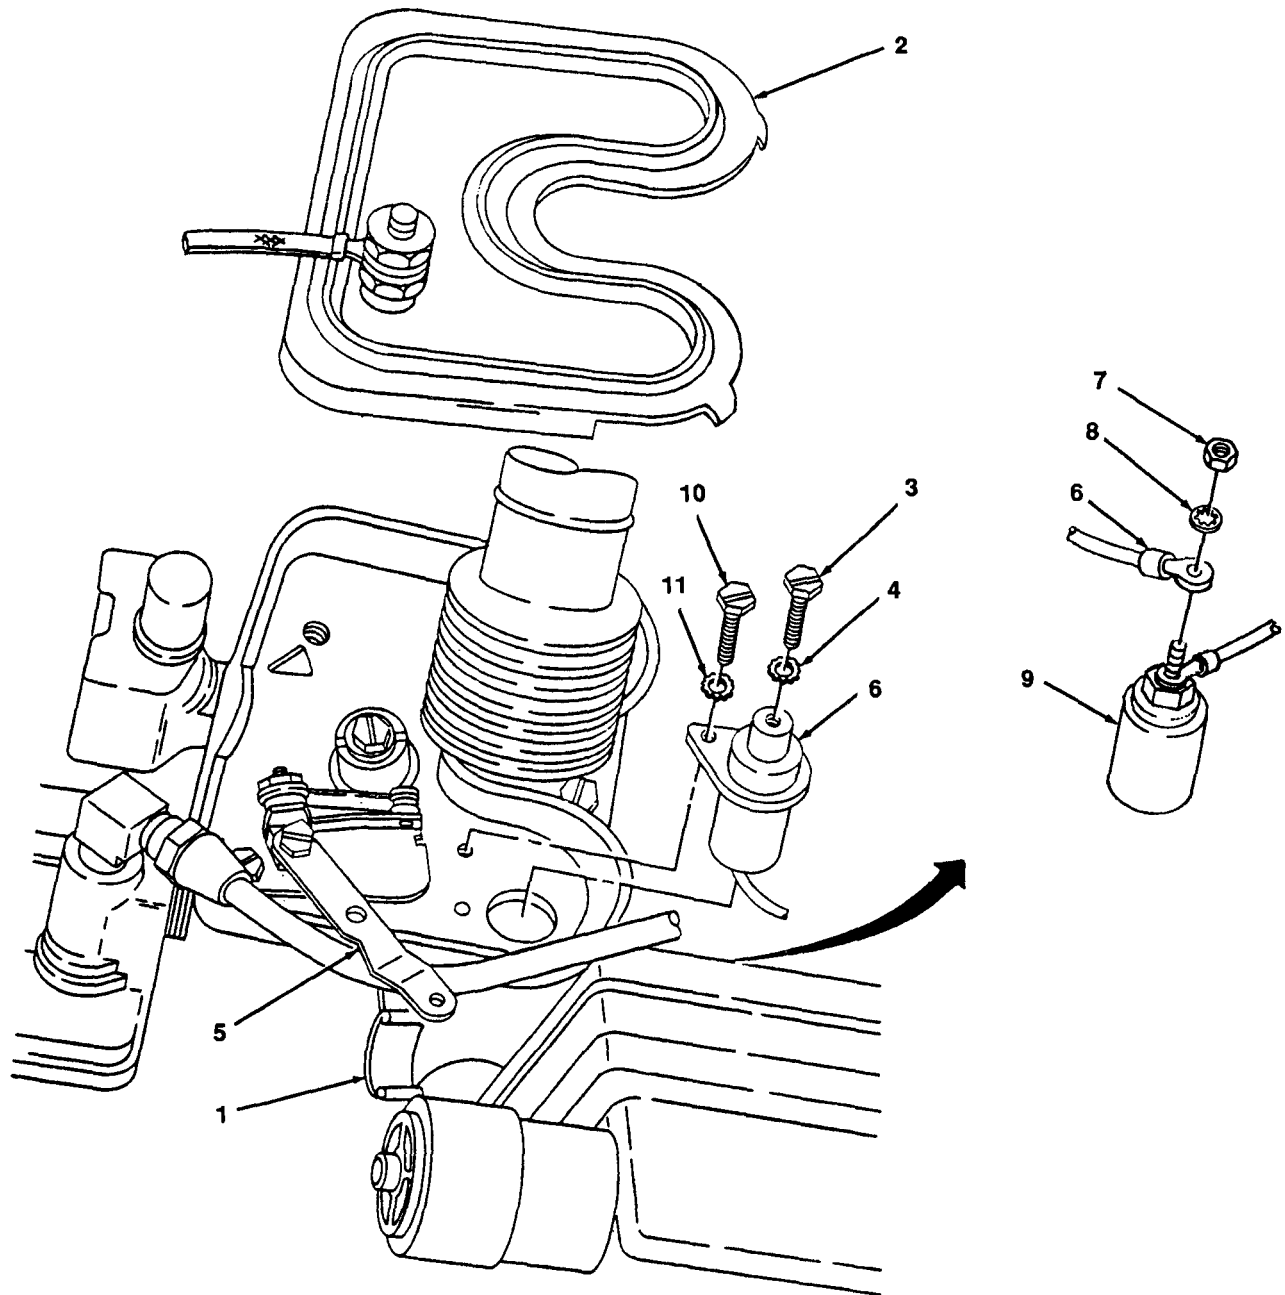

4866-025

Figure 4-22. Condenser Removal and Installation.

4-32. Breather Line.

This task covers:	a. Removal (oil bath)	d. Removal (dry)
	b. Inspection (oil bath)	e. Inspection (dry)
	c. Installation (oil bath)	f. Installation (dry)

INITIAL SETUP

Tools	Materials/Parts
General Mechanic's Tool Kit (Item 1, Appendix B)	Rags, Wiping (Item 6, Appendix D)
	Solvent, Drycleaning (Item 7, Appendix D)
	Sleeve, Rubber (NSN 5365-00-215-7421)

- a. Removal. Oil Bath. (figure 4-23)
- (1) Loosen coupling nut (1) from rocker cover (2).
- (2) Loosen coupling nut (3) from air cleaner (4) and remove breather line (5).

b. Inspection.


**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean breather line with drycleaning solvent.
- (2) Ensure there are no obstructions in line.
- (3) Inspect coupling nuts for signs of striped threads or other damage, and replace breather line if damage is found.

c. Installation. Oil Bath. (figure 4-23)

- (1) Position breather line (5) on rocker cover (2) and finger tighten coupling nut (1).
- (2) Position breather line (5) on air cleaner (4), tighten coupling nut (3), and finish tightening coupling nut (1).

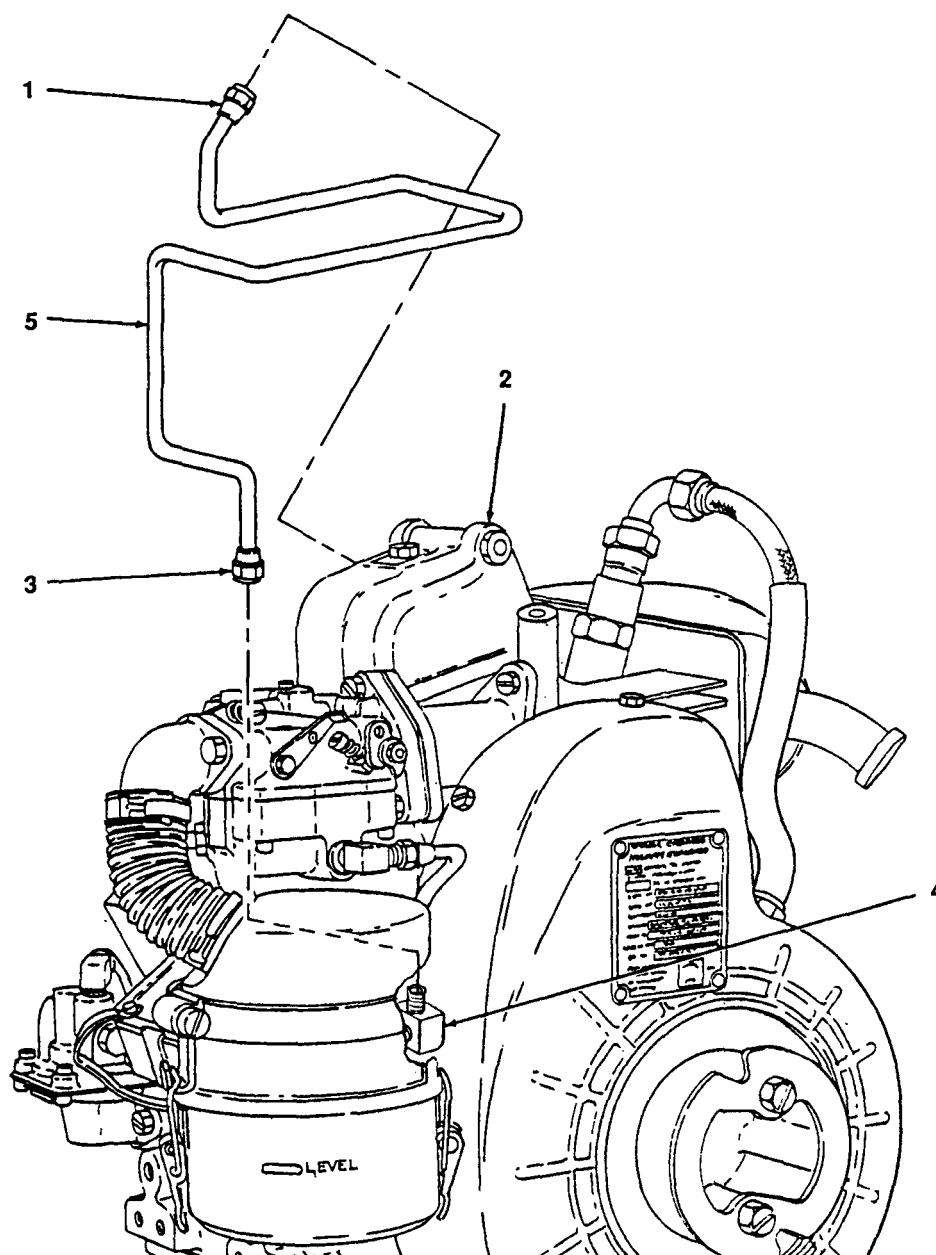

4866-036

Figure 4-23. Breather Line Removal and Installation (Oil Bath Air cleaner).

4-32. **Breather Line (cont).**

d. Removal. Dry. (figure 4-24)

- (1) Loosen coupling nut (1) securing breather line (2) to cylinder head (3).
- (2) Loosen coupling nut (4) securing breather line (2) to air cleaner elbow (5) and remove breather line.
- (3) Remove coupling nut (4) and rubber sleeve (6) from breather line (2).
- (4) Remove adapter (7) from cylinder head (3).

e. Inspection.

**WARNING**


Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean breather line and coupling nut with dry cleaning solvent.
- (2) Ensure there are no obstructions in line.
- (3) Inspect coupling nut for signs of stripped threads, or any other damage. Replace breather line if damage is found.
- (4) Inspect rubber sleeve and replace if torn or otherwise damaged.

f. Installation. Dry. (figure 4-24)

- (1) Install coupling nut (4) and rubber sleeve (6) on breather line (2).
- (2) Install adapter (7) in cylinder head (3).
- (3) Position breather line (2) on cylinder head (3), and finger tighten coupling nut (1).
- (4) Position breather line (2) on air cleaner elbow (5) and tighten coupling nut (4) and coupling nut (1).



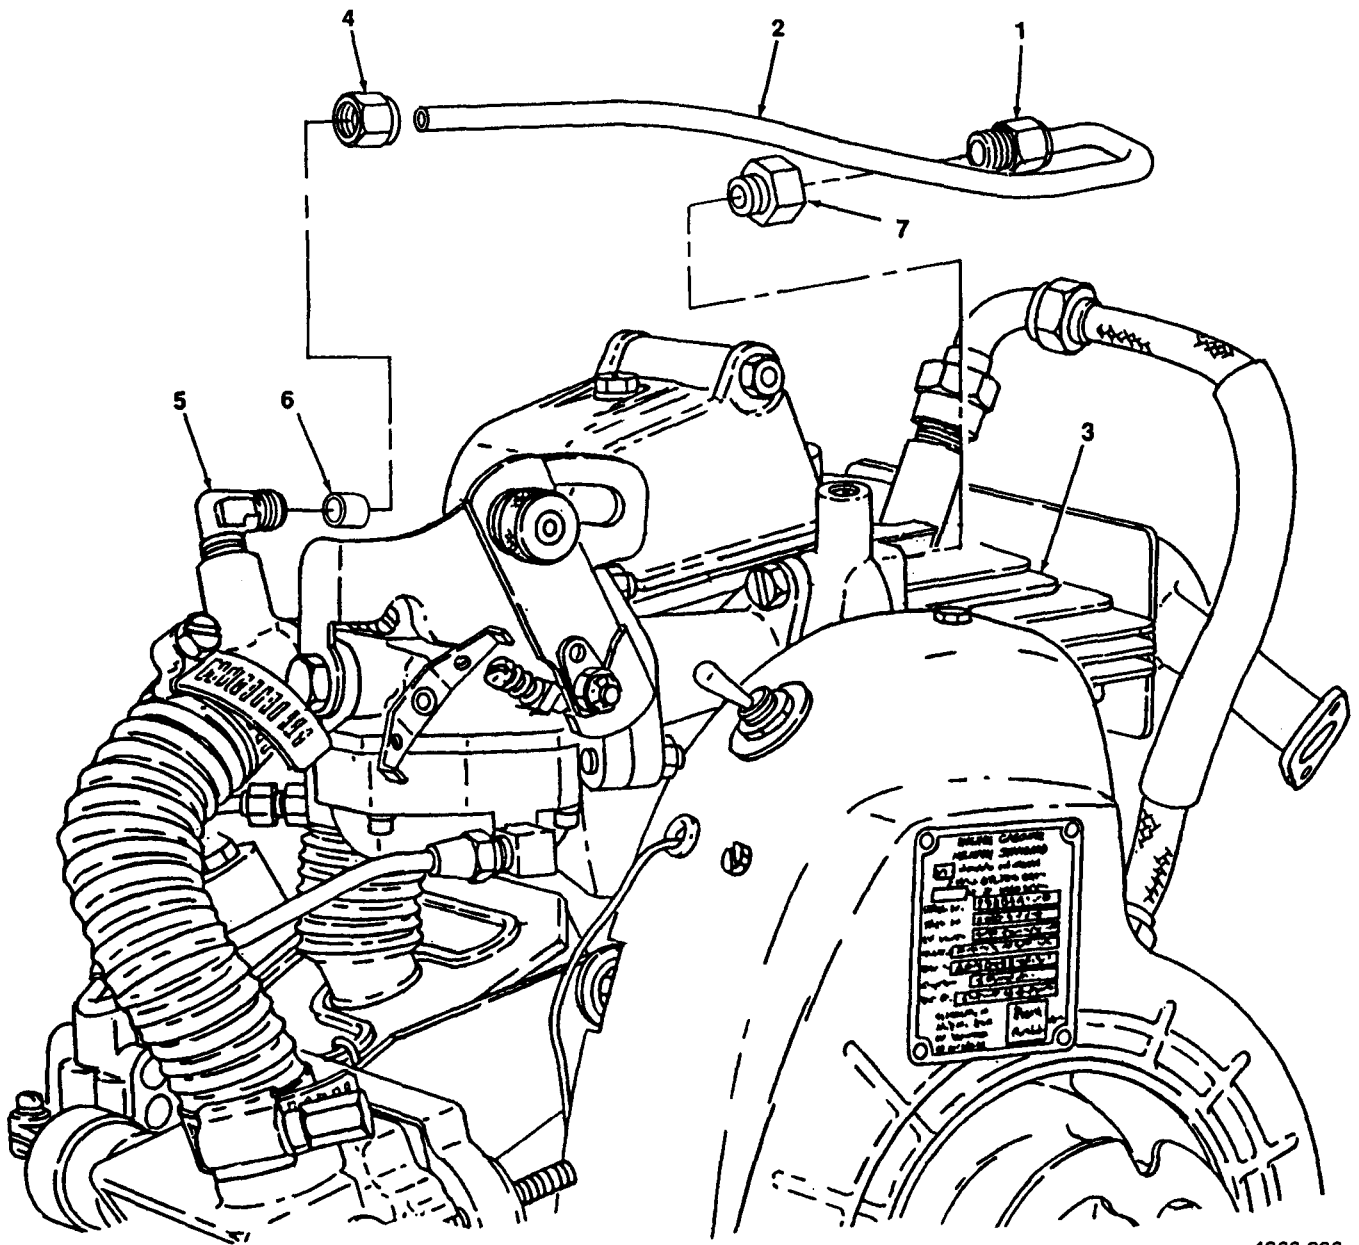

4866-026

Figure 4-24. Breather Line Removal and Installation (Dry Element Air Cleaner).

## INITIAL SETUP

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 4-25)

- (1) Remove screw (1) and washer (2).

### NOTE


Make note of spring placement before removal of throttle lever.

- (2) Remove nut (3) and remove throttle lever (4) and spring (5).

- (3) Remove screw (6) and remove throttle control (7).

*b. Installation.* (figure 4-25)

- (1) Install spring (5) on throttle rod (9).
- (2) Position throttle control (7) on carburetor (8) and secure with screw (6).
- (3) Rotate spring (5) counterclockwise half turn and install throttle lever (4) on throttle rod (9) and secure with nut (3).
- (4) Install screw (1) and washer (2)

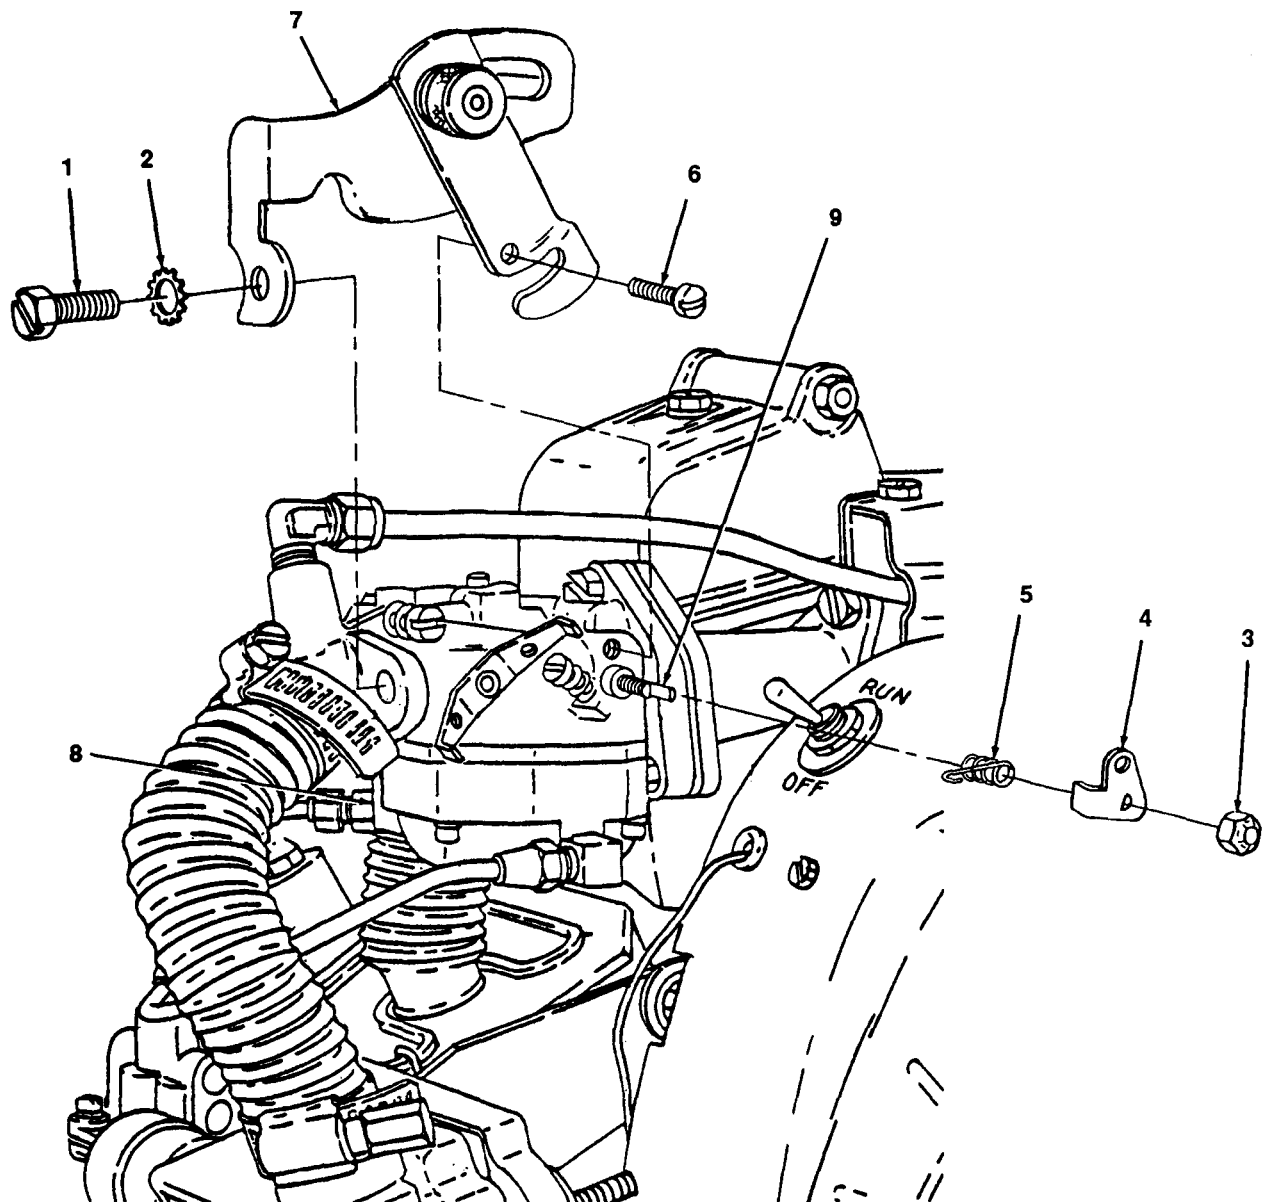

4866-028

Figure 4-25. Throttle Control Removal and Installation.

---

#### 4-34 Carburetor.

---

This task covers:    a. Adjustment                      b. Removal                      c. Inspection                      d. Installation

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Wrench, Torque (NSN 5120-00-640-6364) (Item 2, Appendix B)


###### *Materials/Parts*

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, appendix D)  
Gasket, Carburetor Mounting (NSN 5330-00-819-8733)  
Gasket, Throttle Housing, Front (P/N 9786E64-6)  
Gasket, Throttle Housing, Rear (P/N 9786E65-3)  
Gasket, Throttle Housing to Carburetor (P/N 9786E65-4)

---

##### a. Adjustment. (figure 4-26)

- (1) Turn main adjustment needle (1) and idle adjustment needle (2) fully clockwise to stop.
- (2) Turn main adjustment needle (1) 3/4 turn counterclockwise.
- (3) Turn idle adjustment (2) 1/2 turn counterclockwise.
- (4) Start and warm-up engine (para. 2-9).
- (5) Apply end item load and observe exhaust.
- (6) If exhaust is black, turn main adjustment needle (1) clockwise.
- (7) If engine runs rough or lacks power, turn main adjustment needle (1) counterclockwise.
- (8) To set idle speed, turn idle speed regulating screw (3) clockwise to increase idle or counterclockwise to decrease.
- (9) Stop engine (para. 2-10).

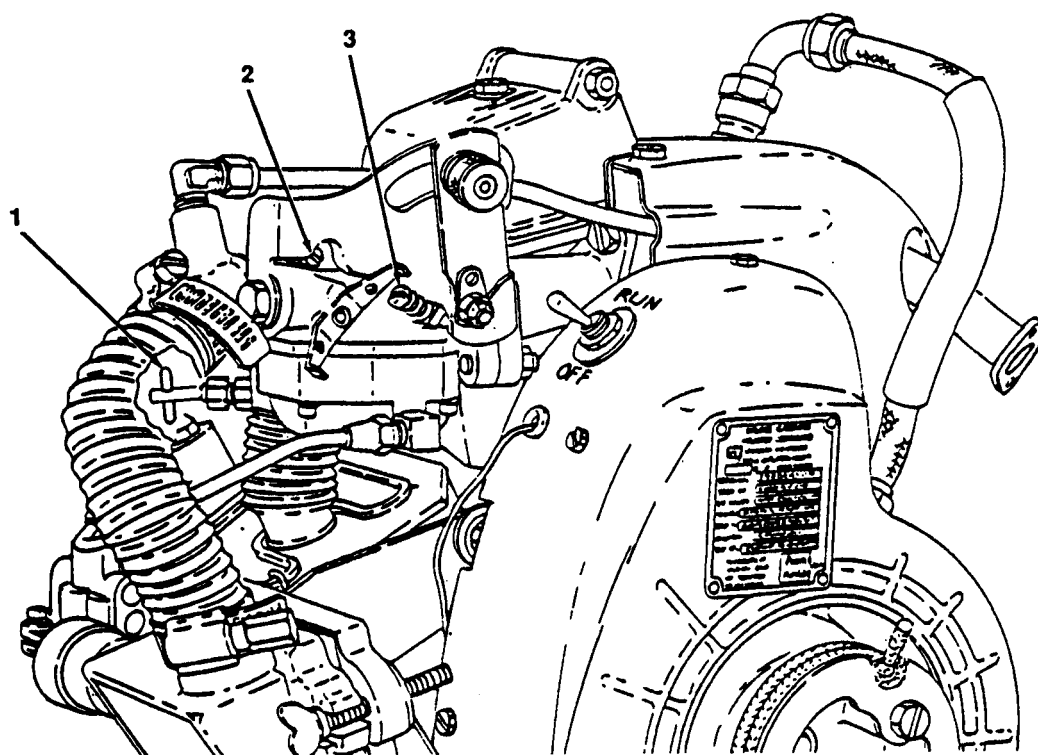

4866-027

Figure 4-26. Carburetor Adjustment.

4-34. **Carburetor (cont).**

b. Removal. (figure 4-27)


- (1) Remove throttle control (para. 4-33).
- (2) Disconnect breather line (1) from air intake elbow (2).
- (3) Loosen clamp (3) and remove air cleaner duct (4) from air intake elbow (2).
- (4) Remove screw (5) and washer (6) and remove air intake elbow (2) and gasket (7).
- (5) Remove two screws (8) and washers (9) and remove throttle housing cover (10) and gasket (11).
- (6) Remove screw (12), washer (13) and remove throttle lever (14) from carburetor (15).
- (7) Remove two screws (16), washers (17) and remove throttle housing (18), gasket (19), rear cover (20), and gasket (21).
- (8) Disconnect fuel line (22) from carburetor (15).
- (9) Remove two nuts (23) and washers (24) securing carburetor (15) to intake manifold (25) and remove carburetor (15) and gasket (26).

**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F–138°F (38°C–60°C).

c. Inspection.

- (1) Clean carburetor with drycleaning solvent, and dry thoroughly.
- (2) Inspect carburetor for cracks, excessive wear, stripped threads or any other signs of damage and replace as needed.
- (3) Clean all gasket surfaces and ensure that old gasket material is removed.

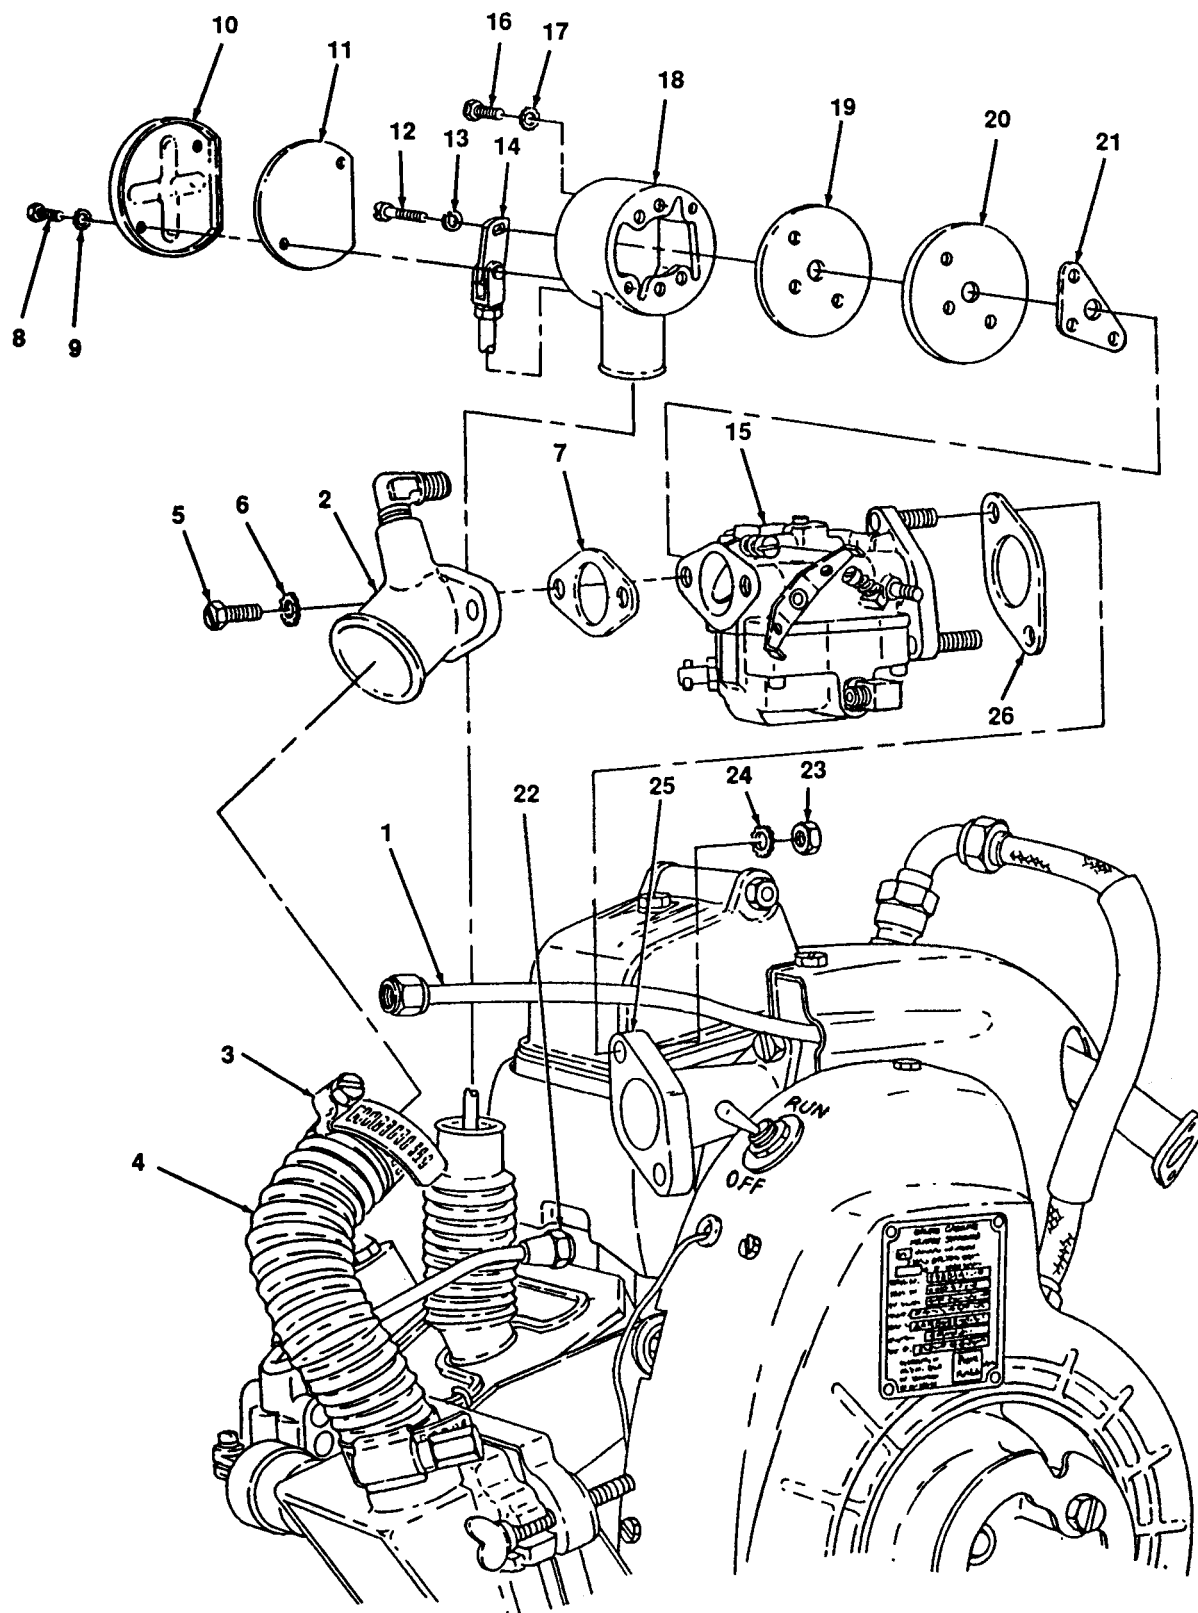

4866-029


Figure 4-27. Carburetor Removal.

4-34. **Carburetor (cont).**

d. Installation. (figure 4-28)

- (1) Position carburetor (15) and gasket (26) on intake manifold (25) and secure with two nuts (23) and washers (24).
- (2) Connect fuel line (22) to carburetor (15).
- (3) Position gasket (21), rear cover (20), gasket (19) and throttle housing (18) on carburetor (15) and secure with two screws (16) and washers (17).
- (4) Position throttle lever (14) on carburetor (15) and secure with screw (12) and washer (13).
- (5) Position gasket (11) and throttle housing cover (10) on throttle housing (18) and secure with two screws (8) and washers (9).
- (6) Position air intake elbow (2) and gasket (7) on carburetor (15) and secure with screw (5) and washer (6).
- (7) Connect breather line (1) to air intake elbow (2).
- (8) Install air cleaner duct (4) on air intake elbow (2) and secure with clamp (3).
- (9) Install throttle control (para. 4-33).
- (10) Adjust carburetor.



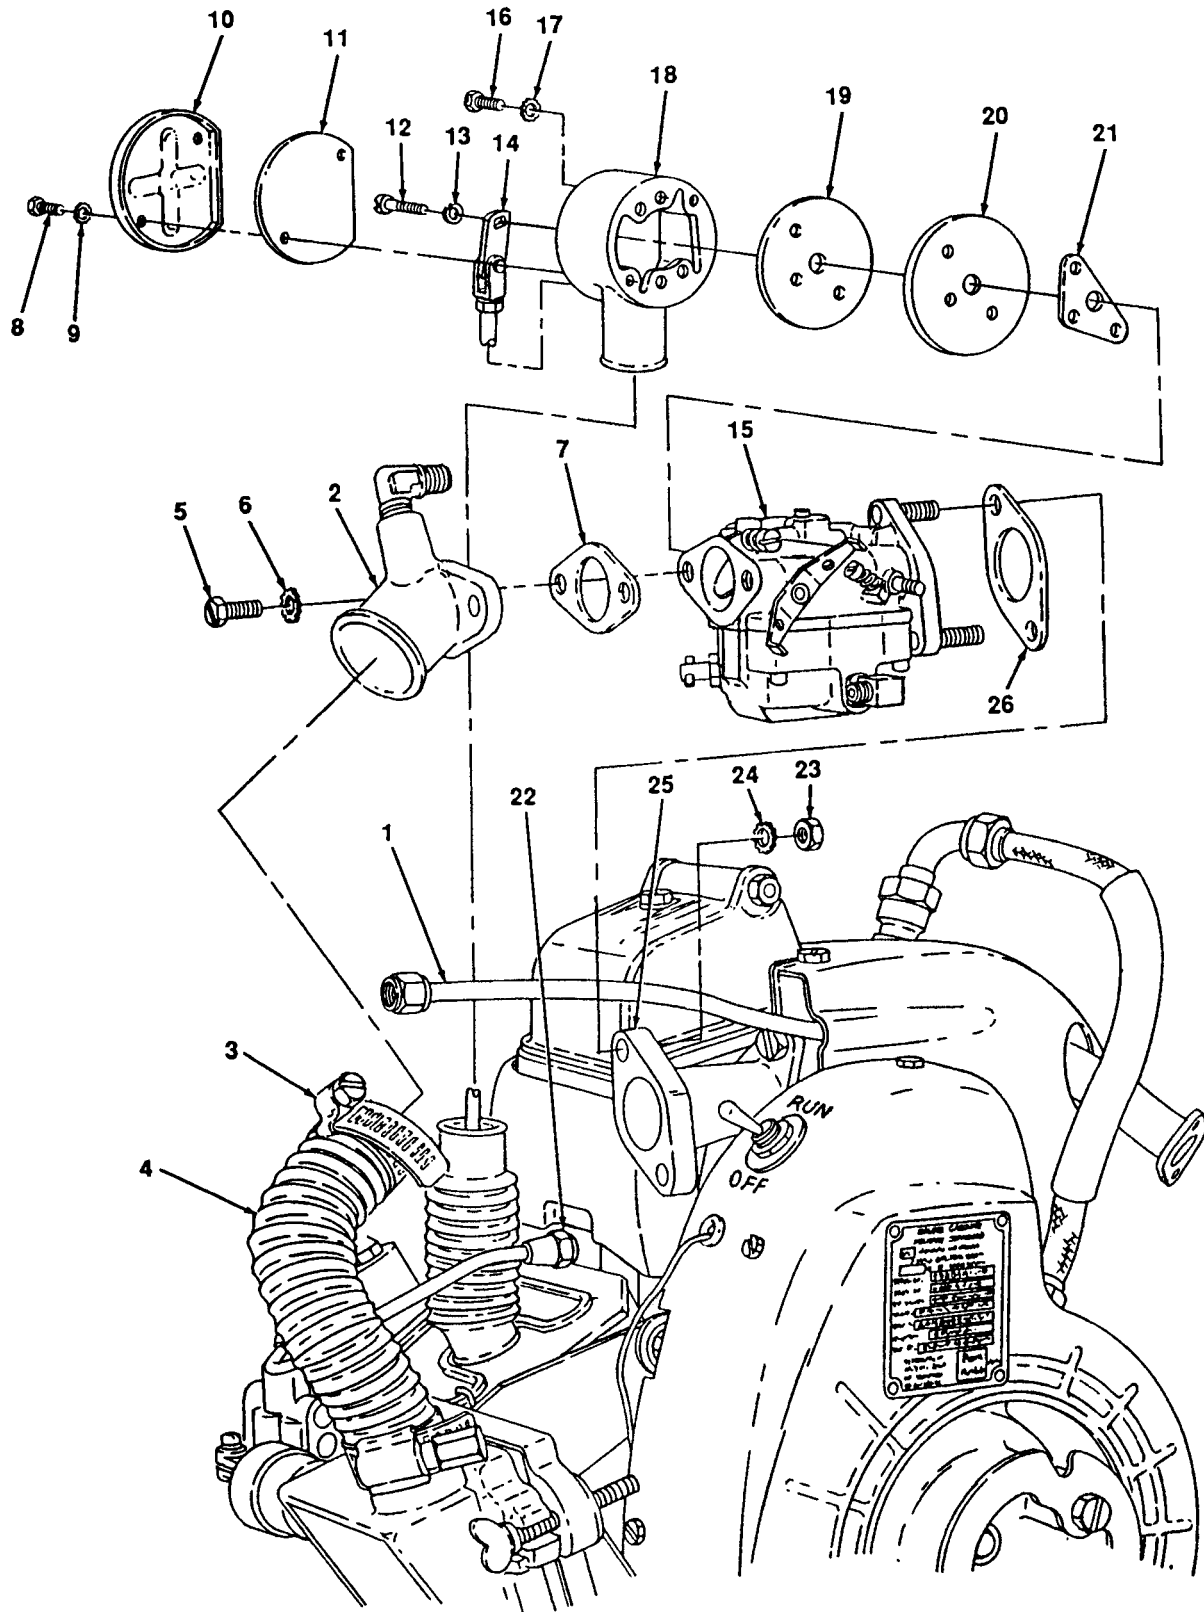

4866-029.1

Figure 4-28. Carburetor, Installation.

#### 4-35. Fuel Line.

This task covers:      a. Removal                                      b. Installation

## INITIAL SETUP

## Tools


General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 4-29)

- (1) Loosen fuel line fitting (1) at fuel pump (2).
- (2) Loosen fuel line fitting (3) at carburetor (4) and remove fuel line (5).

b. Installation. (figure 4-29)

- (1) Connect fuel line fitting (3) to carburetor (4) and finger tighten.
- (2) Connect fuel line fitting (1) to fuel pump (2) and tighten both fittings.

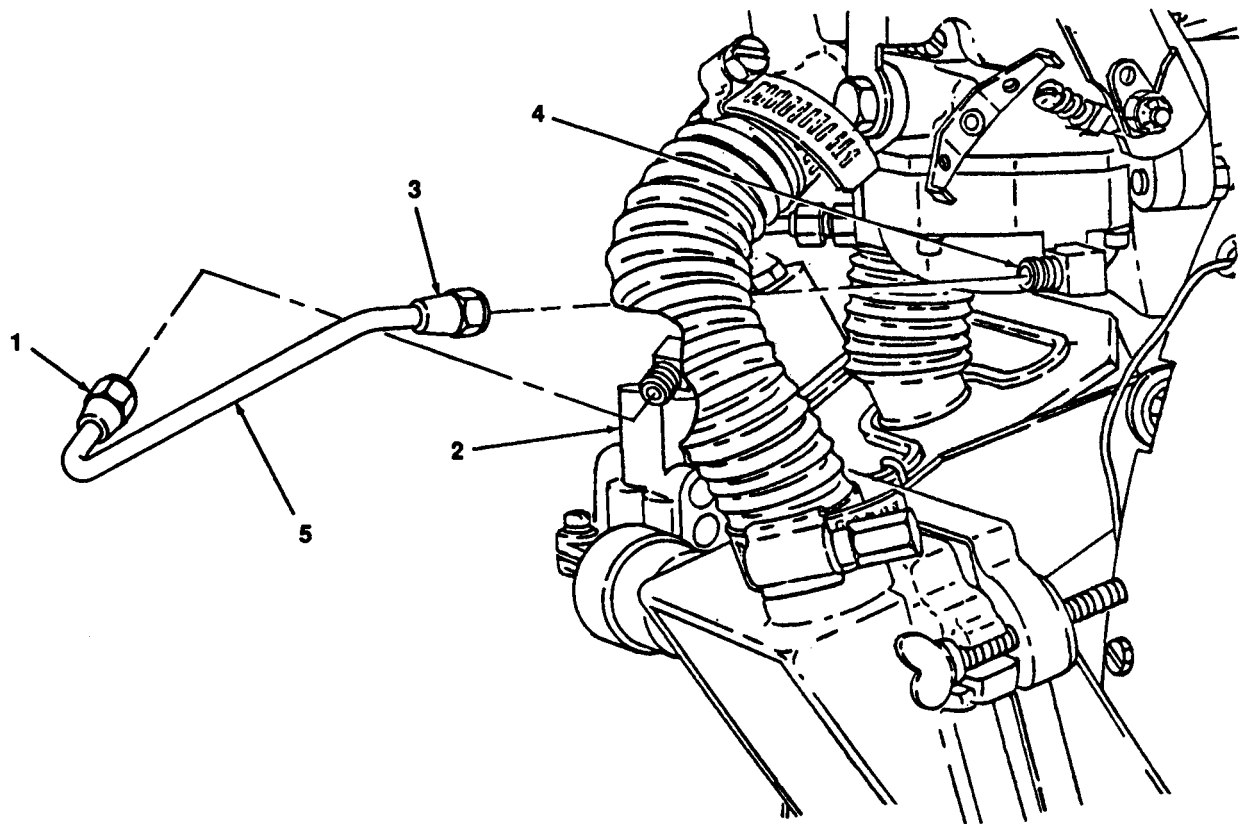

4866-030

Figure 4-29. Fuel Line Removal and Installation.

---

#### 4-36. Fuel Pump.

---

This task covers:      a. Test                              b. Removal                              c. Installation

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Tester, Engine Vacuum and Pressure  
(NSN 4910-00-253-8673) (Item 2, Appendix B)

###### *Equipment Condition*

Fuel supply removed from engine for removal of fuel pump.


###### *Materials/Parts*

Gasket, Fuel Pump Mounting (NSN 5330-00-756-1673)

---

##### a. Test. (figure 4-30)

- (1) Disconnect fuel line (1) from fuel pump (2).
- (2) Connect suitable fuel pressure gage (3) to fuel pump (2).
- (3) Use starting rope to crank engine and check fuel pressure gage. Fuel pressure should be between 1 1/2-3 psi (10.34-20.69 Kpas).
- (4) Replace fuel pump if actual reading does not match specifications.
- (5) Remove pressure gage (3) and connect fuel line (1) to fuel pump (2).

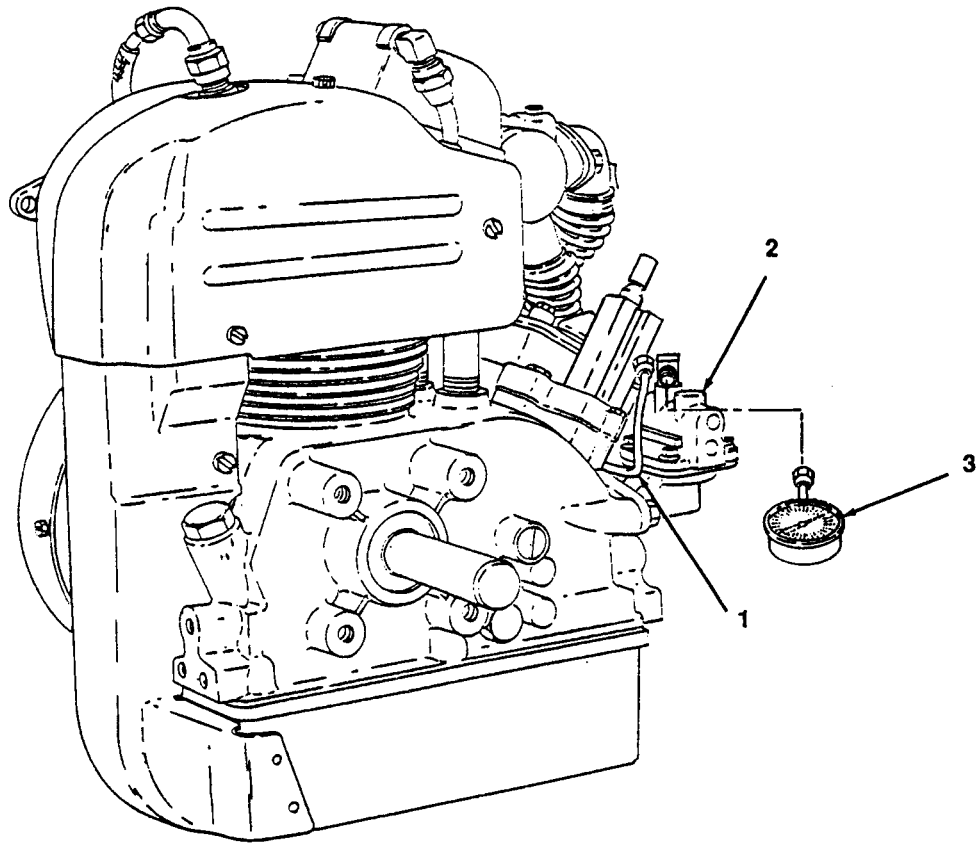

4866-031

Figure 4-30. Fuel Pump Pressure Test.

4-36. Fuel Pump (Cont).

b. Removal. (figure 4-31)

- (1) Loosen fuel line (1) at fuel pump (2).
- (2) Remove two screws (3) and washers (4) securing fuel pump (2) and remove pump and gasket (5).


**NOTE**

Perform step 3 only if fuel pump is being replaced.

- (3) Remove elbow (6) from fuel pump (2).

c. Installation. (figure 4-31)

- (1) Clean mounting surface on engine and fuel pump.
- (2) Install elbow (6) on fuel pump (2).
- (3) Position fuel pump (2) with gasket (5) on engine and secure with two screws (3) and washers (4).
- (4) Connect fuel line (1) to fuel pump (2).

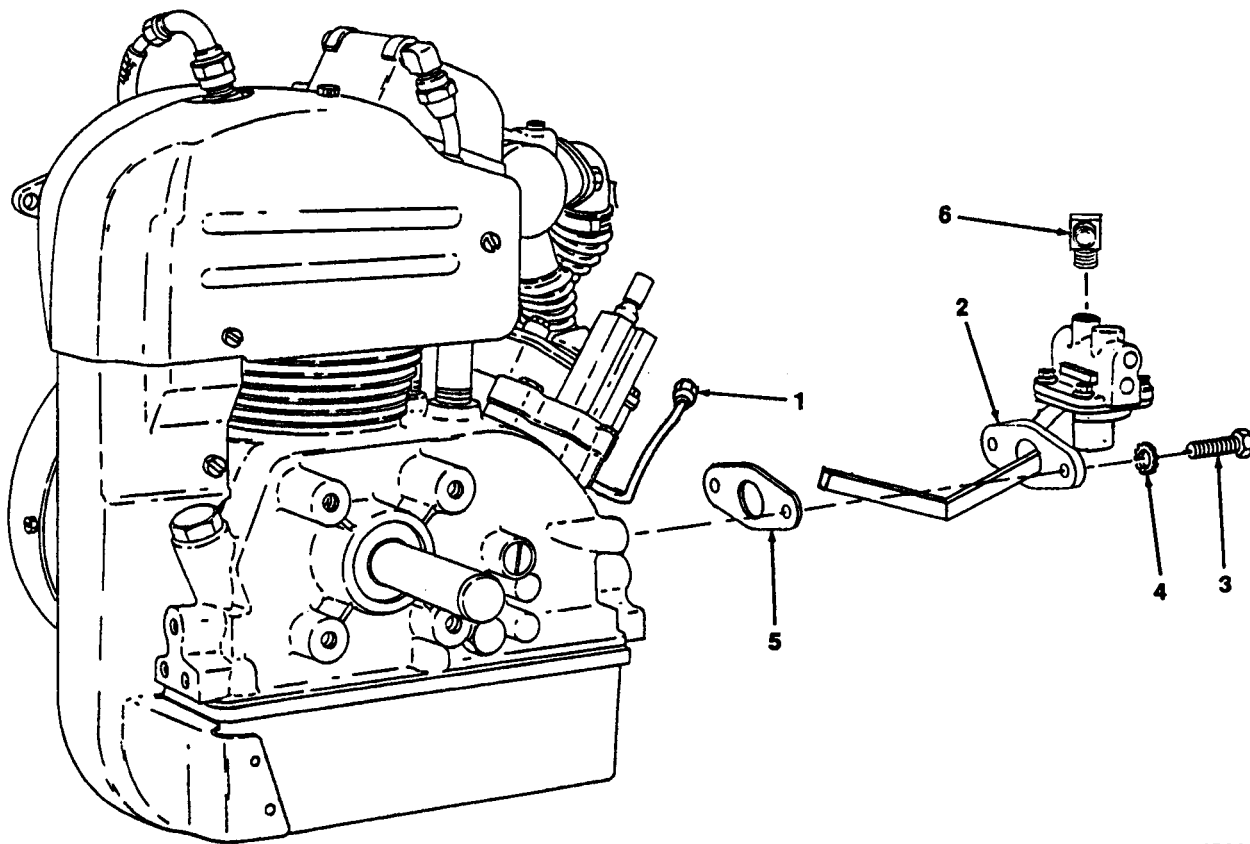

4866-032

Figure 4-31. Fuel Pump Removal and Installation.



---

#### 4-38. Flywheel.

---

This task covers:      a. Removal                      b. Inspection                      c. Installation

---

##### INITIAL SETUP

##### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Puller Kit Mechanical (NSN 5120-00-313-9496)  
(Item 2, Appendix B)  
Wrench, Torque (NSN 5120-00-640-6364)  
(Item 2, Appendix B)

##### *Equipment Condition*

Starter flange removed (para. 4-37).  
Flywheel cover removed (para. 4-16).

a. Removal. (figure 4-33)

- (1) Remove nut (1) and washer (2) from crankshaft (3).
- (2) Using suitable puller, remove flywheel (4) and key (5) from crankshaft (3).

b. Inspect.

- (1) Inspect flywheel for cracks, bent or missing fins.
- (2) Inspect starter flange mounting screw threads for signs of stripping or cross threading.
- (3) Replace a damaged flywheel.

c. Installation. (figure 4-33)

- (1) Position key (5) in crankshaft (6).
- (2) Install flywheel (4) on crankshaft (3) and secure with nut (1) and washer (2). Torque nut to 240-300 in. lbs. (42864-53580 gr cm)



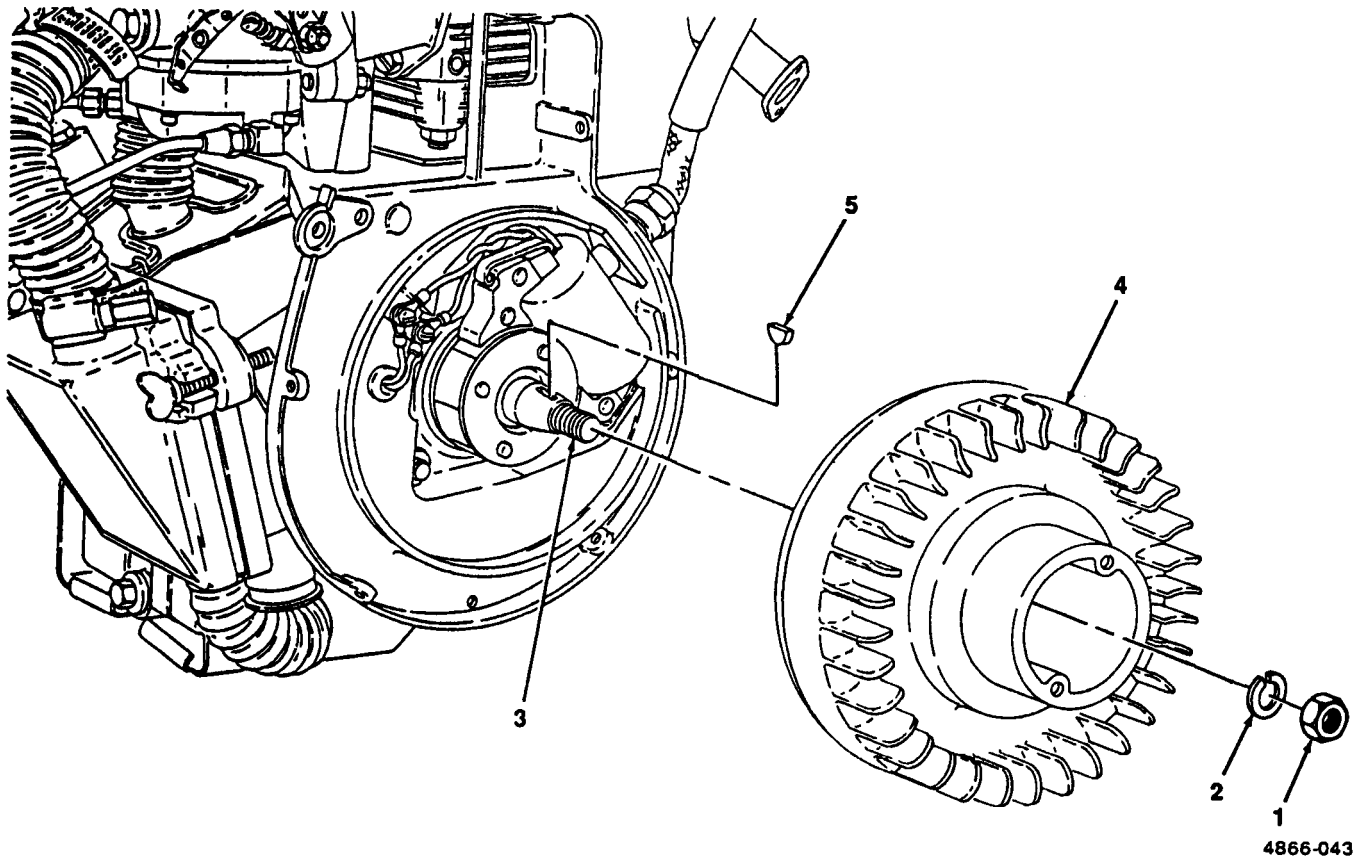


Figure 4-33. Flywheel Removal and Installation.

This task covers:      a. Removal                                      b. Installation

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)  
Wrench, Torque (NSN 5120-00-640-6364) (Item 2,  
Appendix B)

### Materials/Parts

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, Appendix D)

Flywheel cover removed (para. 4-16).  
Carburetor removed (para 4-34).

(1) Remove two screws (1) and washers (2) and remove intake manifold (3) and gasket (4).

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (3) Inspect intake manifold for cracks or other signs of damage and replace if necessary.

- (1) Ensure gasket surfaces are clean.
- (2) Install intake manifold (3) and gasket (4) and secure with two screws (1) and washers (2). Torque screws to 40-50 in. lbs (8037-8930 gr cm).

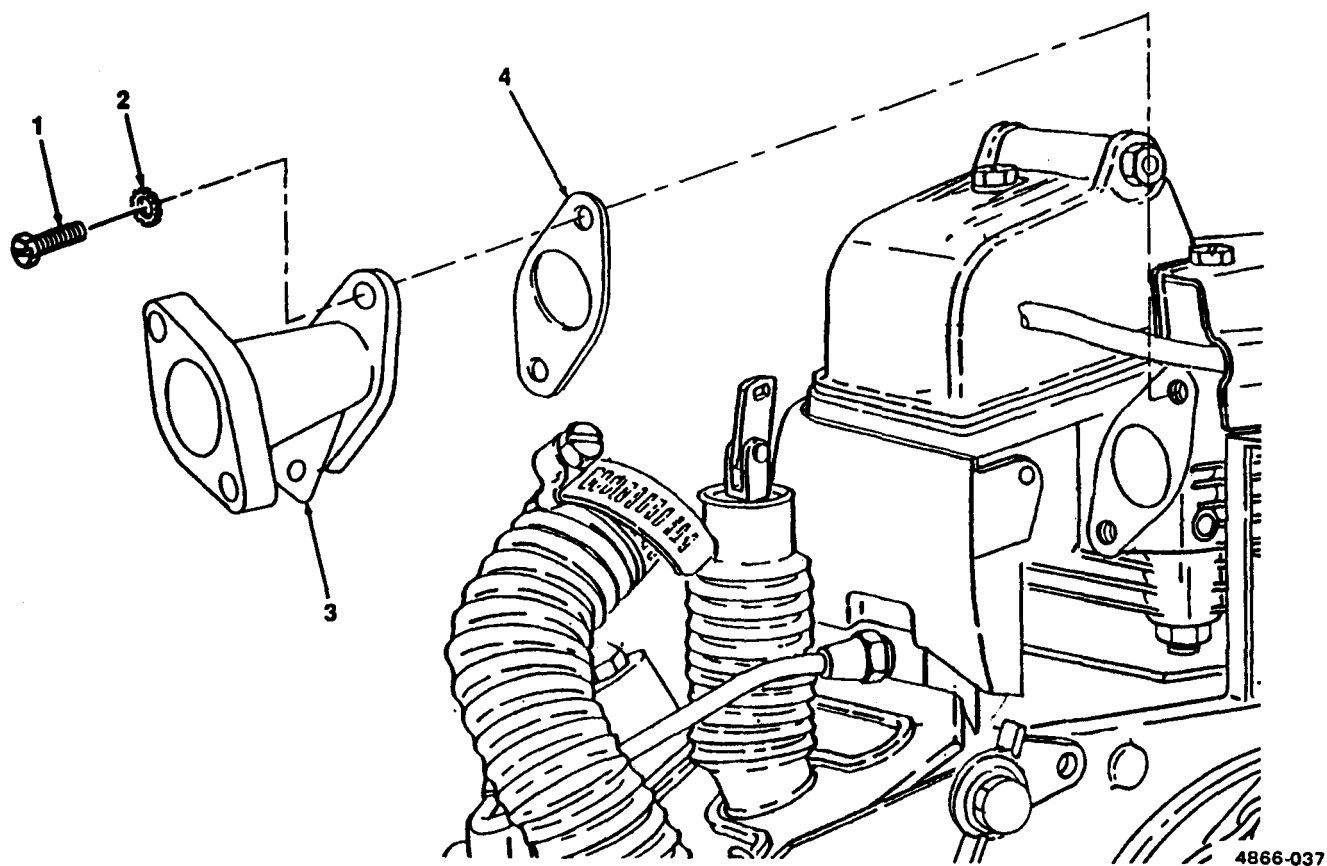


Figure 4-34. Intake Manifold Removal and Installation.

This task covers:      a. Removal      b. Installation

## INITIAL SETUP

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)  
Wrench, Torque (NSN 5120-00-640-6364) (Item 2,  
Appendix B)

### Materials/Parts (cont)

Gasket, Exhaust Manifold Mounting  
(NSN 5330-00-797-3506)

### Equipment Condition

### Materials/Parts

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, Appendix D)

Cylinder head covers removed (para. 4-14).

a. Removal. (figure 4-35)

- (1) Remove two nuts (1) securing exhaust manifold (2) and gasket (3) to cylinder head (4).


## WARNING

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- 
- (2) Clean exhaust manifold with drycleaning solvent and dry thoroughly.
- (3) Inspect exhaust manifold for cracks or other signs of damage and replace as needed.

*b. Installation.* (figure 4-35)

- (1) Ensure gasket surfaces are clean.
- (2) Position exhaust manifold (2) and gasket (3) on cylinder head (4) and secure with two nuts (1). Tighten nuts to 60-85 in. lbs (10716-15181 gr cm).

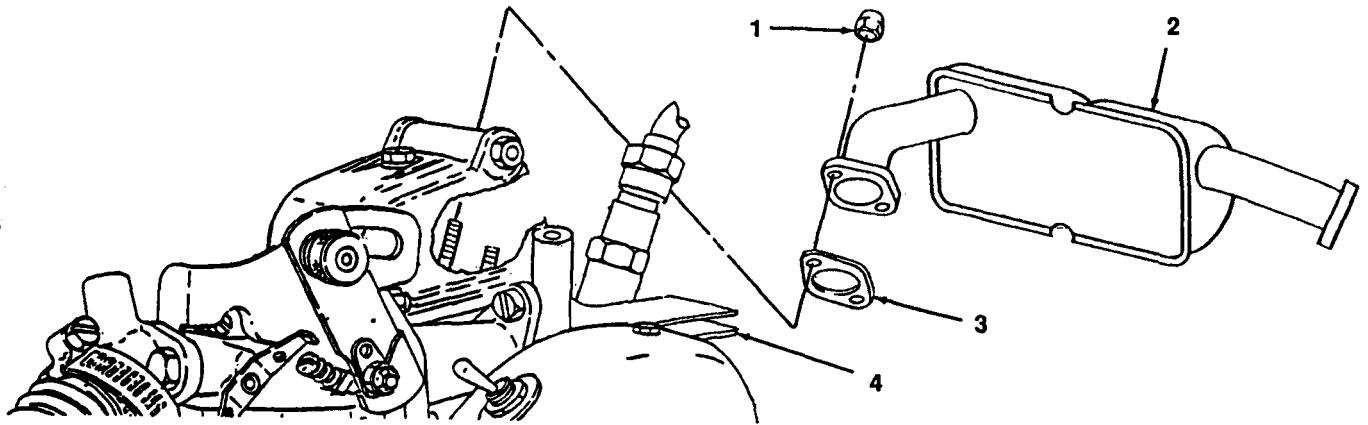

4866-038

Figure 4-35. Exhaust Manifold Removal and Installation.

---

#### 4-41. Bearing Cap.

---

This task covers:      Inspection

---

##### INITIAL SETUP

###### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)


###### *Equipment Condition*

Flywheel removed (para 4-38).

---

Inspection.      (figure 4-36)

- (1) Inspect bearing cap (1) for cracks or other signs of damage.
- (2) Inspect bearing cap (1) for signs of oil seepage.
- (3) Notify Direct Support maintenance of any defects.

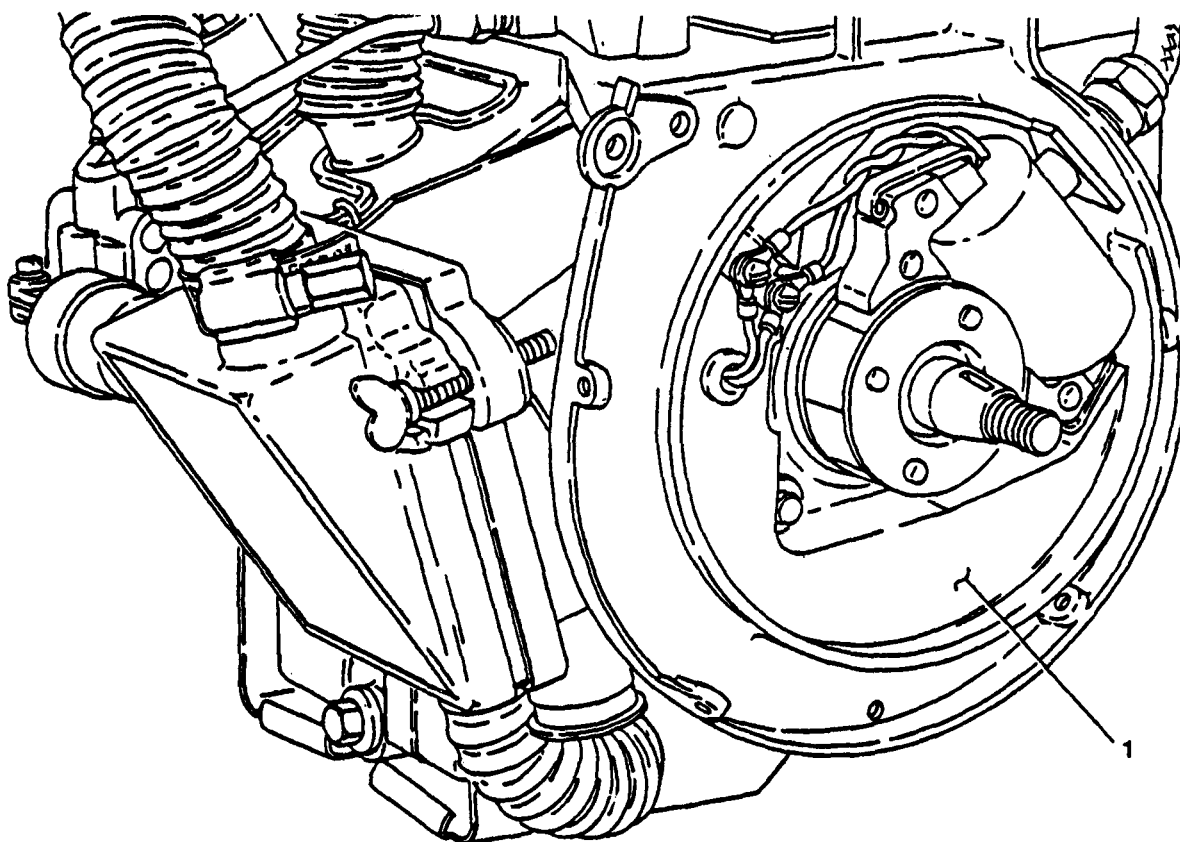

4866-039

Figure 4-36. Bearing Cap Inspection.

## Section VI. PREPARATION FOR SHIPMENT OR STORAGE

Paragraph		Page
4-42	General . . . . .	4-75
4-43	Short Term and Intermediate Storage Procedures . . . . .	4-75
4-44	Administrative Storage . . . . .	4-75

4-42. **General.** This section contains procedures to place the engine into either short term or intermediate storage.

### NOTE

The procedures for placing the engine into either short term or intermediate storage are the same.

4-43. **Short Term and Intermediate Storage Procedures.**

- a. Perform operator Before and After and Unit PMCS.
- b. Remove end item fuel supply.
- c. Drain fuel system.
- d. Drain engine oil.
- e. Secure fuel filter and starter rope to engine.

4-44. **Administrative Storage.**

- a. Placement of equipment in administrative storage should be for short periods of time when a shortage of maintenance effort exists. Items should be in mission readiness within 24 hours or within the time factors determined by the directing authority. During the storage period appropriate maintenance records will be kept.
- b. Before placing equipment in administrative storage, current maintenance services and equipment serviceable criteria (ESC) evaluations should be corrected, and all modification work orders (MWO'S) should be applied.
- c. Storage site selection. Inside storage is preferred for items selected for administrative storage. If inside storage is not available, trucks, vans, conex containers and other containers maybe used.

## CHAPTER 5

### DIRECT SUPPORT MAINTENANCE INSTRUCTIONS

	Page
OVERVIEW . . . . .	5-1
Section I. Repair Parts; Special Tools; Test, Measurement, Diagnostic Equipment (TMDE); and Support Equipment . . . . .	5-1
Section II. Direct Support Troubleshooting . . . . .	5-2
Section III. Direct Support Maintenance Procedures . . . . .	5-5

#### OVERVIEW

This chapter contains information for troubleshooting and maintenance of the engine by Direct Support Maintenance personnel.

#### Section I. REPAIR PARTS; SPECIAL TOOLS; TEST, MEASUREMENT, DIAGNOSTIC EQUIPMENT (TMDE); AND SUPPORT EQUIPMENT

Paragraph	Page
5-1 Common Tools and Test Equipment.. . . .	5-1
5-2 Special Tools, TMDE, and Support Equipment . . . . .	5-1
5-3 Repair Parts . . . . .	5-1

**5-1. Common Tools and Equipment.** For authorized common tools and equipment, refer to the Modified Table of Organization and Equipment (MTOE) applicable to your unit.

**5-2. Special Tools, TMDE and Support Equipment.** For a listing of special tools, TMDE, and support equipment authorized for use on this equipment, refer to the Repair Parts and Special Tools List, TM 5-2805-256-24P, and the maintenance allocation chart (MAC), appendix B of this manual.

**5-3. Repair Parts.** Repair parts are listed and illustrated in the Repair Parts and Special Tools List for 1 1/2 HP Military Standard Engine TM 5-2805-256-24P.

#### Section II. DIRECT SUPPORT TROUBLESHOOTING

Paragraph	Page
5-4 General . . . . .	5-2
5-5 Direct Support Troubleshooting Procedures . . . . .	5-2



5-4. **General.** This section contains troubleshooting procedures to determine the probable cause of observed equipment malfunctions. Test or inspections are provided to isolate the faulty component and corrective actions are provided to eliminate the malfunction.

5-5. **Direct Support Troubleshooting Procedures.** Table 5-1 lists the common malfunctions that may be found during operation. Refer to symptom index to locate the troubleshooting procedures for the malfunction. This manual cannot list all malfunctions that may occur, nor all test or inspections and corrective actions. If a malfunction is not corrected by listed corrective actions, notify your supervisor.

SYMPTOM INDEX

Symptom	Page
Engine will not start . . . . .	...5-2
Engine misses or runs erratically . . . . .	...5-2
Engine oil consumption excessive . . . . .	...5-3
Engine runs excessively noisy . . . . .	...5-3
Engine will not start or runs erratically (model 1A08-4) . . . . .	5-4

Table 5-1. Direct Support Troubleshooting Procedures.

Malfunction
Test or Inspection
Corrective Action

1. ENGINE FAILS TO START.

Step 1. Measure breaker point ignition coil primary windings between noise suppression filter and engine ground, and compare reading with manufacturer's specification (para. 5-20).

Replace a defective coil (para. 5-20).

Step 2. Remove high tension cable from spark plug and measure breaker point ignition coil secondary winding resistance between spring end of cable and engine ground, and compare reading with manufacturer's specification (para. 5-20).

Replace a defective coil (para. 5-20).

2. ENGINE MISSES OR RUNS ERRATICALLY,

Step 1. Check ignition timing (para. 5-9).

Adjust ignition timing (para 5-9).

Table 5-1. Direct Support Troubleshooting Procedures (cont).

Malfunction	Test or Inspection	Corrective Action
	Step 2. Check valve adjustment.	Adjust valves as needed (para. 5-16).
	Step 3. Inspect and test coil (para. 5-20).	Replace defective coil (para. 5-20).
	Step 4. Check for cracked cylinder head and or leaky gasket.	Replace cracked or otherwise damaged cylinder head, para. 5-14.
	Step 5. Check intake and exhaust valve for damage or excessive wear.	Replace damaged valve (para. 5-17).
	Step 6. Check piston and piston rings for damage or excessive wear.	Replace damaged or worn piston or rings (para. 5-18).
3. ENGINE OIL CONSUMPTION EXCESSIVE.		
	Step 1. Check crankshaft side oil seal for seepage or leakage.	Replace faulty crankshaft side oil seal (para 5-23).
	Step 2. Check flywheel side oil seal for seepage or leakage.	Replace faulty flywheel side oil seal (para 5-21).
	Step 3. Check piston and piston rings for wear.	Replace worn or damaged piston and piston rings (para. 5-18).
4. ENGINE RUNS EXCESSIVELY NOISY.		
	Step 1. Check valve mechanism for bent or otherwise damaged components.	Replace worn or damaged components (para 5-14).
	Step 2. Check connecting rod for wear.	Replace worn connecting rod (para 5-18).

Table 5-1. Direct Support Troubleshooting Procedures (cont).

Malfunction
Test or Inspection
Corrective Action

5. ENGINE WILL NOT START OR RUNS ERRATICALLY MODEL 1A08-4.

**NOTE**

The following procedures can be performed with either a digital or analog multimeter refer to figure 5-27 for wiring diagram of electronic ignition system.

Step 1. Check low and high voltage cable ends for looseness.

Tighten any loose connections.

Step 2. Remove high voltage cable from spark plug. Ground cable and hold spring approximately 1/4 in. (6 cm.) from engine. Pull start engine and check for spark.

If spark is present remove and inspect spark plug (para. 4-19).

Step 3. Remove ignition control unit cover and check for moisture or foreign material.

If moisture is present clean and dry terminals and connections and repeat step 2.

Step 4. Check low voltage cable end to end continuity.

If continuity is not present in all three lines replace low voltage cable (para. 5-13).

Step 5. Remove wiring from no. 1 terminal on ignition control unit module. Measure resistance between terminal no. 1 and ground.

If reading is less than 1 Megohm replace ignition module (para. 5-12).

Step 6. Remove wiring from terminals no. 5 and no. 6 and check resistance. Meter should show an initial deflection then a reading of 1 Megohm.

If final reading is not 1 Megohm then replace ignition control unit ignition module (para. 5-12).

Step 7. Check transformer resistance between white and brown wires.

If resistance is more than 1 ohm replace transformer (para. 5-11).

Table 5-1. Direct Support Troubleshooting Procedures (cont).

Malfunction	Test or Inspection	Corrective Action
	Step 8. Check transformer resistance between white wire and spring on end of high voltage cable.	
	If resistance is not between 1400 and 2500 ohms, replace transformer (para. 5-11).	
	Step 9. Check coil resistance between pins A and B of low voltage connector on engine.	
	If resistance is not between 289 and 329 ohms replace coil (para. 5-20).	

### Section III. DIRECT SUPPORT MAINTENANCE PROCEDURE

Paragraph	Page
5-6 General . . . . .	5-5
5-7 Oil Pan . . . . .	5-6
5-8 Governor Assembly . . . . .	5-8
5-9 Ignition Timing (Breaker Point Ignition). . . . .	5-16
5-10 Ignition Control Unit (Breakerless Ignition) . . . . .	5-18
5-11 Transformer (Breakerless Ignition) . . . . .	5-20
5-12 Ignition Module (Breakerless Ignition) . . . . .	5-22
5-13 Low Voltage Cable (Breakerless Ignition) . . . . .	5-24
5-14 Cylinder Head . . . . .	5-26
5-15 Rockers . . . . .	5-31
5-16 Valve Adjustment . . . . .	5-34
5-17 Intake and Exhaust Valves . . . . .	5-36
5-18 Piston and Connecting Rod Assembly . . . . .	5-38
5-19 Rotating Magnet . . . . .	5-43
5-20 Coil . . . . .	5-44
5-21 Flywheel Side Oil Seal . . . . .	5-46
5-22 Noise Suppression Filter (Breaker Point Ignition) . . . . .	5-48
5-23 Crankshaft Side Oil Seal . . . . .	5-50
5-24 Compression Test . . . . .	5-52

5-6. **General.** This section contains direct support maintenance procedures as authorized by the MAC in Appendix B of this manual. Table 5-2 located at the end of this section contains a list of engine components and their wear limits. Any item that does not meet the specified measurements must be replaced. Refer to Appendix E for torque values. All maintenance procedures require only one person to perform.

This task covers:

a.	Removal	b.	Installation
----	---------	----	--------------

## INITIAL SETUP

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)  
Wrench, Torque (NSN 5120-00-230-6380) (Item 3, Appendix B)

### Materials/Parts

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, appendix D)  
Gasket, Oil Pan Mounting (NSN 5330-00-797-3514)

a. Removal. (figure 5-1)

- (1) Remove either drain plug (1) or (2) and drain oil into suitable container.
- (2) Remove lower air duct (para. 4-15).
- (3) Remove eight screws (3) and washers (4) and remove oil pan (5) and gasket (6).


## WARNING

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (4) Clean oil pan (5) and drain plug (1) or (2) with dry cleaning solvent and dry thoroughly.
- (5) Inspect oil pan and drain plugs for signs of damage. Replace as needed.
- (6) Replace washer (7) on drain plug (1) or (2).
- (7) Clean gasket surfaces and remove old gasket material.

b. Installation. (figure 5-1)

- (1) Install oil pan (5) and gasket (6) and secure with eight screws (3) and washers (4). Torque screws to 25-30 in. lbs. (4465-5358 gr. cm.).
- (2) Install drain plug (1) or (2) with washer (7).
- (3) Install lower air duct (para. 4-15).
- (4) Refill engine oil. Refer to LO 9-2805-256-12.

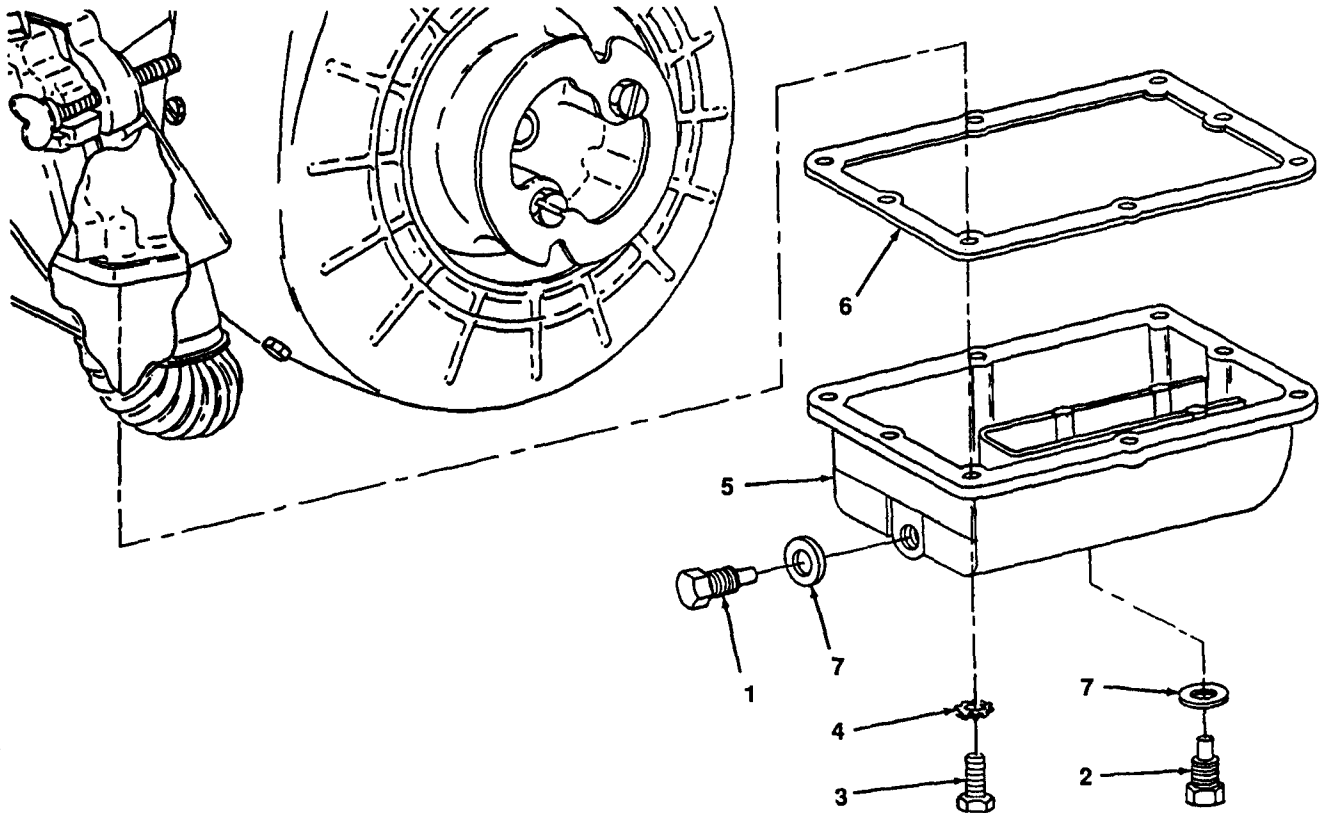

4866-040

Figure 5-1. Oil Pan Removal and Installation.

5-8. Governor Assembly.

---

This task covers:	a. Removal	c. Repair (breaker point ignition)
	b. Repair (breakerless ignition)	d. Installation

---

INITIAL SETUP

Tools	Materials/Parts (cont)
General Mechanic's Tool Kit (Item 1, Appendix B)	Gasket, Throttle Housing, Front (P/N 9786E64-6)
	Gasket, Throttle Housing, Rear (P/N 9786E65-3)
Materials/Parts	Gasket, Throttle Housing to Carburetor (P/N 9786E65-4)
Rags, Wiping (Item 6, Appendix D)	
Solvent, Drycleaning (Item 7, Appendix D)	

---

- a. Removal. (figure 5-2)
- (1) Loosen clamp (1) and remove control rod housing (2) from throttle housing (3).
  - (2) Remove two screws (4) and washers (5) securing throttle housing cover (6) and gasket (7) and remove.
  - (3) Remove screw (8) and washer (9) securing throttle lever (10) to throttle rod (11) and remove.
  - (4) Remove two screws (12) and washers (13) and remove throttle housing (3) gasket (14) rear cover (15) and gasket (16).

NOTE


Step 5 is for engines with breaker point ignition.

- (5) Tag and remove condenser lead (17) from noise suppression filter (18).

NOTE

On engines with breaker point ignitions make note of grounding strap placement before removing screws securing governor assembly.

- (6) Remove three screws (19) and washers (20) securing governor assembly (21) and gasket (22) and remove.
- (7) Remove old gasket from mating surfaces.

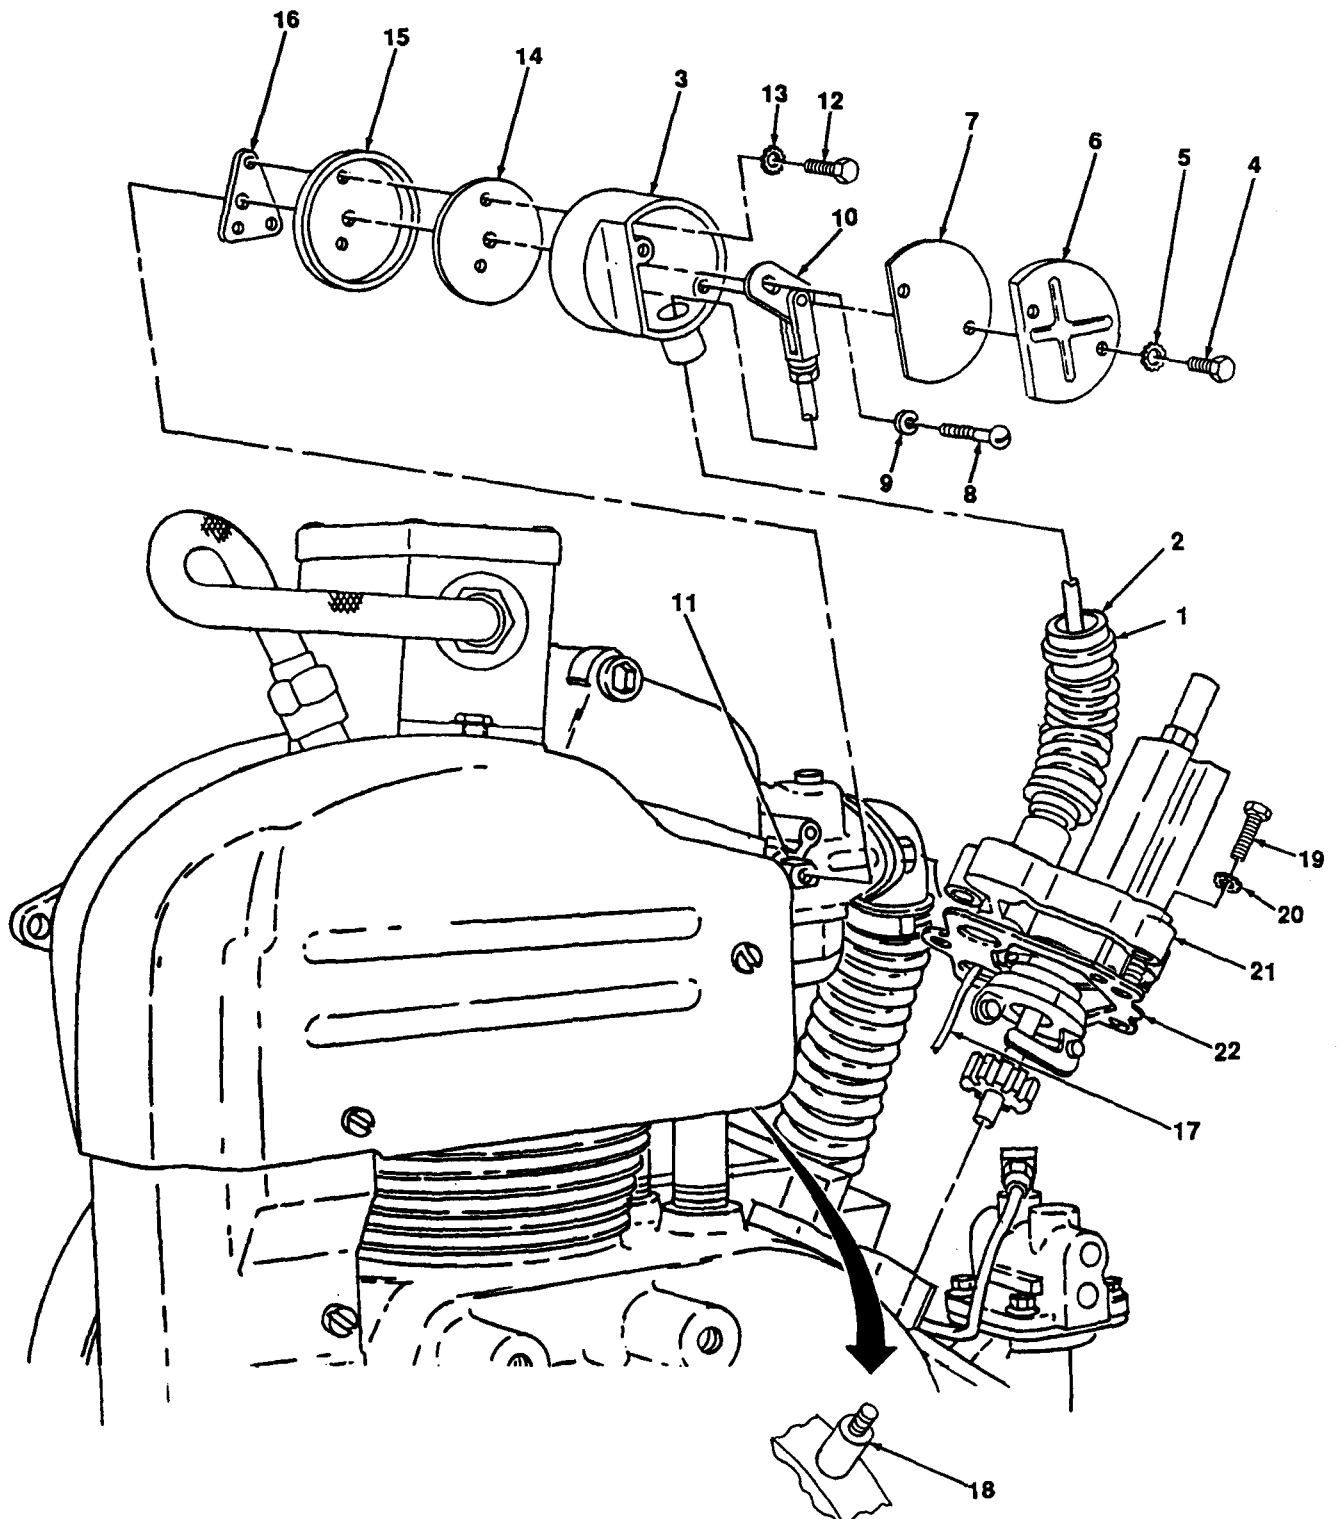

4866-041

Figure 5-2. Governor Assembly Removal.



## 5-8. Governor Assembly (cont).


### *b. Repair Breakerless Ignition.* (figure 5-3)

- (1) Using suitable punch, remove pin (1) and remove flyweight carrier assembly (2) from shaft (3).

### **WARNING**

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (2) Clean flyweight carrier assembly (2) with drycleaning solvent and dry thoroughly.
- (3) Inspect flyweight carrier assembly (2) and replace if worn, cracked or otherwise damaged.
- (4) Install flyweight carrier assembly (2) on shaft (3) and secure with pin (1).

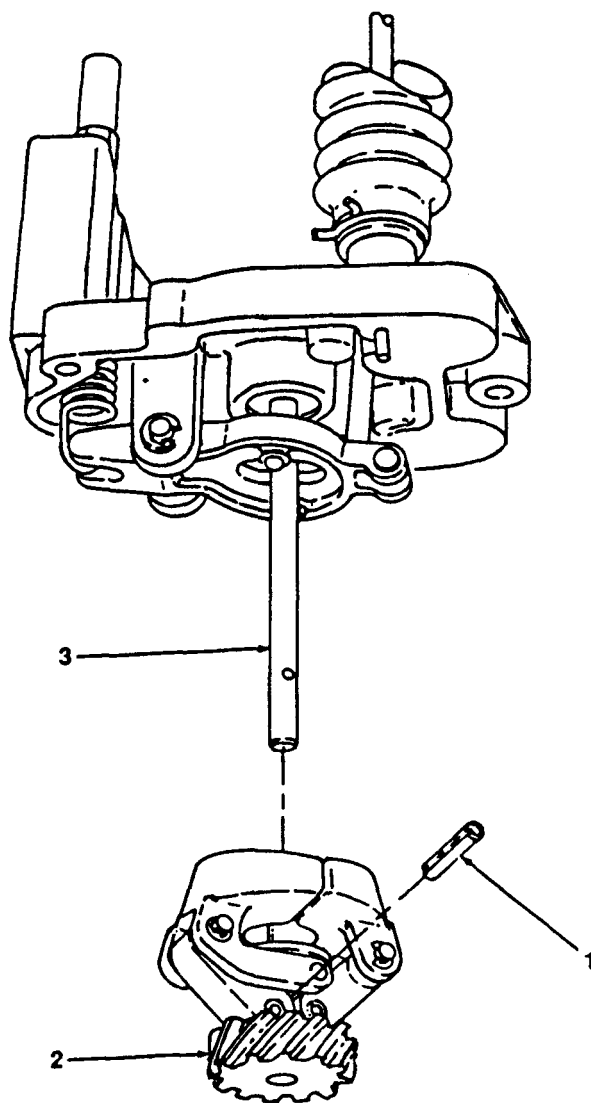

4866-076

Figure 5-3. Governor Repair Breakerless Ignition.

5-8. **Governor Assembly (cont).**


c. Repair. Breaker Point Ignition. (figure 5-4)

- (1) Using suitable punch, remove pin (1), and remove flyweight and carrier assembly (2).

**WARNING**

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (2) Clean flyweight and carrier assembly (2) in drycleaning solvent and dry thoroughly.
- (3) Inspect flyweight and carrier assembly (2) and replace if worn, cracked or otherwise damaged.
- (4) Install flyweight and carrier assembly (2) on shaft (3) and secure with pin (1).

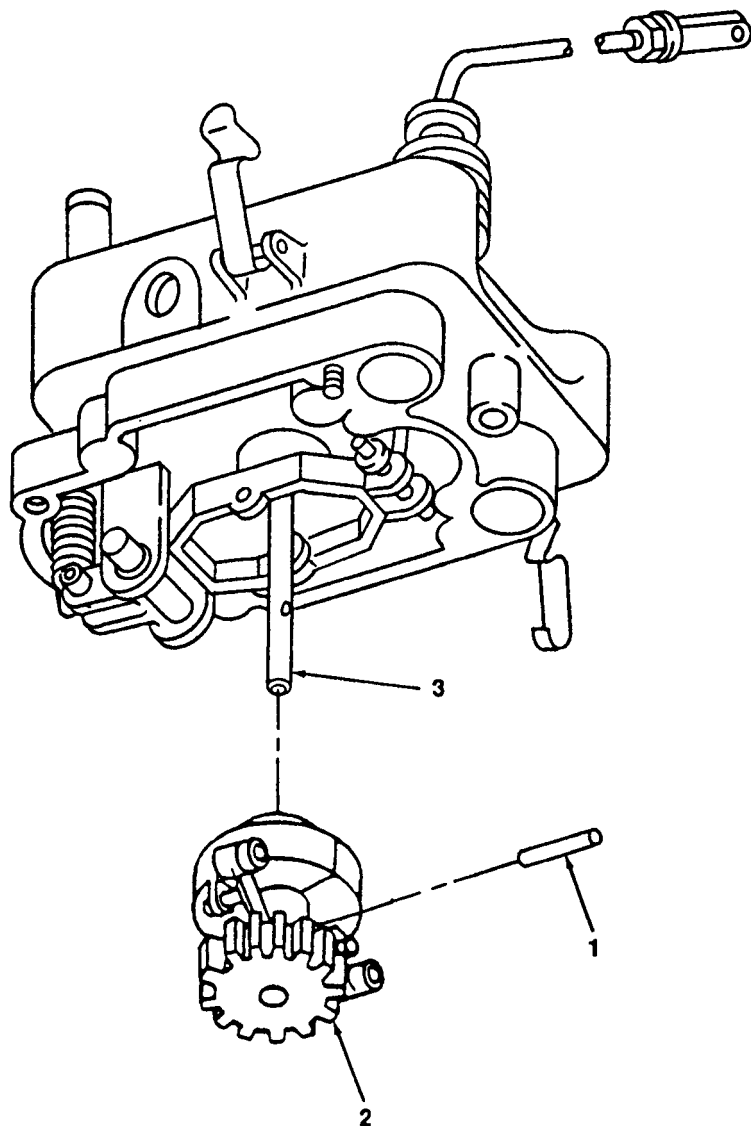

4866-048

Figure 5-4. Governor Repair Breaker Point Ignition.


## 5-8. Governor Assembly (cont).

d. Installation. (figure 5-5)

### NOTE

Steps 1 and 3 are for engines equipped with breaker point ignition.

- (1) Install ground strap on mounting screw (19).
- (2) Install governor assembly (21) and gasket (22) and secure with screws (19) and washers (20).
- (3) Connect condenser lead (17) to noise suppression filter (18).
- (4) Install gasket (16), rear cover (15), gasket (14), and throttle housing (3) and secure with two screws (12) and washers (13).
- (5) Position throttle lever (10) on throttle rod (11) and secure with two screws (12) and washers (13).
- (6) Install throttle housing cover (6) and gasket (7) and secure with two screws (4) and washers (5).
- (7) Install control rod housing (2) on throttle housing (3) and secure with clamp (1).

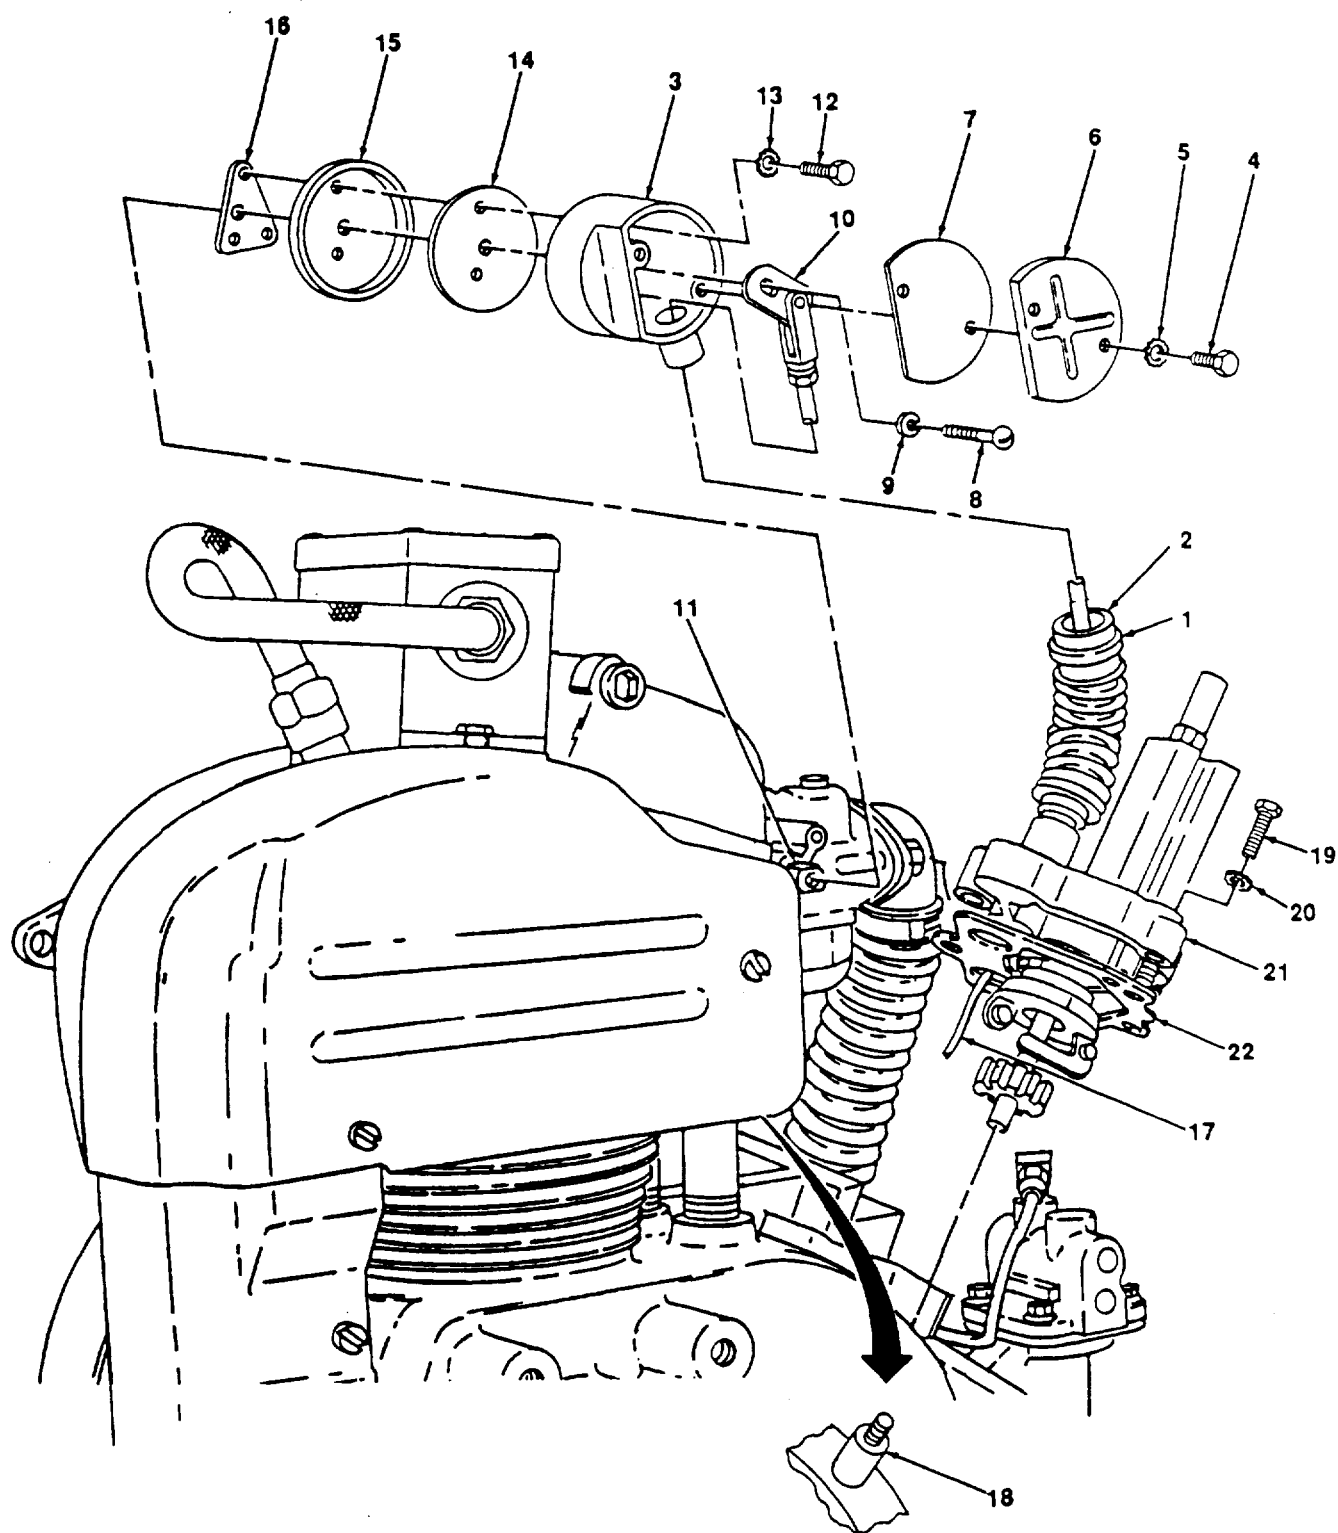

4866-076

Figure 5-5. Governor Assembly Installation.

## 5-9. Ignition Timing (Breaker Point Ignition).

---

This task covers:      Adjustment


### INITIAL SETUP

<i>Tools</i>	<i>Equipment Condition</i>
General Mechanic's Tool Kit (Item 1, Appendix B)	Breaker point gap set (para. 4-30). Rocker cover removed (para. 4-25).

---

### Adjustment. (figure 5-6)

- (1) Unsnap two clips (1) and move breaker point cover (2) out of way.
- (2) Loosen screw (3) and move ignition timing hole cover (4) to expose timing hole.
- (3) Rotate flywheel clockwise until exhaust valve (5) closes, and stop when ignition timing mark on the flywheel aligns with pointer.
- (4) At this point the breaker points contacts (6) should just be starting to open. If they are not loosen screw (7) and turn ignition cam (8) counterclockwise until contacts (6) just start to open and tighten screw (7).
- (5) Close ignition timing hole cover (4) and tighten screw (3).
- (6) Install breaker points cover (2) and secure with two clips (1).

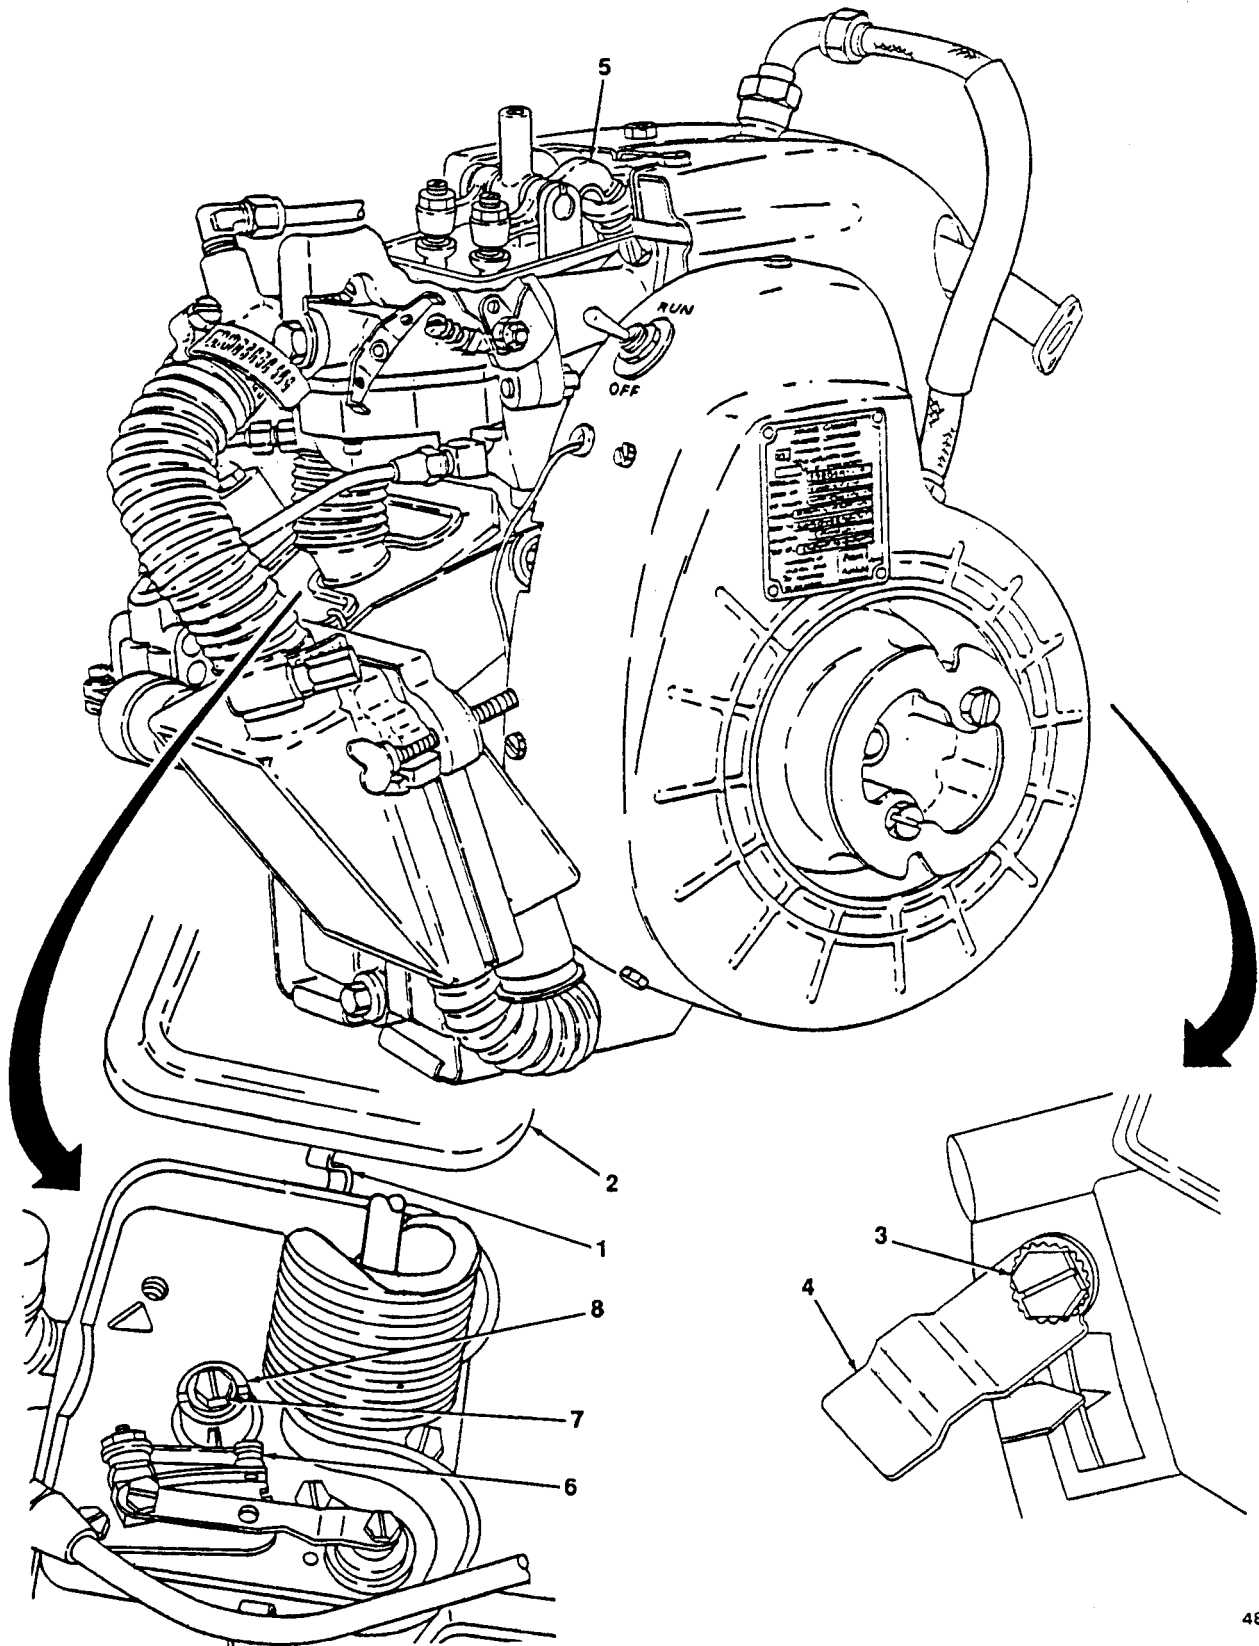

4866-042

Figure 5-6. Ignition Timing.



### 5-10. Ignition Control Unit (Breakerless Ignition).

This task covers:      a. Removal                                      b. Installation

## INITIAL SETUP

## Tools


General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 5-7)

- (1) Disconnect low voltage cable (1) from ignition control unit (2).
- (2) Loosen connector nut (3) and remove ignition cable (4) from ignition control unit (2).
- (3) Remove screw (5) and washer (6).
- (4) Loosen screw (7) and remove ignition control unit (2).

b. Installation. (figure 5-7)

- (1) Install ignition control unit (2) and secure with screw (7), and screw (5) and washer (6).
- (2) Connect low voltage cable (1) to ignition control unit (2).
- (3) Install ignition cable (4), and tighten connector nut (2).

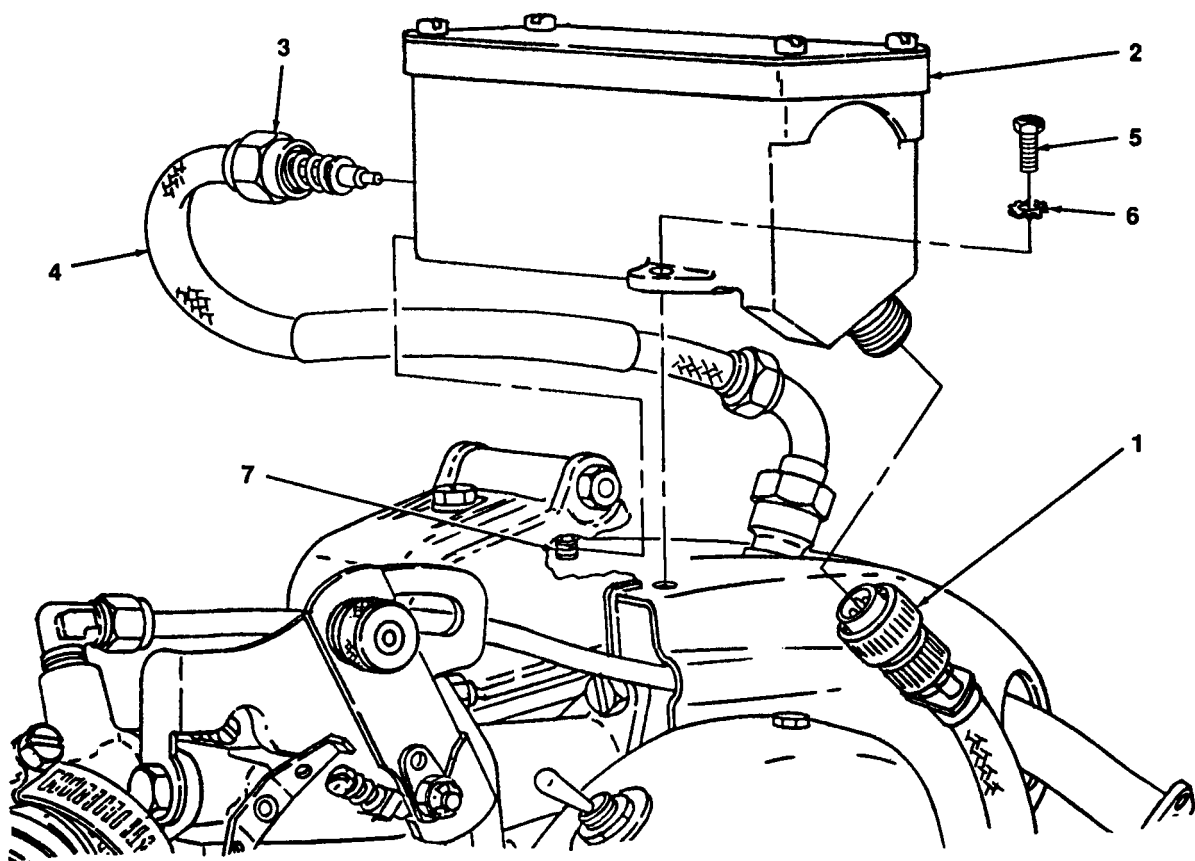

4866-044


Figure 5-7. Ignition Control Unit Removal and Installation.

## INITIAL SETUP

General Mechanic's Tool Kit (Item 1, Appendix B)

- (1) Remove four screws (1) and remove cover (2).
- (2) Tag and remove transformer leads from ignition control unit (3).
- (3) Loosen connector nut (4) and remove ignition cable (5) from ignition control unit (3)
- (4) Remove nut (6) and remove transformer (7) and O ring (8).
- (5) Inspect O ring **(6)** and replace if ripped or other wise damaged.

- (1) Install transformer (7) and O ring (8) and secure with nut (6).
- (2) Connect transformer leads as tagged.
- (3) Install cover (2) and secure with four screws (1).
- (4) Install ignition cable (5) and tighten connector nut (4).

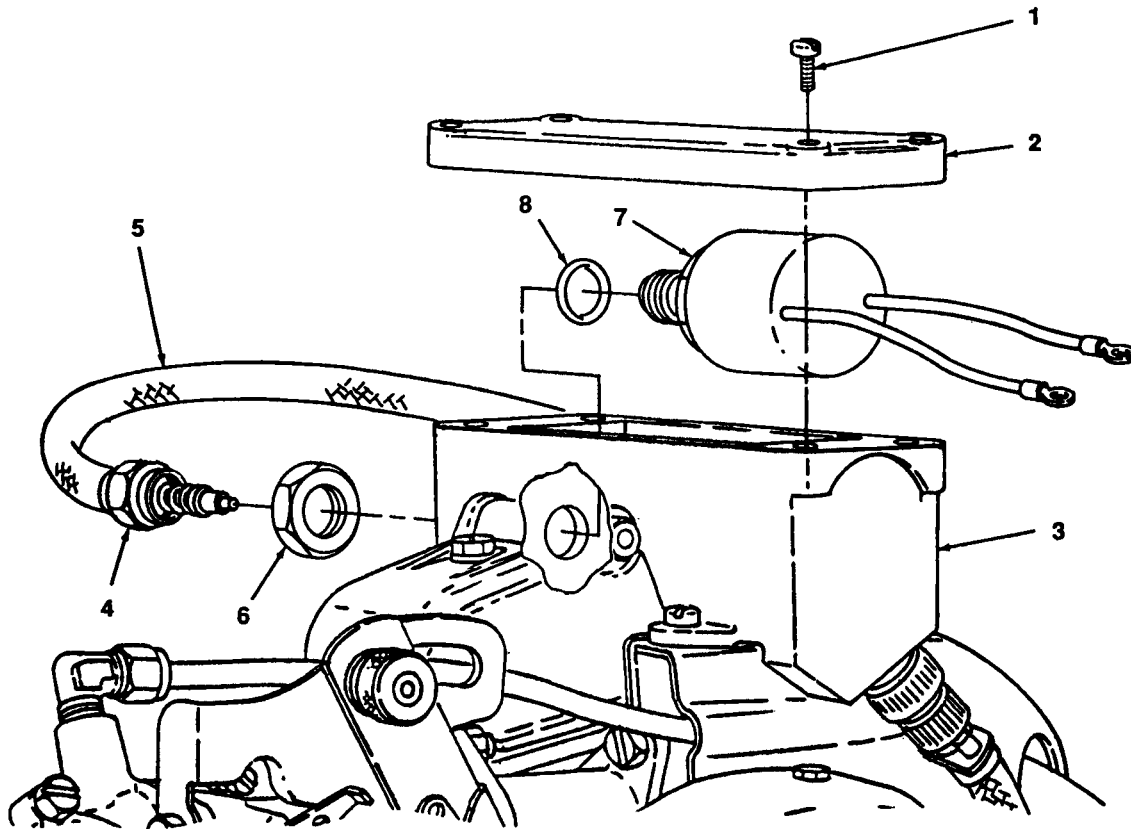

4866-045

Figure 5-8. Transformer Removal and Installation.

This task covers:      a. Removal                                      b. Installation

## INITIAL SETUP

## Tools

General Mechanic's Tool Kit (Item 1, Appendix B)

a. Removal. (figure 5-9)


- (1) Remove four screws (1) and remove cover (2).
- (2) Tag and remove wiring from terminals on ignition module (3).
- (3) Tag wiring secured by ignition module mounting hardware.
- (4) Remove two screws (4) and washers (5) and remove ignition module (3).

b. Installation. (figure 5-9)

### NOTE

Install wiring as tagged to ignition module mounting screws before installing screws.

- (1) Install ignition module (3) and secure with two screws (4) and washers (5).
- (2) Connect wiring to ignition module terminals as tagged.
- (3) Install cover (2) and secure with four screws (1).

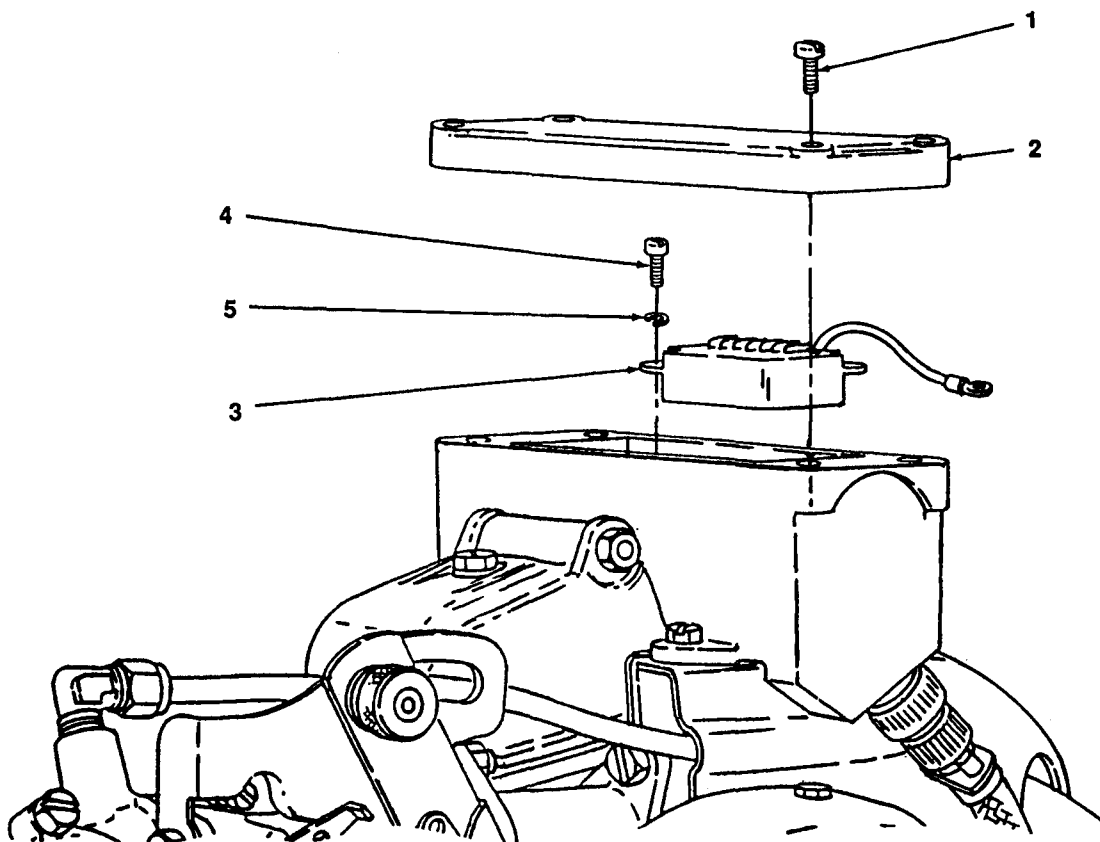

4866-046

*Figure 5-9. Ignition Module Removal and Installation.*

This task covers:      a. Removal      b. Installation

## INITIAL SETUP

## Tools

### Equipment Condition

General Mechanic's Tool Kit (Item 1, Appendix B)

Flywheel Removed (para. 4-38)

a. Removal. (figure 5-10)

- ## WARNING

(2) Remove two coil clamps (5), tag and disconnect connectors and remove coil (6).

- (3) Disconnect low voltage cable (7) from ignition control unit (8).

- (4) Loosen connector nut (9) and remove low voltage cable (7).

b. Installation. (figure 5-10)


- (1) Route low voltage cable leads through bearing cap (4) and tighten connector nut (9).

- (2) Connect low voltage cable (7) to ignition control unit (8).

- (3) Feed wire through bearing cap (4) and secure wire to bearing cap with clamp (3), screw (1) and washer (2).

- (4) Connect coil leads as tagged.

- (5) Install coil (6) and secure with two clamps (5).

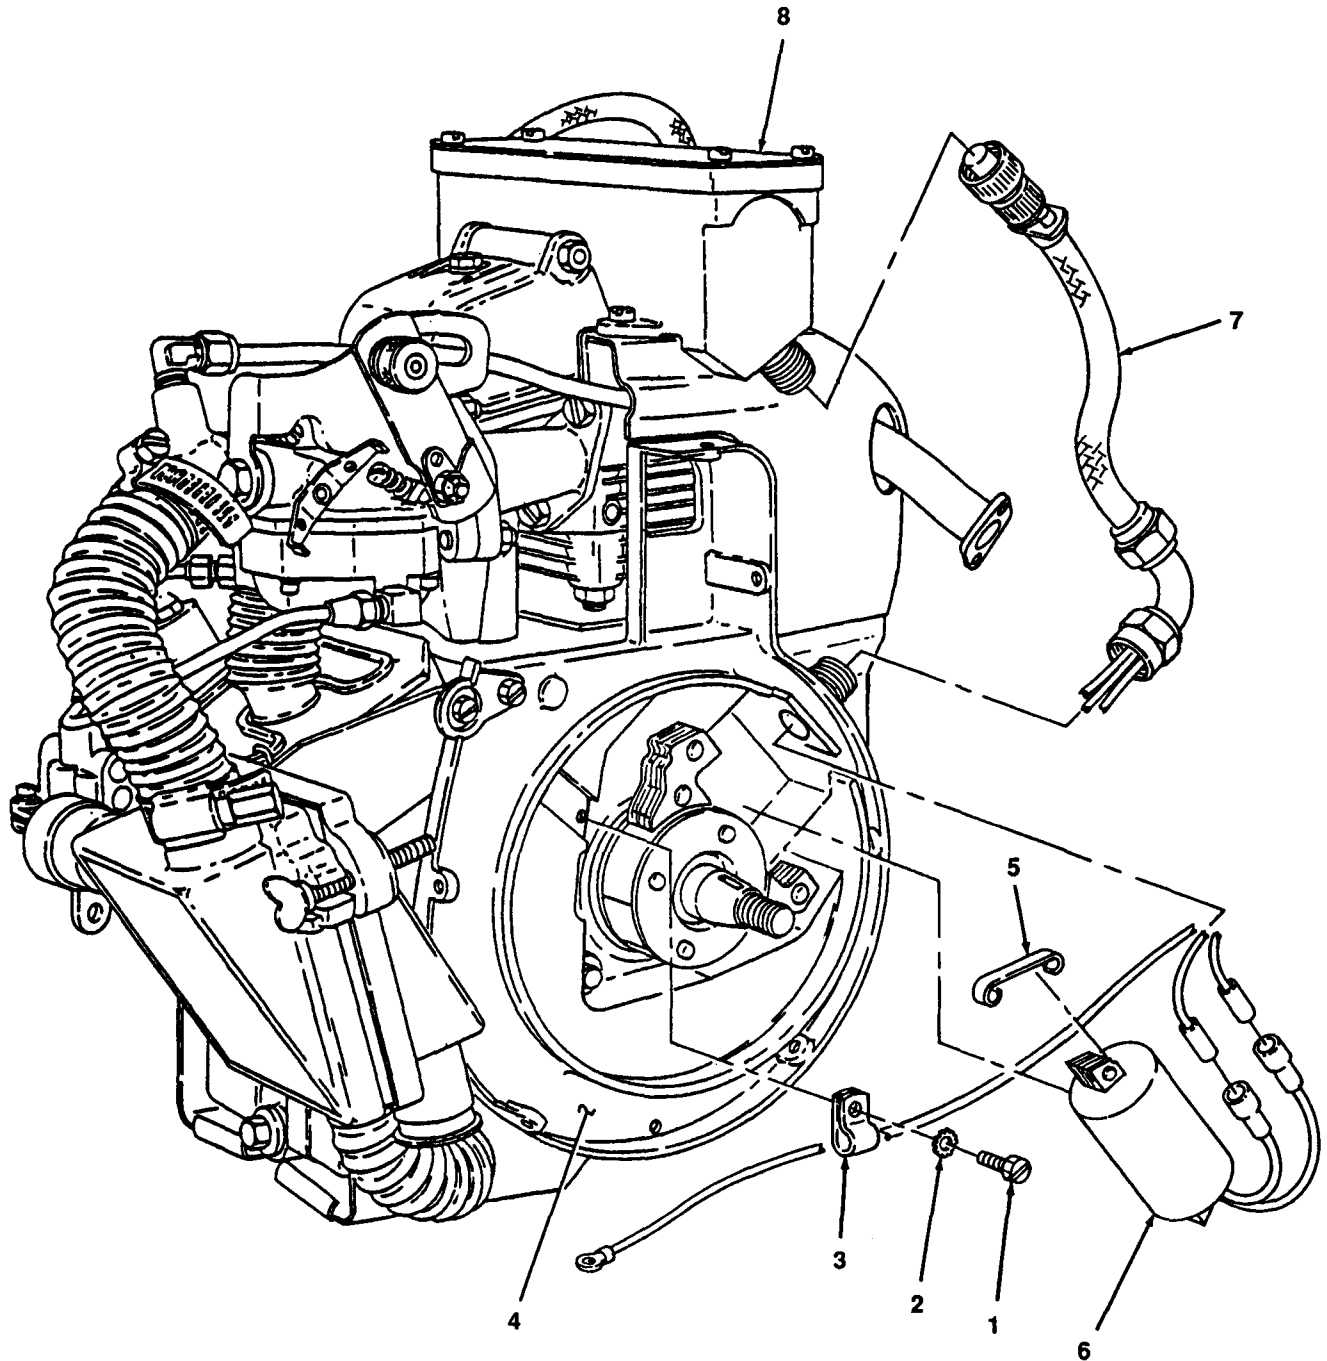

4886-047

Figure 5-10. Low Voltage Cable Removal and Installation.



---

## 5-14. Cylinder Head.

---

This task covers:      a. Removal                      b. Repair                      c. Installation

---

### INITIAL SETUP

#### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
 Wrench, Torque (NSN 5120-00-230-6380) (Item 3, Appendix B)  
 Compressor, Spring (NSN 5330-00-096-6677) (Item 3, Appendix B)

#### *Equipment Condition*

Spark plug removed (para. 4-19).  
 Breather line removed (para. 4-32).  
 Intake manifold removed (para. 4-39).  
 Exhaust manifold removed (para. 4-40).  
 Rocker cover removed (para. 4-25).  
 Flywheel cover removed (para. 4-16)

#### *Materials/Parts*

Rags, Wiping (Item 6, Appendix D)  
 Solvent, Drycleaning (Item 7, Appendix D)  
 Gasket, Cylinder Head Mounting (NSN 5330-00-819-8734)  
 Packing, Pushrod Housing (NSN 5330-00-797-3510)

---

### *a. Removal* (figure 5-11)

- (1) Turn flywheel clockwise until both valves are closed.
- (2) Remove four nuts (1) and washers (2) and remove cylinder head assembly (3) and gasket (4).
- (3) Remove push rods (5), push rod housings (6) rear cylinder cover (7) and preformed packings (8).

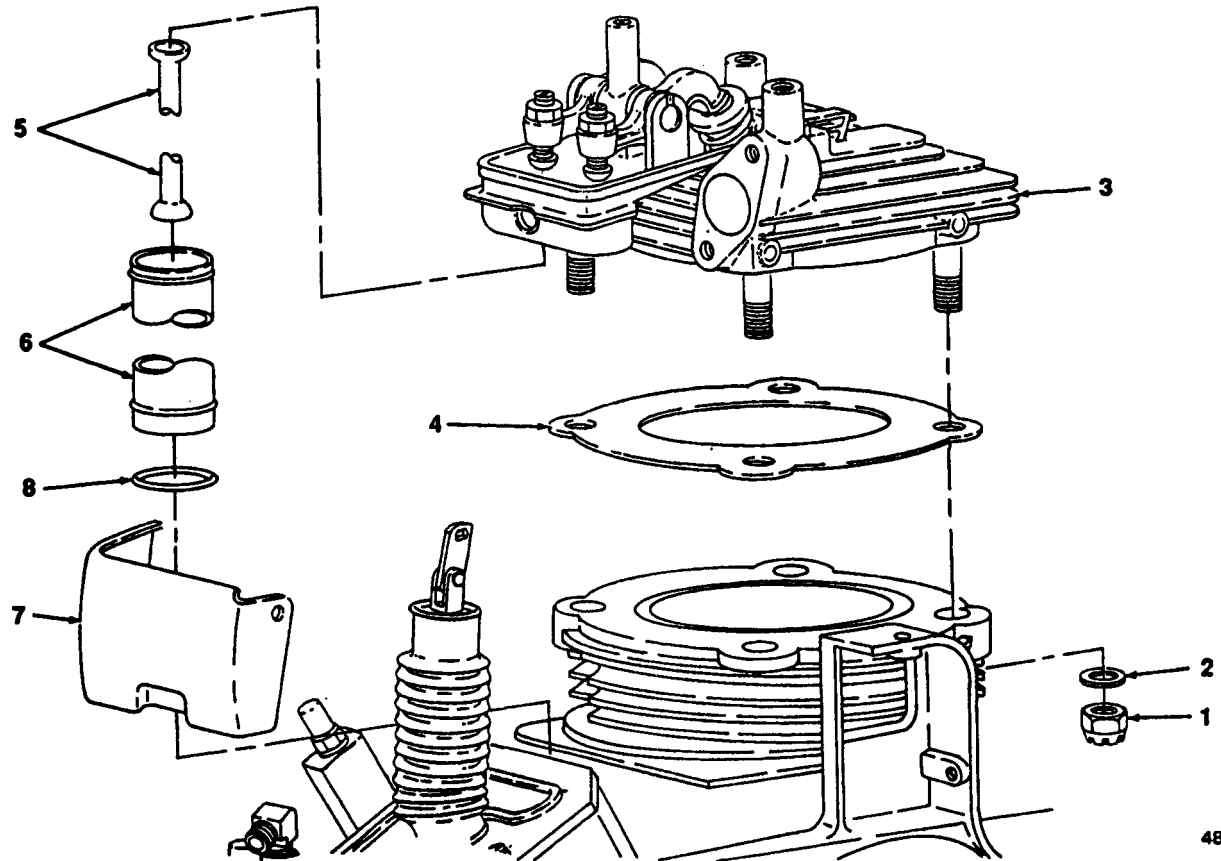


Figure 5-11. Cylinder Head Removal.


5-14. **Cylinder Head (cont).**

b. Repair. (figure 5-12)

**WARNING**

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (1) Clean cylinder head assembly with dry cleaning solvent and dry thoroughly.
- (2) Remove clip (1) and remove rocker shaft (2).
- (3) Remove two rocker arms (3) and take note of which rocker is for intake and exhaust.
- (4) Remove two push rod packing screws (4) and preformed packing (5).
- (5) Use spring compressor and remove two retainer halves (6), rotocap (7) exhaust valve (8) and spring (9).
- (6) Repeat step (5) for intake valve.
- (7) Inspect all components of cylinder head assembly. Replace any component of cylinder head assembly which shows signs of excessive wear or other damaged. Refer to Table 5-2 for wear limits.
- (8) Re-seat valves in cylinder head to ensure proper seal.
- (9) Install exhaust valve (8), spring (9), rotocap (7) and two retainer halves (6).
- (10) Use spring compressor and install two retainer halves (6).
- (11) Repeat steps 9 and 10 for intake valve.
- (12) Install two preformed packings (5) and push rod packing screws (4).
- (13) Install both rocker arms (3), rocker shaft (2) and clip (1).
- (14) Loosen two lock nuts (10) and unscrew adjusters (11) part way.

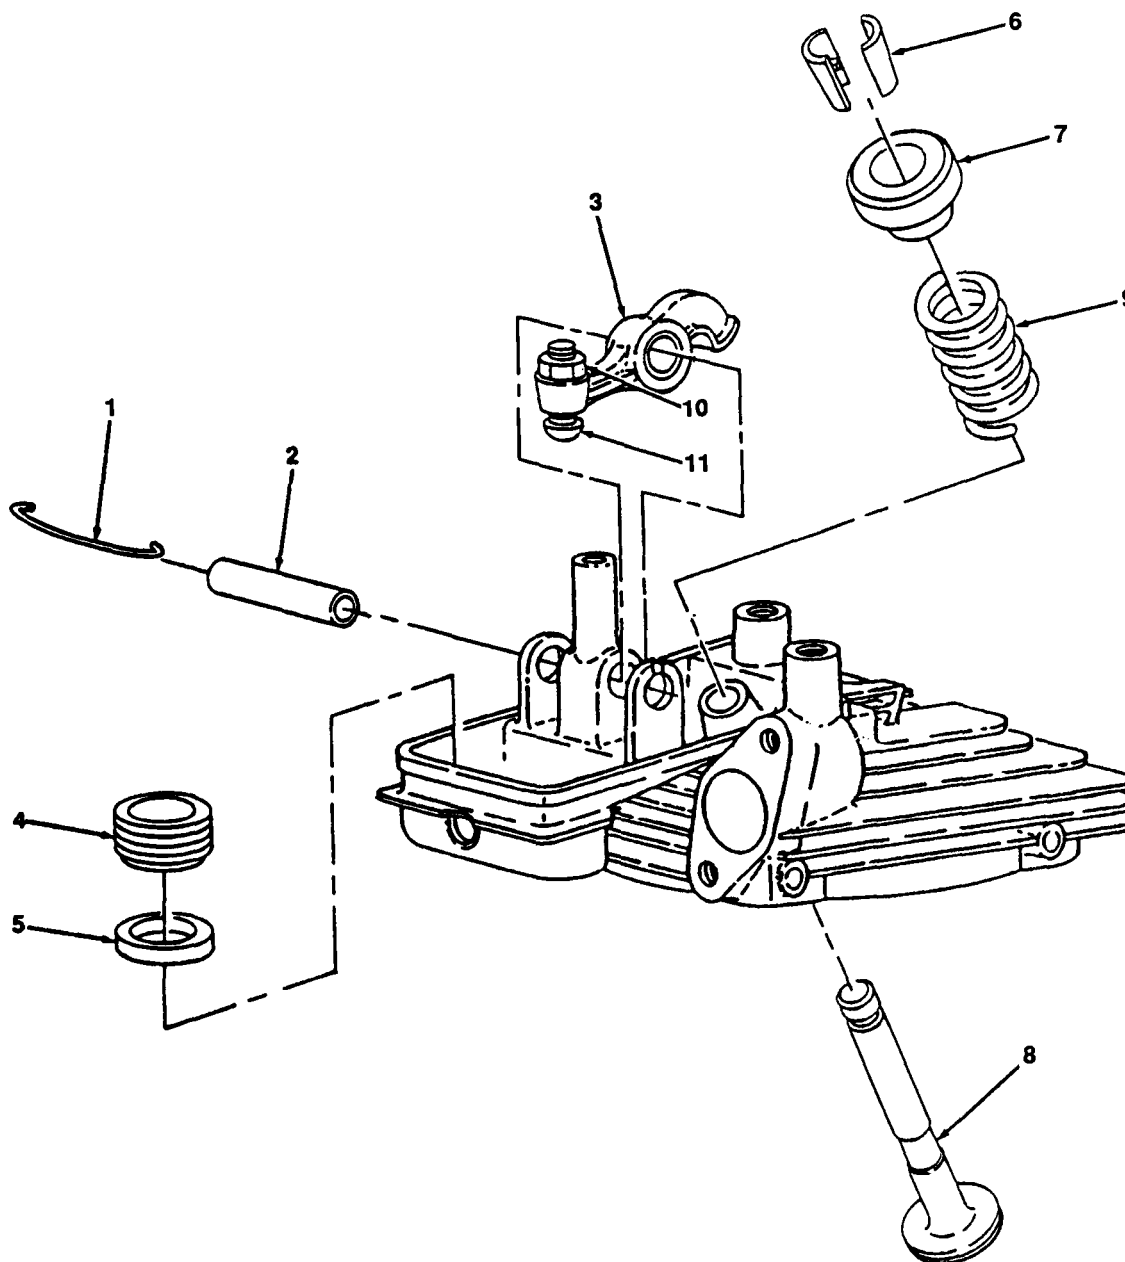

4866-051

Figure 5-12. Cylinder Head Assembly Repair.

## 5-14. Cylinder Head (cont).

c. Installation. (figure 5-13)

- (1) Install preformed packings (8), rear cylinder cover (7), push rod housings (6) and push rods (5).
- (2) Clean gasket surfaces before installing cylinder head assembly.
- (3) Install cylinder head assembly (3) and new gasket (4) and secure with four nuts (1) and washers (2).  
Torque nuts to 140 to 155 in. lbs (25000-27680 gr. cm).
- (4) Adjust valves (para. 5-16).

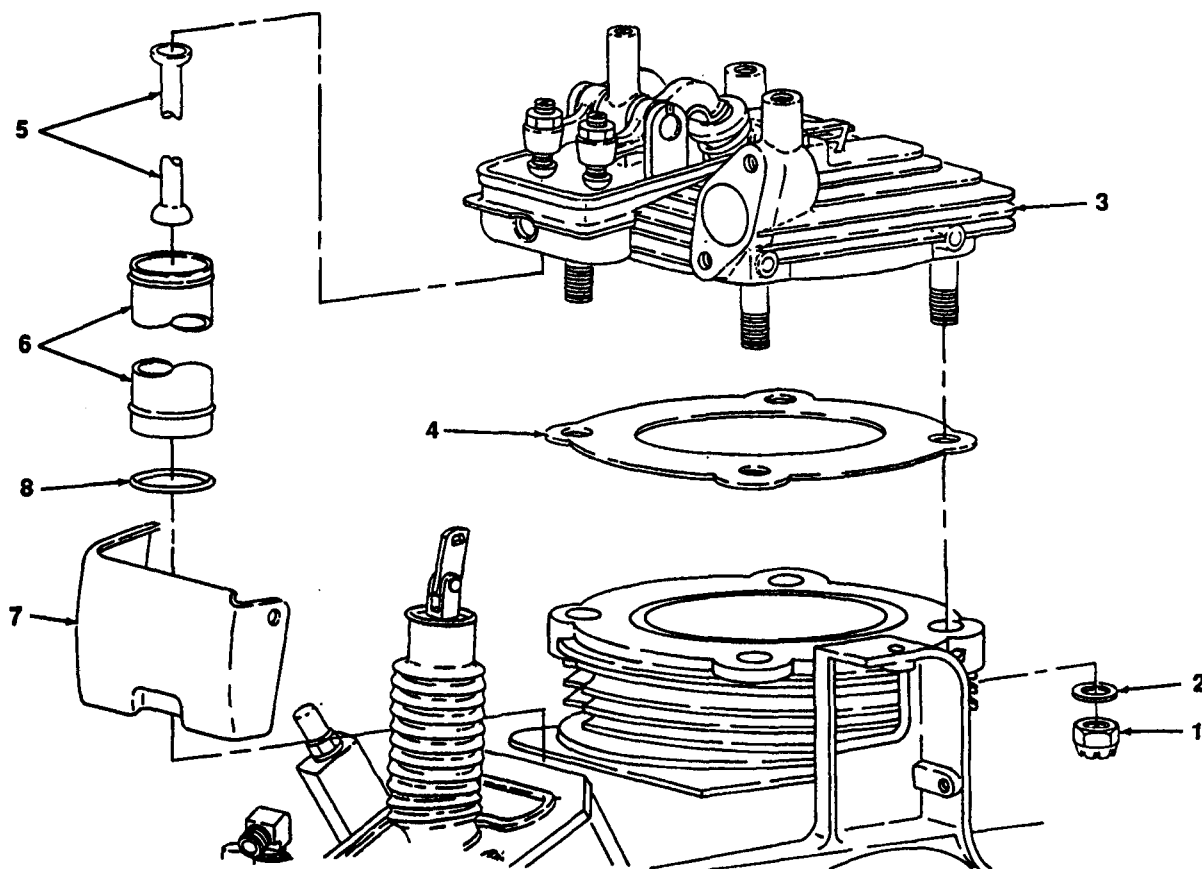


Figure 5-13. Cylinder Head Installation.

## 5-15. Rockers.

This task covers:      a. Removal                      b. Inspection                      c. Installation

### INITIAL SETUP:

#### Tools

General Mechanic's Tool Kit (Item 1, Appendix B)

#### Equipment Condition

Rocker cover removed (para. 4-25).

#### Materials/Parts

Rags, Wiping (Item 6, Appendix D)

Solvent, Drycleaning (Item 7, appendix D)

#### a. Removal. (figure 5-14)

- (1) Loosen locknut (1) on both rockers (2) and (3) and loosen adjusting screws (4) until rockers (2) and (3) are loose.
- (2) Remove clip (5) and remove rocker shaft (6).
- (3) Remove rockers (2) and (3) from cylinder head (7).

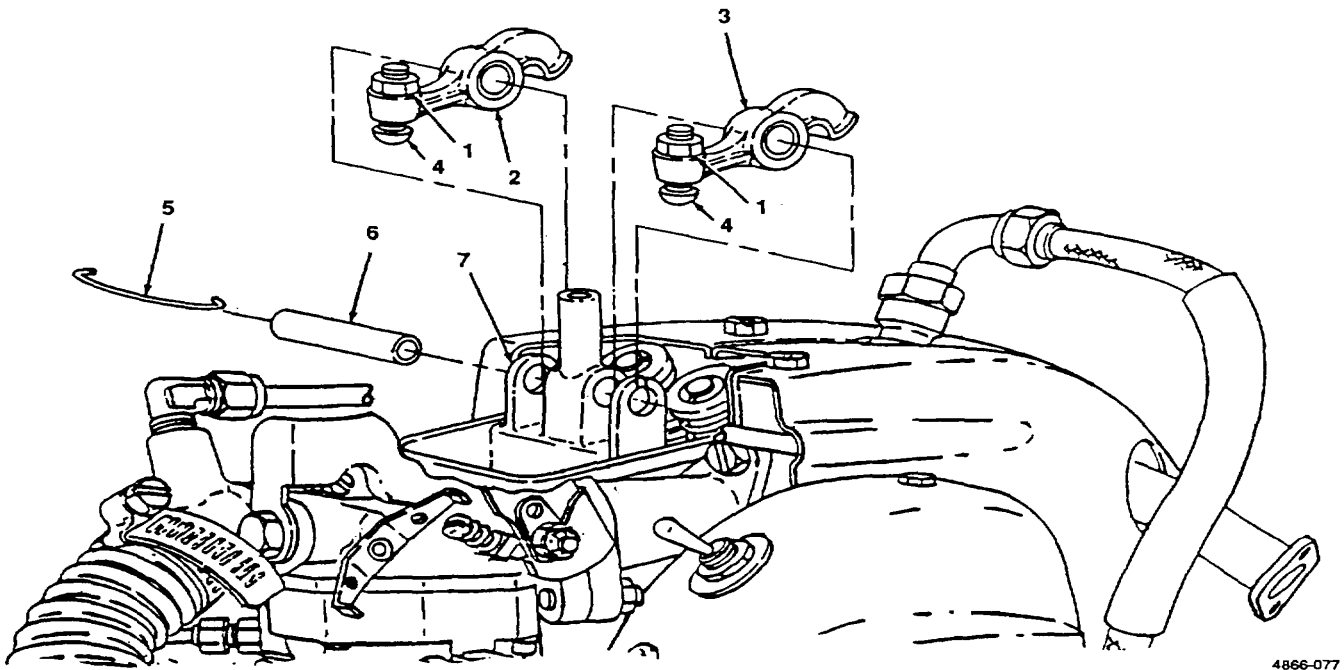


Figure 5-14. Rockers, Removal.

## 5-15. Rockers (cont).

b. Inspection. (figure 5-15)

### WARNING

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (1) Clean rockers in dry cleaning solvent and dry thoroughly.
- (2) Inspect rockers and rocker shaft for cracks or other signs of wear. Refer to Table 5-2 for wear limits.
- (3) Replace any component that is worn or otherwise damaged.

c. Installation. (figure 5-15)

- (1) Position rockers (2) and (3) in cylinder head (7) and on pushrods (8).
- (2) Install rocker shaft (6) and secure with clip (5) and finger tighten adjusting screws (4) until rockers (2) and (3) are snug.
- (3) Adjust valves (para. 5-16).

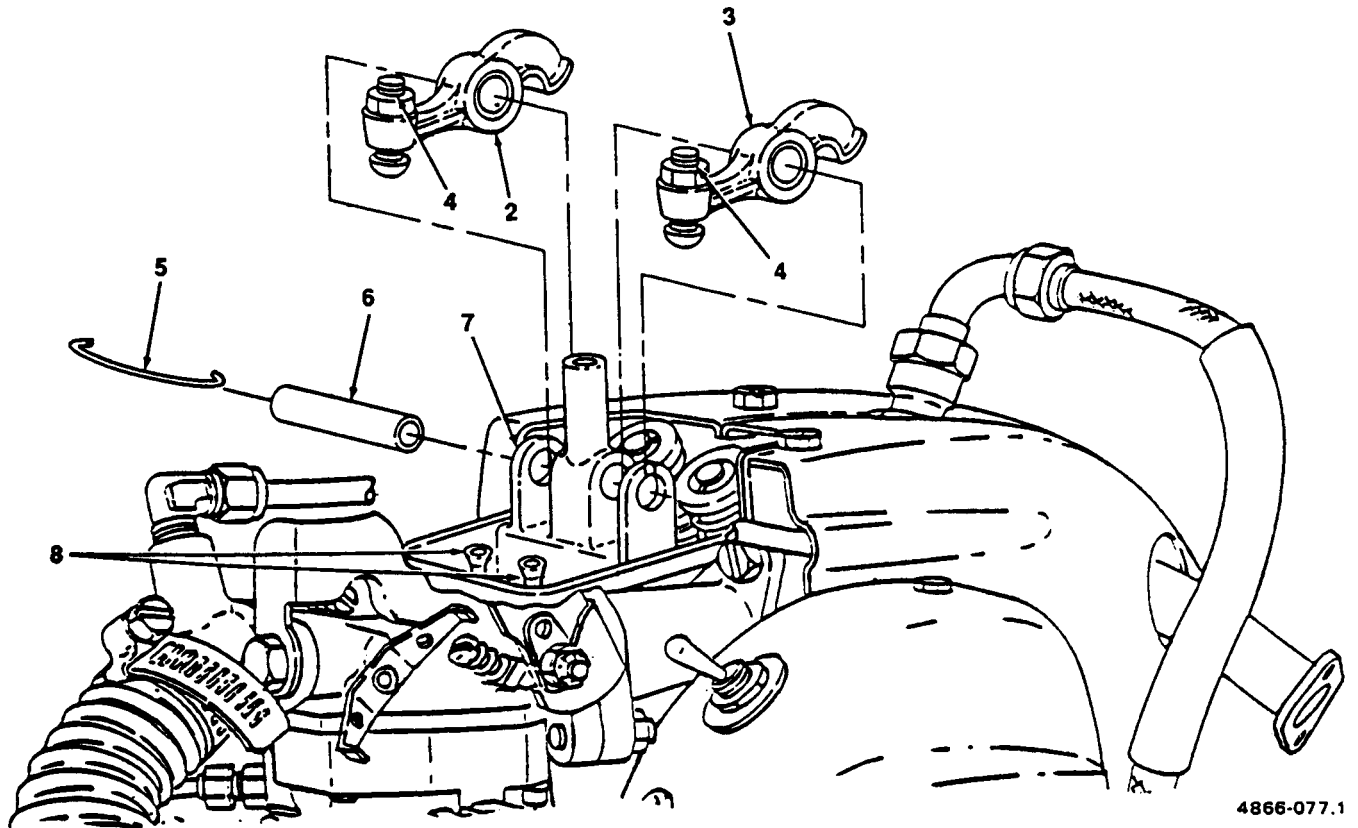


Figure 5-15. Rockers, Installation.



## 5-16. Valve Adjustment.

---

This task covers:      Adjustment

### INITIAL SETUP

#### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)


#### *Equipment Condition*

Engine cold.  
Rocker cover removed (para. 4-25).

---

### Adjustment. (figure 5-16)

- (1) Loosen screw (1) and move timing hole cover (2).
- (2) Rotate flywheel clockwise until both valves (3) close and stop when ignition mark on flywheel aligns with ignition timing pointer.
- (3) Measure valve clearance, correct measurement should be .007 to .009 in. (0.17 to .022 cm).
- (4) Loosen lock nut (4) and turn adjuster screw (5) until desired clearance is obtained and tighten lock nut (4),
- (5) Close timing hole cover (2) and tighten screw (1).

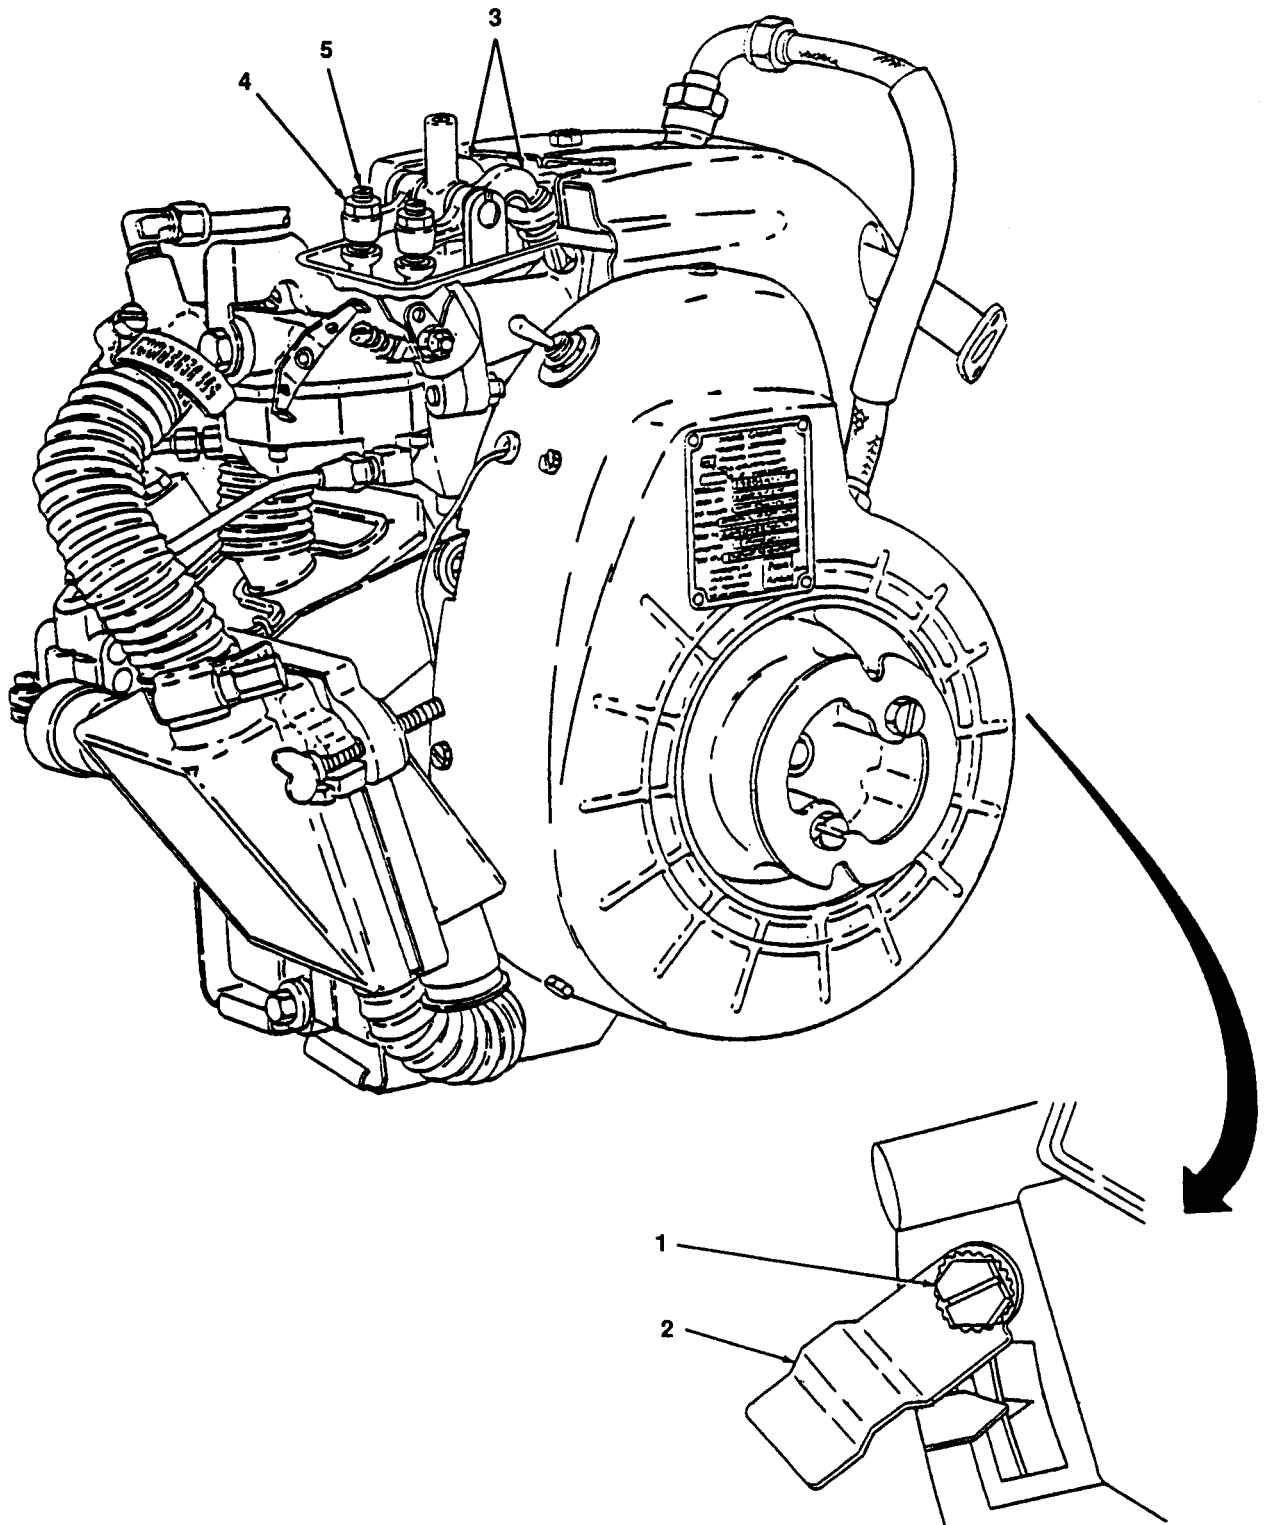

4866-053

Figure 5-16. Valve Adjustment.

## INITIAL SETUP


### Equipment Condition

Cylinder head assembly removed (para. 5-14).

### NOTE

- (1) Remove rocker shaft clip (1) and remove rocker shaft (2).
- (2) Remove rocker arm (3).
- (3) Using suitable valve spring compressor, compress valve spring (4) and remove two retainers (5), valve (6), spring (4) and rotacap (7).
- (4) Replace any damaged or defective parts. Refer to Table 5-2 for wear limits.

- (1) Install valve (6), spring (4), rotocap (7) in cylinder head (8).
- (2) Using suitable valve spring compressor compress spring (4) and install two retainers (5).
- (3) Install rocker arm (3), rocker shaft (2) and rocker shaft clip (1).

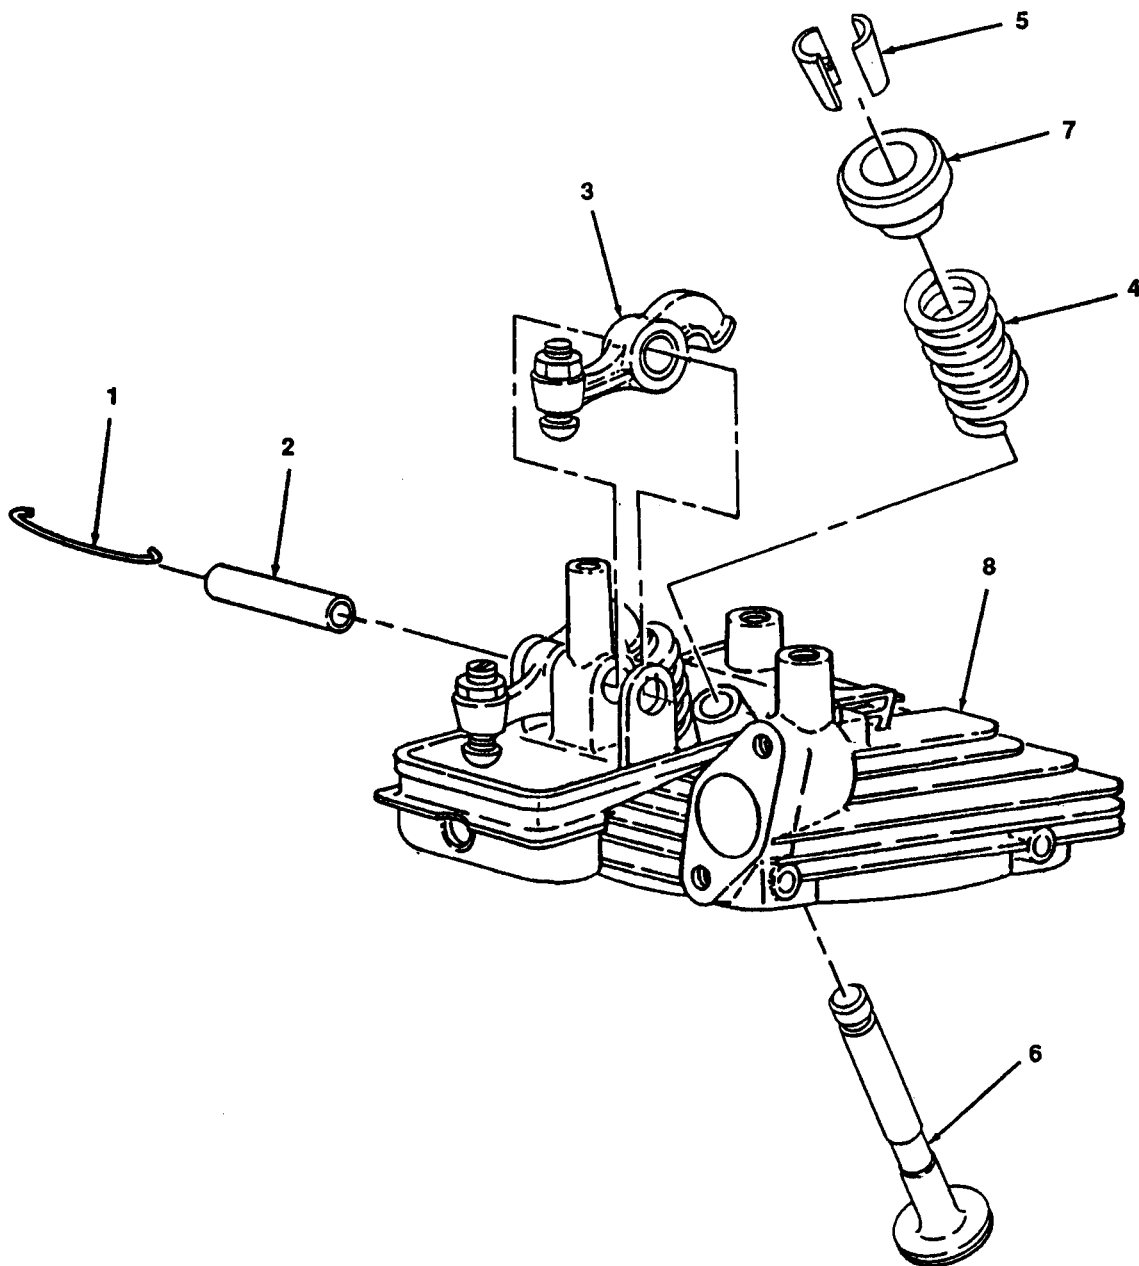

4866-068

Figure 5-17. Intake and Exhaust Valve Removal and Installation.

## 5-18. Piston and Connecting Rod Assembly.

---

This task covers:      a. Removal                      b. Repair                      c. Installation

### INITIAL SETUP

#### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Wrench, Torque (NSN 5120-00-230-6380)  
(Item 3, Appendix B)  
Compressor, Ring (NSN 5120-00-250-6055)  
(Item 3, Appendix B)

#### *Materials/Parts*

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, Appendix D)

#### *Materials/Parts (cont)*

Piston Ring Set (NSN 2805-01-093-2392)  
Lockwasher, Tab (NSN 2805-00-439-8116)  
Ring, Retaining, Piston Pin (NSN 5365-00-070-1928)

#### *Equipment Condition*

Cylinder head assembly removed (para. 5-14)  
Oil pan removed (para 5-7).


---

### a. Removal. (figure 5-18)

#### **WARNING**

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (1) Remove carbon deposits from top of piston (1) and cylinder wall (2) and clean with dry cleaning solvent.
- (2) Bend tangs on lockwasher (3) out.
- (3) Remove bearing cap bolt (4), dipper bolt (5), lockwasher (3) and remove connecting rod cap (6).
- (4) Slide piston (1) out of cylinder (7).

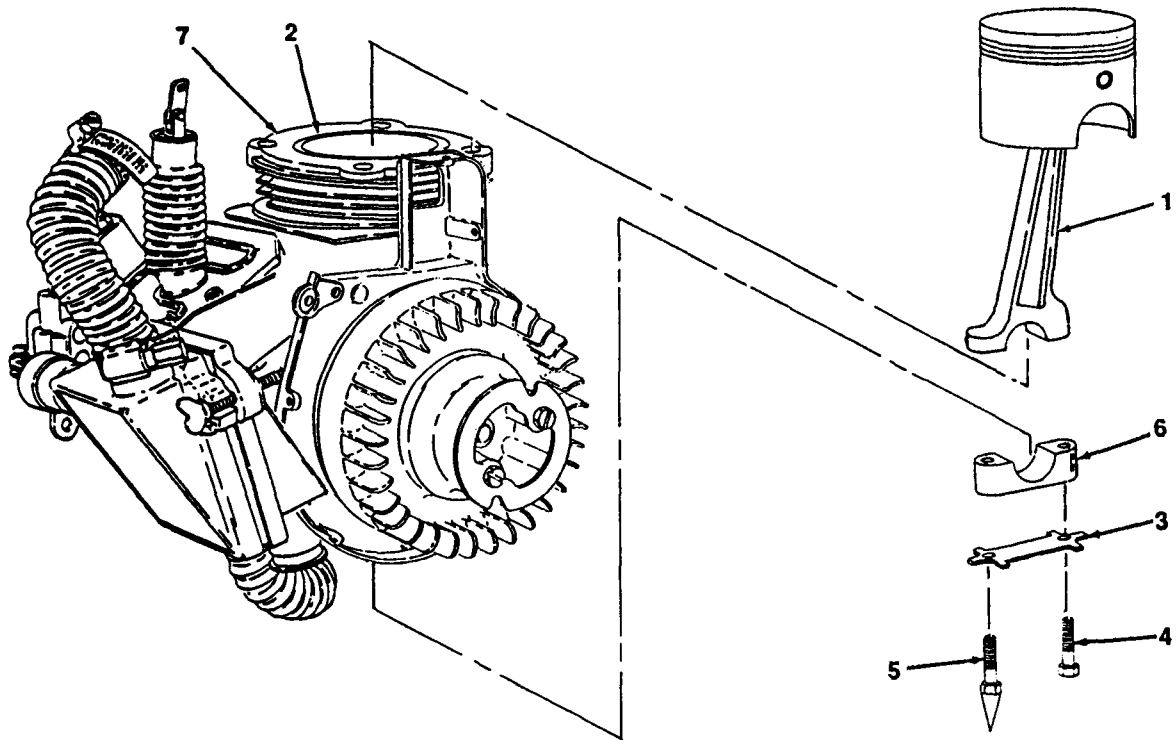

4866-054

Figure 5-18. Piston and Connecting Rod Assembly Removal.

## 5-18. Piston and Connecting Rod Assembly (cont).

### *b. Repair.* (figure 5-19)

- (1) Remove two retaining rings (1) and remove piston pin (2) from piston (3) and connecting rod (4).
- (2) Remove spacer ring (5) and compression ring (6).
- (3) Remove intermediate compression ring (7).
- (4) Remove oil ring (8) and ring expander (9).

### WARNING

Dry cleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F -138°F (38°C-60°C).

- (5) Clean all components of piston and connecting rod assembly with dry cleaning solvent and dry thoroughly. Remove all carbon deposit from top of piston and piston ring grooves.
- (6) Inspect piston (3), piston pin, connecting rod (4), and connecting rod bearing cap (10), dipper bolt (11) and bolt (12) for cracks, excessive wear, or other signs of damaged and replace items as needed. Refer to Table 5-2 for wear limits.

### NOTE


Do not reuse piston rings, retaining rings, or lockwasher (13). When installing piston rings stagger ring gaps.

Install ring expander (9) and oil ring (8).

Install intermediate compression ring (7).

Install compression ring (6) and spacer ring (5).

Position connecting rod (4) in piston (3) and install piston pin (2) and two retaining rings (1).

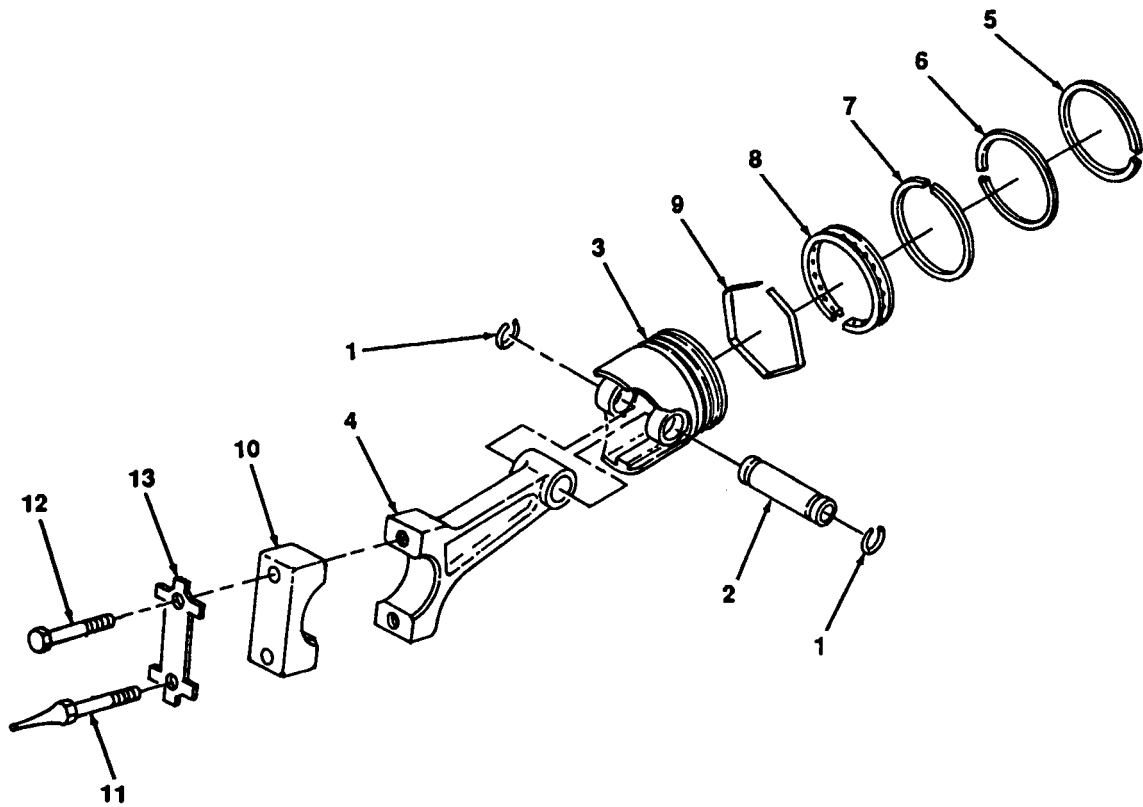

4866-055

Figure 5-19. Piston and Connecting Rod Repair.



## 5-18. Piston and Connecting Rod Assembly (cont).

c. Installation. (figure 5-20)

### NOTE


Use a suitable ring compressor when installing piston in cylinder.

- (1) Install piston (1) in cylinder (7) and position the connecting rod on crankshaft (8).

### NOTE

Dipper bolt is installed in camshaft side of connecting rod bearing cap. Install new lockwasher. Do not reuse lockwasher.

- (2) Install connecting rod bearing cap (6) and lockwasher (3) and secure with dipper bolt (5) and bolt (4). Torque bolts to 90-100 in. lbs (10047-17860gm. cm.).
- (3) Bend tangs on lockwasher (3) around bolt (4) and dipper bolt (5) head.

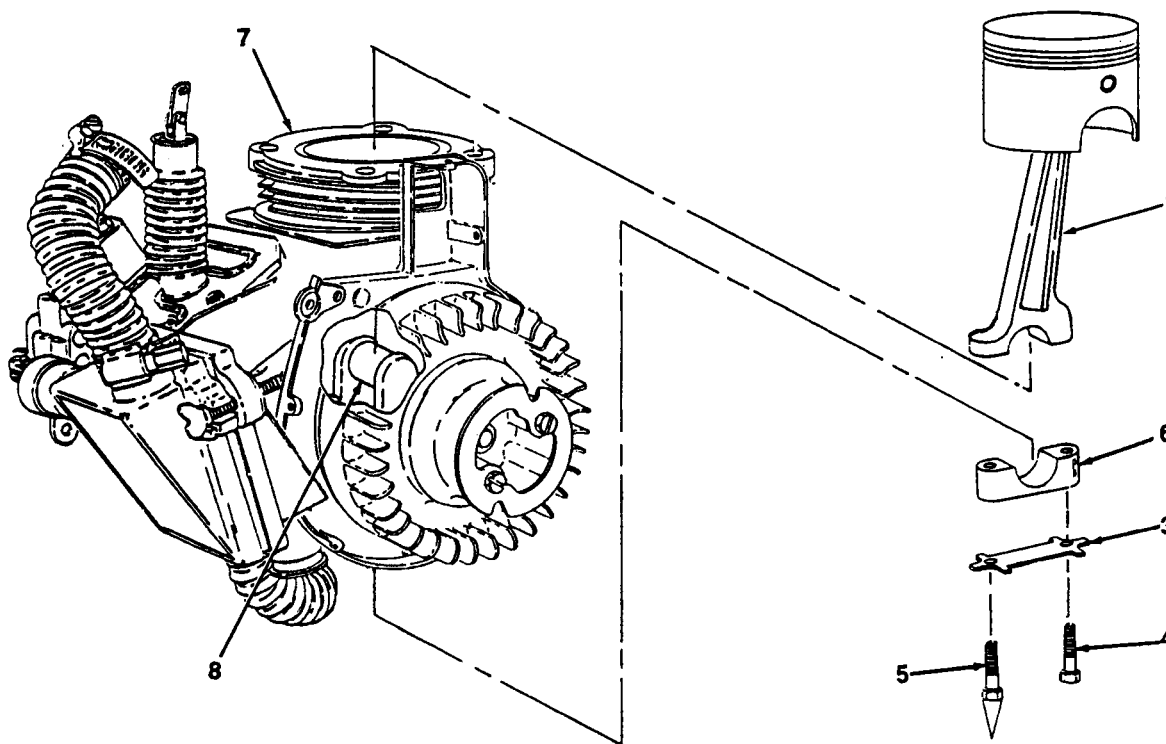

4866-056

Figure 5-20. Piston and Connecting Rod Assembly Installation.



5-20. Coil.

This task covers:      a. Removal                      b. Test                      c. Installation.

INITIAL SETUP

Tools	Equipment Condition
General Mechanic's Tool Kit (Item 1, Appendix B) Multimeter (NSN 6625-01-139-2512) (Item 2, Appendix B)	Flywheel removed (para. 4-38).

a. Removal. (figure 5-22)

**WARNING**

Use extreme care when removing coil clamps, flying clamps can cause severe eye injury.  
Cover work area with rag or hand when removing clamps.

**NOTE**

Make note of coil leads placement before removing coil.

- (1) Remove two coil clamps (1) securing coil (2) and remove.
- (2) Tag and disconnect coil leads.

b. Test.



- (1) Perform resistance test between leads of coil.
- (2) Resistance should be 309 ± 20 ohms (for breakerless ignition coil).
- (3) Resistance should be as follows for breaker point ignition coil.

Manufacturer	Primary windings (ohms)	Secondary windings (ohms)
Bendix Corp.	0.512 ± 0.050	3,300 ± 400
Colt Industries	0.370 ± 0.025	8,500 ± 700
Motor Parts. Inc.	0.370 ± 0.025	8,500 ± 700

- (4) If measured resistance does not match specified resistance replace coil.

c. Installation. (figure 5-22)


- (1) Connect coil leads as tagged.
- (2) Install coil leads and coil (2) and secure with two coil clamps (1).

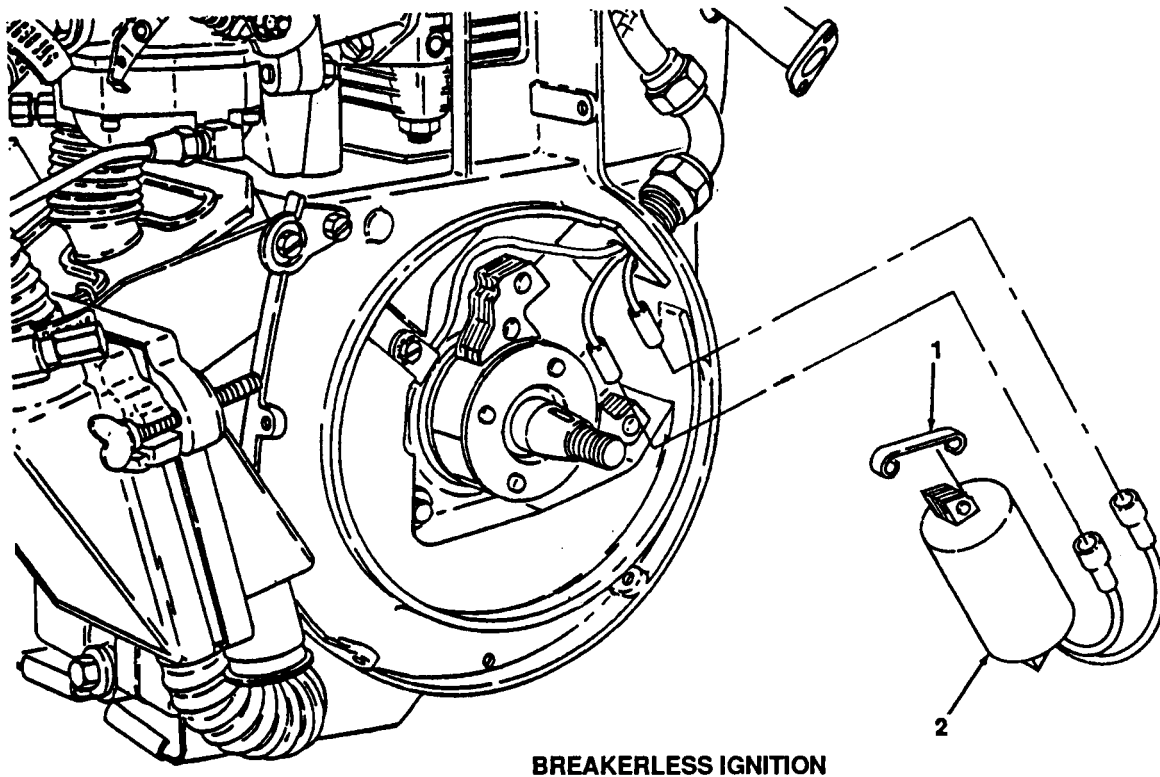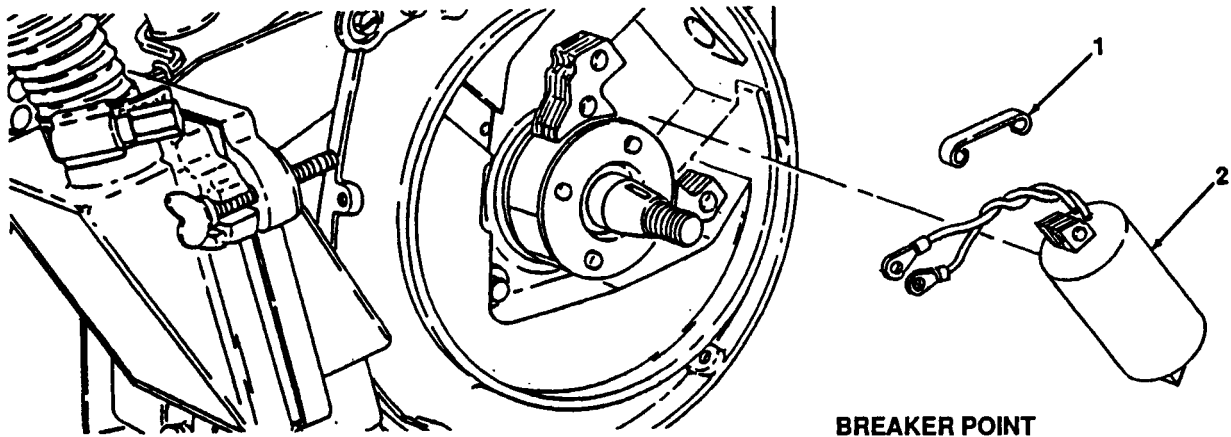

4866-058

Figure 5-22. Coil Removal and Installation.



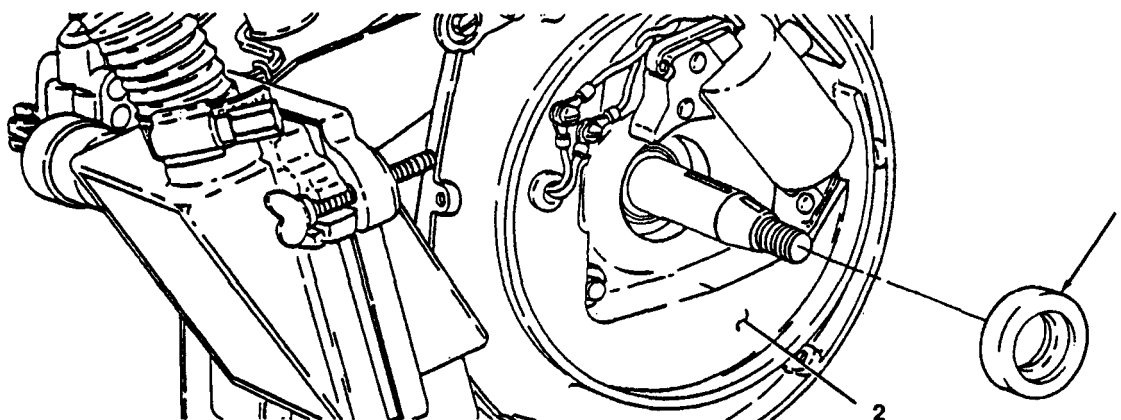

4866-069

*Figure 5-23. Flywheel Side Oil Seal Removal and Installation.*

## INITIAL SETUP

*Equipment Condition*


Flywheel removed (para. 4-38).

(1) Tag and remove wiring from suppression filter (1).

(2) Remove nut (2) and washer (3) and remove suppression filter (1).

(1) Position suppression filter (1) in bearing cap (4) and secure with nut (2) and washer (3).

(2) Connect wiring as tagged to suppression filter (1).

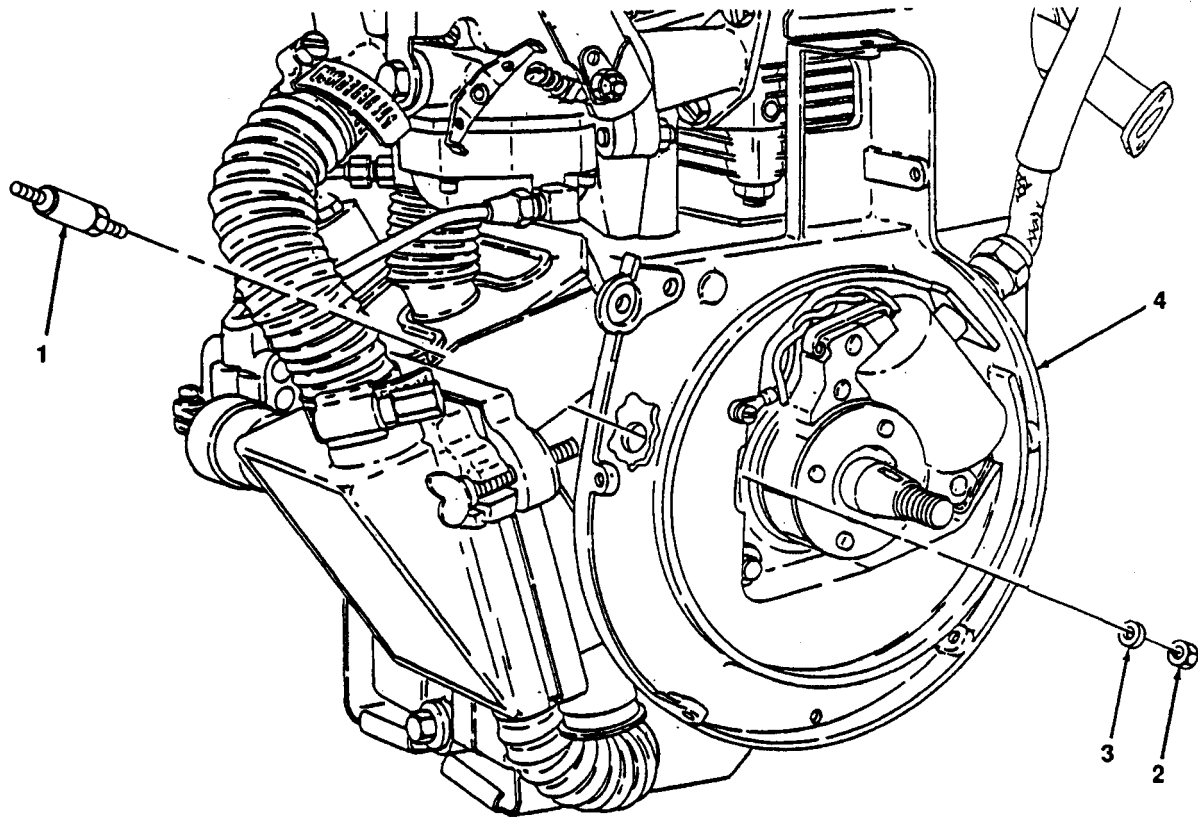

4866-059

*Figure 5-24. Noise Suppression Filter Removal and Installation.*



This task covers:

a. Removal	b. Installation.
------------	------------------

## Tools

### Materials/Parts

General Mechanic's Tool Kit (Item 1, Appendix B)


### Crankcase and Oil Seal (P/N 13214E7063)

a. Removal. (figure 5-25)

- (1) Clean area around rear oil seal (1).
- (2) Using suitable tools, remove rear oil seal (1) from crankcase (2).

b. Installation. (figure 5-25)

- (1) Clean crankcase mounting surface.
- (2) Install rear oil seal (1) in crankcase (2).

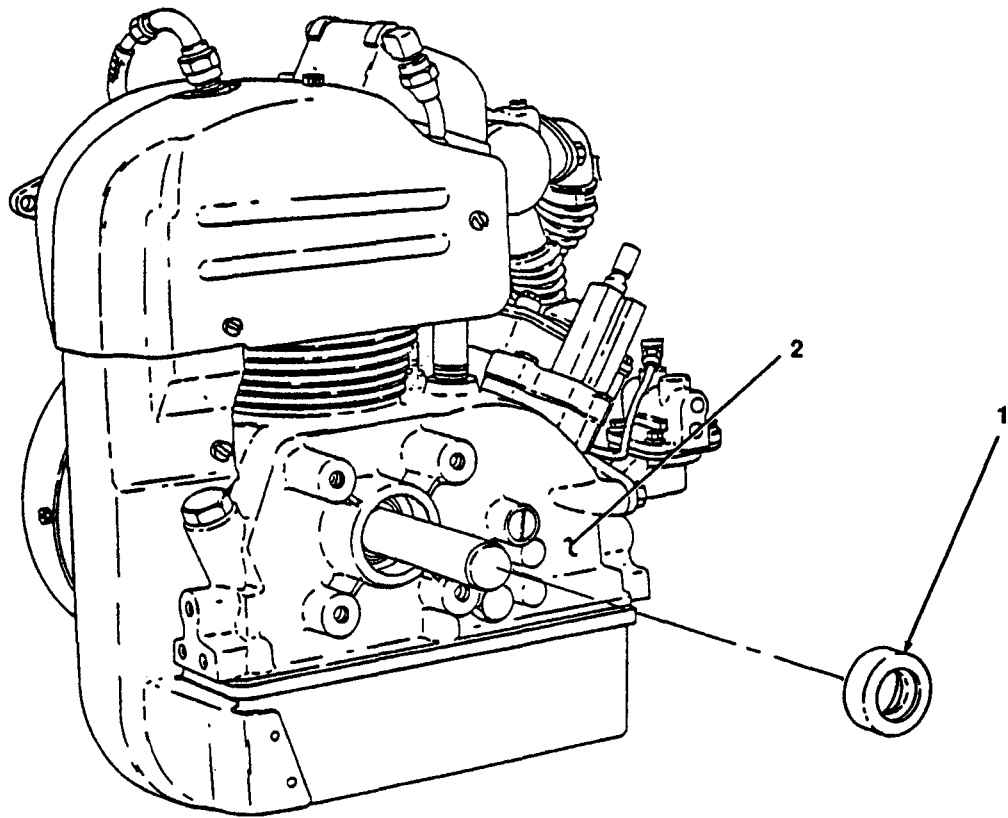

4866-074

*Figure 5-25. Crankshaft Side Oil Seal Removal and Installation.*

## 5-24. **Compression Test.**

---

This task covers:      Test

---

### INITIAL SETUP

#### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)  
Tester, Cylinder Compression (NSN 4910-00-250-2423)  
(Item 2, Appendix B)

---


#### Test. (figure 5-26)

- (1) Disconnect ignition cable (1) from spark plug (2).
- (2) Remove spark plug (2) from engine (3).
- (3) Install suitable pressure gage (4) in spark plug hole.
- (4) Using starter rope crank engine several times, and check pressure gage.

#### **NOTE**


As altitude increases cylinder compression will decrease.

- (5) Cylinder compression should be a minimum of 90 psi (63279 kpa) at sea level.
- (6) Remove pressure gage (4).
- (7) Install spark plug (2), and connect ignition cable (1).

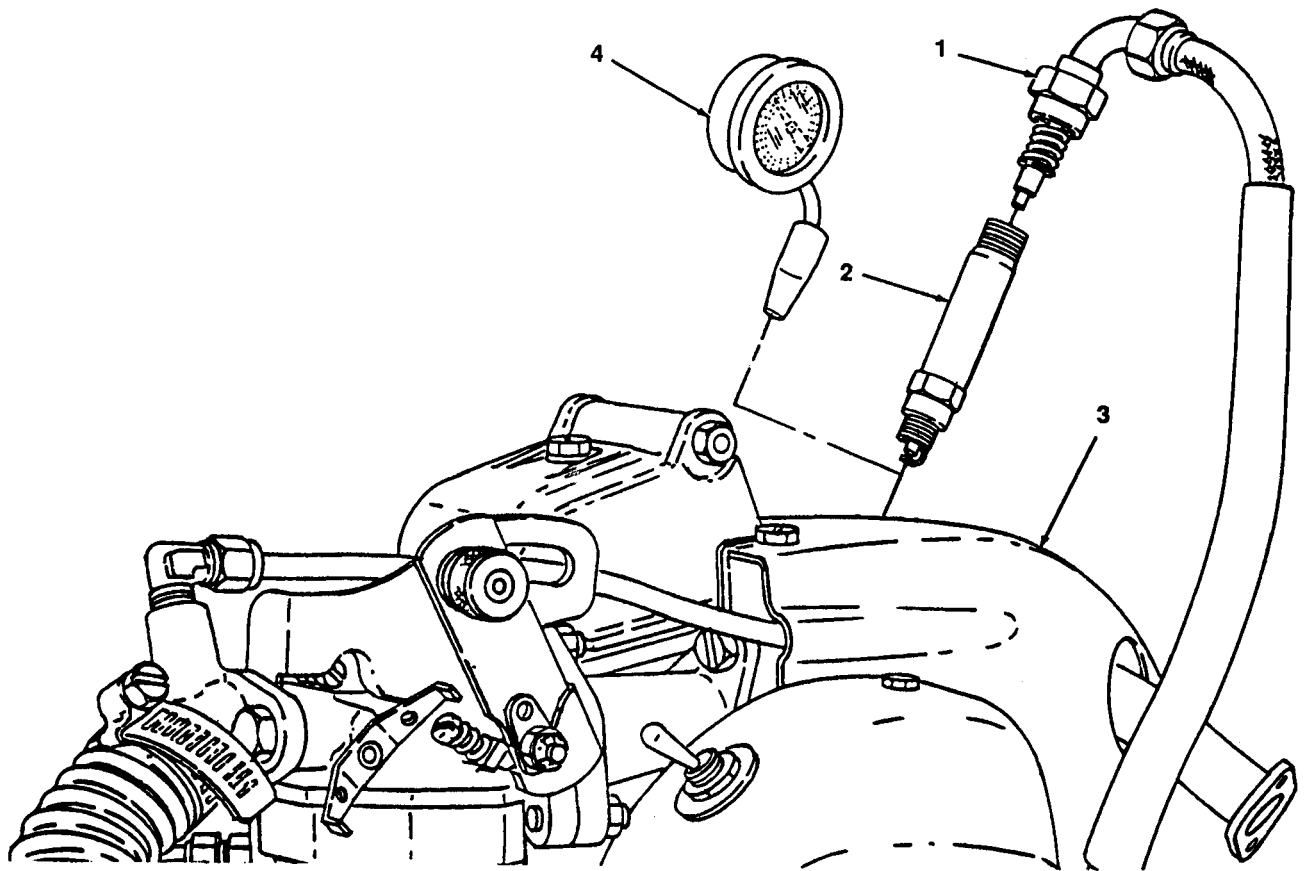


4866-072

Figure 5-26. Compression Test

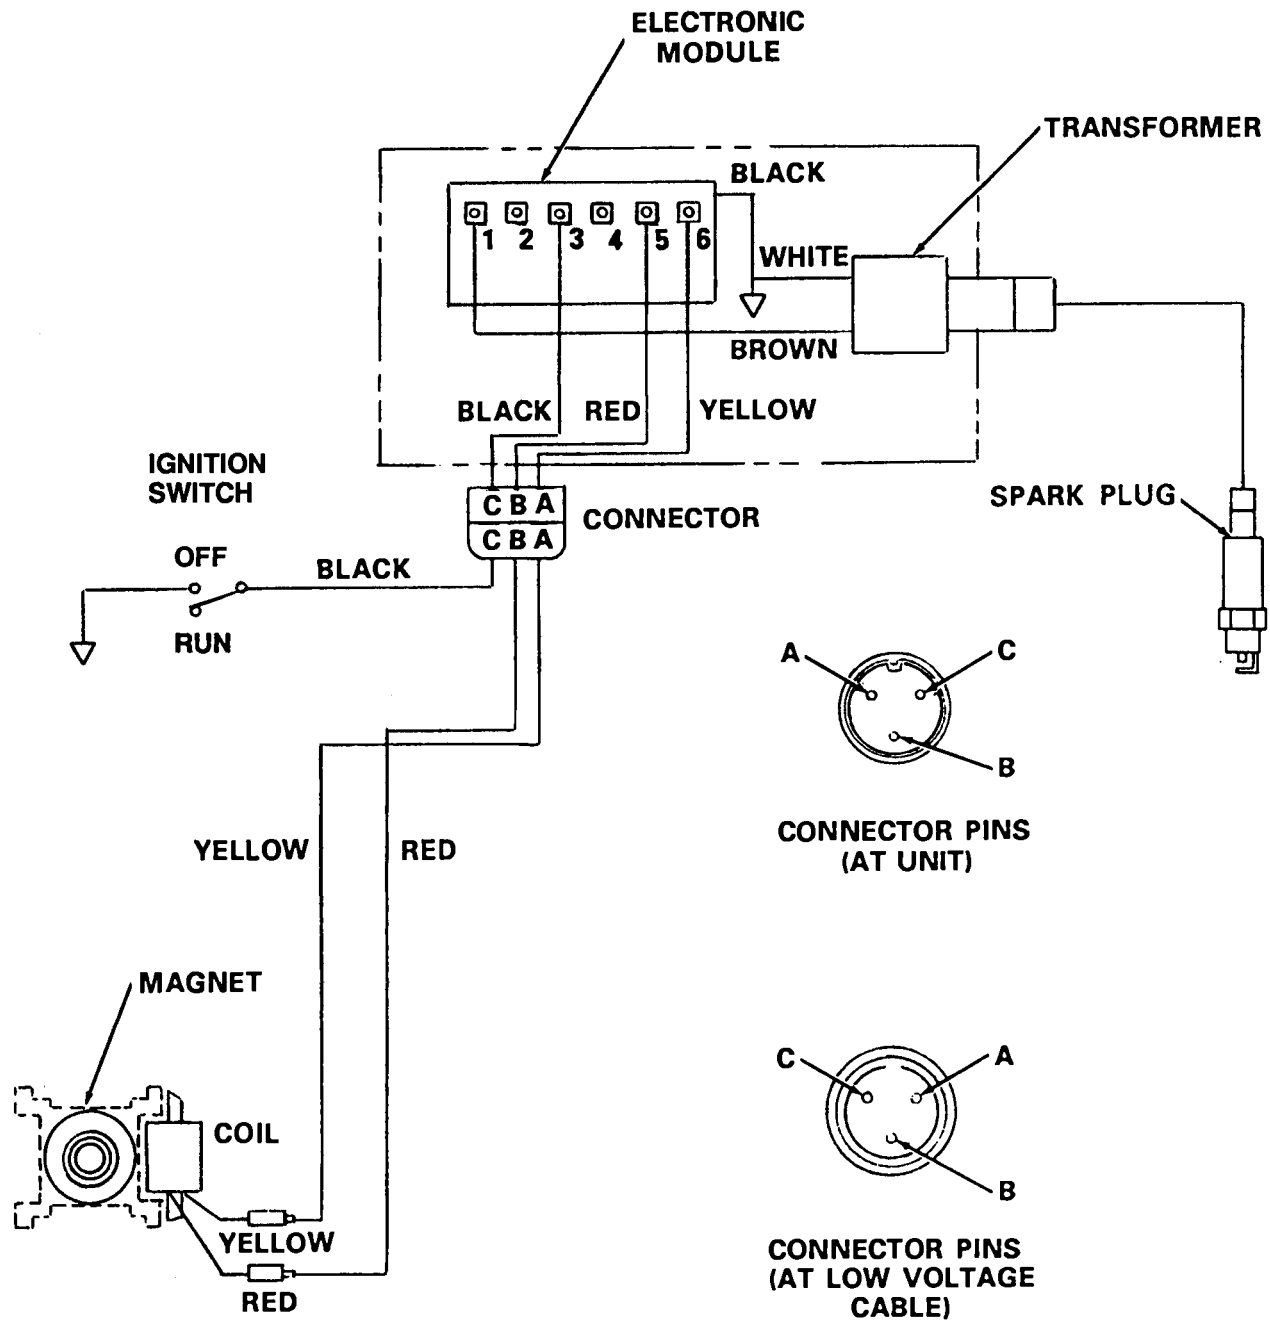

4866-078

Figure 5-27. Breakerless Ignition System Wiring Diagram.

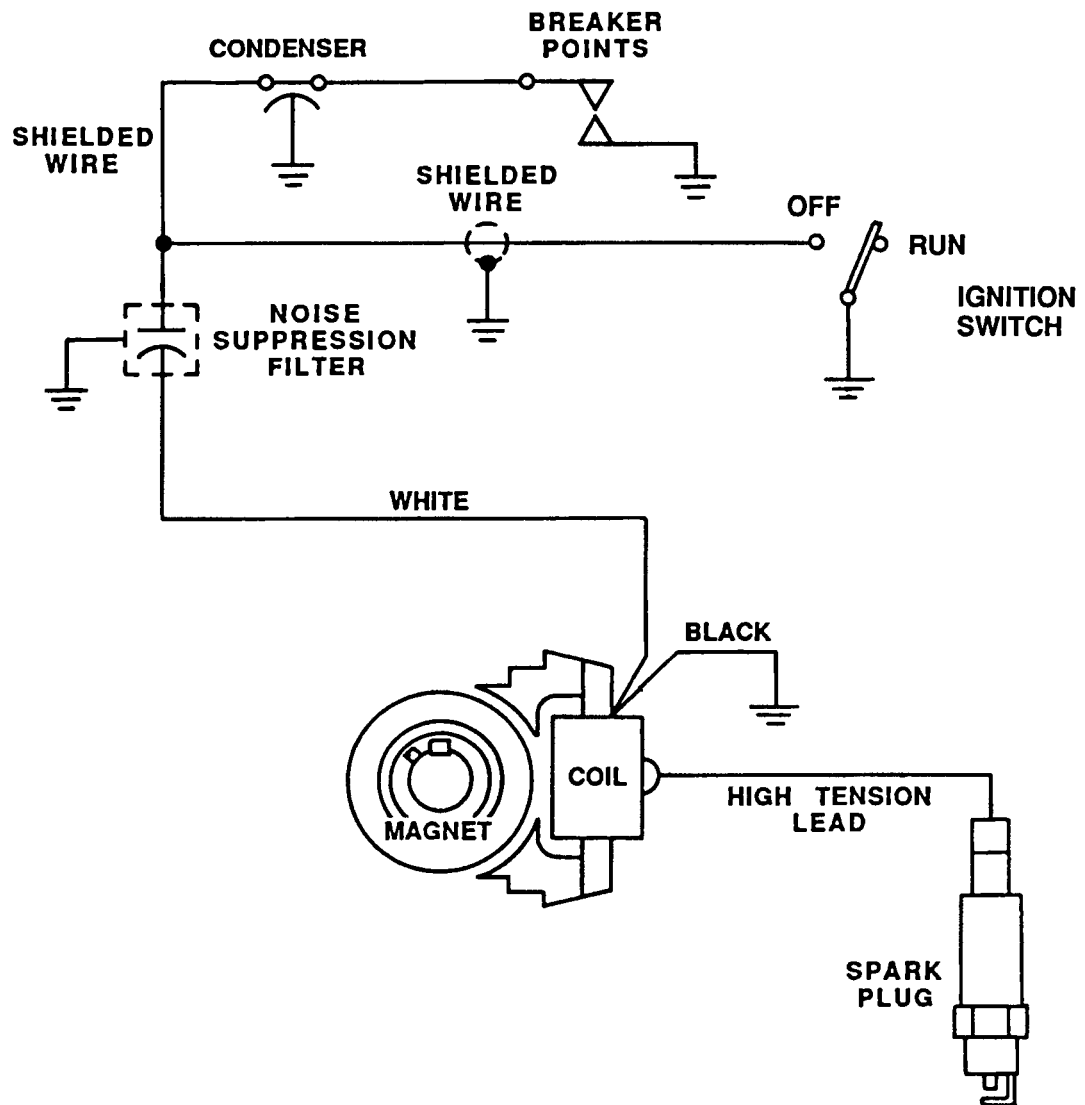

4866-080

Figure 5-28. Breaker Point Ignition Wiring Diagram.

Table 5-2. Engine Repair and Replacements Limits.

Item	Measurements	
	Minimum	Maximum
CONNECTING ROD		
Large end i.d.	0.8789 (2.2324)	0.8798 (2.2346)
Piston pin diameter	0.4200 (1.0668)	0.4205 (1.0680)
Side clearance	0.4190 (1.0642)	0.4915 (1.0655)
	0.020 (0.0508)	0.036 (0.0914)
PISTON		
Piston pin hole dia.	0.4195 (1.0655)	0.4200 (1.0668)
Skirt o.d.		
A-top	2.2475 (5.7086)	2.2480 (5.709)
Bottom	2.2485 (5.7111)	2.2490 (5.7124)
B-top	(5.7099)	(5.7111)
Bottom	2.2490 (5.7124)	2.2495 (5.7137)
C-top	2.2485	2.2490
Bottom	2.2495 (5.7137)	2.2500 (5.7150)
Skirt o.d.		
D-top	2.2490 (5.7124)	2.2495 (5.7137)
Bottom	2.2500 (5.7150)	2.2505 (5.7162)
Piston ring groove dia.		
Top	1.998 (5.0749)	2.008 (5.1003)
Second	1.950 (4.953)	1.960 (4.9784)
Third	1.950 (4.953)	1.960 (4.9784)
Piston ring groove width		
Top	0.1205 (0.3060)	0.1215 (0.3086)
Second	0.0955 (0.2425)	0.0965 (0.2451)
Third	0.188 (0.4775)	0.189 (0.4800)

Table 5-2. Engine Repair and Replacements Limits (cont).

Item	Measurements	
	Minimum	Maximum
Piston rings		
Width: spacer	0.0235 (0.0596)	0.245 (0.0622)
Top	0.0930 (0.2362)	0.0940 (0.2387)
Second	0.0930 (0.2362)	0.0940 (0.2387)
Third	0.1860 (0.4724)	0.1870 (0.4749)
Thickness: spacer	0.111 (0.2819)	0.115 (0.2921)
Top	0.094 (0.2387)	0.104 (0.2641)
Second	0.094 (0.2387)	0.104 (0.2641)
Third	0.094 (0.2387)	0.104 (0.2641)
Gap clearance spacer	0.0005 (0.0012)	0.0350 (0.0889)
Top	0.007 (0.0177)	0.017 (0.0451)
Second	0.007 (0.0177)	0.017 (0.0431)
Third	0.007 (0.0177)	0.017 (0.0431)
Side clearance		
First	0.0020 (0.00500)	0.0050 (0.0127)
Second	0.0015 (0.0038)	0.0035 (0.0088)
Third	0.0010 (0.0025)	0.0030 (0.0076)
VALVES		
Exhaust and intake		
Length to gage point	2.7885 (7.0827)	2.7935 (7.0954)
Stem diameter	0.3100 (0.7874)	0.3105 (0.7886)



Table 5-2. Engine Repair and Replacements Limits (cont).

Item	Measurements	
	Minimum	Maximum
VALVE SEAT INSERTS		
Exhaust and intake		
Outside diameter	0.867 (2.2021)	0.877 (2.2275)
Inside diameter	0.745 (1.8923)	0.750 (1.905)
Seat angle	44° 45'	45° 0.
Rocker arms		
Rocker arm i.d.	0.6245 (1.5862)	0.6255 (1.5887)
Rocker shaft o.d.	0.4375 (1.1112)	0.4380 (1.1125)
Rocker arm bearing i.d. in rocker arm	0.4380 (1.1125)	0.4383 (1.1132)

## CHAPTER 6

### GENERAL SUPPORT MAINTENANCE INSTRUCTIONS

	Page
OVERVIEW .....	6-1
Section I. Repair Parts; Special Tools; Test, Measurement, Diagnostic Equipment (TMDE); and Support Equipment .....	6-1
Section II. General Support Troubleshooting .....	6-1
Section III. General Support Maintenance Procedures .....	6-3

#### OVERVIEW

This chapter provides procedures for troubleshooting and maintenance of the 1 1/2 HP Military Standard Engine by General Support maintenance personnel.

#### Section I. REPAIR PARTS; SPECIAL TOOLS; TEST, MEASUREMENT, DIAGNOSTIC EQUIPMENT (TMDE); AND SUPPORT EQUIPMENT

Paragraph	Page
6-1 Common Tools and Test Equipment .....	6-1
6-2 Special Tools, TMDE, and Support Equipment .....	6-1
6-3 Repair Parts .....	6-1

6-1. **Common Tools and Test Equipment.** For authorized common tools and equipment, refer to the Modified Table of Organization and Equipment (MTOE) applicable to your unit.

6-2. **Special Tools, TMDE and Support Equipment.** For a listing of special tools, TMDE, and support equipment authorized for use on this equipment, refer to the Repair Parts and Special Tools List, TM 5-2805-256-24P, and the maintenance allocation chart (MAC), appendix B of this manual.

6-3. **Repair Parts.** Repair parts are listed and illustrated in the Repair Parts and Special Tools List for 1 1/2 HP Military Standard Engine TM 5-2805-256-24P.

#### Section II. GENERAL SUPPORT TROUBLESHOOTING

Paragraph	Page
6-4 General .....	6-1
6-5 General Support Troubleshooting Procedures .....	6-2

6-4. **General.** This section contains troubleshooting procedures to determine the probable cause of observed equipment malfunctions. Tests or inspections are provided to isolate the faulty component and corrective actions are provided to eliminate the malfunction.

6-5. **General Support Troubleshooting Procedures.** Table 6-1 lists the common malfunctions that may be found during operation. Refer to Symptom Index to locate the troubleshooting procedures for the malfunction. This manual cannot list all malfunctions that may occur, nor all tests or inspections and corrective actions. If a malfunction is not corrected by listed corrective actions, notify your supervisor.

### SYMPTOM INDEX

Symptom	Page
Engine Runs Excessively Noisy . . . . .	6-2

*Table 6-1. General Support Troubleshooting Procedures.*

Malfunction	Test or Inspection	Corrective Action
<b>ENGINE RUNS EXCESSIVELY NOISY.</b>		
	Step 1. Check crankshaft end play.	Adjust crankshaft end play if needed (para. 6-7).
	Step 2. Check bearing cap assembly bearing cup and bearing for excessive wear or damage.	Replace worn or otherwise damaged bearing cup and bearing (para. 6-7).
	Step 3. Check crankcase bearing cup and bearing for excessive wear or damage.	Replace a worn or otherwise damaged crankcase bearing cup and bearing (para. 6-10).
	Step 4. Check camshaft and gear for excessive wear.	Replace a worn or otherwise damaged camshaft (para. 6-8).
	Step 5. Check crankshaft wear.	Replace a worn or otherwise damaged crankshaft (para. 6-9).

Section III. GENERAL SUPPORT MAINTENANCE PROCEDURES

Paragraph		Page
6-6	General .....	6-3
6-7	Bearing Cap Assembly .....	6-4
6-8	Crankshaft Assembly .....	6-8
6-9	Camshaft Assembly .....	6-12
6-10	Crankcase Assembly .....	6-18

6-6. **General.** This section contains general support maintenance procedures as authorized by the MAC in Appendix B of this manual. Table 6-2 at the end of this section, contains wear limits for those items maintained by general support maintenance. Those items which to not meet the specified measurements must be replaced. Refer to Appendix E for torque values. All maintenance procedures require only one person to perform.

---

**6-7. Bearing Cap Assembly.**

---

This task covers:      a. Removal                      b. Repair                      c. Installation

---

INITIAL SETUP

<i>Tools</i>	<i>Equipment Condition</i>
General Mechanic's Tool Kit (Item 1, Appendix B) Wrench, Torque (NSN 5120-00-230-6380)	Coil removed (para. 5-20). Air cleaner removed (para. 4-21) Rotating magnet removed (para. 5-19) Low voltage cable removed (para. 5-13).
<i>Materials/Parts</i>	
Rags, Wiping (Item 6, Appendix D) Solvent, Drycleaning (Item 7, Appendix D) Seal (P/N 13214E7063)	


---

a. Removal. (figure 6-1)

**NOTE**

Steps 1 and 2 are for engines with breaker point ignition.

- (1) Loosen connector nut (1) and remove high tension cable (2) from bearing cap (3).
- (2) Tag and remove wiring from bearing cap (3).
- (3) Remove three nuts (4) and remove bearing cap (3), shims (5) and O-ring (6).

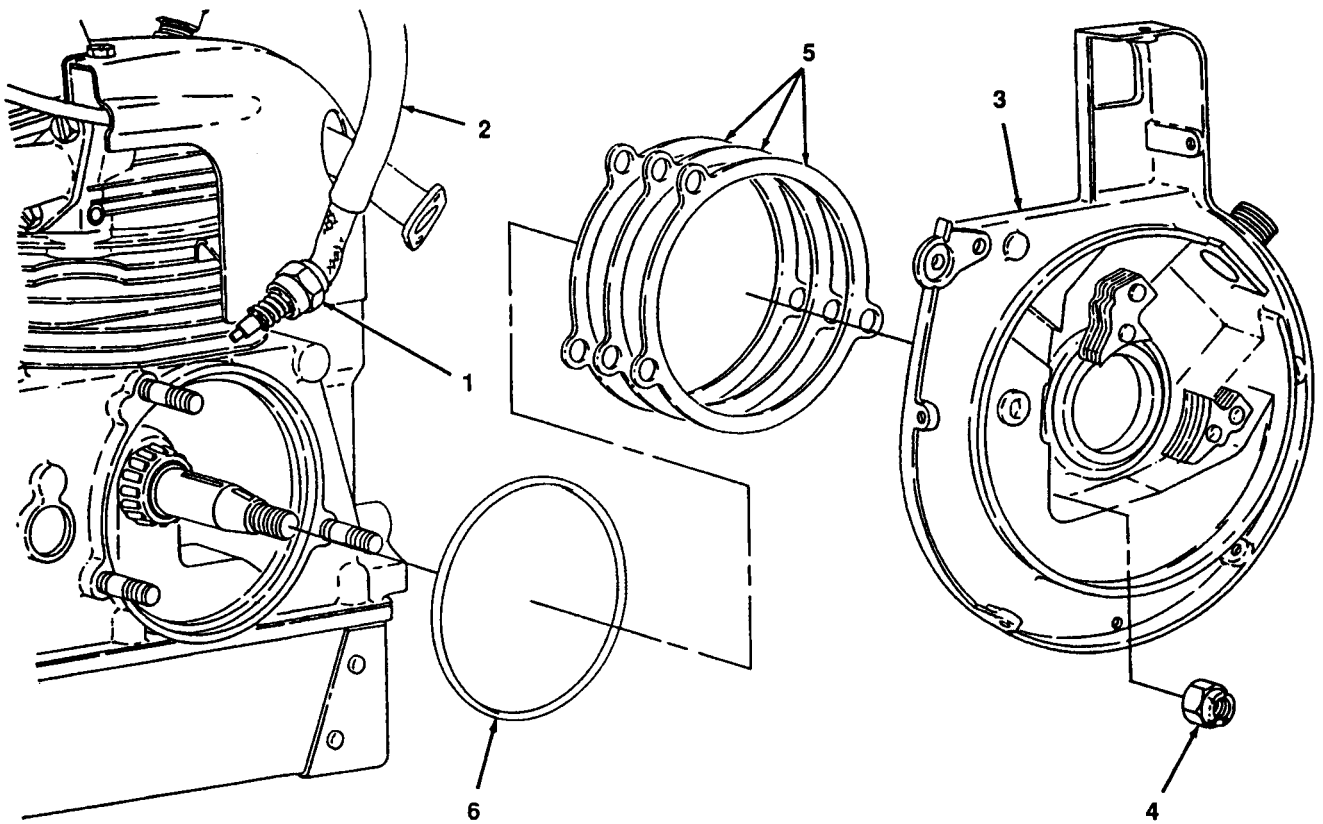

4866-060

Figure 6-1. Bearing Cap Removal.


## 6-7. Bearing Cap Assembly (cont).

b. Repair. (figure 6-2)

### WARNING

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean bearing cap (1) with drycleaning solvent and dry thoroughly.
- (2) Inspect crankshaft bearing cup (2) and bearing (3) for excessive wear, and replace if defective. Refer to table 6-2 for wear limits.
- (3) Inspect oil seal (4) and replace if ripped or otherwise damaged.
- (4) Inspect bearing cap (1) for cracks or other signs of damage and replace if defective.

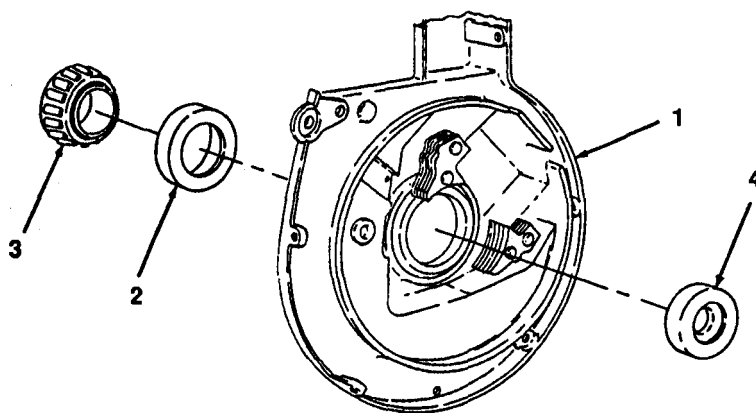

4866-061

Figure 6-2. Bearing Cap Repair.


c. Installation. (figure 6-3)

- (1) Install O-ring (6), shims (5) and bearing cap (3) and secure with three nuts (4). Torque nuts to 100-125 in. lbs (17860-22325 gr cm).
- (2) Check crankshaft end-play. Remove or install shims (5) as necessary to obtain crankshaft end-play of .000-.003 in. (.000-.007 cm).

**NOTE**

Steps 3 and 4 are for engines with breakerless ignition.

- (3) Connect wiring to bearing cap (3) as tagged.
- (4) Install high tension cable (2) and tighten connector nut (1)

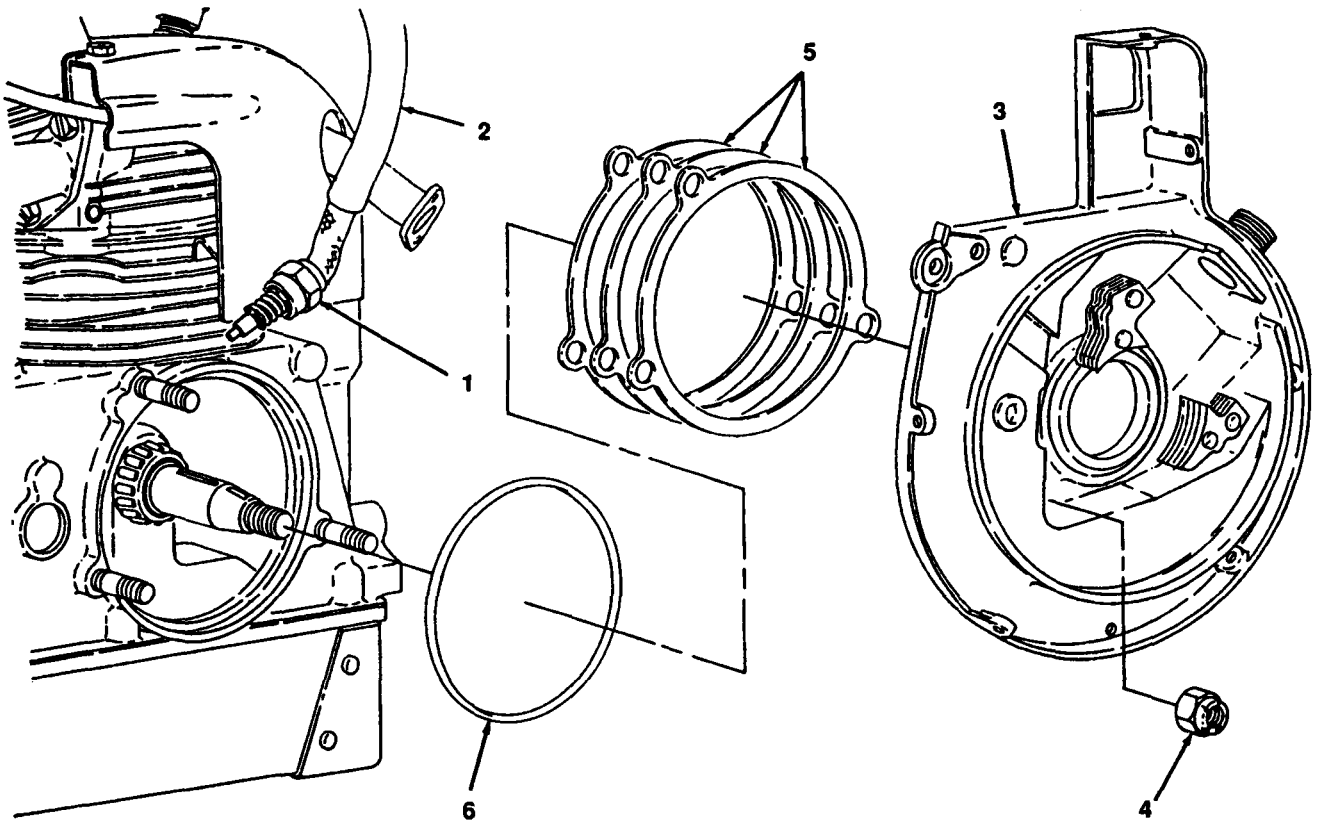

4866-062

Figure 6-3. Bearing Cap Installation.



## 6-8. Crankshaft Assembly.

---

This task covers:      a. Removal                      b. Inspection                      c. Installation

---

### INITIAL SETUP

#### *Tools*

General Mechanic's Tool Kit (Item 1, Appendix B)

#### *Equipment Condition*

Piston removed (para. 5-18).

Bearing cap removed (para. 6-7).

#### *Materials/Parts*


Rags, Wiping (Item 6, Appendix D)

Solvent, Drycleaning (Item 7, Appendix D)

---

#### a. Removal. (figure 6-4)

Remove crankshaft (1), and bearing (2) from crankcase (3).

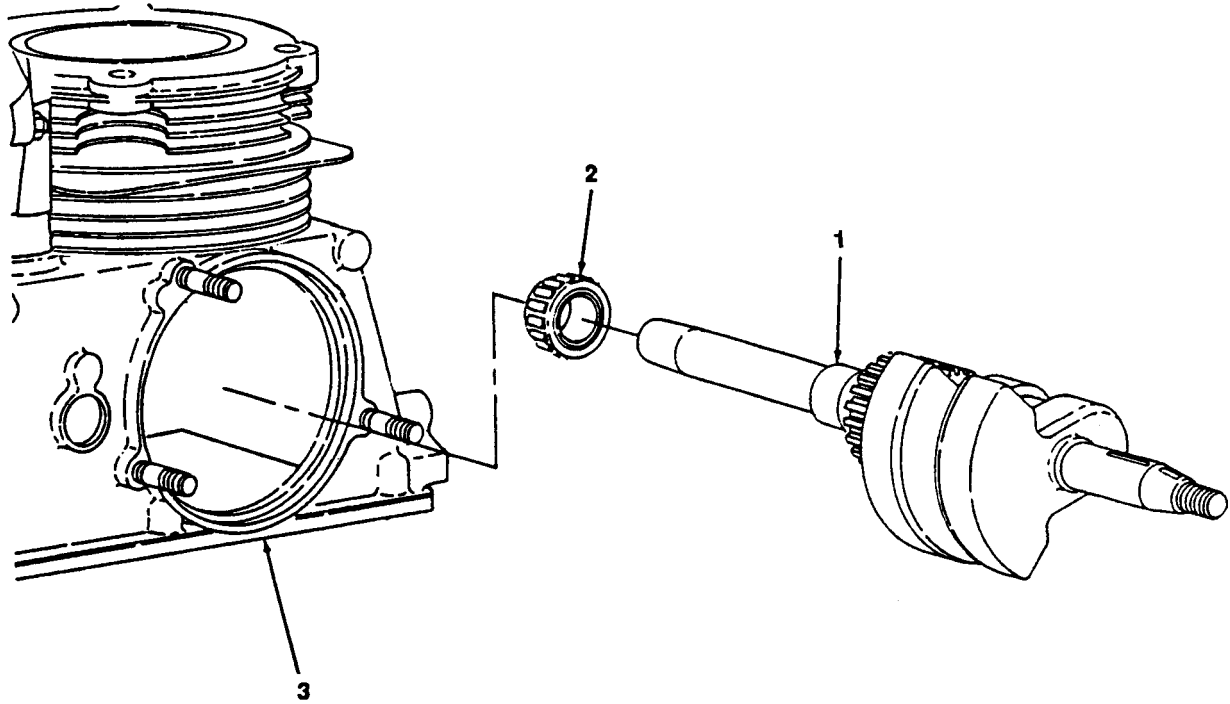

4866-066

*Figure 6-4. Crankshaft Removal.*


## 6-8. Crankshaft Assembly (cont).

b. Inspection. (figure 6-5)

### **WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean crankshaft (1) and bearing (2) with drycleaning solvent and dry thoroughly.
- (2) Inspect crankshaft and bearing for signs of excessive wear or other damage and replace as needed. Refer to table 6-2 for wear limits.
- (3) Inspect crankcase bearing cup (3) and replace if excessively worn or otherwise damaged. Refer to table 6-2 for wear limits.

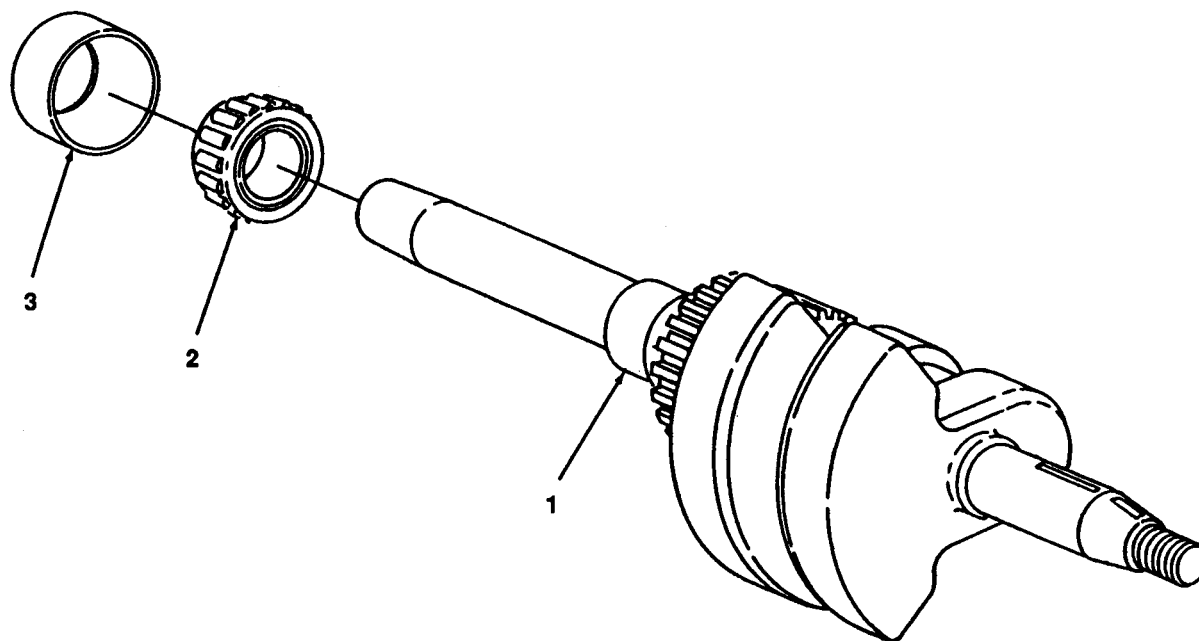

4866-073


Figure 6-5. Crankshaft Inspection.

### **NOTE**

Crankcase bearing cup exploded out of crankcase in figure 6-5 for clarity.

c. Installation. (figure 6-6)

Install bearing (1) and crankshaft (2) in crankcase (3) and align timing marks on camshaft (4) and crankshaft (2).

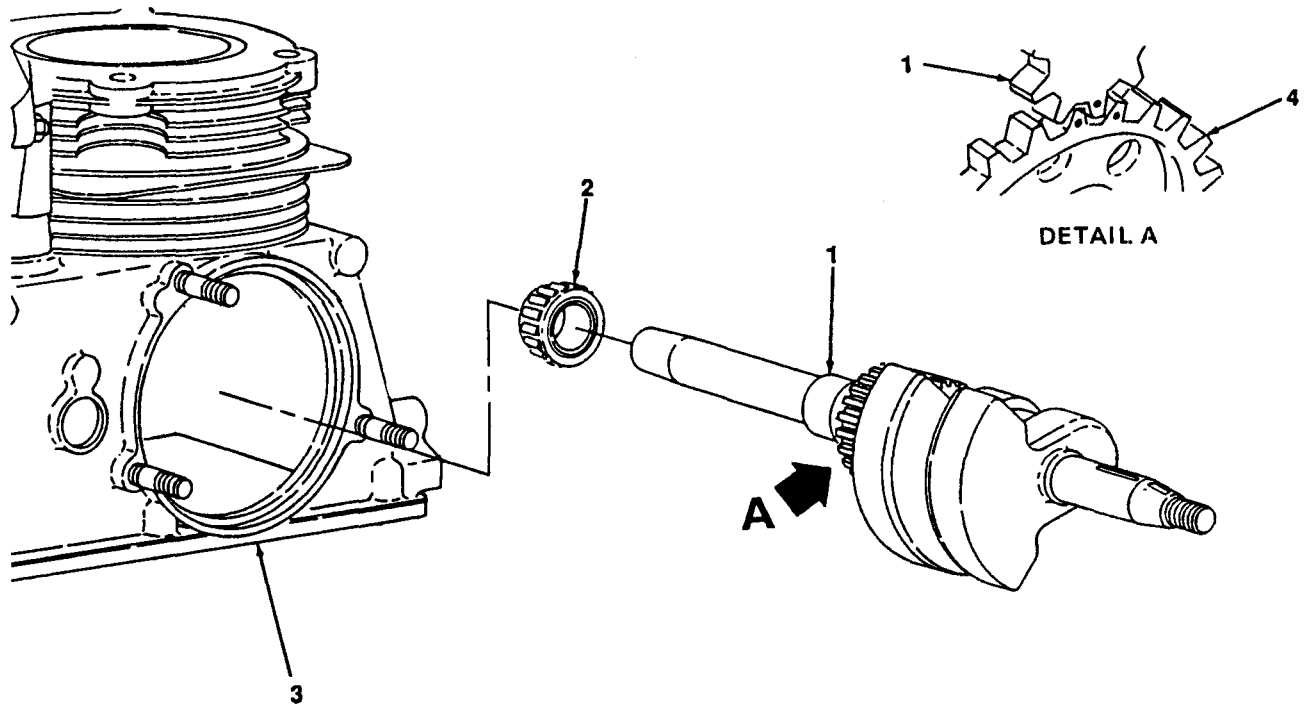

4866-070

Figure 6-6. Crankshaft Installation.

---

6-9. **Camshaft, Camshaft Axle, and Tappets.**

---

This task covers:      a. Removal                      b. Inspection                      c. Installation

---

INITIAL SETUP

<i>Tools</i>	<i>Equipment Condition</i>
General Mechanic's Tool Kit (Item 1, Appendix B) Puller Kit, Mechanical (NSN 5120-00-423-1596) (Item 3, Appendix B)	Crankshaft removed (para. 6-8)


*Materials/Parts*

Rags, Wiping (Item 6, Appendix D)  
Solvent, Drycleaning (Item 7, Appendix D)  
Seal (NSN 5330-00-797-4639)

---

a. Removal. (figure 6-7)

- (1) Remove camshaft axle plug (1) and seal (2).
- (2) Install a long screw, with the same thread size as an oil pan screw, into the camshaft axle (3) and remove axle.
- (3) Remove screw from camshaft axle (3).
- (4) Remove camshaft (4) and valve tappets (5).
- (5) Remove clip (6) from camshaft axle (3).

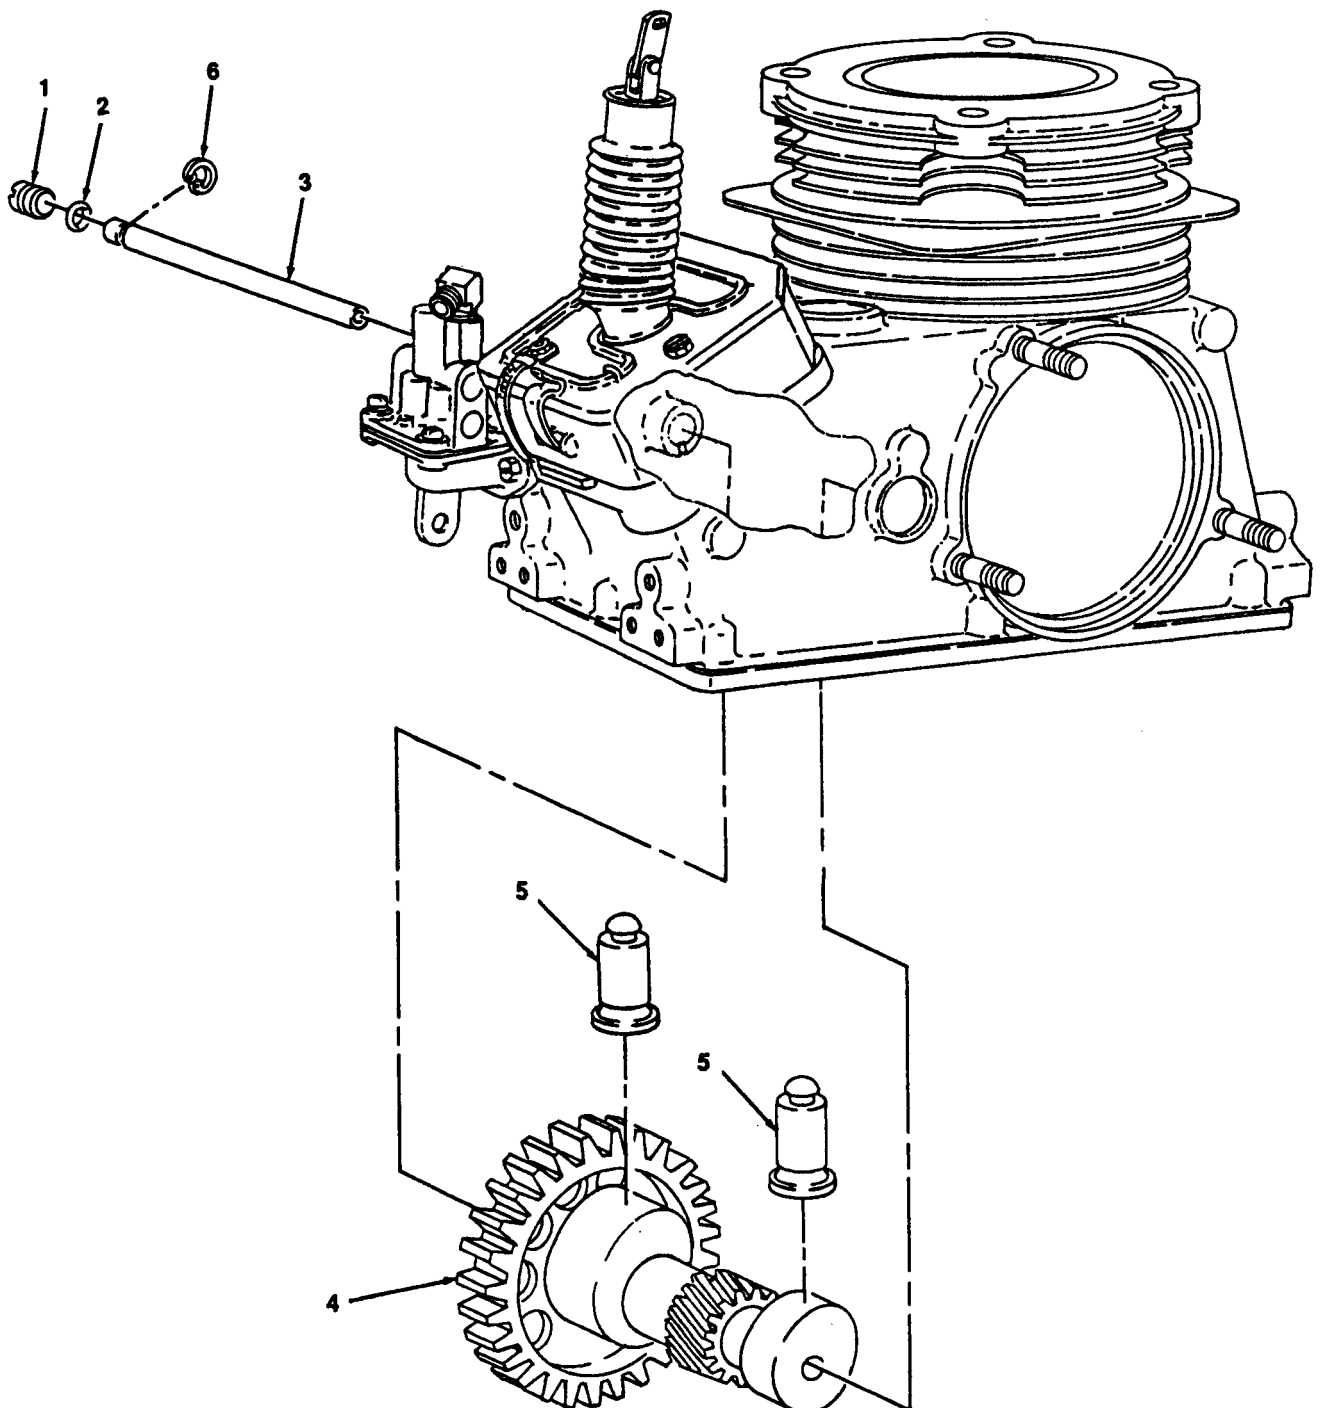

4866-063

Figure 6-7. Camshaft Removal.


6-9. **Camshaft, Camshaft Axle, and Tappets (cont).**

b. Removal. (figure 6-8)

**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F–138°F (38°C-60°C).

- (1) Clean camshaft (6), camshaft axle (5) and tappets (7) with drycleaning solvent and dry thoroughly.
- (2) Inspect all components for signs of excessive wear, missing or damaged gears or other signs of damage, and replace defective parts. Refer to table 6-2 for wear limits.

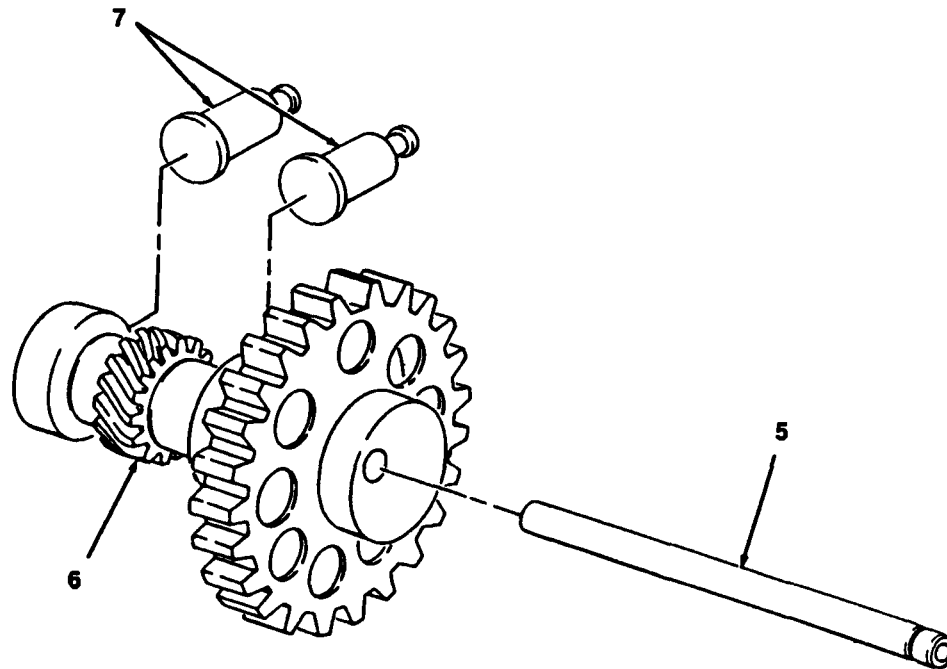

4866-064


*Figure 6-8. Camshaft Inspection.*



**6-9. Camshaft, Camshaft Axle, and Tappets (cont).**

c. Installation. (figure 6-9)

- (1) Install clip (6) on camshaft axle (3).
- (2) Install valve tappets (5).
- (3) Install camshaft (4).
- (4) Install camshaft axle (3), seal (4) and camshaft axle plug (1).

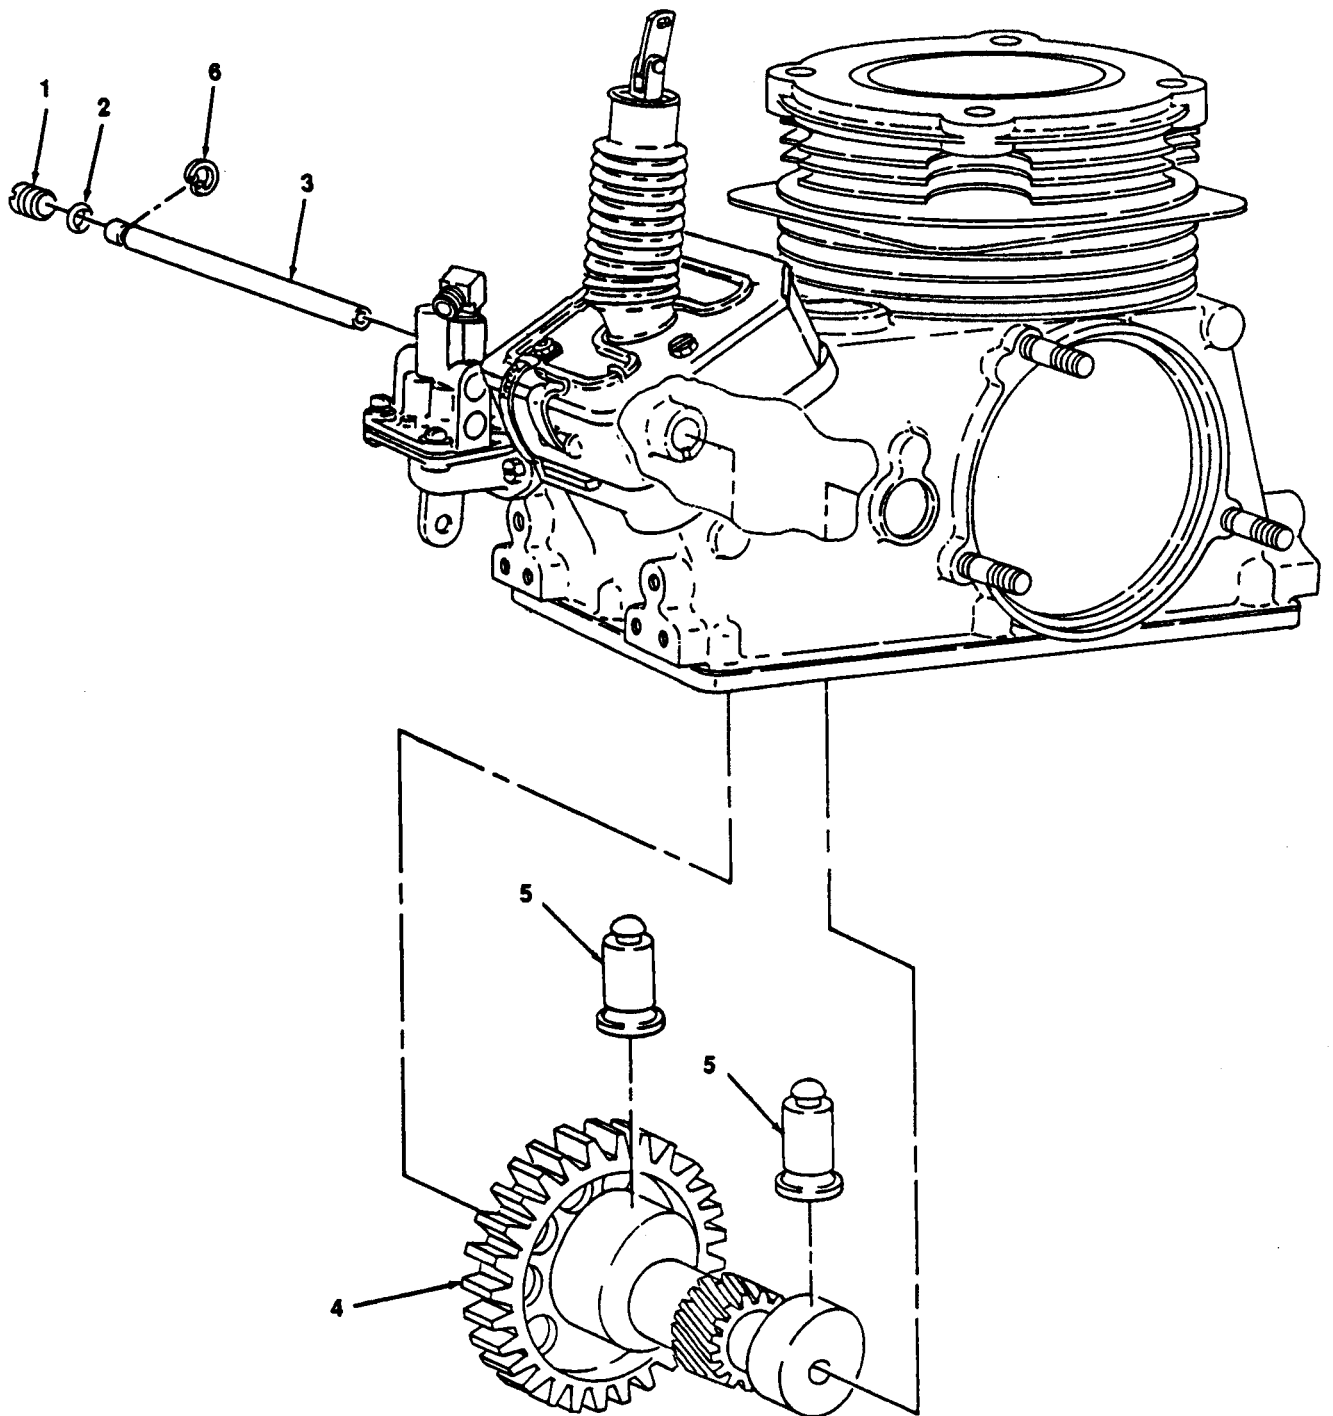

4866-065

Figure 6-9. Camshaft Installation.

---

6-10. **Crankcase Assembly.**

---

This task covers:      Repair

---

INITIAL SETUP

<i>Tools</i>	<i>Equipment Condition</i>
General Mechanic's Tool Kit (Item 1, Appendix B)	Piston and connecting rod assembly removed (para. 5-18)
<i>Materials/Parts</i>	Camshaft removed (para. 6-8).
Rags, Wiping (Item 6, Appendix D)	Crankshaft removed (para. 6-9).
Solvent, Drycleaning (Item 7, Appendix D)	Fuel pump removed (para. 4-36).
Seal (P/N 13214E7063)	


---

Repair. (figure 6-10)

**WARNING**

Drycleaning solvent PD-680 used to clean parts is potentially dangerous to personnel and property. Avoid repeated and prolonged skin contact. Do not use near open flame or excessive heat. Flash point of solvent is 100°F-138°F (38°C-60°C).

- (1) Clean crankcase (1) with drycleaning solvent and dry thoroughly.
- (2) Inspect crankcase (1) and replace if worn or otherwise damaged. Refer to Table 6-2 for wear limits.
- (3) Remove bearing (2) and replace.
- (4) Remove bearing cup (3) and replace
- ( 5 ) Inspect bearing cap studs (4) and replace if threads are damaged.
- (6) Remove oil seal (5) and replace.

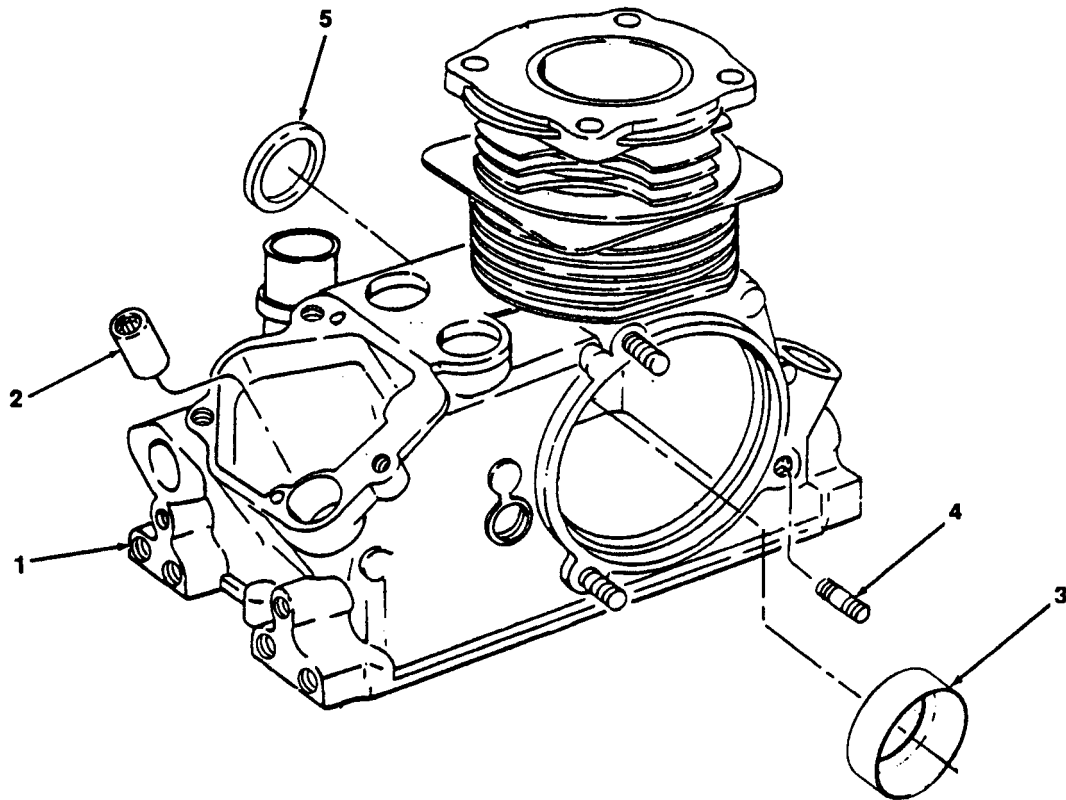

4866-071

*Figure 6-10. Crankcase Repair.*

Table 6-2. Engine Repair and Replacement Limits

Item	Measurements	
	Minimum	Maximum
CAMSHAFT		
Camshaft axle dia.	0.3730 (0.9474)	0.3733 (0.9481)
Cam lift	0.1827 (0.4640)	0.1867 (0.4742)
Cam lobe wear	1.3287 (3.3748)	1.3247 (3.3647)
CRANKSHAFT		
Main bearing journals:		
Front	0.9385 (2.3837)	0.9395 (2.3863)
Rear	0.9385 (2.3837)	0.9395 (2.3863)
Connecting rod journal o.d.	0.8745 (2.2212)	0.8750 (2.2225)
End play	0.000 (0.000)	0.003 (0.007)
Crankshaft bearings		
Bearing i.d. (cont)	0.9375 (2.3812)	0.938 (2.3825)
Bearing o.d. (cup)	1.9687 (5.0004)	1.9697 (5.0030)
VALVE TAPPETS		
Outside diameter	0.4974 (1.2633)	0.4979 (1.2646)
Clearance in guide	0.0006 (0.0015)	0.0018 (0.0045)
Tappet guide i.d.	0.4987 (1.2666)	0.4992 (1.2679)
CYLINDER		
A- bore	2.2495 (5.7137)	2.2500 (5.7150)
B - bore	2.2500 (5.7150)	2.2505 (5.7162)
C - bore	2.2505 (5.7162)	2.2510 (5.7175)
D - bore	2.2510 (5.7175)	2.2515 (5.7188)
Out of round	0.000 T.I.R. (0.000)	0.001 T.I.R. (0.0025)
Taper	0.000 (0.000)	0.002 (0.0050)

## APPENDIX A

### REFERENCES

A-1. **Scope.** This appendix contains all forms, lubrication orders, pamphlets and technical manuals referenced in this manual.

#### A-2. **Forms.**

Air Force Maintenance Management Policy . . . . .	AFR 66-1
Air Force Suggestion Program . . . . .	AFR 900-4
Equipment Inspection and Maintenance Worksheet . . . . .	DA Form 2404
Recommended Changes to Publications . . . . .	DA Form 2028-2
Quality Deficiency Report (QDR) . . . . .	SF 368
Transportation Discrepancy Report (TDR) . . . . .	SC 361
Report of Discrepancy (ROD).... .	SF 364

#### A-3. **Lubrication Order.**

Lubrication Order, Gasoline Engine, 1 1/2 HP Military Standard Models 1A08-1, -2, -3, and -4.. . . .	L0 9-2805-256-12
---------------------------------------------------------------------------------------------------------	------------------

#### A-4. **Pamphlets.**

The Army Maintenance Management System (TAMMS) . . . . .	DA Pam 738-750
Consolidated Index of Army Publications and Blank Forms . . . . .	DA Pam 25-30

#### A-5. **Technical Manuals.**

Unit, Direct Support, General Support and Depot Maintenance Repair Parts and Special Tool List . . . . .	TM 5-2805-256-24P TO 38G2-102-4 P-8-611-24P
Painting Instructions for Army Materiel . . . . .	TM 43-0139
Procedures for Destruction of Equipment to Prevent Enemy Use . . . . .	TM 750-244-3

#### A-6. **Field Manual.**

Artificial Respiration . . . . .	FM 21-11
----------------------------------	----------

#### A-7. **Technical Bulletin**

Preservation of Mechanical Equipment for Shipment and Storage. . . . .	TM 740-97-2
------------------------------------------------------------------------	-------------



## APPENDIX B

### MAINTENANCE ALLOCATION CHART

#### Section I. INTRODUCTION

**B-1. Maintenance Allocation Chart (MAC).** This MAC assigns maintenance functions in accordance with the Three Level Maintenance Concept.

**B-2. Use of the Maintenance Allocation Chart, Section II.**

a. The MAC assigns maintenance functions based on the following considerations:

- (1) Skills available.
- (2) Work time required.
- (3) Tools and test equipment required and/or available.

b. If a lower level of maintenance identified in column (4) of the MAC cannot perform all tasks of a single maintenance function (e.g., test, repair), then the higher level that can perform other tasks of that function is also indicated.

c. Higher maintenance levels are automatically authorized to perform maintenance functions assigned to a lower maintenance level.

d. Higher maintenance levels will perform the maintenance functions of lower maintenance levels when required or directed by the Commander who has authority to direct such tasking.

e. Assignment of a maintenance function in the MAC does not carry automatic authorization to carry the related spare or repair parts in stock. Information to requisition or secure parts will be as specified in the associated RPSTL.

f. Normally, there will be no deviation from the assigned level of maintenance. However, in cases of operational necessity, maintenance functions assigned a higher level may, at the request of the lower level, be assigned to the lower level on a one-time basis, if specifically authorized by the maintenance officer of the higher level to which the function is assigned. In such a case, the special tools, equipment, etc., required by the lower level to perform this function will be furnished by the higher level assigned the function. Also, transfer of a function to a lower level does not relieve the higher level of responsibility for the function, so the higher level will provide technical supervision and inspection of the function being performed at the lower level.

**B-3. Maintenance Functions.** Maintenance functions will be limited to and defined as follows:

a. Inspect. To determine the serviceability of an item by comparing its physical, mechanical, and/or electrical characteristics with established standards through examination (e.g., by sight, sound, or feel).

b. Test. To verify serviceability and detect incipient failure by measuring the mechanical or electrical characteristics of an item and comparing those characteristics with prescribed standards.



c. Service. Operations required periodically to keep an item in proper operating condition, i.e., to clean (includes decontaminate), to preserve, to drain, or to replenish fuel, lubricants, hydraulic fluids, or compressed air supplies.

d. Adjust. To maintain within prescribed limits, by bringing into proper or exact position, or by setting the operating characteristics to the specified parameters.

e. Aline. To adjust specified variable elements of an item to bring about optimum or desired performance.

f. Calibrate. To determine and cause corrections to be made or to be adjusted on instruments or test measuring and diagnostic equipment used in precision measurement. Consists of comparison of two instruments, one of which is a certified standard of known accuracy, to detect and adjust any discrepancy in the accuracy of the instrument being compared.

g. Install. The act of emplacing, seating, or fixing into position an item, part, or module (component assembly) in a manner to allow the proper functioning of an equipment or system.

h. Replace. The act of substituting a serviceable like type part, a subassembly, or module (component or assembly) for an unserviceable counterpart.

i. Repair. The application of maintenance services (inspect, test, service, adjust, aline, calibrate, or replace) or other maintenance actions (welding, grinding, riveting, straightening, facing, remachining, or resurfacing) to restore serviceability to an item by correcting specific damage, fault, malfunction, or failure in a part, subassembly, module (component or assembly), end item, or system.

j. Overhaul. That maintenance effort (service/action) necessary to restore an item to a completely serviceable operational condition as prescribed by maintenance standards in appropriate technical publications (i.e., DMWR). Overhaul does not normally return an item to a like new condition.

k. Rebuild. Consists of those services/actions necessary for the restoration of unserviceable equipment to a like new condition in accordance with original manufacturing standards. Rebuild is the highest degree of materiel maintenance applied to Army equipment. The rebuild operation includes the act of returning to zero those age measurements (hours/miles, etc.) considered in classifying Army equipment/components.

#### **B-4. Explanation of Columns in the MAC, Section II.**

a. Column (1). Group Number. Column 1 lists functional group code numbers which are assigned to identify maintenance significant components, assemblies, subassemblies, and modules to their next higher assembly.

b. Column (2). Component/Assembly. Column 2 contains the item names of components, assemblies, subassemblies, and modules for which group numbers (column 1) are assigned and for which maintenance is authorized.

c. Column (3). Maintenance Function. Column 3 lists the functions to be performed on items listed in Column 2. (Function definition: are contained in paragraph A-3.)

d. Column (4). Maintenance Level. The maintenance levels, Unit, Intermediate, and Depot, are allotted separate subcolumns within column 4. Entry of a work time figure (such as 1.0, 0.2) in a subcolumn indicates that that level is authorized to perform the function listed in column 3, and the average time required to do the function is the work time figure. If the number or complexity of tasks within a maintenance function varies from one maintenance level to another, the applicable work time figure for each level will be entered for that function. The work time figure represents the average time it takes to restore a component/assembly to a serviceable condition under a typical field operating environment.

e. Column (5). Tools and Equipment. Column 5 specifies, by code, common tool sets (not individual tools from those sets), common TMDE, and special tools, TMDE, and support equipment required to perform a designated function. The code in Column 5 keys to the listing in Section III of the MAC.

f. Column (6). Remarks. This column when applicable, contains a letter code with is keyed to an explanation of the code contained in Section IV of the MAC.

#### **B-5. Explanation of Columns in the MAC, Section III.**

a. Column (1). Tool or Test Equipment Reference Code. The tool or test equipment reference code correlates with a code used in the MAC, Section II, Column 5.

b. Column (2). Maintenance Category. The lowest category of maintenance authorized to use the tool or test equipment.

c. Column (3). Nomenclature. Name or identification of the tool or test equipment.

d. Column (4). National/NATO Stock Number. The National stock number of the tool or test equipment.

e. Column (5). Tool Number. The manufacturer's part number.

#### **B-6. Explanation of Columns in the MAC, Section IV.**

a. Column (1). Reference Code. The code recorded in column 6, Section II.

b. Column (2). Remarks. This column lists information pertinent to the maintenance function being performed as indicated in the MAC, Section II.

## Section II. MAINTENANCE ALLOCATION CHART

(1) Group number	(2) Component/ assembly	(3) Maintenance function	(4) Maintenance level					(5) Tools and eqpt.	(6) Remarks
			C	O	F	H	D		
00	Engine Assembly	Overhaul					16.0		
01	Fuel Filter Assembly								
	Fuel Filter	Inspect	0.1					1	
		Service		0.3				1	
		Install		0.1					
		Replace		0.3					
02	Cooling System								
	Cylinder Head Covers	Replace		0.2				1	
		Repair		1.0				1	
	Lower Air Duct	Replace		0.2				1	
		Repair		1.0				1	
	Flywheel Cover	Replace		0.2				1	
		Repair		1.0				1	
	Ignition Switch	Inspect	0.1						
		Test		0.3				1,2	
		Install		0.3				1	
		Replace		0.6				1	
03	High Tension Cable and Spark Plug								
	High Tension Cable	Inspect	0.1						
		Test		0.3				1,3	
		Install		0.2				1	
		Replace		0.4				1	
	Spark Plug	Inspect	0.1						
		Test		0.3				1	
		Adjust		0.2				1	
		Install		0.4				1	
		Replace		0.5				1	

## Section II. MAINTENANCE ALLOCATION CHART (cont)

(1) Group number	(2) Component/ assembly	(3) Maintenance function	(4) Maintenance level					(5) Tools and eqpt.	(6) Remarks
			C	O	F	H	D		
04	Air Cleaner Assembly								
	Air Cleaner	Inspect	0.1						
		Service		0.3				1	
		Install		0.3				1	
		Replace		0.5				1	
	Clamps and Hoses	Install		0.2				1	
05		Replace		0.3				1	
	Element	Install		0.2				1	
		Replace		0.3					
	Rocker Arm Cover Assembly								
	Relief Valve	Inspect		0.1					
		Install		0.1				1	
06		Replace		0.2				1	
	Rocker Cover	Install		0.1				1	
		Replace		0.2				1	
		Repair		0.2				1	
	Oil Fill Tube and Gage Assembly								
	Tube	Install		0.2				1	
07		Replace		0.4				1	
	Gage	Install		0.1					
		Replace		0.1					
	Oil Pan Assembly								
	Oil Pan	Install			0.2			1	
		Replace			0.4			1	

**Section II. MAINTENANCE ALLOCATION CHART (cont)**

(1) Group number	(2) Component/ assembly	(3) Maintenance function	(4) Maintenance level					(5) Tools and eqpt.	(6) Remarks
			C	O	F	H	D		
08	Engine Speed Governor and Controls	Governor  Adjust Install Replace Repair		0.3	0.5			1	
					0.9			1	
					0.5			1	
								1	
09	Ignition System	Breaker Points Cover		0.1				1	
				0.1				1	
		Breaker Points		0.2					
				0.2				1	
				0.3				1	
				0.5				1	
		Condenser		0.2				1	
				0.4				1	
		Ignition Control Unit			0.4			1,2	
					0.3			1	
		Transformer			0.1			1,2	
					0.2			1	
		Ignition Module			0.2			1,2	
					0.2				
		Low Voltage Cable			0.1			1,2	
					0.3				
10	Breather Line Assembly	Breather Line		0.1					
				0.2				1	
				0.4				1	

**Section II. MAINTENANCE ALLOCATION CHART (cont)**

(1) Group number	(2) Component/ assembly	(3) Maintenance function	(4) Maintenance level					(5) Tools and eqpt.	(6) Remarks
			C	O	F	H	D		
11	Carburetor and Throttle Control								
	Throttle Control	Adjust	0.1						
		Install		0.2				1	
		Replace		0.4				1	
	Carburetor	Inspect		0.1					
		Adjust		0.1					
12		Install		0.4				1	
		Replace		0.7				1	
	Fuel Line and Fuel Pump Assembly								
	Fuel Line	Install		0.1				1	
		Replace		0.2				1	
	Fuel Pump	Test		0.2					
13		Install		0.2				1	
		Replace		0.4				1	
	Flywheel Assembly								
	Starter Flange	Install		0.1				1	
		Replace		0.2				1	
	Flywheel	Inspect		0.1					
14		Install		0.4				1	
		Replace		0.8				1	
	Manifolds								
	Intake	Install		0.2				1	
		Replace		0.4				1	
	Exhaust	Inspect		0.1					
		Install		0.2				1	
		Replace		0.4				1	

**Section II. MAINTENANCE ALLOCATION CHART (cont)**

(1)	(2)	(3)	(4)					(5)	(6)
Group number	Component/ assembly	Maintenance function	Maintenance level					Tools and eqpt.	Remarks
			C	O	F	H	D		
15	Cylinder Head Assembly	Install			0.3			1	B
		Replace			0.6			1	
		Repair			0.1			1	
	Rockers	Install			0.2			1	
		Replace			0.4			1	
	Intake and Exhaust Valves	Adjust			0.1			1	
		Install			0.2			1	
		Replace			0.4			1	
	16	Piston and Connecting Rod Assembly	Repair			0.8			
Aline					0.1			1	
Install					0.3			1	
Replace					0.6			1	
17	Bearing Cap Assembly								
	Rotating Magnet	Install			0.2			1	
		Replace			0.4			1	
	Coil	Test			0.2			1,2	
		Install			0.2			1	
		Replace			0.4			1	
	Bearing Cap	Install				0.8		1	
		Replace				1.5		1	
		Repair				0.5		1	
	Bearing Cup	Install				0.2		1	
		Replace				0.4		1	
	18	Crankshaft Assembly	Inspect				0.3		
Install						0.4		1	
Replace						0.8		1	

## Section II. MAINTENANCE ALLOCATION CHART (cont)

(1) Group number	(2) Component/ assembly	(3) Maintenance function	(4) Maintenance level					(5) Tools and eqpt.	(6) Remarks
			C	O	F	H	D		
19	Camshaft Assembly	Inspect Install Replace				0.2 0.4 0.8		1 1	
20	Crankcase Assembly	Repair				0.5		1	

## Section III. TOOLS AND TEST EQUIPMENT REQUIREMENTS FOR 1 1/2 HP MILITARY STANDARD ENGINE

Tool or test equipment ref code (1)	Maintenance category (2)	Nomenclature (3)	National/NATO stock number (4)	PN Tool number (5)
1	0	General Mechanics Tool Kit	5180-00-699-5273	
2	0	Shop Equipment, Automotive Maintenance and Repair: Organizational Maintenance, No. 1 Common, Less Power	4919-00-754-0654	
3	F	Shop Equipment, Automotive Maintenance and Repair; Field Maintenance, Wheeled Vehicles, Set A	4910-95-CL-A02 4910-00-348-7696	

## Section IV. REMARKS

Reference Code	Remarks
A	Test includes pressure test
B	Test includes compression test





## APPENDIX C

### COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS

#### Section I. INTRODUCTION

##### C-1. Scope.

This appendix lists components of end item and basic issue items for the 1 1/2 HP Military Standard Engine to help you inventory items required for safe and efficient operation.

##### C-2. General.

The Components of End Item and Basic Issue Items Lists are divided into the following sections.

a. Section II. Components of End Item. This listing is for informational purposes only, and is not authority to requisition replacements. The items are part of the end item, but are removed and separately packaged for transportation or shipment. As part of the end item, these items must be with the end item whenever it is issued or transferred between properly accounts. Illustrations are furnished to assist you in identifying the items.

b. Section III. Basic Issue Items. These are the minimum essential items required to place the 1 1/2 HP Military standard engine in operation. The illustrations will assist you with hard-to-identify items. This manual is your authority to request/requisition replacement Bll, based on TOE/MTOE authorization of the end item.

##### C-3. Explanation of Columns.

The following provides an explanation of columns found in the tabular listings:

a. Column (1). Illustration Number (Illus Number). This column indicates the number of the illustration in which the item is shown.


b. Column (2). National Stock Number. Indicates the National Stock Number assigned to the item and will be used for requisitioning purposes.

c. Column (3). Description. Indicates the Federal item name, and, if required, a minimum description to identify and locate the item. The last line for each item indicates the FSCM (in parentheses) followed by the part number.

d. Column (4). Unit of Measure (U/M). Indicates the measure used in performing the actual operational/maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in., pr).

e. Column (5). Quantity Required (QTY RQR). Indicates the quantity of the item authorized to be used with/on the equipment.

## Section II. COMPONENTS OF END ITEMS

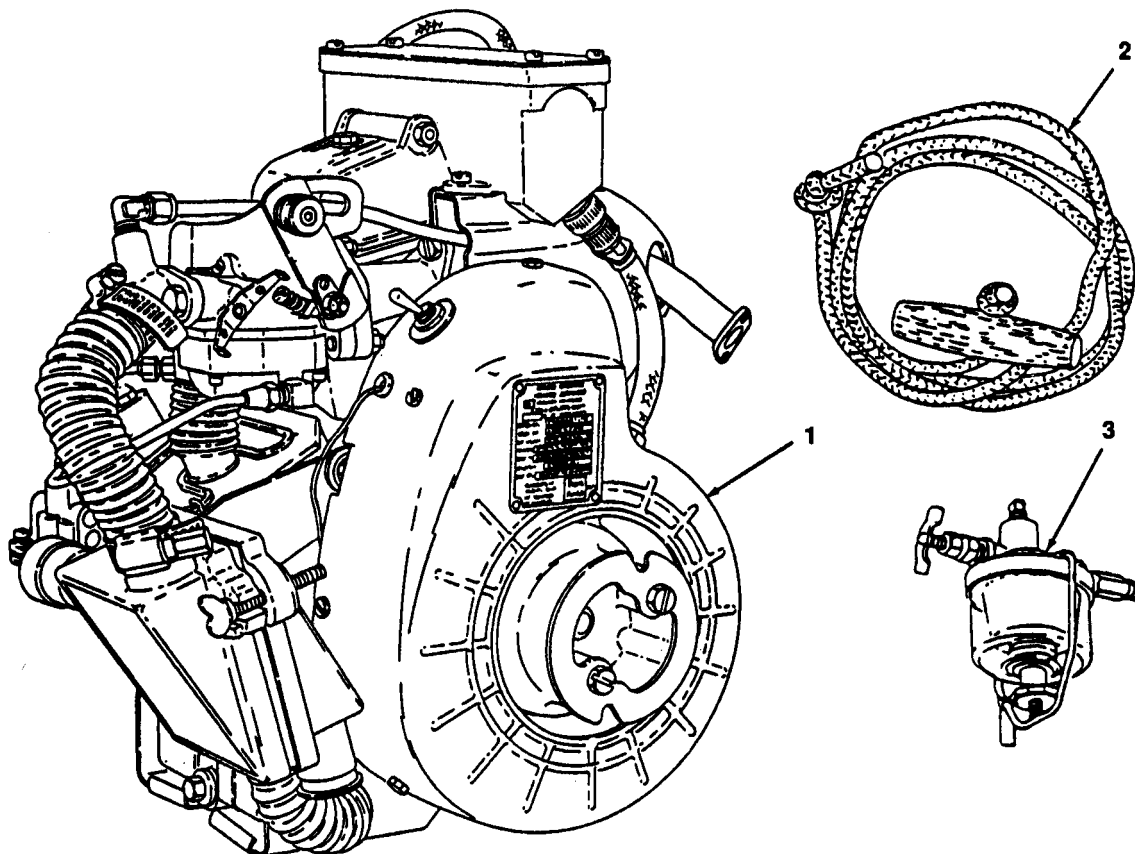

4866-079

(1) Illus Number	(2) National Stock Number	(3) Description FSCM and Part Number	Usable On Code	(4) U/M	(5) Qty Rqr
1	2805-00-601-5181	Engine, Military Standard 1 1/2 HP Model 1A08-1		ea	1
1	2805-00-714-8552	Engine, Military Standard 1 1/2 HP Model 1A08-2		ea	1
1	2805-00-068-7510	Engine, Military Standard 1 1/2 HP Model 1		ea	1
1	2805-01-182-8467	Engine, Military Standard 1 1/2 HP Model 1A08-4		ea	1
2	2990-00-972-7950	Rope Starter Cable Assembly		ea	1
3	2910-00-905-9792	Filter Assembly, Fuel		ea	1

**Section III. BASIC ISSUE ITEMS**

Not Applicable



## APPENDIX D

### EXPENDABLE/DURABLE SUPPLIES MATERIALS LIST

#### Section I. INTRODUCTION

D-1. **Scope.** This listing is for informational purposes only and is not authority to requisition the listed items. These items are authorized to you by CTA 50-970, Expendable/Durable Items (except medical, class V, repair parts, and heraldic items).

#### D-2. Explanation of Columns.

a. Column (1) - Item Number. This number is assigned to the entry in the listing and is referenced in the narrative instructions to identify the material (e.g., "Use cleaning compound, item 5, appendix C").

b. Column (2) - Level. This column identifies the lowest level of maintenance that requires the listed item.

- C - Operator/Crew
- O - Organizational Maintenance
- F - Direct Support Maintenance
- H - General Support Maintenance

c. Column (3) - National Stock Number. This is the National stock number assigned to the item; use it to request or requisition the item.

d. Column (3) - Description. Indicates the Federal item name, and, if required, a description to identify the item. The last line for each item indicates the Federal Supply code for Manufacturer (FSCM ) in parentheses followed by the part number.

d. Column (5) - Unit of Measure (U/M). Indicates the measure used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., EA, IN., PR). If the unit of measure differs from the unit of issue, requisition the lowest unit of issue that will satisfy your requirements.

## Section II. EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST

(1) Item number	(2) Level	(3) National stock number	(4) Description	(5) U/M
1	C		Coating, Chemical Agent Resistant	gal.
2	C	9150-01-152-4117	Oil, Engine OE/HDO 15W-40	qt.
	C	9150-01-152-4118	Oil, Engine OE/HDO 15W-40	5 gal.
	C	9150-01-152-4119	Oil, Engine OE/HDO 15W-40	55 gal.
3	C		Oil, Engine OE/HDO 30	qt.
4	C		Oil, Engine, OEA/APH-PD-1	qt.
5	C		Oil, Engine OEA/APG-PD-1	qt.
6	C	7920-00-205-1711	Rag, Wiping, 50/B (58536) A-A-531	ea
7	C		Solvent, Drycleaning PD-680	gal.

## APPENDIX E

### TORQUE LIMITS

E-1. **General.** Table E-1 provides torque limits to be observed when installing attaching hardware or spark plugs.

*Table E-1. Torque Limits.*

Attaching Part	Range
Flywheel bolt	240-300 in. lb (42864-53580 gr cm)
Cylinder head nuts	140-155 in. lb (25004-27683 gr cm)
Rocker arm adjusting screw lock nuts	44-55 in. lb (7858-9823 gr cm)
Intake manifold to cylinder head bolts	45-50 in. lb (8037-8930 gr cm)
Muffler to cylinder head bolts	60-85 in. lb (10715-15181 gr cm)
Spark plugs	275-300 in. lb (49115-53580 gr cm)
Connecting rod bolts	90-100 in. lb (16074-17860 gr cm)
Oil pan screws	25-30 in. lb (4465-5358 gr cm)
Bearing cap nuts	100-125 in lb(17860-22325 gr cm)
Fuel pump bolts	45-50 in. lb (8037-8930 gr cm)
Governor housing screws	25-30 in. lb (4465-5358 gr cm)
Carburetor mounting bolts	60-85 in. lb (10715-15181 gr cm)



APPENDIX F

ADDITIONAL AUTHORIZATION LIST (AAL)

Section I. INTRODUCTION

- D-1. SCOPE.** This appendix lists additional items you are authorized for the Engine, Gasoline, 1 1/2 HP MILSTD.
- D-2. GENERAL.** Section II identifies items that are not routinely used with the MILSTD and do not have to accompany it or be turned in with it.
- D-3. EXPLANATION OF LISTING.** National stock numbers, descriptions, and quantities are provided to help you identify and request the additional items you require to support this equipment. The items are listed in alphabetical sequence by item name.

Section II. ADDITIONAL AUTHORIZATION LIST

(1) ITEM NO	(2) NATIONAL STOCK NUMBER	(3) DESCRIPTION,(FSCM) & PART NUMBER	USABLE ON CODE	(4) U/M	(5 ) QTY AUTH
1	2990-01-032-0775	SPARK ARRESTER		EA	1

Change 2 F-1/(F-2 blank)

## INDEX

Subject	Paragraph
<b>A</b>	
Administrative Storage . . . . .	4-75
Air Cleaner . . . . .	4-20
Air Cleaner Assembly . . . . .	4-21
Air Cleaner Element . . . . .	4-23
Altitudes, Operation at Different. . . . .	2-14
<b>B</b>	
Bearing Cap . . . . .	4-41
Bearing Cap Assembly . . . . .	6-7
Breaker Points (Breaker Point Ignition) . . . . .	4-30
Breaker Points Assembly (Breaker Point Ignition) . . . . .	4-29
Breaker Points Cover (Breaker Point Ignition) . . . . .	4-28
Breather Line . . . . .	4-32
<b>C</b>	
Camshaft Assembly . . . . .	6-9
Capabilities and Features, Equipment Characteristics . . . . .	1-8
Carburetor . . . . .	4-34
Clamps and Hoses . . . . .	4-22
Common Tools and Test Equipment	
Direct Support . . . . .	5-1
General Support . . . . .	6-1
Unit . . . . .	4-1
Components of End Item and Basic Issue Items List . . . . .	C-1
Compression Test . . . . .	5-52
Condenser . . . . .	4-31
Connecting Rod Assembly, Piston and . . . . .	5-18
Consolidated Index of Army Publications and Blank Forms . . . . .	1-2
Controls and Indicators, Description and Use of Operator's . . . . .	2-2
Crankcase Assembly . . . . .	6-10
Crankshaft Assembly . . . . .	6-8
Crankshaft Side Oil Seal . . . . .	5-23
Cylinder Head . . . . .	5-14
Cylinder Head Covers . . . . .	4-15
<b>D</b>	
Destruction of Army Materiel to Prevent Enemy Use . . . . .	1-5
Differences Between Models . . . . .	1-12
Different Altitudes, Operational. . . . .	2-14

## INDEX (cont)

Subject	Paragraph
<b>D (cont)</b>	
Direct Support Maintenance Procedures	
Coil . . . . .	5-20
Compression Test . . . . .	5-24
Crankshaft Side or Seal . . . . .	5-23
Cylinder Head . . . . .	5-26
Flywheel Oil Seal . . . . .	5-21
Governor Assembly . . . . .	5-8
Ignition Control Unit (Breakerless Ignition) . . . . .	5-10
Ignition Module (Breakerless Ignition) . . . . .	5-12
Ignition Timing (Breaker Point Ignition) . . . . .	5-9
Intake and Exhaust Valves.. . . .	5-17
Low Voltage Cable (Breakerless Ignition) . . . . .	5-13
Noise Suppression Filter (Breaker Point Ignition) . . . . .	5-22
Oil Pan . . . . .	5-7
Piston and Connecting Rod Assembly . . . . .	5-18
Rockers . . . . .	5-15
Rotating Magnet . . . . .	5-19
Transformer (Breakerless Ignition). . . . .	5-11
Valve Adjustment . . . . .	5-16
Direct Support Troubleshooting Procedures . . . . .	5-5
Dusty or Sandy Areas, Operation in . . . . .	2-11

## E

Element, Air Cleaner . . . . .	4-23
Equipment Characteristics, Capabilities and Features . . . . .	1-8
Equipment Data . . . . .	1-11
Equipment Improvement Recommendations (EIR), Reporting . . . . .	1-4
Exhaust Manifold . . . . .	4-40
Exhaust Valves, Intake and . . . . .	5-17
Expendables/Durables Supplies Materiels List . . . . .	D-1
Extreme Cold, Operation in . . . . .	2-15
Extreme Heat, Operation in . . . . .	2-13

## F

Filter, Noise Suppression . . . . .	5-22
Flywheel . . . . .	4-38
Flywheel Cover . . . . .	4-16
Flywheel Side Oil Seal . . . . .	5-21
Fuel Filter Assembly . . . . .	4-13
Fuel Line . . . . .	4-35
Fuel Pump . . . . .	4-36

## INDEX (cont)

Subject	Paragraph
<b>G</b>	
Gage Assembly, Oil Fill Tube and . . . . .	4-26
General Support Maintenance Procedures	
Bearing Cap Assembly . . . . .	6-7
Camshaft Assembly . . . . .	6-9
Crankcase Assembly . . . . .	6-10
Crankshaft Assembly . . . . .	6-8
General Support Troubleshooting Procedures . . . . .	6-5
Glossary . . . . .	1-7
Governor Assembly . . . . .	4-27, 5-8
<b>H</b>	
Handling, Safety, Care, and . . . . .	1-13
High Tension Cable . . . . .	4-18
Hoses, Clamps and . . . . .	4-22
<b>I</b>	
Ignition Control Unit (Breakerless Ignition) . . . . .	5-10
Ignition Module (Breakerless Ignition) . . . . .	5-12
Ignition Timing (Breaker Point Ignition) . . . . .	5-9
Ignition Switch . . . . .	4-17
Indicators, Operator's Controls and . . . . .	2-2
Inspection . . . . .	4-4
Intake and Exhaust Valves . . . . .	5-17
Intake Manifold . . . . .	4-39
Intermediate Storage Procedures, Short Term and . . . . .	4-43
<b>J, K</b>	
<b>L</b>	
Location and Description of Major Components (Models 1A08-1, -2) . . . . .	1-9
Location and Description of Major Components (Models 1A08-3, -4) . . . . .	1-10
Lower Air Duct . . . . .	4-15
Low Voltage Cable . . . . .	5-13
Lubrication . . . . .	3-2, 4-5
<b>M</b>	
Magnetic, Rotating . . . . .	5-19
Maintenance Allocation Chart.... .	B-1
Maintenance Forms, Records and Reports . . . . .	1-3

## INDEX (cont)

Subject	Paragraph
<b>M (cont)</b>	
Maintenance Procedures, Direct Support	
Coil . . . . .	5-20
Compression Test . . . . .	5-24
Crankshaft Side Oil Seal . . . . .	5-23
Cylinder Head . . . . .	5-26
Flywheel Oil Seal . . . . .	5-21
Governor Assembly . . . . .	5-8
Ignition Control Unit (Breakerless Ignition) . . . . .	5-10
Ignition Module (Breakerless Ignition) . . . . .	5-12
Ignition Timing (Breaker Point Ignition) . . . . .	5-9
Intake and Exhaust Valves . . . . .	5-17
Low Voltage Cable (Breakerless Ignition) . . . . .	5-13
Noise Suppression Filter (Breaker Point Ignition) . . . . .	5-22
Oil Pan . . . . .	5-7
Piston and Connecting Rod Assembly . . . . .	5-18
Rockers . . . . .	5-15
Rotating Magnet . . . . .	5-19
Transformer (Breakerless Ignition). . . . .	5-11
Valve Adjustment . . . . .	5-16
Maintenance Procedures, General Support	
Bearing Cap Assembly . . . . .	6-7
Camshaft Assembly . . . . .	6-9
Crankcase Assembly . . . . .	6-10
Crankshaft Assembly . . . . .	6-8
Maintenance Procedures, Unit	
Air Cleaner . . . . .	4-20
Air Cleaner Assembly . . . . .	4-21
Air Cleaner Element . . . . .	4-23
Bearing Cap . . . . .	4-41
Breaker Points (Breaker Point Ignition) . . . . .	4-30
Breaker Points Assembly (Breaker Point Ignition) . . . . .	4-29
Breaker Points Cover (Breaker Point Ignition) . . . . .	4-28
Breather Line . . . . .	4-32
Carburetor . . . . .	4-34
Clamps and Hoses . . . . .	4-22
Condenser (Breaker Point Ignition). . . . .	4-31
Cylinder Head Covers . . . . .	4-14
Exhaust Manifold . . . . .	4-39
Flywheel . . . . .	4-38
Flywheel Cover . . . . .	4-16
Fuel Filter Assembly . . . . .	4-13
Fuel Line . . . . .	4-35
Fuel Pump . . . . .	4-36
Governor Assembly . . . . .	4-27

## INDEX (cont)

Subject	Paragraph
<b>M (cont)</b>	
High Tension Cable . . . . .	4-18
Ignition Switch . . . . .	4-17
Intake Manifold . . . . .	4-39
Lower Air Duct . . . . .	4-15
Oil Fill Tube and Gage Assembly. . . . .	4-26
Painting . . . . .	4-12
Relief Valve . . . . .	4-24
Rocker Cover . . . . .	4-25
Spark Plug . . . . .	4-19
Starter Flange . . . . .	4-37
Throttle Control . . . . .	4-33
Major Components (Models 1A08-1, -2), Location and Descriptions of . . . . .	1-9
Major Components (Models 1A08-3, -4), Location and Descriptions of . . . . .	1-10
Manifold, Exhaust . . . . .	4-40
Manifold, Intake . . . . .	4-39
Models, Differences Between . . . . .	1-12
Module (Breakerless Ignition), Ignition . . . . .	5-12
<b>N</b>	
Noise Suppression Filter (Breaker Point Ignition) . . . . .	5-22
<b>O</b>	
Oil Fill Tube and Gage Assembly . . . . .	4-26
Oil Pan . . . . .	5-7
Oil Seal, Crankshaft Side . . . . .	5-23
Oil Seal, Flywheel Side . . . . .	5-21
Operational Different Altitudes . . . . .	2-14
Operation in Dusty or Sandy Areas. . . . .	2-11
Operation in Extreme Cold . . . . .	2-15
Operation in Extreme Heat . . . . .	2-13
Operation, Principles of . . . . .	1-14
Operation in Rainy, Humid, or Salt Air Conditions . . . . .	2-12
Operator's Controls and Indicators. ....	2-2
Operator Troubleshooting Procedures . . . . .	3-4
<b>P</b>	
Painting . . . . .	4-12
Pan, Oil . . . . .	5-7
Piston and Connecting Rod Assembly . . . . .	5-18
Preparation for Storage or Shipment . . . . .	1-6

## INDEX (cont)

Subject

### P (cont)

Preventive Maintenance Checks and Services (PMCS)	
Operator . . . . .	2-3
Unit . . . . .	4-8
Principles of Operation . . . . .	1-14
Procedures, Starting . . . . .	2-9
Procedures, Stopping . . . . .	2-10
Pump, Fuel . . . . .	4-36

### Q

### R

Rainy, Humid, or Salt air Conditions, Operation in . . . . .	2-12
Records and Reports, Maintenance Forms . . . . .	1-3
References . . . . .	A-1
Relief Valve . . . . .	4-24
Repair Parts	
Direct Support . . . . .	5-3
General Support . . . . .	6-3
Unit . . . . .	4-3
Reporting Equipment Improvement Recommendations (EIR) . . . . .	1-4
Rocker Cover . . . . .	4-25
Rockers . . . . .	5-15
Rotating Magnet . . . . .	5-19

### S

Safety, Care and Handling . . . . .	1-13
Salt Air Conditions, Operation in Rainy, Humid, or . . . . .	2-12
Sandy or Dusty Areas, Operation in . . . . .	2-11
Spark Plug . . . . .	4-19
Special Tools, Test Measurement and Diagnostic Equipment (TMDE)	
and Support Equipment . . . . .	4-2, 5-2, 6-2
Starter Flange . . . . .	4-37
Starting Procedures . . . . .	2-9
Stopping Procedures . . . . .	2-10
Storage or Shipment, Preparation for . . . . .	1-6
Storage, Administrative . . . . .	4-75
Support Equipment, Special Tools, Test Measurement and	
Diagnostic Equipment, and. . . . .	4-2, 5-2, 6-2
Switch, Ignition . . . . .	4-17

## INDEX (cont)

Subject	Paragraph
<b>T</b>	
Test, Compression . . . . .	5-24
Testing . . . . .	4-6
Throttle Control . . . . .	4-33
Timing (Breaker Point Ignition), Ignition . . . . .	5-9
Torque Limits . . . . .	E-1
Transformer (Breakerless Ignition). . . . .	5-11
Troubleshooting, Procedures,	
Direct Support . . . . .	5-5
General Support . . . . .	6-5
Unit . . . . .	4-10
<b>U</b>	
Unit Maintenance Procedures	
Air Cleaner . . . . .	4-20
Air Cleaner Assembly . . . . .	4-21
Air Cleaner Element . . . . .	4-23
Bearing Cap . . . . .	4-41
Breaker Points (Breaker Point Ignition) . . . . .	4-30
Breaker Points Assembly (Breaker Point Ignition) . . . . .	4-29
Breaker Points Cover (Breaker Point Ignition) . . . . .	4-28
Breather Line . . . . .	4-32
Carburetor . . . . .	4-34
Clamps and Hoses . . . . .	4-22
Condenser (Breaker Point Ignition). . . . .	4-31
Cylinder Head Covers . . . . .	4-14
Exhaust Manifold . . . . .	4-39
Flywheel . . . . .	4-38
Flywheel Cover . . . . .	4-16
Fuel Filter Assembly . . . . .	4-13
Fuel Line . . . . .	4-35
Fuel Pump . . . . .	4-36
Governor Assembly . . . . .	4-27
High Tension Cable . . . . .	4-18
Ignition Switch . . . . .	4-17
Intake Manifold . . . . .	4-39
Lower Air Duct . . . . .	4-15
Oil Fill Tube and Gage Assembly. . . . .	4-26
Painting . . . . .	4-12
Relief Valve . . . . .	4-24
Rocker Cover . . . . .	4-25
Spark Plug . . . . .	4-19



INDEX (cont)

Subject	Paragraph
U (cont)	
Starter Flange . . . . .	4-37
Throttle Control . . . . .	4-33
Unit Troubleshooting Procedures . . . . .	4-10

V

Valve Adjustment . . . . .	5-16
Valve, Relief . . . . .	4-24
Valves, Intake and Exhaust . . . . .	5-17

W, X, Y, Z

ARMY TM 9-2805-256-14  
AIR FORCE TO 38G2-102-2  
NAVY NAVFAC P-8-611-14E

C 2

By Order of the Secretaries of the Army, Air Force and Navy:

**RONALD R. FOGELMAN**

*General, USAF*

*Chief of Staff*

**HENRY VICCELLIO, JR.**

*General, USAF*

*Commander, Air Force Materiel Command*

**J.E. BUFFINGTON**

*Rear Admiral, CEC, US Navy*

*Commander*

*Navy Facilities Engineering*

*Command*

DISTRIBUTION:

To be distributed in accordance with DA Form 12-25-E, block no. 0751, requirements for TM 9-2805-256-14.



# RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CAREFULLY TEAR IT OUT, FOLD IT AND DROP IT IN THE MAIL!

## SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

PFC JOHN DOE  
COA, 3d ENGINEER BN  
FT. LEANARDWOOD, MO 63108

DATE SENT

PUBLICATION NUMBER

TM 9-2805-256-14

PUBLICATION DATE

10 Aug 1990

PUBLICATION TITLE

Engine, Gasoline, 1½ HP

BE EXACT... PIN-POINT WHERE IT IS

PAGE NO

PARA-GRAPH

FIGURE NO

TABLE NO

IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:

6

2-1  
a

In line 6 of paragraph 2-1a the manual states the engine has 6 Cylinders. The engine on my set only has 4 Cylinders. Change the manual to show 4 Cylinders.

B1

4-3

Callout 16 on figure 4-3 is pointing at a bolt. In key to figure 4-3, item 16 is called a shim - Please correct one or the other.

125

line 20

I ordered a gasket, item 19 on figure B-16 by NSN 2 910-00-762-3001. I got a gasket but it doesn't fit. Supply says I got what I ordered, so the NSN is wrong. Please give me a good NSN

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

JOHN DOE, PFC (268) 317-7111

SIGN HERE:

JOHN DOE

DA FORM 2028-2  
1 JUL 79

PREVIOUS EDITIONS ARE OBSOLETE.  
DRSTS-M Overprint 1, 1 Nov 80

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR RECOMMENDATION MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

COMMANDER  
U S ARMY TROOP SUPPORT COMMAND  
ATTN: AMSTR-MCTS  
4300 GOODFELLOW BOULEVARD  
ST. LOUIS, MO 63120-1798

TEAR ALONG PERFORATED LINE

# RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE  
DOPE ABOUT IT ON THIS  
FORM, CAREFULLY TEAR IT  
OUT, FOLD IT AND DROP IT  
IN THE MAIL!

## SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 9-2805-256-14

PUBLICATION DATE

10 Aug 1990

PUBLICATION TITLE

Engine, Gasoline, 1½ HP

BE EXACT... PIN-POINT WHERE IT IS

PAGE  
NO

PARA-  
GRAPH

FIGURE  
NO

TABLE  
NO

IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2

1 JUL 79

PREVIOUS EDITIONS  
ARE OBSOLETE.  
DRSTS-M Overprint 2, 1 Nov 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR  
RECOMMENDATION MAKE A CARBON COPY OF THIS  
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

COMMANDER  
U S ARMY TROOP SUPPORT COMMAND  
ATTN: AMSTR-MCTS  
4300 GOODFELLOW BOULEVARD  
ST. LOUIS, MO 63120-1798

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE  
DOPE ABOUT IT ON THIS  
FORM. CAREFULLY TEAR IT  
OUT, FOLD IT AND DROP IT  
IN THE MAIL!

**SOMETHING WRONG WITH THIS PUBLICATION?**

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 9-2805-256-14

PUBLICATION DATE

10 Aug 1990

PUBLICATION TITLE

Engine, Gasoline, 1½ HP

BE EXACT... PIN-POINT WHERE IT IS

PAGE  
NO

PARA-  
GRAPH

FIGURE  
NO

TABLE  
NO

IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2  
1 JUL 79

PREVIOUS EDITIONS  
ARE OBSOLETE.  
DRSTS-M Overprint 2, 1 Nov 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR  
RECOMMENDATION MAKE A CARBON COPY OF THIS  
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE



FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

COMMANDER  
U S ARMY TROOP SUPPORT COMMAND  
ATTN: AMSTR-MCTS  
4300 GOODFELLOW BOULEVARD  
ST. LOUIS, MO 63120-1798

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE  
DOPE ABOUT IT ON THIS  
FORM. CAREFULLY TEAR IT  
OUT. FOLD IT AND DROP IT  
IN THE MAIL!

# SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 9-2805-256-14

PUBLICATION DATE

10 Aug 1990

PUBLICATION TITLE

Engine, Gasoline, 1½ HP

BE EXACT... PIN-POINT WHERE IT IS

PAGE  
NO

PARA-  
GRAPH

FIGURE  
NO

TABLE  
NO

IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2  
1 JUL 79

PREVIOUS EDITIONS  
ARE OBSOLETE.  
DRSTS-M Overprint 2, 1 Nov 80.

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR  
RECOMMENDATION MAKE A CARBON COPY OF THIS  
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR  
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS

COMMANDER  
U S ARMY TROOP SUPPORT COMMAND  
ATTN: AMSTR-MCTS  
4300 GOODFELLOW BOULEVARD  
ST. LOUIS, MO 63120-1798

TEAR ALONG PERFORATED LINE

# The Metric System and Equivalents

## Linear Measure

1 centimeter = 10 millimeters = .39 inch  
 1 decimeter = 10 centimeters = 3.94 inches  
 1 meter = 10 decimeters = 39.37 inches  
 1 dekameter = 10 meters = 32.8 feet  
 1 hectometer = 10 dekameters = 328.08 feet  
 1 kilometer = 10 hectometers = 3,280.8 feet

## Weights

1 centigram = 10 milligrams = .15 grain  
 1 decigram = 10 centigrams = 1.54 grains  
 1 gram = 10 decigram = .035 ounce  
 1 dekagram = 10 grams = .35 ounce  
 1 hectogram = 10 dekagrams = 3.52 ounces  
 1 kilogram = 10 hectograms = 2.2 pounds  
 1 quintal = 100 kilograms = 220.46 pounds  
 1 metric ton = 10 quintals = 1.1 short tons

## Liquid Measure

1 centiliter = 10 milliliters = .34 fl. ounce  
 1 deciliter = 10 centiliters = 3.38 fl. ounces  
 1 liter = 10 deciliters = 33.81 fl. ounces  
 1 dekaliter = 10 liters = 2.64 gallons  
 1 hectoliter = 10 dekaliters = 26.42 gallons  
 1 kiloliter = 10 hectoliters = 264.18 gallons

## Square Measure

1 sq. centimeter = 100 sq. millimeters = .155 sq. inch  
 1 sq. decimeter = 100 sq. centimeters = 15.5 sq. inches  
 1 sq. meter (centare) = 100 sq. decimeters = 10.76 sq. feet  
 1 sq. dekameter (are) = 100 sq. meters = 1,076.4 sq. feet  
 1 sq. hectometer (hectare) = 100 sq. dekameters = 2.47 acres  
 1 sq. kilometer = 100 sq. hectometers = .386 sq. mile

## Cubic Measure

1 cu. centimeter = 1000 cu. millimeters = .06 cu. inch  
 1 cu. decimeter = 1000 cu. centimeters = 61.02 cu. inches  
 1 cu. meter = 1000 cu. decimeters = 35.31 cu. feet

## Approximate Conversion Factors

To change	To	Multiply by	To change	To	Multiply by
inches	centimeters	2.540	ounce-inches	newton-meters	.007062
feet	meters	.305	centimeters	inches	.394
yards	meters	.914	meters	feet	3.280
miles	kilometers	1.609	meters	yards	1.094
square inches	square centimeters	6.451	kilometers	miles	.621
square feet	square meters	.093	square centimeters	square inches	.155
square yards	square meters	.836	square meters	square feet	10.764
square miles	square kilometers	2.590	square meters	square yards	1.196
acres	square hectometers	.405	square kilometers	square miles	.386
cubic feet	cubic meters	.028	square hectometers	acres	2.471
cubic yards	cubic meters	.765	cubic meters	cubic feet	35.315
fluid ounces	milliliters	29.573	cubic meters	cubic yards	1.308
pints	liters	.473	milliliters	fluid ounces	.034
quarts	liters	.946	liters	pints	2.113
gallons	liters	3.785	liters	quarts	1.057
ounces	grams	28.349	liters	gallons	.264
pounds	kilograms	.454	grams	ounces	.035
short tons	metric tons	.907	kilograms	pounds	2.205
pound-feet	newton-meters	1.356	metric tons	short tons	1.102
pound-inches	newton-meters	.11296			

## Temperature (Exact)

°F	Fahrenheit temperature	5/9 (after subtracting 32)	Celsius temperature	°C
----	------------------------	----------------------------	---------------------	----



This fine document...

Was brought to you by me:



### [Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to [liberatedmanuals.com](http://liberatedmanuals.com), so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals</A>

- Sincerely  
Igor Chudov  
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)