

**TM 11-6625-539-24P-2**

---

**TECHNICAL MANUAL**

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT  
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST  
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)  
FOR**

**TEST SET, TRANSISTOR TS-1836B/U**

**(NSN 6625-00-168-0954)**

---

**HEADQUARTERS      DEPARTMENT OF      THE      ARMY  
03 AUGUST 1976**



TECHNICAL MANUAL

No. 11-6625-539-24P-2



HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, DC, 3 August 1976

**ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT  
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST  
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)  
FOR  
TEST SET, TRANSISTOR TS-1836B/U  
(NSN 6625-00-168-0954)**

**Current as of 28 April 1976**

**REPORTING OF ERRORS**

You can improve this manual by recommending improvements using DA Form 2028-2 (Test) located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 (Test) in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Electronics Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Section	Page	Illus Figure
I. Introduction	1	
II. Repair parts list	5	
Group 00 Test Set, Transistor TS-1836B/U	5	
01 Case Assembly (Upper)	6	2
02 Panel Assembly	9	3-5
0201 Electronic Components Assembly	15	6
03 Case Assembly (Lower)	17	7
Section III. Special tool list (Not applicable)		
IV. National stock number and part number index	18	



## SECTION 1

### INTRODUCTION

---

#### **1. Scope**

This manual lists repair parts and special tools required for performance of general support maintenance of the TS-1836B/U.

#### **2. General**

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section 11. Repair Parts List.* A list of repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence.

b. *Section III. Special Tools List.* Not applicable.

c. *Section IV. National Stock Number and Part Number Index.* A list, in ascending National item identification number (NIIN, last 9 digits) sequence, of all National stock numbers appearing in the listings, followed by a list, in alphabetic sequence, of all part numbers appearing in the listings. National stock number and part numbers are cross-referenced to each illustration figure and item number appearance.

#### **3. Explanation of Columns**

The following provides an explanation of columns found in the tabular listings:

a. *Illustration.* This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration in which the item is shown.

(2) *item number.* The number used to identify each item called out in the illustration.

b. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair,

or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

#### **NOTE**

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA, XD, and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application /Explanation
H	Support item is removed, replaced, used at the general support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application /Explanation
H	The lowest maintenance level capable of complete repair of the support item is the general support level.
Z	Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

<i>Recoverability Codes</i>	<i>Definition</i>
---------------------------------	-------------------

Z—Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.

H—Reparable item. When uneconomically repairable, condemn and dispose at the general support level.

c. *National Stock Number.* Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. *Part Number.* Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications standards, and inspection requirements, to identify an item or range of items.

#### **NOTE**

When a stock number item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. *Federal Supply Code for Manufacturer (FSCM).* The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or (government agency, etc.)

f. *Description.* Indicates the Federal item name and, if required, a minimum description to identify the item.

g. *Unit of Measure (U/M).* Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc.). When the unit of measure differs from

the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. *Quantity Incorporated in Unit.* Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

#### **4. Special Information**

The following publication pertains to the TS-1836B/U and its components:

TM 11-6625-539-15-2, Test Set, Transistor TS-1836B/U.

#### **5. How to Locate Repair Parts**

a. When National stock number or part number is unknown.

(1) *First.* Using the table of contents, determine the functional group within which the repair part belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the repair part belongs.

(3) *Third.* Identify the repair part on the illustration and note the illustration figure and item number of the repair part.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.


(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in ascending NIIN sequence followed by a list of part numbers in ascending alphabetic sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

#### **6. Abbreviations**

Not applicable.

(Next printed page is 5)

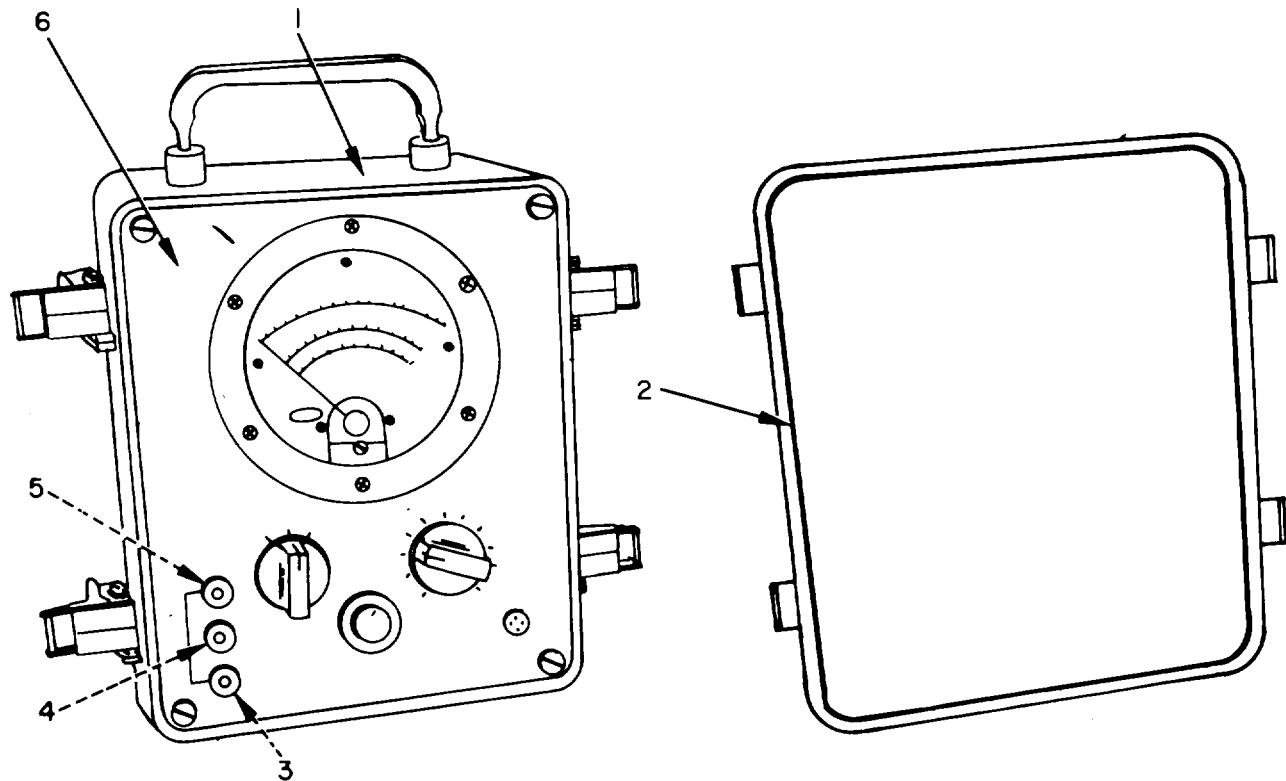


EL2HU001

Figure 1. Test Set, Transistor TS-1836B/U.

## SECTION II

TM11-6625-539-24P-2

(1) ILLUSTRATION		(2) SMR CODE	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION	(7)	(8) OTY INC IN UNIT
(a) FIG NO.	(b) ITEM NO.					USABLE ON CODE	U/M	
						GROUP 00 TEST SET, TRANSISTOR		
						TS-1836B/U		
1	1	XDHMM		4252193-502	24624	CASE ASSEMBLY (LOWER)	EA	1
1	2	XDHMM		4252193-501	24624	CASE ASSEMBLY (UPPER)	EA	1
1	3	PAHZZ	6625-00-105-0506	2280190-5	93346	LEAD,TEST	EA	1
1	4	PAHZZ	6625-00-106-2289	2280190-6	93346	LEAD,TEST	EA	1
1	5	PAHZZ	6625-00-105-2915	2280190-7	93346	LEAD,TEST	EA	1
1	6	XDHMM		4150886-001	24624	PANEL ASSEMBLY	EA	1

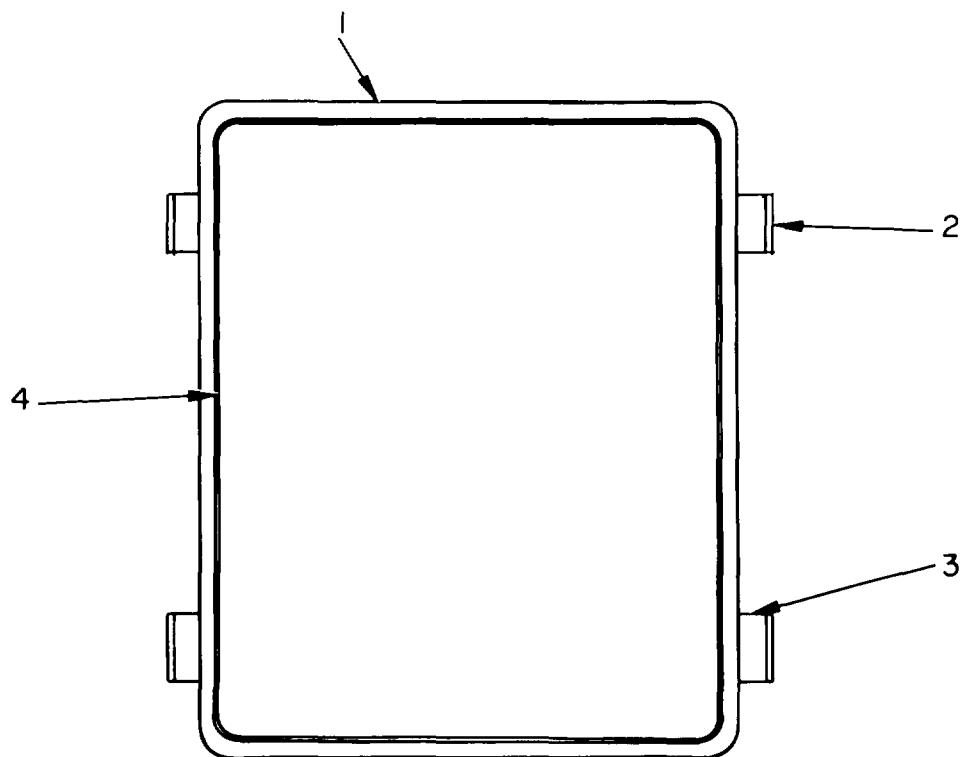

EL2HU002


Figure 2. Case Assembly (Upper).

## SECTION II

TM11-6625-539-24P-2

(1) ILLUSTRATION (a) FIG NO.	(2) SMR CODE (b) ITEM NO.	(3) NATIONAL STOCK NUMBER	(4) PART NUMBER	(5) FSCM	(6) DESCRIPTION	(7)	(8) QTY INC IN UNIT
						USABLE ON CODE	U/M
GROUP 01 CASE ASSEMBLY (UPPER)							
2	1 PAHZZ	6625-00-813-9205	4252193-503	24624	COVER, TEST SET	EA	1
2	2 XDHZZ		2152285-1	24624	STRIKE,CATCH	EA	4
2	3 XDHZZ		2152286-1	24624	PLATE, BACK	EA	4
2	4 XDHZZ		3150508-1	24624	GASKET	EA	1




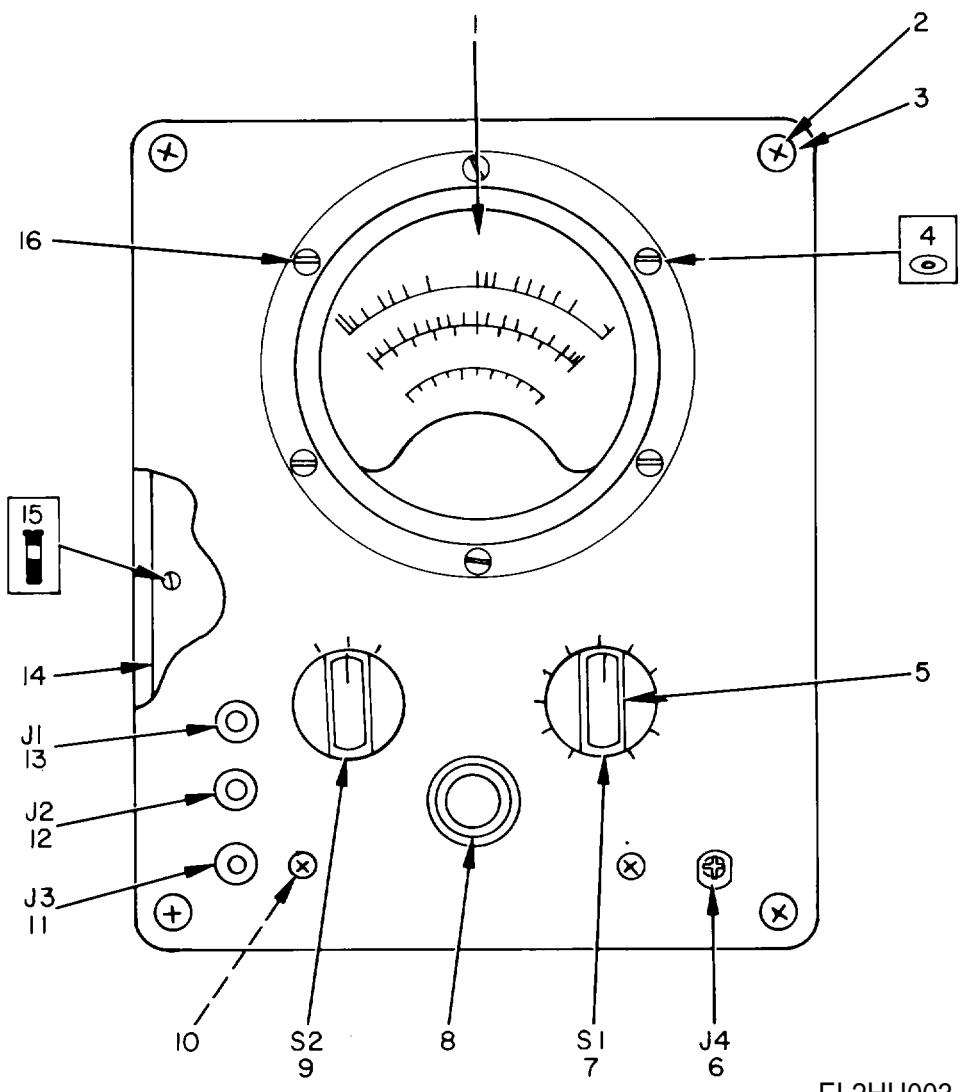

EL2HU003

Figure 3. Panel Assembly-Front View.

SECTION II ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
FIG NO.	ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION	USABLE ON	QTY INC IN UNIT
GROUP 02 PANEL ASSEMBLY								
3	1	PAHZZ	6625-00-813-9206	4150370	24624	MULTIMETER, REPLACEMENT	EA	1
3	2	XDHZZ	5305-00-054-6654	MS51957-30	96906	SCREW, MACHINE	EA	4
3	3	XDHZZ		62401-136	24624	WASHER, LOCK	EA	10
3	4	XDHZZ		62101-015	24624	WASHER, FLAT	EA	6
3	5	PAOZZ	5355-00-668-5420	1500	72512	KNOB	EA	2
3	6	PAHZZ	5935-00-982-4391	05-3313	91662	SOCKET, TRANSISTOR	EA	1
3	7	PAHZZ	5930-00-103-5169	212-21631-9	71450	SWITCH, ROTARY	EA	1
3	8	PAOZZ	5355-00-911-0240	1910	72512	KNOB	EA	1
3	9	PAHZZ	5930-00-103-5170	222-21632-3	71450	SWITCH, ROTARY	EA	1
3	10	XDHZZ	5365-00-769-3976	8414A0632-10	06540	POST, ELECTRICAL MECHANICAL EQUIPMENT	EA	4
3	11	PAHZZ	5935-00-755-2602	108-907	74970	JACK, TIP	EA	1
3	12	PAHZZ	5935-00-729-5559	108-903	74970	JACK, TIP	EA	1
3	13	PAHZZ	5935-00-803-1445	108-90	74970	JACK, TIP	EA	1
3	14	XDHHH		1250420-501	24624	ELECTRONIC COMPONENT ASSEMBLY	EA	1
3	15	XDHZZ		MS24693PC26	96906	SCREW, MACHINE	EA	2
3	16	XDHZZ	5305-00-054-6652	MS51957-28	96906	SCREW, MACHINE	EA	6

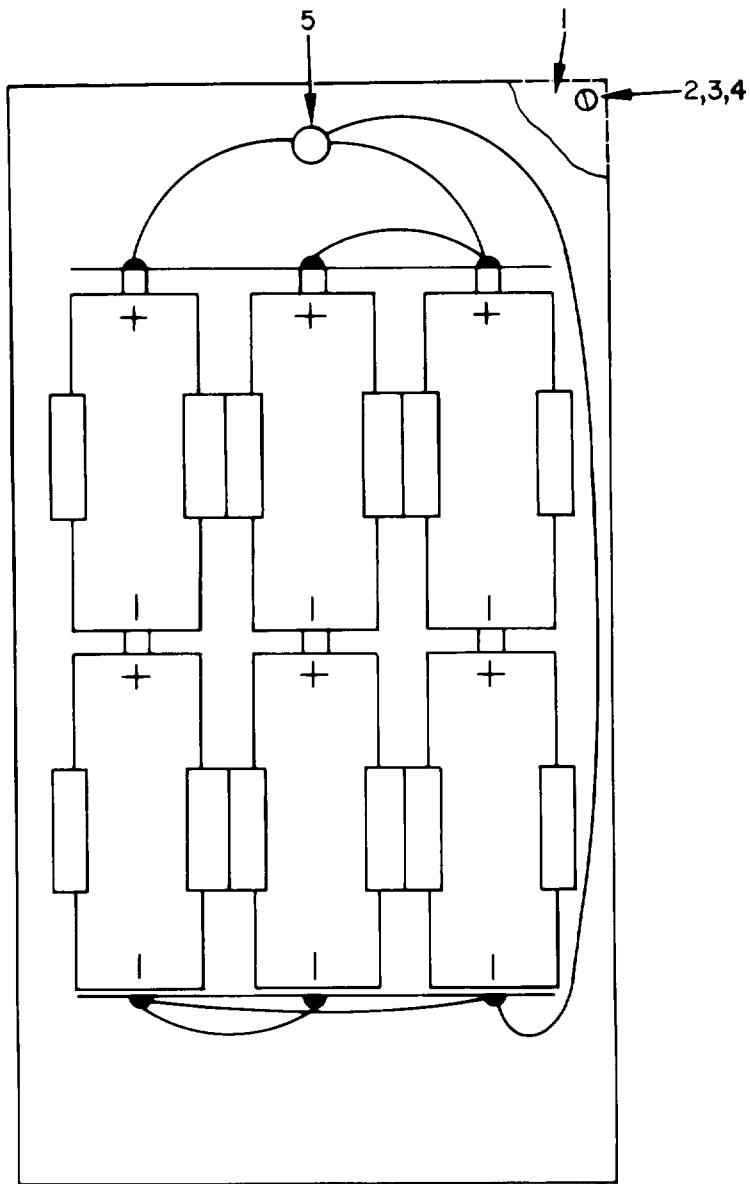

EL2HU004


Figure 4. Panel Assembly-Battery Holder Compartment.

## SECTION II

TM11-6625-539-24P-2

(1) ILLUSTRATION (a) FIG NO.	(2) ITEM NO.	(3) SMR CODE	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER	(6) DESCRIPTION	(7)		(8) OTY INC IN U/M UNIT
						FSCM	USABLE ON CODE	
4	1	PAHZZ	6625-00-810-5694	3250911-502	24624 COVER ASSEMBLY,BATTERY			EA 1
4	2	XDHZZ	5305-00-059-3657	MS51958-61	96906 SCREW,MACHINE			EA 4
4	3	XDHZZ		62401-138	24624 WASHER,LOCK			EA 4
4	4	XDHZZ		62101-025	24624 WASHER,FLAT			EA 4
4	5	PAHZZ	5325-00-174-5317	AN931-3-5	88044 GROMMET,RUBBER			EA 1




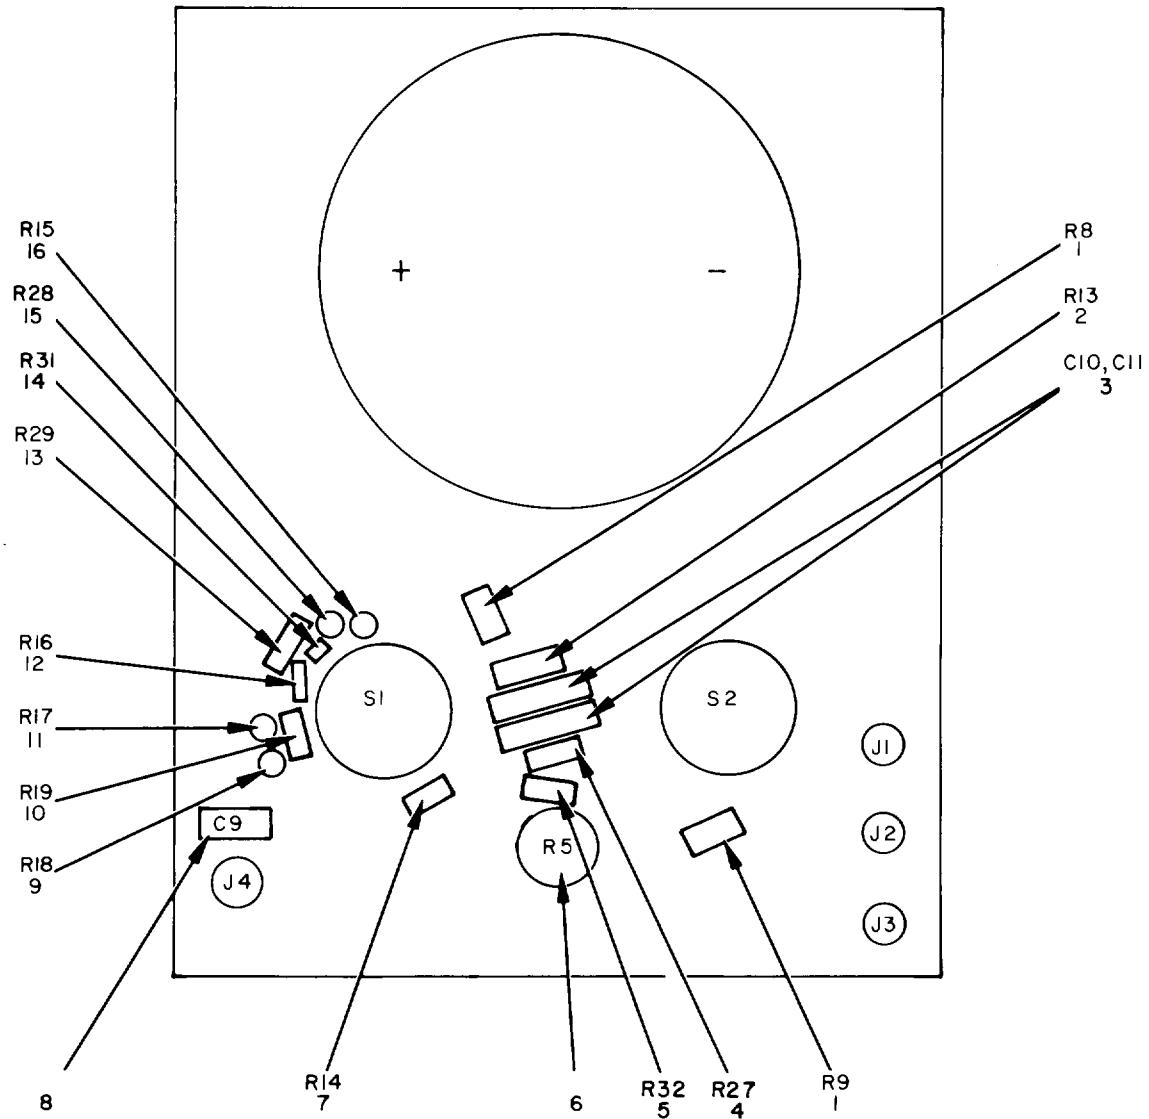

EL2HU005

Figure 5. Panel Assembly-Rear View.


SECTION II ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION	USABLE ON CODE	QTY INC IN UNIT
5	1	PAHZZ	5905-00-279-3505	RC20GF392J	81349	RESISTOR, FIXED, COMPOSITION		EA 2
5	2	PAHZZ	5905-00-892-6465	RN65D49R9F	81349	RESISTOR, FIXED, FILM		EA 1
5	3	XDHZZ		B41283-25-15V	25088	CAPACITOR, FIXED, ELECTROLYTIC		EA 2
5	4	XDHZZ		RN65D5R56F	81349	RESISTOR, FIXED, FILM		EA 1
5	5	PAHZZ	5905-00-192-0660	RC20GF184J	81349	RESISTOR, FIXED, COMPOSITION		EA 1
5	6	PAHZZ	5905-00-119-3321	MM6453VA45	71450	RESISTOR, VARIABLE		EA 1
5	7	PAHZZ	5905-00-845-9431	RC20GF4R7J	81349	RESISTOR, FIXED, COMPOSITION		EA 1
5	8	XDHZZ		BYA10D47M	14655	CAPACITOR, FIXED, CERAMIC DIELECTRIC		EA 1
5	9	PAHZZ	5905-00-993-6341	RN65D7500F	81349	RESISTOR, FIXED, FILM		EA 1
5	10	PAHZZ	5905-00-190-8883	RC20GF100J	81349	RESISTOR, FIXED, COMPOSITION		EA 1
5	11	XDHZZ		RN65D2500F	81349	RESISTOR, FIXED, FILM		EA 1
5	12	PAHZZ	5905-00-811-4821	RN65D1000F	81349	RESISTOR, FIXED, FILM		EA 1
5	13	PAHZZ	5905-00-883-9198	RN65D1001F	81349	RESISTOR, FIXED, COMPOSITION		EA 1
5	14	PAHZZ	5905-00-279-3504	RC20GF472J	81349	RESISTOR, FIXED, COMPOSITION		EA 1
5	15	PAHZZ	5905-00-767-7229	RN65D1180F	81349	RESISTOR, FIXED, FILM		EA 1
5	16	XDHZZ		RC20GF563J	81349	RESISTOR, FIXED, COMPOSITION		EA 1

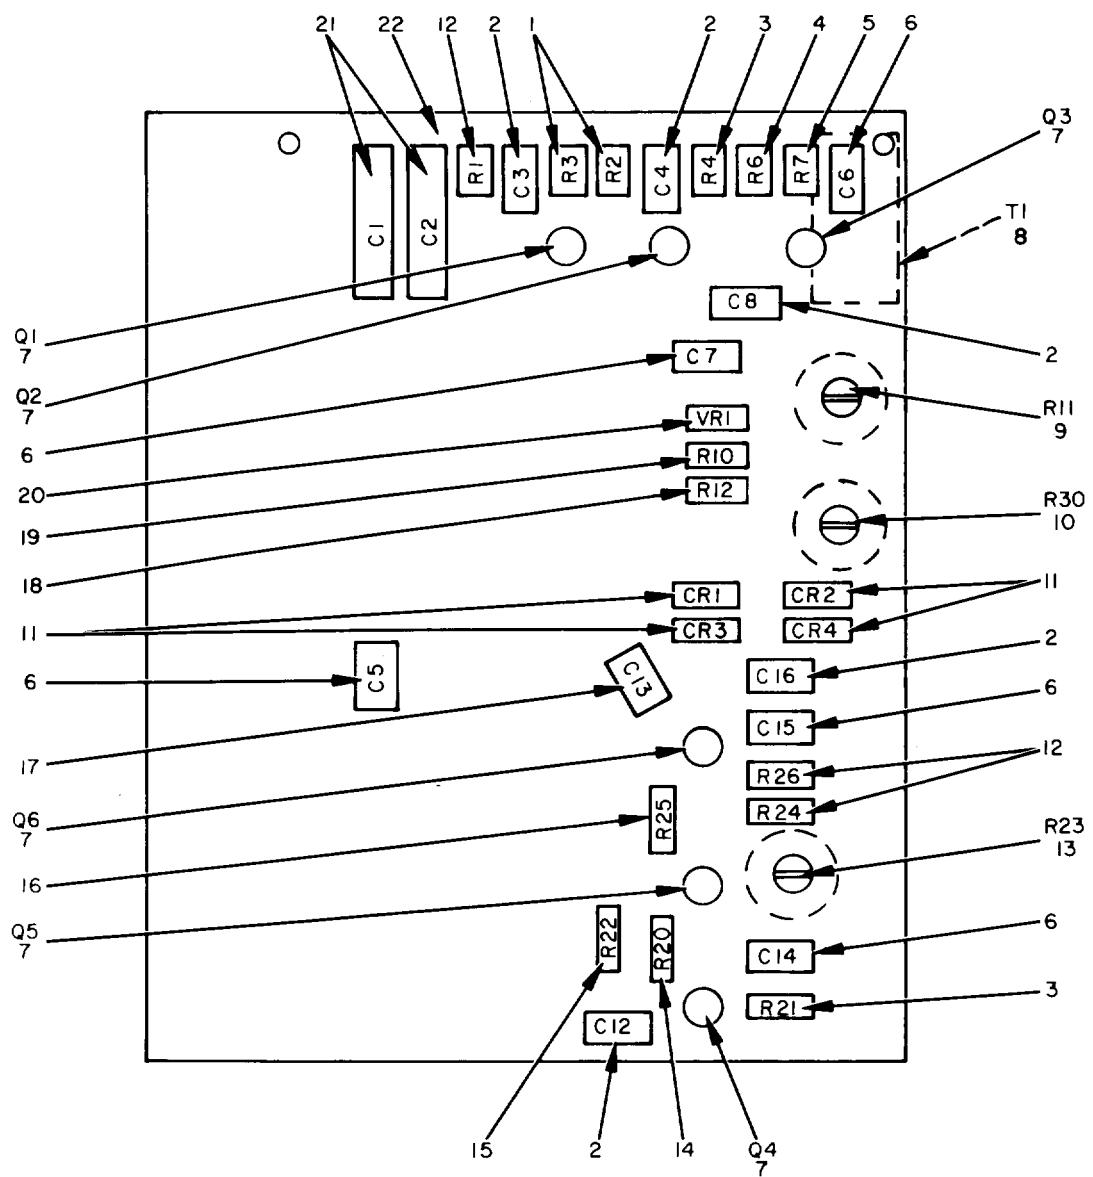

EL2HU006

Figure 6. Electronic Components Assembly.

SECTION II ILLUSTRATION		(1) (A) FIG NO.	(2) (B) ITEM NO.	(3) SMR CODE	(4) NATIONAL STOCK NUMBER	(5) PART NUMBER	(6) DESCRIPTION	(7) QTY INC IN	(8) QTY INC IN
GROUP 0201 ELECTRONIC COMPONENTS ASSEMBLY									
6	1	PAHZZ	5905-00-171-1998		RC20GF333J	81349	RESISTOR, FIXED, COMPOSITION	EA	2
6	2	PAHZZ	5910-00-952-1555		1DP1-203	02799	CAPACITOR, FIXED, PLASTIC DIELECTRIC	EA	5
6	3	PAHZZ	5905-00-195-6806		RC20GF102J	81349	RESISTOR, FIXED, COMPOSITION	EA	2
6	4	PAHZZ	5905-00-279-3499		RC20GF273J	81349	RESISTOR, FIXED, COMPOSITION	EA	1
6	5	PAHZZ	5905-00-279-2643		RC32GF101J	81349	RESISTOR, FIXED, COMPOSITION	EA	1
6	6	XDHZZ			B41283-25-15V	25088	CAPACITOR, FIXED, ELECTROLYTIC	EA	5
6	7	PAHZZ	5961-00-925-2109		2N3392	81349	TRANSISTOR	EA	6
6	8	PAHZZ	5950-00-103-7520		M5202	24624	TRANSFORMER	EA	1
6	9	PAHZZ	5905-00-119-3322		MM6454VA45	71450	RESISTOR, VARIABLE	EA	1
6	10	XDHZZ			E870PCA	79727	RESISTOR, VARIABLE	EA	1
6	11	PAHZZ	5961-00-669-6884		1N277	81349	SEMICONDUCTOR DEVICE, DIODE	EA	4
6	12	PAHZZ	5905-00-279-1876		RC20GF222J	81349	RESISTOR, FIXED, COMPOSITION	EA	3
6	13	PAHZZ	5905-00-119-3323		SR9325-45-2	71450	RESISTOR, VARIABLE	EA	1
6	14	PAHZZ	5905-00-299-1971		RC20GF822J	81349	RESISTOR, FIXED, COMPOSITION	EA	1
6	15	PAHZZ	5905-00-195-6761		RC20GF104J	81349	RESISTOR, FIXED, COMPOSITION	EA	1
6	16	PAHZZ	5905-00-279-3506		RC20GF332J	81349	RESISTOR, FIXED, COMPOSITION	EA	1
6	17	XDHZZ			B41283-1-100V	25088	CAPACITOR, FIXED, ELECTROLYTIC	EA	1
6	18	XDHZZ			RC20GF563J	81349	RESISTOR, FIXED, COMPOSITION	EA	1
6	19	PAHZZ	5905-00-190-8880		RC20GF122J	18349	RESISTOR, FIXED, COMPOSITION	EA	1
6	20	XDHZZ			1N754A	81349	SEMICONDUCTOR DEVICE, DIODE	EA	1
6	21	XDHZZ			B41283-250-15V	25088	CAPACITOR, FIXED, ELECTROLYTIC	EA	2
6	22	XDHZZ			4150714-002	24624	TERMINAL BOARD	EA	1

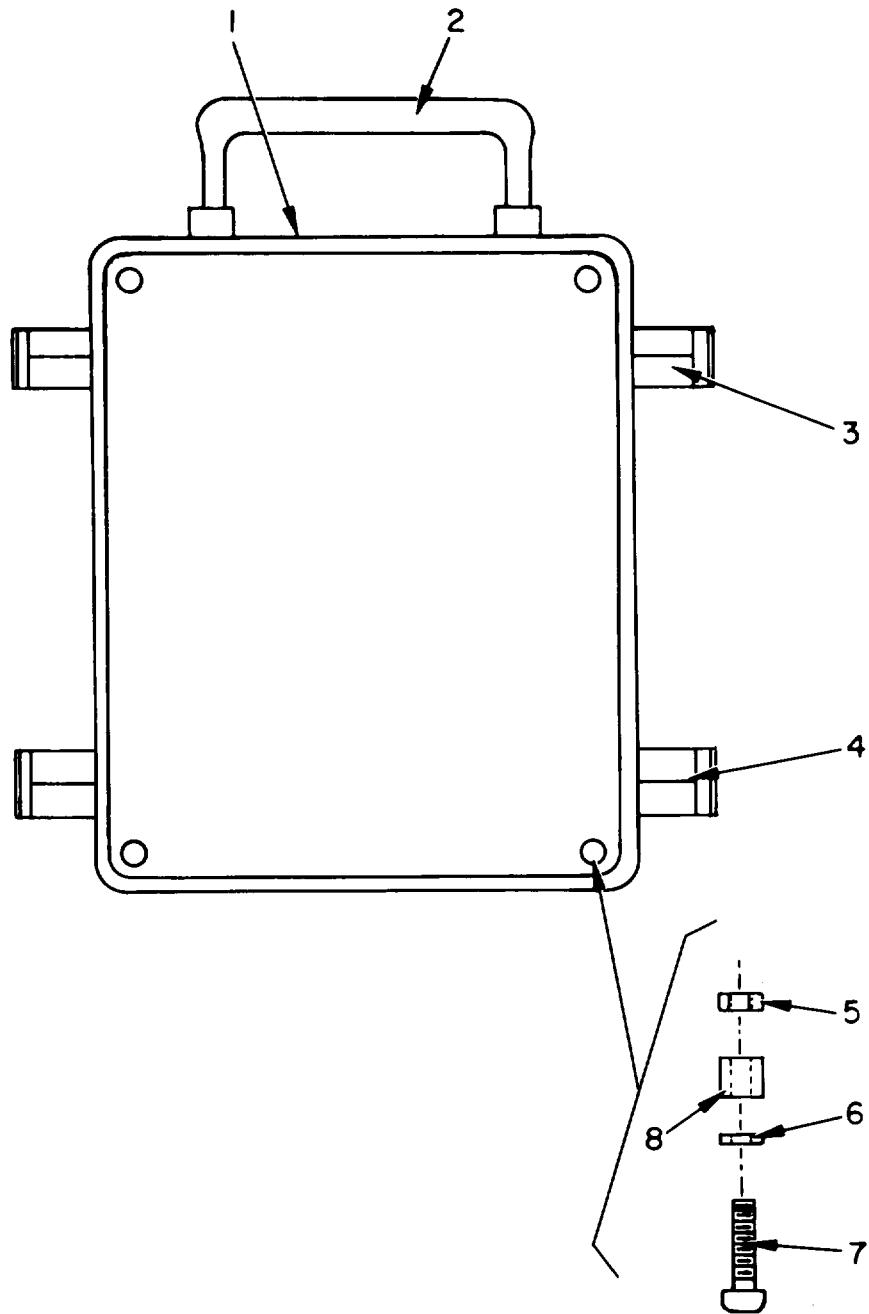

EL2HU007

Figure 7. Case Assembly (Lower).

SECTION II ILLUSTRATION		(2)	(3)	(4)	(5)	(6)	(7)	(8)
(A) FIG NO.	(B) ITEM NO.	SMR CODE	NATIONAL STOCK NUMBER	PART NUMBER	FSCM	DESCRIPTION	USABLE ON CODE	QTY INC IN U/M UNIT
GROUP 03 CASE ASSEMBLY (LOWER)								
7	1	PAHZZ	6625-00-810-5710	5250748-502	24624	CASE, LOWER HALF		EA 1
7	2	PAHZZ	5340-00-985-6711	76-2	08730	HANDLE, BOW		EA 1
7	3	XDHZZ		2152286-1	24624	PLATE, BACK		EA 4
7	4	XDHZZ		2152284-1	24624	CATCH, STRIKE		EA 4
7	5	XDHZZ		50FA4-40	56878	NUT, SELF LOCKING, HEXAGON		EA 4
7	6	XDHZZ		MS15795-304	96906	WASHER, FLAT		EA 4
7	7	XDHZZ	5305-00-515-7219	MS35233-17	96906	SCREW, MACHINE		EA 4
7	8	XDHZZ		1355	06540	BUMPER, RUBBER		EA 4

## SECTION IV

## NATIONAL STOCK NUMBER AND PART NUMBER INDEX

NOTE: LATEST NATIONAL STOCK NUMBER ASSIGNMENTS ARE INCLUDED AT END OF

STOCK NUMBER	FIGURE NO.	ITEM NO.	STOCK NUMBER	FIGURE NO.	ITEM NO.		
<b>INDEX</b>							
5305-00-054-6652	3	16	5305-00-515-7219	7	7		
5305-00-054-6654	3	2	5355-00-668-5420	3	5		
5305-00-059-3657	4	2	5961-00-669-6884	6	11		
5930-00-103-5169	3	7	5935-00-729-5559	3	12		
5930-00-103-5170	3	9	5935-00-755-2602	3	11		
5950-00-103-7520	6	8	5905-00-767-7229	5	15		
6625-00-105-0506	1	3	5365-00-769-3976	3	10		
6625-00-105-2915	1	5	5935-00-803-1445	3	13		
6625-00-106-2289	1	4	6625-00-810-5694	4	1		
5905-00-171-1998	6	1	6625-00-810-5710	7	1		
5325-00-174-5317	4	5	5905-00-811-4821	5	12		
5905-00-190-8880	6	19	6625-00-813-9205	2	1		
5905-00-190-8883	5	10	6625-00-813-9206	3	1		
5905-00-192-0660	5	5	5905-00-845-9431	5	7		
5905-00-195-6761	6	15	5905-00-883-9198	5	13		
5905-00-195-6806	6	3	5905-00-892-6465	5	2		
5905-00-279-1876	6	12	5355-00-911-0240	3	8		
5905-00-279-2643	6	5	5961-00-925-2109	6	7		
5905-00-279-3499	6	4	5910-00-952-1555	6	2		
5905-00-279-3504	5	14	5935-00-982-4391	3	6		
5905-00-279-3505	5	1	5340-00-985-6711	7	2		
5905-00-279-3506	6	16	5905-00-993-6341	5	9		
5905-00-299-1971	6	14					
<b>PART</b>							
NUMBER	FSCM	FIG NO	ITEM NO	PART NUMBER	FIG NO	ITEM NO	
AN931-3-5	88044	4	5	SR9325-45-2	71450	6	13
BYA10D47M	14655	5	8	05-3313	91662	3	6
B41283-1-100V	25088	6	17	1DP1-203	2799	6	2
B41283-25-15V	25088	5	3	1N277	81349	6	11
B41283-25-15V	25088	6	6	1N754A	81349	6	20
B41283-250-15V	25088	6	21	1C8-90	74970	3	13
E870PCA	79727	6	10	108-903	74970	3	12
MM6453VA45	71450	5	6	108-907	74970	3	11
MM6454VA45	71450	6	9	1250420-501	24624	3	14
MS15795-304	96906	7	6	1355	6540	7	8
MS24693PC26	96906	3	15	1500	72512	3	5
MS35233-17	96906	7	7	1910	72512	3	8
MS51957-28	96906	3	16	2N3392	81349	6	7
MS51957-30	96906	3	2	212-21631-9	71450	3	7
MS51958-61	96906	4	2	2152284-1	24624	7	4
M5202	24624	6	8	2152285-1	24624	2	2
RC20GF100J	81349	5	10	2152286-1	24624	2	3
RC20GF102J	81349	6	3	2152286-1	24624	7	3
RC20GF104J	81349	6	15	222-21632-3	71450	3	9
RC20GF122J	81349	6	19	2280190-5	93346	1	3
RC20GF184J	81349	5	5	2280190-6	93346	1	4
RC20GF222J	81349	6	12	2280190-7	93346	1	5
RC20GF273J	81349	6	4	3150508-1	24624	2	4
RC20GF332J	81349	6	16	3250911-502	24624	4	1
RC20GF333J	81349	6	1	4150370	24624	3	1
RC20GF392J	83149	5	1	4150714-002	24624	6	22
RC20GF4R7J	81349	5	7	4150886-001	24624	1	6
RC20GF472J	81349	5	14	4252193-501	24624	1	2
RC20GF563J	81349	5	16	4252193-502	24624	1	1
RC20GF563J	81349	6	18	4252193-503	24624	2	1
RC20GF822J	81349	6	14	50FA4-40	56878	7	5
RC32GF101J	81349	6	5	5250748-502	24624	7	1
RN65D1000F	81349	5	12	62101-015	24624	3	4
RN65D1001F	81349	5	13	62101-025	24624	4	4
RN65D1180F	81349	5	15	62401-136	24624	3	3
RN65D2500F	81349	5	11	62401-138	24624	4	3
RN65D49R9F	81349	5	2	76-2	8730	7	2
RN65D5R56F	81349	5	4	8414A0632-10	6540	3	10
RN65D7500F	81349	5	9				

## LATEST NATIONAL STOCK NUMBER ASSIGNMENTS

STOCK NUMBER	FIGURE NUMBER	ITEM NUMBER
5905-00-119-3321	5	6
5905-00-119-3322	6	9
5905-00-119-3323	6	13



By Order of the Secretary of the Army:

Official:

PAUL T. SMITH  
*Major General, United States Army*  
*The Adjutant General*

FRED C. WEYAND  
*General, United States Army*  
*Chief of Staff*

DISTRIBUTION:

*Active Army:*

USASA (2)	USAERDAA (1)
COE (1)	USAERDAW (1)
USAARENBD (1)	MAAG (1)
DARCOM (1)	USARMIS (1)
TRADOC (2)	Units org under fol TOE: (1 cy each unit)
USASATC&S (2)	6-615 29-86
USAAVNTBD (2)	6-616 29-87
OS Maj Comd (4)	7 29-105
LOGCOMDS (3)	11-16 29-109
MICOM (2)	11-38 29-134
TECOM (2)	11-85 29-136
USACC (4)	11-86 29-245
USACC-EUR (2)	11-87 29-247
USACC-SO (2)	1 1-97 29-402
USAADVNS (2)	11-98 32-52
MDW (1)	11-117 32-56
Armies (2)	11-127 32-57
Corps (2)	11-127 32-77
HISA (Ft Monmouth) (33)	11-237 32-78
Svc Colleges (1)	11-302 37
USASESS (5)	11-(500 (AA-AC) 39-51
USAADS (2)	17 44-2
USAFAS (2)	29-1 44-12
USAARMS (2)	29-11 44-236
USAIS (2)	29-15 44-536
USAES (2)	29-16 44-568
USAICS (3)	29-17 55-89
Instl (2) except	29-21 55-99
Fort Gillem (10)	29-25 55-405
Fort Gordon (10)	29-35 55-406
Fort Huachuca (10)	29-36 55-407
Fort Carson (5)	29-37 55-457
Ft Richardson (ECOM) (2)	29-41 55-458
LBAD (14)	29-51 57
SAAD (30)	29-55 57-100
TOAD (14)	29-57 67
SHAD (3)	29-85 77-100
Sig FLDMS (1)	

*NG:* State AG (3 cys each) AL, AK, AZ, AR, CA, CO, CT, GA, KY, MD, MA, MO, NC, OK, PA, TX, VA, WA,  
*USAR:* None

For explanation of abbreviations used see AR 310-50.

## RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS

**SOMETHING WRONG WITH THIS MANUAL?**

THEN...JOT DOWN THE  
DOPE ABOUT IT ON THIS  
FORM, TEAR IT OUT, FOLD  
IT AND DROP IT IN THE  
MAIL!

FROM: (YOUR UNIT'S COMPLETE ADDRESS)

Commander  
Stateside Army Depot  
ATTN: AMSTA-US  
Stateside, N.J. 07703

DATE 10 July 1975

PUBLICATION NUMBER

TM 11-5840-340-12

DATE

23 Jan 74

TITLE

Radar Set AN/PSC-76

BE EXACT...PIN-POINT WHERE IT IS

IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG DOTTED LINE

PAGE NO. PARA-GRAPH FIGURE NO. TABLE NO.

2-25 2-28

Recommend that the installation antenna alignment procedure be changed throughout to specify a 2° IFF antenna lag rather than 1°.

REASON: Experience has shown that with only a 1° lag, the antenna servo system is too sensitive to wind gusting in excess of 25 knots, and has a tendency to rapidly accelerate and decelerate as it hunts, causing strain to the drive train. Hunting is minimized by adjusting the lag to 2° without degradation of operation.

3-10 3-3 3-1

Item 5, Function column. Change "2 db" to "3db."

REASON: The adjustment procedure for the TRANS POWER FAULT indicator calls for a 3 db (500 watts) adjustment to light the TRANS POWER FAULT indicator.

5-6 5-8

Add new step f.1 to read, "Replace cover plate removed in step e.1, above."

REASON: To replace the cover plate.

FO3

Zone C 3. On J1-2, change "+24 VDC to "+5 VDC."

REASON: This is the output line of the 5 VDC power supply. + 24 VDC is the input voltage.

TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SSG I. M. DeSpirito 999-1776

SIGN HERE:

DA FORM 2028-2 (TEST) 1 AUG 74

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

HISA 1686-75



## **RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS**



# SOMETHING WRONG WITH THIS MANUAL?

**THEN... JOT DOWN THE DOPE  
ABOUT IT ON THIS FORM,  
CUT IT OUT, FOLD IT AND  
DROP IT IN THE MAIL!**

**FROM: (YOUR UNIT'S COMPLETE ADDRESS)**

**DATE**

PUBLICATION NUMBER

DATE

**BE EXACT...PIN-POINT WHERE IT IS**

**IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:**

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
----------	------------	------------	-----------

CUT ALONG DOTTED LINE

				<h1>SOMETHING WRONG WITH THIS MANUAL?</h1>	
<p>THEN... JOT DOWN THE DOPE ABOUT IT ON THIS FORM, CUT IT OUT, FOLD IT AND DROP IT IN THE MAIL!</p>				<p>FROM: (YOUR UNIT'S COMPLETE ADDRESS)</p>	
				<p>DATE</p>	
<p>PUBLICATION NUMBER</p>		<p>DATE</p>			
<p>BE EXACT... PIN-POINT WHERE IT IS IN THIS SPACE TELL WHAT IS WRONG AND WHAT SHOULD BE DONE ABOUT IT:</p>					
PAGE NO.	PARA- GRAPH	FIGURE NO.	TABLE NO.		
<p>TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER</p>				<p>SIGN HERE:</p>	

**DA FORM 1 AUG 74 2028-2 (TEST)**

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR  
UNIT'S ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

OFFICIAL BUSINESS  
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID  
DEPARTMENT OF THE ARMY  
DOD 314



Commander  
US Army Electronics Command  
ATTN: DRSEL-MA-Q  
Fort Monmouth, New Jersey 07703

CUT ALONG DOTTED LINE

FOLD BACK

## **RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS**



# SOMETHING WRONG WITH THIS MANUAL?

**THEN... JOT DOWN THE DOPE  
ABOUT IT ON THIS FORM,  
CUT IT OUT, FOLD IT AND  
DROP IT IN THE MAIL!**

**FROM: (YOUR UNIT'S COMPLETE ADDRESS)**

DATE

PUBLICATION NUMBER

DATE

**BE EXACT... PIN-POINT WHERE IT IS**

**IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:**

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
----------	------------	------------	-----------

CUT ALONG DOTTED LINE

**TYPED NAME, GRADE OR TITLE AND TELEPHONE NUMBER**

SIGN HERE:

**DA FORM 1 AUG - 2028-2 (TEST)**

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR  
UNIT'S ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

OFFICIAL BUSINESS  
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID  
DEPARTMENT OF THE ARMY  
DOD 314



Commander  
US Army Electronics Command  
ATTN: DRSEL-MA-Q  
Fort Monmouth, New Jersey 07703

CUT ALONG DOTTED LINE

FOLD BACK

## **RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL MANUALS**



# SOMETHING WRONG WITH THIS MANUAL?

**FROM: (YOUR UNIT'S COMPLETE ADDRESS)**

**THEN... JOT DOWN THE DOPE  
ABOUT IT ON THIS FORM,  
CUT IT OUT, FOLD IT AND  
DROP IT IN THE MAIL!**

DATE

PUBLICATION NUMBER

DATE

**BE EXACT... PIN-POINT WHERE IT IS**

**IN THIS SPACE TELL WHAT IS WRONG  
AND WHAT SHOULD BE DONE ABOUT IT:**

PAGE NO.	PARA-GRAPH	FIGURE NO.	TABLE NO.
----------	------------	------------	-----------

CUT ALONG DOTTED LINE

**TYPED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER**

**SIGN HERE:**

**DA FORM 1 AUG 74 2028-2 (TEST)**

P.S.--IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR MANUAL "FIND," MAKE A CARBON COPY OF THIS AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR  
UNIT'S ADDRESS



FOLD BACK

DEPARTMENT OF THE ARMY

---

---

OFFICIAL BUSINESS  
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID  
DEPARTMENT OF THE ARMY  
DOD 314



CUT ALONG DOTTED LINE

Commander  
US Army Electronics Command  
ATTN: DRSEL-MA-Q  
Fort Monmouth, New Jersey 07703

FOLD BACK

# THE METRIC SYSTEM AND EQUIVALENTS

## WEAR MEASURE

Centimeter = 10 Millimeters = 0.01 Meters = 0.3937 Inches  
 1 Meter = 100 Centimeters = 1000 Millimeters = 39.37 Inches  
 1 Kilometer = 1000 Meters = 0.621 Miles

## WEIGHTS

Gram = 0.001 Kilograms = 1000 Milligrams = 0.035 Ounces  
 1 Kilogram = 1000 Grams = 2.2 lb.  
 1 Metric Ton = 1000 Kilograms = 1 Megagram = 1.1 Short Tons

## LIQUID MEASURE

1 Milliliter = 0.001 Liters = 0.0338 Fluid Ounces  
 1 Liter = 1000 Milliliters = 33.82 Fluid Ounces

## SQUARE MEASURE

1 Sq. Centimeter = 100 Sq. Millimeters = 0.155 Sq. Inches  
 1 Sq. Meter = 10,000 Sq. Centimeters = 10.76 Sq. Feet  
 1 Sq. Kilometer = 1,000,000 Sq. Meters = 0.386 Sq. Miles

## CUBIC MEASURE

1 Cu. Centimeter = 1000 Cu. Millimeters = 0.06 Cu. Inches  
 1 Cu. Meter = 1,000,000 Cu. Centimeters = 35.31 Cu. Feet

## TEMPERATURE

$5/9(F - 32) = ^\circ C$   
 212° Fahrenheit is equivalent to 100° Celsius

90° Fahrenheit is equivalent to 32.2° Celsius

32° Fahrenheit is equivalent to 0° Celsius

$9/5C + 32 = ^\circ F$

## APPROXIMATE CONVERSION FACTORS

### TO CHANGE

Inches.....  
 Feet.....  
 Yards.....  
 Miles.....  
 Square Inches.....  
 Square Feet.....  
 Square Yards.....  
 Square Miles.....  
 Acres.....  
 Cubic Feet.....  
 Cubic Yards.....  
 Fluid Ounces.....  
     nts.....  
     arts.....  
     allons.....  
 Ounces.....  
 Pounds.....  
 Short Tons.....  
 Pound-Feet.....  
 Pounds per Square Inch.....  
 Miles per Gallon.....  
 Miles per Hour.....

### TO

Centimeters.....  
 Meters.....  
 Meters.....  
 Kilometers.....  
 Square Centimeters.....  
 Square Meters.....  
 Square Meters.....  
 Square Kilometers.....  
 Square Hectometers.....  
 Cubic Meters.....  
 Cubic Meters.....  
 Milliliters.....  
 Liters.....  
 Liters.....  
 Liters.....  
 Grams.....  
 Kilograms.....  
 Metric Tons.....  
 Newton-Meters.....  
 Kilopascals.....  
 Kilometers per Liter.....  
 Kilometers per Hour.....

### MULTIPLY BY

2.540  
 0.305  
 0.914  
 1.609  
 6.451  
 0.093  
 0.836  
 2.590  
 0.405  
 0.028  
 0.765  
 29.573  
 0.473  
 0.946  
 3.785  
 28.349  
 0.454  
 0.907  
 1.356  
 6.895  
 0.425  
 1.609

### TO CHANGE


Centimeters.....  
 Meters.....  
 Meters.....  
 Kilometers.....  
 Square Centimeters.....  
 Square Meters.....  
 Square Meters.....  
 Square Kilometers.....  
 Square Hectometers.....  
 Cubic Meters.....  
 Cubic Meters.....  
 Milliliters.....  
 Liters.....  
 Liters.....  
     ers.....  
     ms.....  
     ograms.....  
 Metric Tons.....  
 Newton-Meters.....  
 Kilopascals.....  
 Kilometers per Liter.....  
 Kilometers per Hour.....

### TO

Inches.....  
 Feet.....  
 Yards.....  
 Miles.....  
 Square Inches.....  
 Square Feet.....  
 Square Yards.....  
 Square Miles.....  
 Acres.....  
 Cubic Feet.....  
 Cubic Yards.....  
 Fluid Ounces.....  
 Pints.....  
 Quarts.....  
 Gallons.....  
 Ounces.....  
 Pounds.....  
 Short Tons.....  
 Pounds-Feet.....  
 Pounds per Square Inch.....  
 Miles per Gallon.....  
 Miles per Hour.....

### MULTIPLY BY

0.394  
 3.280  
 1.094  
 0.621  
 0.155  
 10.764  
 1.196  
 0.386  
 2.471  
 35.315  
 1.308  
 0.034  
 2.113  
 1.057  
 0.264  
 0.035  
 2.205  
 1.102  
 0.738  
 0.145  
 2.354  
 0.621

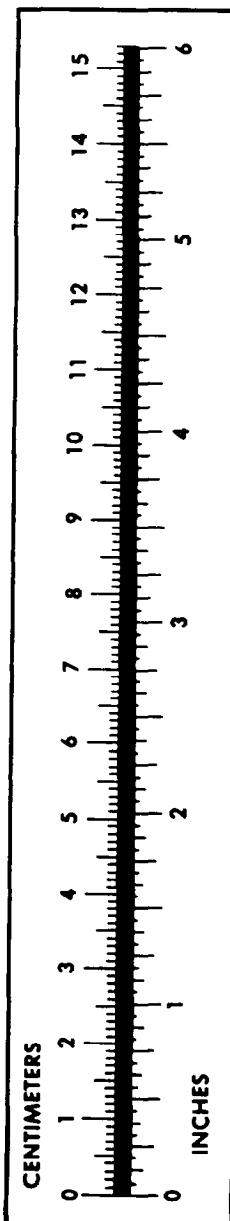

**PIN: 019972-000**

This fine document...

Was brought to you by me:



## Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to [liberatedmanuals.com](http://liberatedmanuals.com), so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals</A>

- Sincerely  
Igor Chudov  
<http://igor.chudov.com/>
- [Chicago Machinery Movers](http://chicagomachinerymovers.com)