

TM 9-4940-504-14&P

TECHNICAL MANUAL

OPERATOR, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE
MANUAL INCLUDING REPAIR PARTS LIST

FOR

SEPARATOR, OIL AND WATER
MODEL S-100-B
(METALCRAFT INC.)
(NSN 4940-00-242-4100)

HEADQUARTERS, DEPARTMENT OF THE ARMY

MARCH 1981

Technical Manual }
No. 9-4940-504-14&P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC, 19 March 1981

OPERATOR, ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE MANUAL
INCLUDING REPAIR PARTS LIST
FOR
SEPARATOR, OIL AND WATER
MODEL S-100-B
(NSN 4940-00-242-4100)

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual direct to: Commander, US Army Armament Materiel Readiness Command, ATTN: DRSAR-MAS, Rock Island, IL 61299. A reply will be furnished directly to you.

NOTE

This manual is published for the purpose of identifying an authorized commercial manual for the use of the personnel to whom this oil and water separator is issued.

Manufactured by: Metalcraft Inc.
718 Debelius Ave.
Baltimore, MD 21205

Procured under Contract No. DAAA09-77-C-6913

This technical manual is an authentication of the manufacturer's commercial literature and does not conform with the format and content specified in AR 310-3, Military Publications. This technical manual does, however, contain available information that is essential to the operation and maintenance of the equipment.

INSTRUCTIONS FOR REQUISITIONING PARTS
NOT IDENTIFIED BY NSN

When requisitioning parts not identified by National Stock Number, it is mandatory that the following information be furnished the supply officer.


- 1 - Manufacturer's Federal Supply Code Number - 06535
- 2 - Manufacture's Part Number exactly as listed herein.
- 3 - Nomenclature exactly as listed herein, including dimensions, if necessary.
- 4 - Manufacturer's Model Number - Model S-100-B
- 5 - Manufacturer's Serial Number (End Item)
- 6 - Any other information such as Type, Frame Number, and Electrical Characteristics, if applicable.
- 7 - If DD Form 1348 is used, fill in all blocks except 4, 5, 6, and Remarks field in accordance with AR 725-50.

Complete Form as Follows:

- (a) In blocks 4, 5, 6, list manufacturer's Federal Supply Code Number - 06535 followed by a colon and manufacturer's Part Number for the repair part.
- (b) Complete Remarks field as follows:
Noun: (nomenclature of repair part)
For: NSN: 4940-00-242-4100
Manufacturer: Metalcraft Inc.

Model: S-100-B
Serial: (of end item)

Any other pertinent information such as Frame Number,
Type, Dimensions, etc.

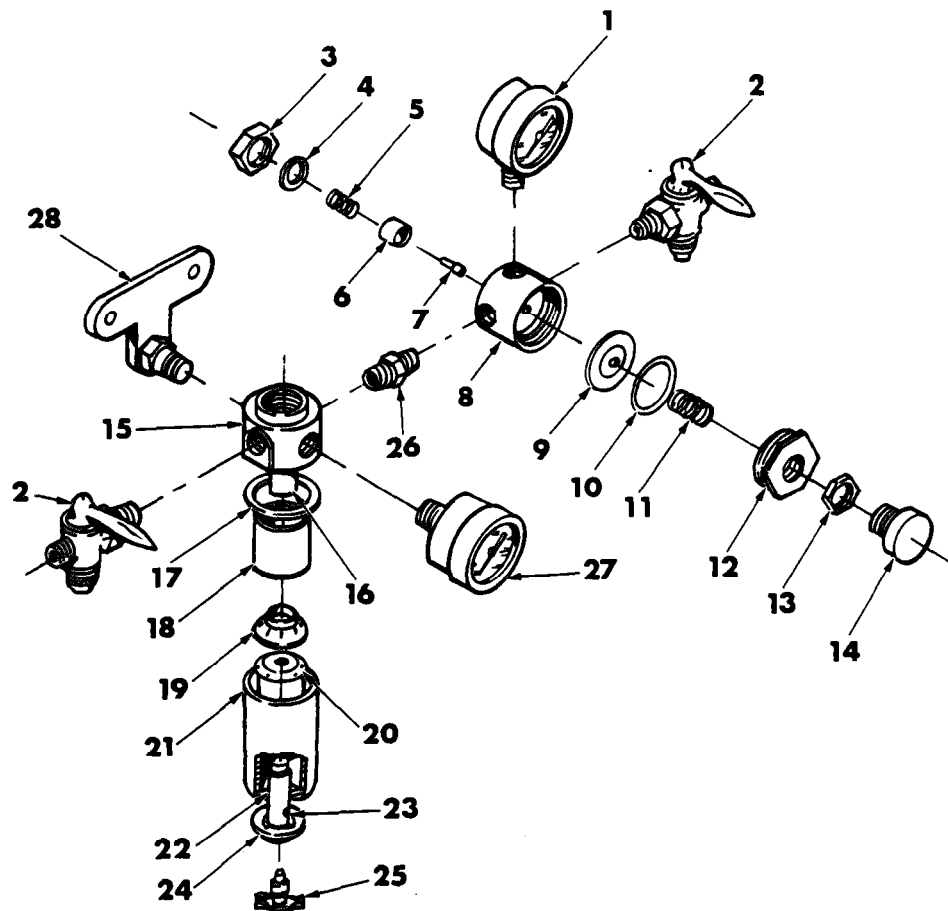

ITEM NO.	PART NO.	DESCRIPTION	QUANTITY
1	GPS-100-2	GAUGE 100 PSI	1
2	45-8006	AIR VALVE 1/4 N.P.T. x 1/4 N.P.S.	2
	7-4338	PRESSURE REGULATOR COMPLETE (ITEMS 3 thru 14)	1
3	7-4279	BOTTOM NUT.....	1
4	7-4280	WASHER	1
5	7-4281	VALVE SPRING	1
6	7-4290	VALVE DISC	1
7	7-4282	VALVE STEM	1
8	7-4291	BODY	1
9	7-4283	DIAPHRAGM	1
10	7-4284	DIAPHRAGM GASKET	1
11	7-4286	ADJUSTING SPRING	1
12	7-4285	BONNET NUT	1
13	7-4288	LOCK NUT	1
14	7-4287	ADJUSTING KNOB	1

ITEM NO.	PART NO.	DESCRIPTION	QUANTITY
	40-5683	FILTER ASS'Y. COMPLETE (ITEMS 15 thru 25)	1
15	7-5259	BODY	1
16	7-5260	INLET TUBE	1
17	7-5261	BOWL GASKET	1
18	7-5262	FILTER ELEMENT	1
19	7-5263	BAFFLE	1
20	7-5264	BAFFLE PLATE	1
21	7-5265	BOWL	1
22	7-5266	CENTER STUD.....	1
23	7-5267	O RING.....	1
24	7-5268	STUD WASHER.....	1
25	7-5269	DRAIN VALVE	1
26	45-018	ADAPTER 1/4 N.P.T. x 1/4 N.P.T.	1
27	GPL-200-2	GAUGE 200 PSI (REAR MTD)	1
28	10-4342	MOUNTING BRACKET	1

OPERATING INSTRUCTIONS

MODEL S-100-B

Air inlet to separator is in top of separator head. Mainline air pressure is indicated on pressure gage mounted on separator head. Gage reads in pounds per square inch (PSI) from 0-200 PSI. A shut-off valve is mounted on separator head which is filtered mainline air pressure. Valve is off with handle in 90° position to valve body and on with handle parallel to body of valve.

An air pressure regulator is mounted to separator head for filtered regulated air supply. Automatically removes water, dirt, pipe scale and other harmful foreign matter from air lines. Incoming air is led down the center tube, then directed out against the curved baffle. The centrifugal action imparted to the air efficiently separates dirt and water which drops to the bottom. The air then passes through the cleanable micronic filter element as a final safeguard. The lower flat baffle plate prevents accumulated water and dirt from reentering the air stream. All foreign matter is always kept below the filter element. The removable transparent bowl provides a visual reminder to drain excess water.

The regulators are spring-loaded diaphragm type regulators. The direction of air flow is indicated by an In marking next to the required part on the regulator. Air enters the air inlet on the right-hand side and flows past the spring-loaded valve disc which is held in the open position by the valve stem which extends up to the lower side of the diaphragm. A spring-loaded spring retainer presses against the opposite side of the diaphragm. Air flows up past the valve stem to the pressure chamber below the diaphragm. If the incoming air pressure does not exceed the pressure for which the regulator is set, the air flows through a small aperture on the outlet side of the pressure chamber to the outlet connection. If the inlet pressure exceeds the pressure for which the regulator is set, the pressure at the bottom of the diaphragm forces the diaphragm up. The valve stem is forced to follow the diaphragm by the action of the spring below the valve disc. When the pressure in the pressure chamber is high enough, the valve disc seats and prevents more air from passing through the regulator. As air is used from the outlet of the regulator, the pressure in the pressure chamber drops and the spring above the diaphragm forces the valve disc open to allow more air from the inlet side to pass into the pressure chamber. The regulator pressure is adjusted by increasing or decreasing the pressure on the spring above the diaphragm with the adjusting knob through the top of the regulator. Increasing the pressure on the spring increases the regulated pressure.

The bowl of the filter should be drained daily or whenever water accumulates in bottom of bowl. To drain, open drain valve (25) on bottom of bowl. Filter should be disassembled and cleaned periodically.

Supply air inlet is a 1/2" NPT female part in top of filter. The gage mounted on filter head is for supply line air pressure. The shut-off valve threaded directly into side of filter head is filtered supply line pressure air.

Regulated filtered air is supplied thru the regulator mounted on side of filter. The regulator is used to control the air pressure turn adjusting knob (14) on regulator counterclockwise to decrease pressure and clockwise to increase air pressure (maximum pressure 100 PSI). When desired pressure is maintained, tighten lock nut (13) on adjusting knob.

DISASSEMBLY OF FILTER FOR CLEANING AND MAINTENANCE

NOTE

Turn off air supply before loosening or removing any parts from this unit.

FILTER DISASSEMBLY

Unscrew center stud (22) and remove bowl (21) with baffle plate (20) and bowl gasket (17). Unscrew baffle (19) to remove filter element (18) and replace if needed. Screw out inlet tube (16) from body (15) if necessary to replace or clean.

To assemble filter follow above instructions in reverse.

REGULATOR

Dirt on the valve disc (6) will cause the regulator to creep. After regulator is set the pressure will increase. To correct, remove bottom nut (3). Unscrew plug carefully so as not to lose washer, valve disc, spring and valve stem. Clean valve disc or replace if necessary and assemble.

DISASSEMBLY OF REGULATOR

Unscrew and remove adjusting knob (14) together with lock nut (13). Unscrew bottom nut (3) as mentioned above. Carefully unscrew bonnet nut (12) while holding regulator right side up. Then lift out spring (11), diaphragm gasket (10), diaphragm (9) from body. Clean all parts in a mild clean solvent and reassemble in the reverse order of above disassembly.

Gages, valves, mounting bracket and fittings may be removed for cleaning or replacing by unscrewing from filter head or regulator.

By Order of the Secretary of the Army:

Official:

E. C. MEYER
General, United States Army
Chief of Staff

J. C. PENNINGTON
Major General, United States Army
The Adjutant General

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM, CAREFULLY TEAR IT
OUT, FOLD IT AND DROP IT
IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

Your mailing address

DATE SENT

Date you filled out this form

PUBLICATION NUMBER

TM 9-4940-504-14&P

PUBLICATION DATE

19 March 1981

PUBLICATION TITLE

Maintenance Manual for Oil and
Water Separator, Model S-100-B

BE EXACT... PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

1

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

Item number 10 is listed with the parts, but is not
shown on the illustration.

SAMPLE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

JANE I. KNOTT, SP4, 222-1111

SIGN HERE:

SP4 Jane I. Knott

DA FORM 2028-2
JUL 79

PREVIOUS EDITIONS
ARE OBSOLETE.

P.S.-IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR
RECOMMENDATION MAKE A CARBON COPY OF THIS
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



Commander
US Army Armament Materiel Readiness Command
ATTN: DRSAR-MAS
Rock Island, IL 61299

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM, CAREFULLY TEAR IT
OUT, FOLD IT AND DROP IT
IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 9-4940-504-14&P

PUBLICATION DATE

19 March 1981

PUBLICATION TITLE

Maintenance Manual for Oil and
Water Separator, Model S-100-B

BE EXACT... PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 1 JUL 79 2028-2

PREVIOUS EDITIONS
ARE OBSOLETE.

P.S.-IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR
RECOMMENDATION MAKE A CARBON COPY OF THIS
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

Commander
US Army Armament Materiel Readiness Command
ATTN: DRSAR-MAS
Rock Island, IL 61299

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM, CAREFULLY TEAR IT
OUT, FOLD IT AND DROP IT
IN THE MAIL

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 9-4940-504-14&P

PUBLICATION DATE

19 March 1981

PUBLICATION TITLE

Maintenance Manual for Oil and
Water Separator, Model S-100-B

BE EXACT... PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

TEAR ALONG PERFORATED LINE

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA, FORM 2028-2
JUL 79

PREVIOUS EDITIONS
ARE OBSOLETE.

P.S.—IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR
RECOMMENDATION MAKE A CARBON COPY OF THIS
AND GIVE IT TO YOUR HEADQUARTERS.

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



Commander
US Army Armament Materiel Readiness Command
ATTN: DRSAR-MAS
Rock Island, IL 61299

TEAR ALONG PERFORATED LINE

RECOMMENDED CHANGES TO EQUIPMENT TECHNICAL PUBLICATIONS



THEN... JOT DOWN THE
DOPE ABOUT IT ON THIS
FORM, CAREFULLY TEAR IT
OUT, FOLD IT AND DROP IT
IN THE MAIL!

SOMETHING WRONG WITH THIS PUBLICATION?

FROM: (PRINT YOUR UNIT'S COMPLETE ADDRESS)

DATE SENT

PUBLICATION NUMBER

TM 9-4940-504-14&P

PUBLICATION DATE

19 March 1981

PUBLICATION TITLE

Maintenance Manual for Oil and
Water Separator, Model S-100-B

BE EXACT... PIN-POINT WHERE IT IS

PAGE
NO.

PARA-
GRAPH

FIGURE
NO.

TABLE
NO.

IN THIS SPACE TELL WHAT IS WRONG
AND WHAT SHOULD BE DONE ABOUT IT:

PRINTED NAME, GRADE OR TITLE, AND TELEPHONE NUMBER

SIGN HERE:

DA FORM 2028-2
1 JUL 79

PREVIOUS EDITIONS
ARE OBSOLETE.

P.S.-IF YOUR OUTFIT WANTS TO KNOW ABOUT YOUR
RECOMMENDATION MAKE A CARBON COPY OF THIS
AND GIVE IT TO YOUR HEADQUARTERS.

TEAR ALONG PERFORATED LINE

FILL IN YOUR
UNIT'S ADDRESS

FOLD BACK

DEPARTMENT OF THE ARMY

OFFICIAL BUSINESS
PENALTY FOR PRIVATE USE \$300

POSTAGE AND FEES PAID
DEPARTMENT OF THE ARMY
DOD 314



TEAR ALONG PERFORATED LINE

Commander
US Army Armament Materiel Readiness Command
ATTN: DRSAR-MAS
Rock Island, IL 61299

TM 9-4940-504-14&P - SEPARATOR, OIL AND WATER —1981

This fine document...

Was brought to you by me:



[Liberated Manuals -- free army and government manuals](#)

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap “watermarks” and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<http://www.liberatedmanuals.com/>>Free Military and Government Manuals

- Sincerely
Igor Chudov
<http://igor.chudov.com/>
- [Chicago Machinery Movers](#)